

THE BEST BATH OR SHOWER EXPERIENCE? THE ONE NOBODY INTERRUPTS.

Thank you for buying an American Standard bath or shower product.

We're so grateful you did, and you will be too. Not just while you're waking up each morning, but also every time a dirty gardener, sweaty soccer player, or muddy dog gets cleaned up. How do we know? Just like you, we've lived with that same beautiful chaos called life for almost 150 years. We believe that while every home should appreciate in value, we never forget the sentimental value that grows from enjoying life in the heart of home—your kitchen and bath. That's why we love your stories and ideas; they help us innovate with products that make your life easier.

Or, visit **americanstandard-us.com/bathroom/tub-and-shower-doors** to watch video, view/download installation manuals or learn more about your product.

Have a question or need help on install?

For questions or help on installation call us at **800-442-1902**.

For a copy of our warranty in additional languages,
please visit Americanstandard.com

American Standard

OWNERS MANUAL

Elevate™ Neo-Angle Shower Door AM00841400

INSTALLATION INSTRUCTIONS

Thank you for selecting American Standard – the benchmark of fine quality for over 150 years. To ensure this product is installed properly, please read these instructions carefully before you begin. Certain installations may require professional help. Also be sure your installation conforms to local codes.


INSTALLATION PREPARATION

- Please unpack carefully and identify all parts needed for installation by using the Box Contents page as a reference. Inspect the product and report any damages or missing parts immediately to customer care by calling 800-442-1902. Follow the prompts for consumer/shower doors.
- These Elevate shower doors were developed to be installed with the Elevate shower base and Elevate shower walls. If you are using a different base and wall set, you may need additional hardware and tools to complete the installation.
- Handle the glass panels carefully and protect the edges. Unequal pressure applied during installation can cause cracking or breakage, and the sharp corners on the glass panels can cause damage to the wall or floor materials.
- Ensure adequate wall support is provided to area where shower door is to be installed.
- Shower base and wall material must be installed prior to the door installation.
- Wear protective equipment during installation to avoid injury.
- Please keep these instructions for after care and customer service details.


⚠ WARNING: PRODUCT IS HEAVY AND REQUIRES TWO PEOPLE FOR INSTALLATION.

⚠ WARNING: TEMPERED GLASS CANNOT BE DRILLED, CUT OR MODIFIED.

INSIDE THE BOX

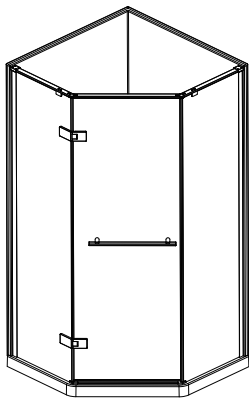

Left Hand Opening

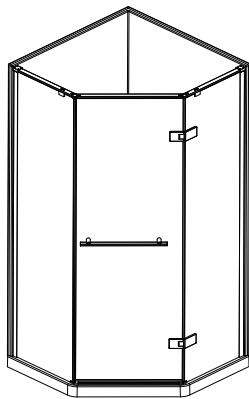


Right Hand Opening

Image shown may vary from product purchased.

RECOMMENDED TOOLS AND MATERIALS

Installation steps will indicate which tools should be used with associated letter

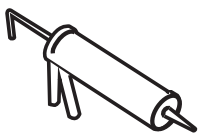


Caulking Gun

A



Level

B

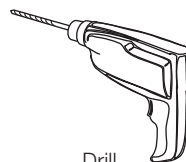


Drill

C



1/4" (6 mm)
Drill Bits #2 Square Drive Bit

D



Regular
Screwdriver

E




1/8" (3.2 mm)
Drill Bits #2 Square Drive Bit

F




Phillips
Screwdriver

G



Utility Knife

H



Hammer

I



Pencil

J



Tape
Measure

K



Safety
Equipment

L






















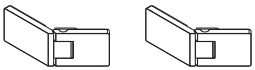
















BEFORE YOU BEGIN


Inspect your product thoroughly before installing. Take extra care in handling surfaces of the bath and use only non-abrasive cloths to avoid scratching. Observe all local plumbing and building codes.

American Standard

BOX CONTENTS

1x Installation Instruction	➔		
[1] 2x Wall Posts	➔		
[2] 2x Side Covers	➔		
[3] 1x Support Bar	➔		
[4] 1x Bottom Threshold	➔		
[5] 1x Bottom Gasket	➔		
[6] 1x Side Gasket	➔		
[7] 1x Magnetic Seal	➔		
[8] 1x Magnetic Seal	➔		
[9] 1x Door Panel	➔		
[10] 1x Fixed Panel A	➔		
[11] 1x Fixed Panel B	➔		
[12] 1x Handle Set	➔		
[13] 2x Hinges	➔		
[14] 6x Screws M4x16	➔		
[15] 6x Adjust Fixtures	➔		
[16] 2x Screws ST4x35	➔		
[17] 2x Wall Brackets	➔		
[18] 6x Caps	➔		
[19] 1x Fixing (L)	➔		
[20] 1x Fixing (R)	➔		
[21] 2x Screws ST4x25	➔		
[22] 10x Wall Anchors	➔		
[23] 8x Screws ST4x35	➔		
[24] 1x 2.5mm Allen Key	➔		
[25] 1x 4mm Allen Key	➔		
[26] 1x Hole Location Template	➔		
[27] 2x Gaskets	➔		

ASSEMBLY DRAWING

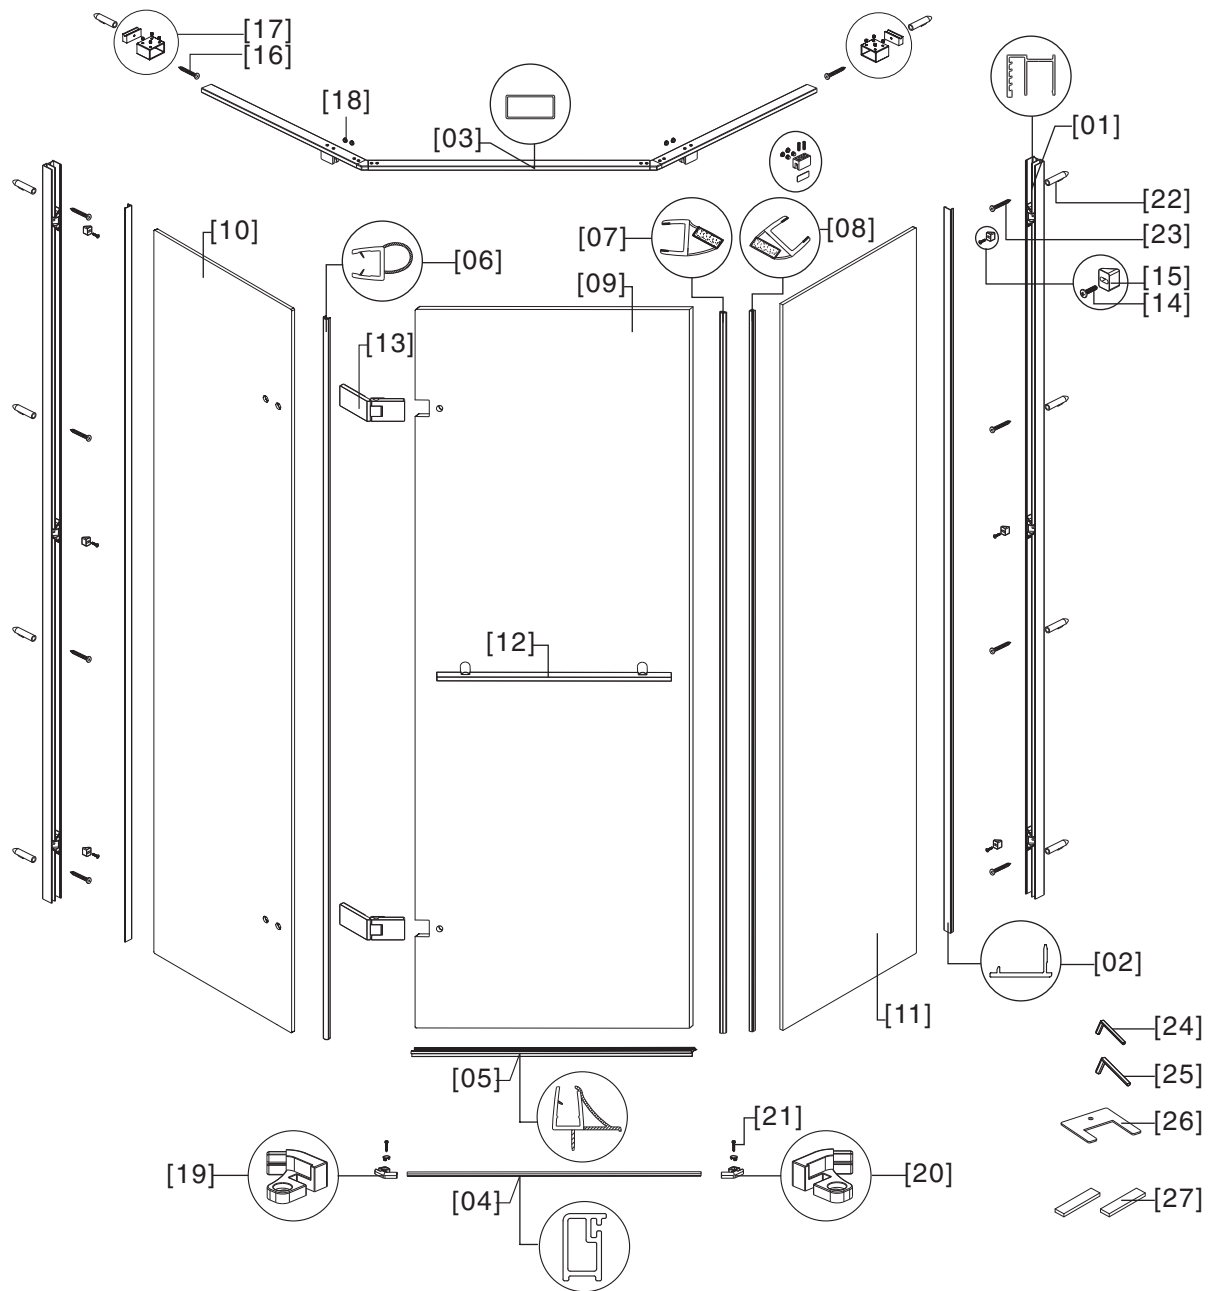



- [1] 2x Wall Posts
- [2] 2x Side Covers
- [3] 1x Support Bar
- [4] 1x Bottom Threshold
- [5] 1x Bottom Gasket
- [6] 1x Side Gasket
- [7] 1x Magnetic Seal
- [8] 1x Magnetic Seal
- [9] 1x Door Panel

- [10] 1x Fixed Panel A
- [11] 1x Fixed Panel B
- [12] 1x Handle Set
- [13] 2x Hinges
- [14] 6x Screws M4x16
- [15] 6x Adjust Fixtures
- [16] 2x Screws ST4x35
- [17] 2x Wall Brackets
- [18] 6x Caps

- [19] 1x Fixing (L)
- [20] 1x Fixing (R)
- [21] 2x Screws ST4x25
- [22] 10x Wall Anchors
- [23] 8x Screws ST4x35
- [24] 1x 2.5mm Allen Key
- [25] 1x 4mm Allen Key
- [26] 1x Hole Location Template
- [27] 2x Gaskets

DETERMINING DOOR OPENING SIDE

NOTE: Before installing the shower door, determine the door opening side. If it is to be a Left Hand Opening (as illustrated), proceed to step 1. If it is to be a Right Hand Opening (as illustrated), disassemble both hinges as per the images below and reassemble to prepare the hinges for Right Hand Opening.

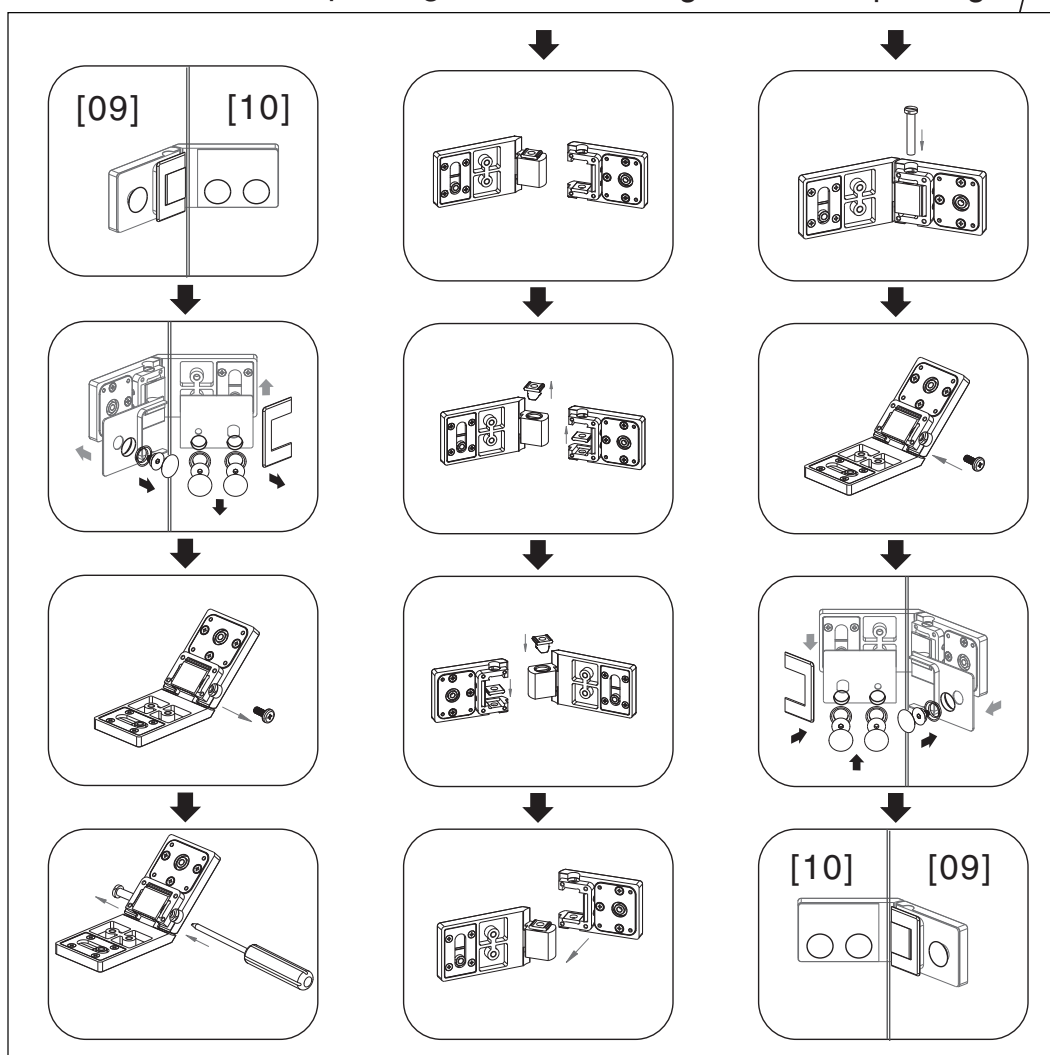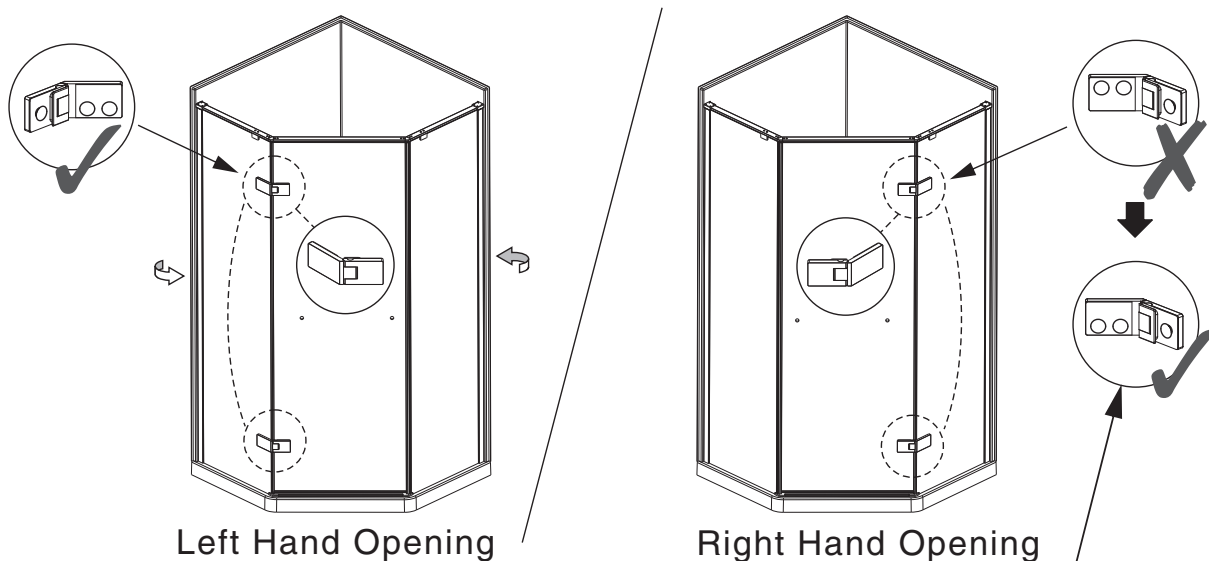

INSTALLATION INSTRUCTIONS

IMPORTANT GENERAL INFORMATION

This unit is best installed by two people.

Cover drain with tape prior to installation to prevent the loss of small parts.

Unpack your unit carefully and inspect for freight damage. Lay out and identify all parts using Box Contents and Assembly Drawing as a reference. Before discarding the carton check to see that no small hardware parts have fallen to the bottom of the box. If any parts are damaged or missing refer to the description noted in the instructions when inquiring about replacements.


Handle the glass panels carefully and protect the edges. Although tempered glass is very resistant to breakage, the glass can still break if unequal pressure is applied during installation and the sharp corners of the panel can damage tile and flooring surface.

Be sure to wear safety glasses whenever drilling or cutting. When drilling holes in ceramic tile or marble use a center punch and hammer to carefully break the glazed surface. This will prevent skidding when drilling.

NOTE: TEMPERED GLASS CANNOT BE DRILLED, CUT OR MODIFIED.

INSTALLING WALL POSTS


- In this step, you'll need following parts: [1] x2, [22] x8, [23] x8, [26] x1
- In this step, you'll need the following tools: B, C, D, G, I, J

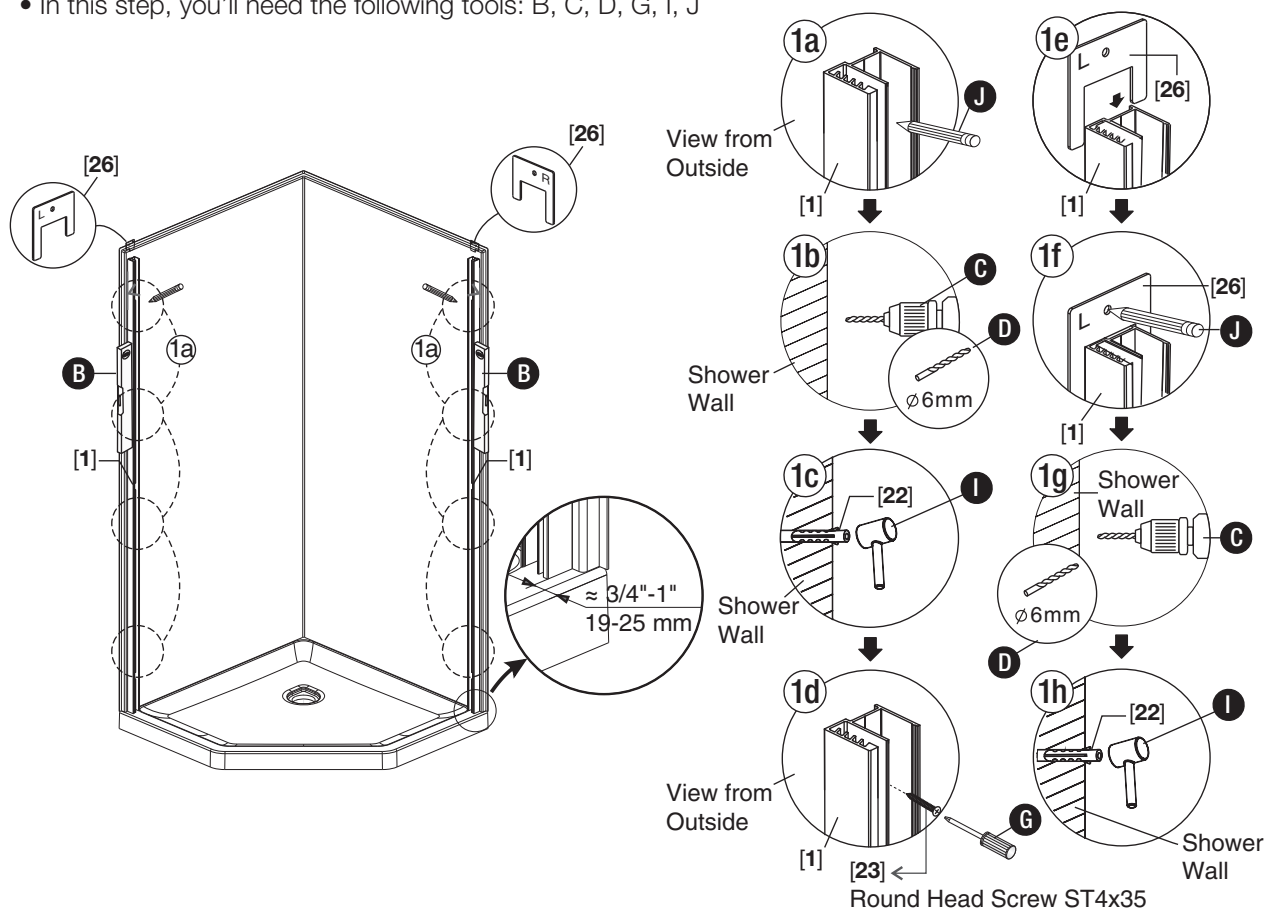

- 1a.** Measure from the outside edge of the base deck $\frac{3}{4}$ " to 1" (19 to 25 mm) (ref. main illustration near bottom) and mark deck of base. Place outside edge of Wall Post [1] (slot where glass panel goes) onto mark on base deck and plumb using Level [B]. Tape Wall Post [1] to shower wall to temporarily hold in place. Mark all predrilled holes in Wall Post [1] with a pencil [J]. Repeat procedure for Wall Post [1] on opposite side.
- 1b.** If using supplied Wall Anchors [22] drill each of the marks on the wall from step 1a using a 6mm drill bit. If not using Wall Anchors, drill using appropriate size bit for screw being used.
- 1c.** If using Wall Anchors [22], place into each drilled hole.
- 1d.** Place either left or right Wall Post [1] on the wall and screw into place using ST4x35 [23] screws. Ensure Wall Post [1] is in correct position (ref illustration).
- 1e.** Slide the Hole Location Template [26] all the way down over left Wall Post [1]. **NOTE:** the "L" stamped into the Hole Location Template [26] indicating LEFT.
- 1f.** Mark the hole in the Hole Location Template [26] with a pencil [J].
- 1g.** Remove Hole Location Template [26] and drill marked location on shower wall with a 6mm Drill Bit [D] if using Wall Anchor [22].
- 1h.** Insert Wall Anchor [22] into drilled hole. Tap into place with Hammer [I].

INSTALLING FIXED PANEL A & B


- In this step, you'll need following part: [10] x1, [11] x1, [15] x6, [14] x6
- In this step, you'll need the following tool: G

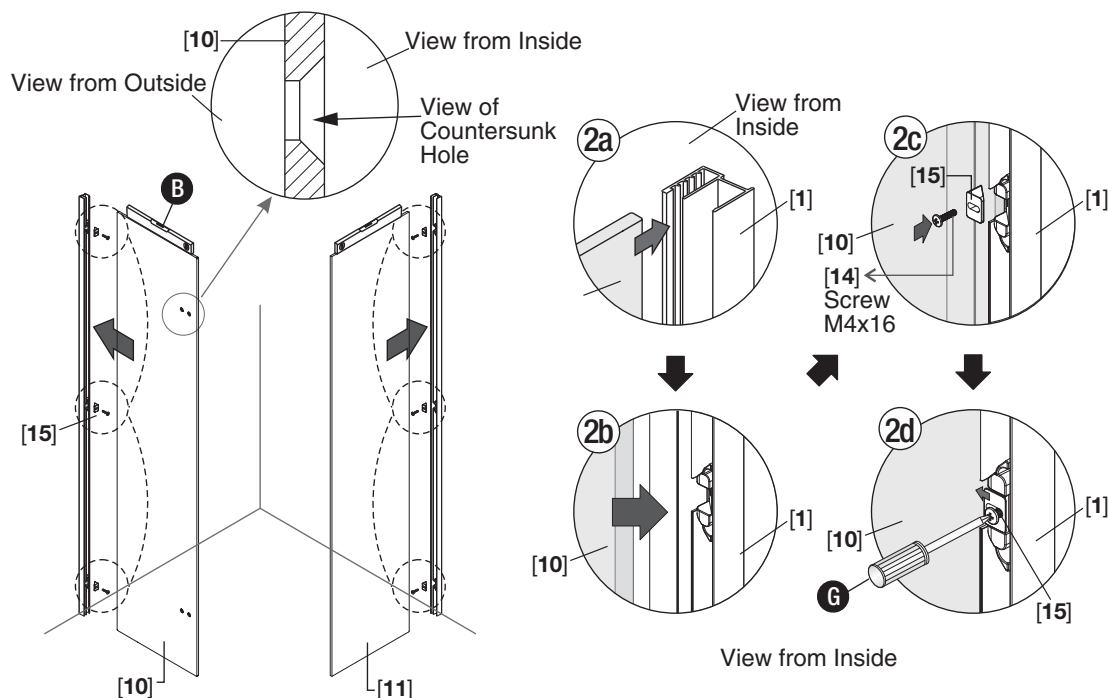

- 2a.** Insert Fixed Panel A [10] into narrow slot of Wall Post [1].
- 2b.** Ensure Fixed Panel A [10] fully fits into the channel of Wall Post [1].
- 2c.** Insert Adjust Fixtures [15] into notches of the Wall Post [1] and lightly screw into place using M4x16 Screw [14] at 3 locations.
- 2d.** Level [B] Fixed Panel A [10] and fully tighten each of the M4x16 Screws [14]. Install Fixed Panel B [11] in the same way.

INSTALLING DOOR PANEL AND HINGES


- In this step, you'll need following parts: [4] x1, [6] x1, [9] x1, [13] x2, [19] x2

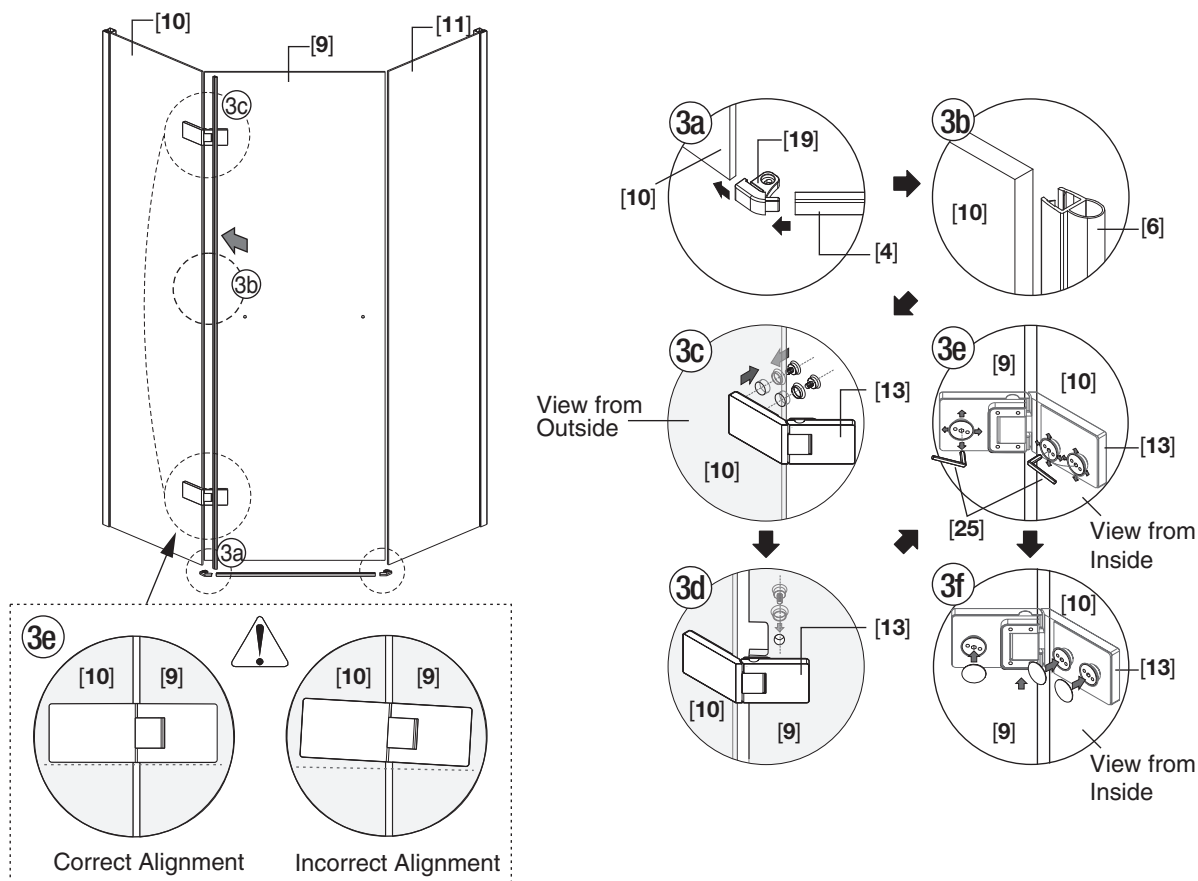

- 3a.** Slide notch of Fixing L [19] into bottom of Fixed Panel A [10]. Attach Bottom Threshold [4] into opposite side of Fixing L [19] as illustrated. Attach Fixing R [20] onto Fixed Panel B [11] and Bottom Threshold [4] in the same way on the opposite side.
- 3b.** Press Side Gasket [6] fully onto edge of Fixed Panel A [10].
- 3c.** On one side of Hinge [13] remove the two screws and plastic washers as illustrated. Repeat for second Hinge [13]. Attach one of the Hinges [13] at the holes of Fixed Panel A [10], then place the plastic washer and screw into the hole. Ensure the plastic washer stays within the hole of the Fixed Panel A [10] and lightly tighten the two screws. Repeat installation for the second Hinge [13] onto Fixed Panel A [10].
- 3d.** Remove the single screw and washer from both Hinges [13]. Carefully position and install Door Panel [9] over each of the Hinges [13] and insert the washer and screw into each hole of Door Panel [9] keeping the washer within the hole of the door panel. Lightly tighten both screws.
- 3e.** Observe that both Hinges [13] are straight and even (ref. illustration 3e). Once both hinges are straight, securely tighten all screws on both hinges using supplied 4mm Allen Key [25].
- 3f.** Snap cover caps over each screw of both Hinges [13] to cover screws.

INSTALLING BOTTOM GASKET AND MAGNETIC SEALS



- In this step, you'll need following parts: [5] x1, [7] x1, [8] x1
- In this step, you'll need the following tools: A, H

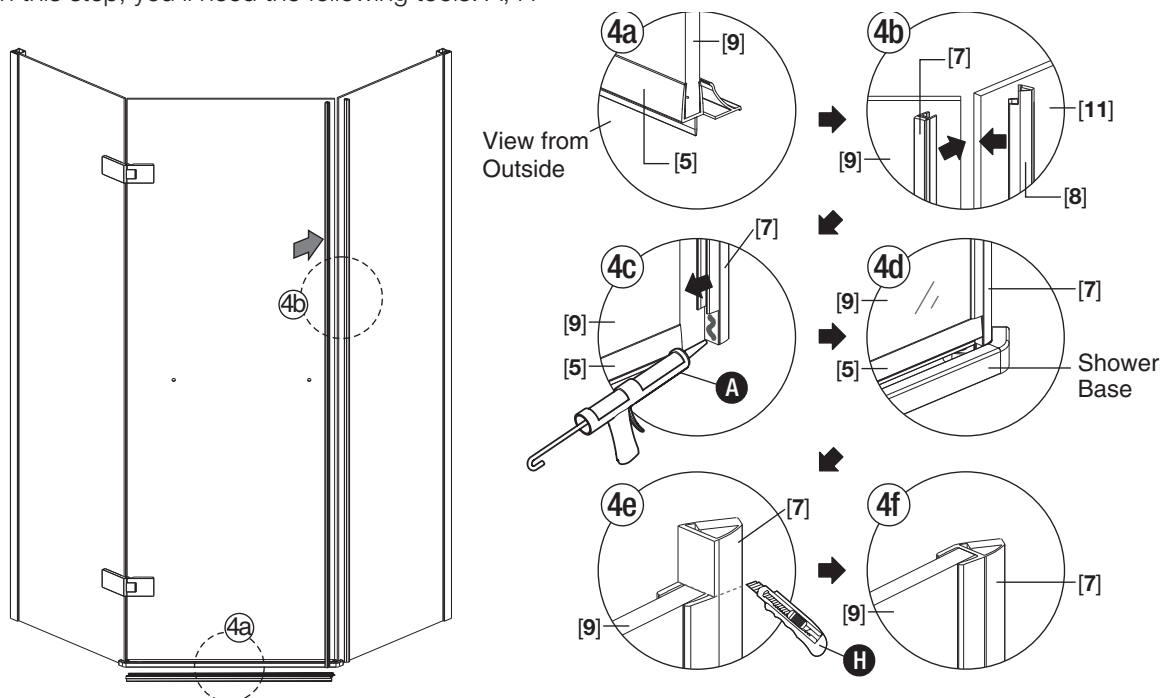

- 4a.** Open Door Panel [9] and install Bottom Gasket [5] on bottom of door panel. Note the direction of the gasket in illustration 4a.
- 4b.** Install Magnetic Seal [7] onto outside edge of Door Panel [9]. Install Magnetic Seal [8] onto outside of Fixed Panel B [11].
- 4c.** Apply a small amount of silicone on the lower, inside edge of Magnetic Seal [7] and fully push into Door Panel [9] to hold in place.
- 4d.** Ensure that the Magnetic Seal [7] correctly fits around the Bottom Gasket [5] and does not interfere with the closer of Door Panel [9].
- 4e.** Trim the excess portion of Magnetic Seal [7] with Utility Knife [H].
- 4f.** Ensure Magnetic Seal [7] fits flush to top of Door Panel [9].

ADJUSTING DOOR PANEL

- In this step, you'll need following part: [27]
- In this step, you'll need the following tool: H

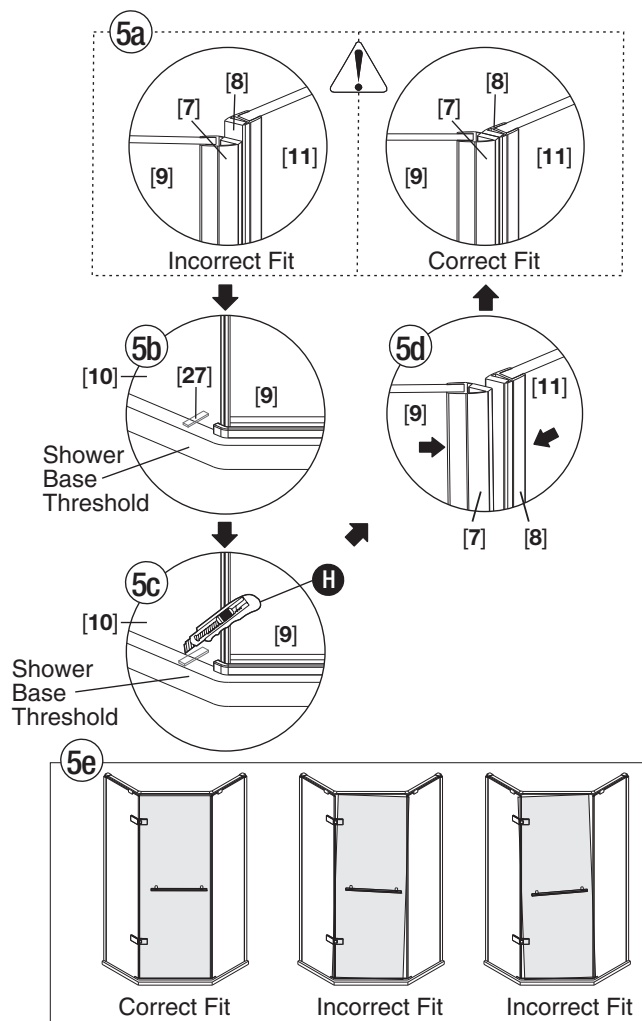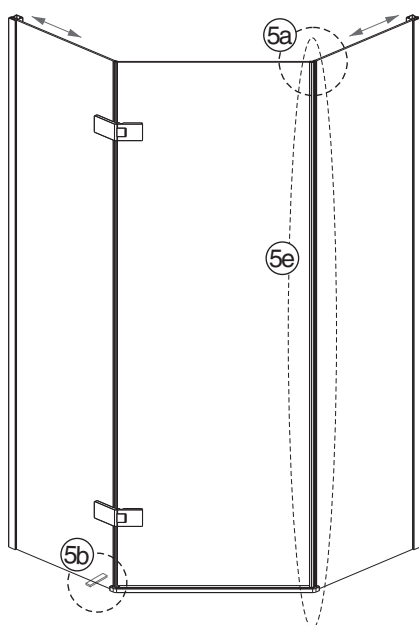


- 5a.** Close Door Panel [9] and observe if there are any gaps between the Door Panel [9] and Fixed Panel B [11] or if the door is high or low at any location (ref. illustration). Also both Fixed Door Panels A or B can be moved in or out from the Wall Post [1] (note: will need to loosen Adjustment Fixtures [15] to do so to aid in adjusting the Door Panel [9]).
- 5b.** If Door Panel [9] is lower when closed against Fixed Panel B [11], then slide Gasket [27] under Fixed Panel A [10] to slightly raise Door Panel [9].
- 5c.** Trim Gasket [27] with Utility Knife [H].
- 5d.** Further adjustment of any gap between Door Panel [9] and Fixed Panel B [11] can be made by pushing either Magnetic Seal [7] or [8] in or out.
- 5e.** Once all adjustments have been made, verify that the Door Panel [9] closes smoothly and correctly with no gaps. (ref. illustration).

6

MOUNTING BOTTOM THRESHOLD TO DECK OF BASE



- In this step, you'll need following parts: [18], [21]
- In this step, you'll need the following tools: C, F

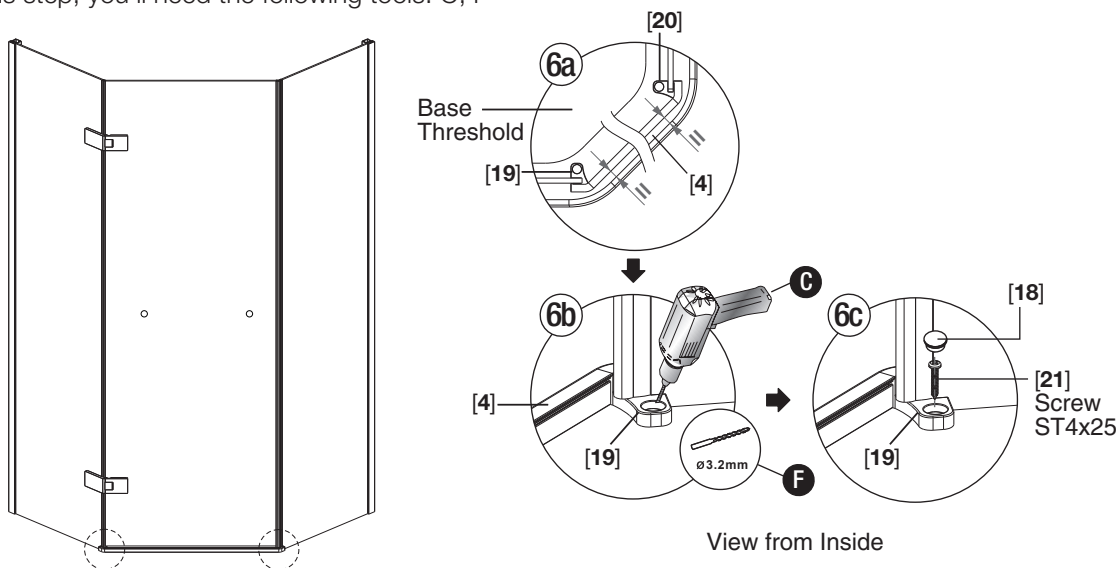

- 6a.** Verify that the Bottom Threshold [4] is positioned evenly in front of deck of shower base.
- 6b.** Drill a 3.2mm hole through the Fixing L [19] into the deck of the shower base.
- 6c.** Place a ST4x25 Screw [21] into the drilled hole and securely screw into place. Place Cap [18] over ST4x25 Screw head [21] to cover screw head. Repeat for Fixing R [20] on opposite side.

INSTALLATION OF SUPPORT BAR


- In this step, you'll need following parts: [3], [16], [17], [18]
- In this step, you'll need the following tool: G

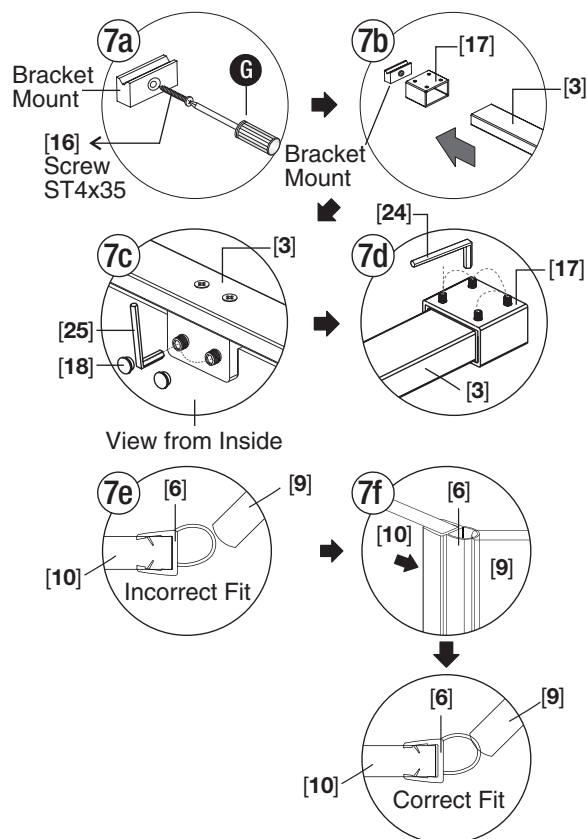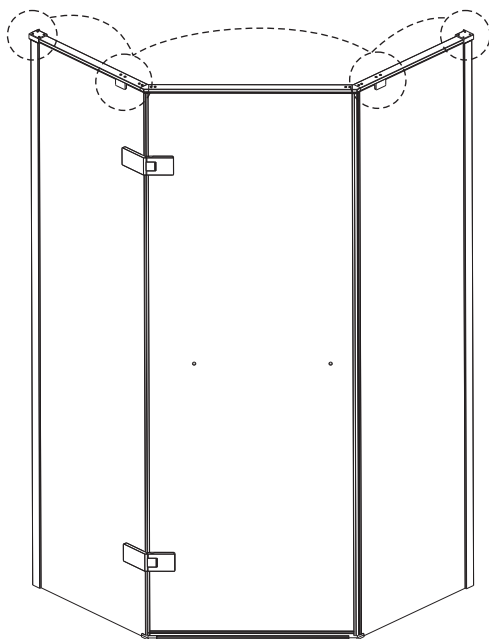

- 7a.** Remove Bracket Mount from the Wall Bracket [17] (illustrated) and install into previous drilled hole from steps 1d to 1g on the shower wall using one ST4x35 Screw [16]. Repeat installation on the opposite side.
- 7b.** Slide Wall Bracket [17] over piece screwed into shower wall, then place Support Bar [3] into Wall Bracket [17] on opposite end. Align Support Bars [3] 4 clips over the top edges of Fixed Panels A & B. Repeat installation of Wall Bracket [17] on opposite side.
- 7c.** Align Support Bar [3] clips over top edges of Fixed Panels A&B and turn set screws of the Support Bar clips clockwise using supplied 4mm Allen Key [25] to secure Support bar to the Fixed Panels A&B.
- 7d.** Tighten all set screws of both Wall Brackets [17] using supplied 2.5mm Allen Key [24].
- 7e.** Once Support Bar [3] is completely installed, observe if there are any gaps between Side Gasket [6] and Door Panel [9].
- 7f.** If any gaps exist along the length of Side Gasket [6] and Door Panel [9], the Side Gasket [6] can be moved in or out to provide a proper water tight seal (ref. illustration for Correct Fit).

INSTALLING HANDLE SET AND SIDE COVERS

- In this step, you'll need following parts: [2], [12]



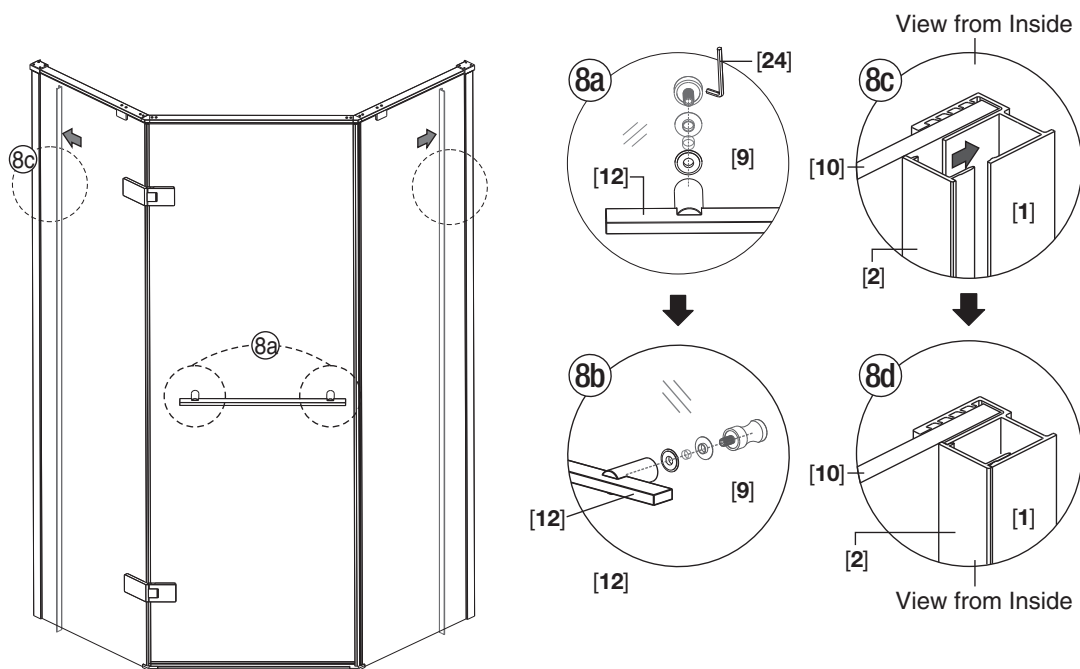


- 8a.** Remove short end of threaded nut and washers from Handle Set [12]. This end of the Handle Set should be installed nearest the door hinges. Ensure the clear washers are installed inside and outside of Door Panel [9] as illustrated. Lightly snug threaded nut.
- 8b.** Remove longer end of threaded nut and washers from Handle Set [12] and install into hole on opposite end of Door Panel [9] while keeping the clear washers between the inside and outside of the glass. Tightly snug the threaded nut to secure Handle Set [12] to Door Panel [9].
- 8c.** Slide Side Cover [2] over Wall Post [1] as illustrated.
- 8d.** Fully insert Side Cover [2] into Wall Post [1] and push into place to cover and trim Wall Post [1].

9

APPLYING SEALANT ON HINGE COVER PLATE

- In this step, you'll need the following tool: A

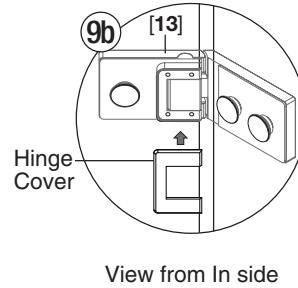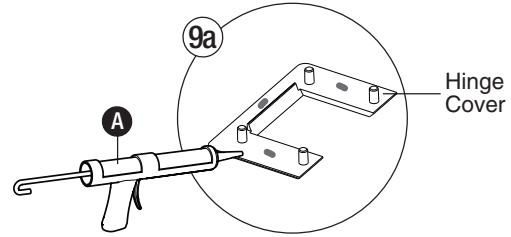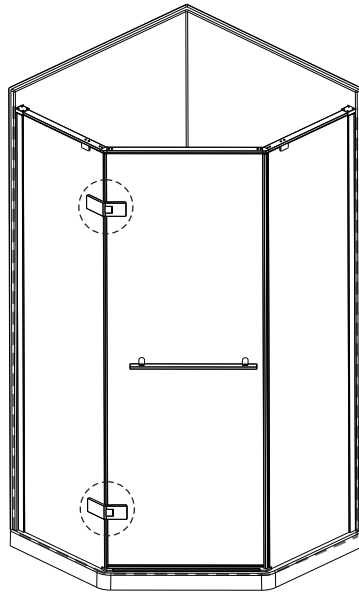



9a. Apply Sealant [A] around the Hinge Cover [13] as illustrated.

9b. Line up the 4 studs of the Hinge Cover [13] over the Hinge [13] and snap into place.

10

APPLY SEALANT TO SHOWER DOOR

- In this step, you'll need the following tool: A

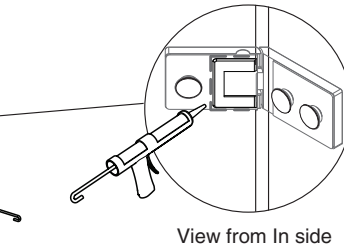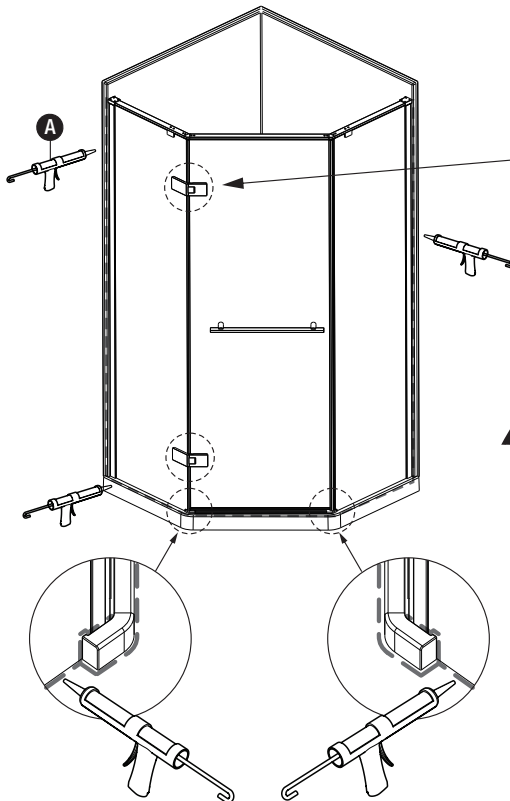

View from In side



Allow 24 hours for silicone to dry before use

10a. Apply a Silicone Sealant [A] to all areas around the perimeter of the shower door as illustrated. Allow 24 hours for sealant to dry before using shower.

POST INSTALLATION CLEAN-UP

Remove all construction debris from bath.

Do not use wire brushes or any other metal implement on bath surface. Post installation clean-up generally can be completed using warm water and liquid dishwashing detergent. Stubborn dirt or stains may be removed using granular Spic and Span® mixed with water.

Painter's naphtha can be used to remove excess adhesives and/or wet oil-base paint.

AFTERCARE AND CLEANING

Two primary materials are used to manufacture your new American Standard shower enclosure: tempered glass and anodized aluminum. To ensure a long lasting finish on the enclosure, wipe it down with a towel after each use.

For occasional, more concentrated cleaning efforts Lysol Non-Abrasive Bathroom Cleaner works extremely well. Be sure that any over spray falling on the aluminum frame is rinsed thoroughly and dried. Many over-the-counter cleaners, if applied to the aluminum and left on, will harm the metal finish and cause permanent damage even though their directions indicate safe use on shower doors. Never use a scouring agent to clean the aluminum.

Spic And Span® Is A Registered Trademark Of The Spic And Span Company

American Standard

WARRANTY

SHOWER DOORS 10 YEAR WARRANTY

AS America, Inc. ("American Standard®") warrants to the original non-commercial owner that it will, at its sole option, repair or replace this product or any part of this product, if it confirms that the product is defective in materials or workmanship under normal use and maintenance for 10 years. This warranty is non-transferable to subsequent purchasers or owners. The sole exception to the non-transferability of this warranty is that if this product is purchased by a plumber, contractor or other service provider, this warranty extends to the first property owner on whose behalf the product was purchased for installation.

For this warranty to become effective, the warranty registration process must be completed via the internet or telephone per the warranty registration instructions.

The warranty term for non-commercial owners does not apply to commercial owner installations. Commercial owner installations shall have a warranty of 3 year(s), measured from the date of initial purchase. A "commercial owner installation" includes use of the products in apartments and other rental units, non-residential facilities, hotels, commercial businesses and/or other public accommodations. Except for warranty duration, all other warranty terms apply to commercial owner installations.

This warranty DOES NOT COVER the following:

1. Because American Standard cannot control the quality of products sold by unauthorized sellers, this warranty applies only to American Standard products which were purchased from American Standard or an American Standard authorized seller, unless otherwise prohibited by law. American Standard reserves the right to reject warranty claims from purchasers for products purchased from unauthorized sellers, including unauthorized Internet sites.
2. Defects or damage arising from shipping, installation, alterations, accidents, abuse, misuse, lack of proper maintenance and use of other than genuine American Standard replacement parts, in all cases whether caused by a plumbing contractor, service company, the owner or any other person.
3. Deterioration through normal wear and tear.
4. WATER DAMAGE, OR DAMAGES RESULTING FROM ABUSE OR MISUSE OR FROM FAILURE TO INSTALL OR MAINTAIN THIS PLUMBING PRODUCT IN ACCORDANCE WITH THE WRITTEN INSTRUCTIONS FURNISHED BY AS AMERICA, INC.
5. USE OF CLEANING PRODUCTS CONTAINING CALCIUM HYPO CHLORITE (CHLORINE), SCOURING POWDERS OR PADS SHALL NOT BE COVERED.
6. THE USE OF SCENTED CANDLES IN CLOSE PROXIMITY WITH THIS PRODUCT CAN RESULT IN PERMANENT STAINING OF THE FINISH.
7. Expense of normal maintenance.
8. All costs of removal, transportation, labor, reinstallation or other costs including postage and/or shipping costs to obtain warranty service shall be paid by the purchaser.
9. ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, ALL OF WHICH ARE HEREBY EXPRESSLY DISCLAIMED. Some States do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY OR FITNESS FOR PURPOSE INTENDED, ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some States do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.
10. Responsibility for compliance with local code requirements ARE EXCLUDED FROM THIS WARRANTY. (Since local code requirements vary greatly distributors, retailers, dealers, installation contractors and users of plumbing products should determine whether there are any code restrictions on the installation or use of a specific product.) This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

OBTAINING WARRANTY SERVICE

If you believe that you have a warranty claim, contact American Standard, either through an authorized AS America, Inc. dealer or re-seller, by writing to the addresses below, or visiting the website below:

UNITED STATES

American Standard Brands
30 Knightsbridge Road, Suite 301
Piscataway, New Jersey 08854
Attention: Director of Customer Care
For residents of the United States,
warranty information may also be obtained
by calling the following toll free number:
(800) 442-1902
www.americanstandard.com

CANADA

LIXIL Canada, Inc.
5900 Avebury Rd.
Mississauga, Ontario
Canada L5R 3M3
Toll Free: (800) 387-0369
www.americanstandard.ca

MEXICO

American Standard B&K Mexico
S. de R.L. de C.V.
Via Morelos #330
Col. Santa Clara
Ecatepec 55540 Edo. Mexico
Toll Free: 01-800-839-1200
www.americanstandard.com.mx

PLEASE COMPLETE AMERICAN STANDARD WARRANTY REGISTRATION PROCESS AND SAVE THIS WARRANTY INFORMATION

IMPORTANT: Registration of the shower doors must be completed for this warranty to become effective. Your registration will make it easier to contact you in the event of a product recall.*

INSTRUCTIONS: Register your shower doors at www.americanstandard.com. Please save your proof of purchase (sale receipt). If you need assistance or do not have access to our website, please contact American Standard Customer Care at: (800) 442-1902. An American Standard representative will assist in completing the warranty registration.

*In California, your warranty rights remain intact even if you do not complete the registration process.

THIS WARRANTY IS NOT TRANSFERABLE FROM ORIGINAL CONSUMER PURCHASER.

American Standard

TELL US WHAT YOU THINK!



Please leave us a product review or story at **americanstandard.com/reviews**



Great Tub

03/13/2018 06:52:29 CDT American Standard Bathtubs Saver 60 Inch by 34 Inch Integral Apron Bathtub, Left Hand Drain

Love the tub. It is very roomy and would definitely buy it again. Our old tub cracked so we got this one to replace it. This one feels like it is more durable and not as flimsy as the last one.

Register your warranty and sign up for an idea-filled newsletter at **americanstandard.com/warranty**.

Find installation videos at **youtube.com/americanstandard**.

≡ WANT MORE INFO?

For questions or help call us at **800-442-1902**,
or visit **americanstandard.com**