



INSTALLATION INSTRUCTIONS

If you have any questions, please feel free to contact us.
Email: lowesteam@aminalife.com


3 HANDLES SHOWER FAUCET SET

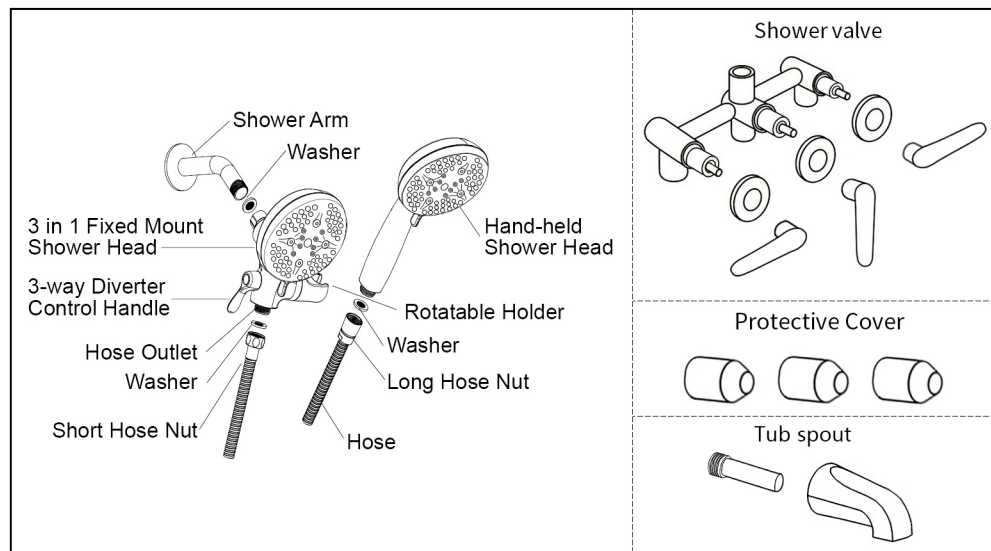

Note: Several U.S. state and local municipal plumbing codes require the use of a backflow prevention device when installing a hand shower. This device is termed a vacuum breaker. If your hand shower includes a vacuum breaker it will be located in the plug of hand-held shower.

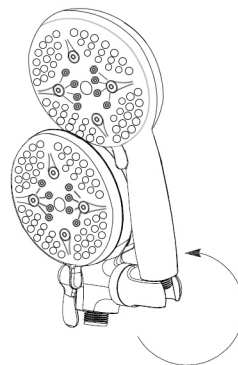


To Adjust Angle of Hand Shower
Rotate holder in vertical direction to set desired hand shower angle.

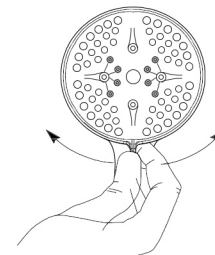

Spray Selector
Spray Selector allows you to select from various spray patterns. Spray pattern is controlled by the small lever that rotates left and right.




To Save Water while Lathering or Shampooing
To save water, turn dial lever to pause mode. For your safety (to prevent pressure buildup), pause mode has water dripping instead of complete shut-off. After use, do not leave dial set to pause mode.

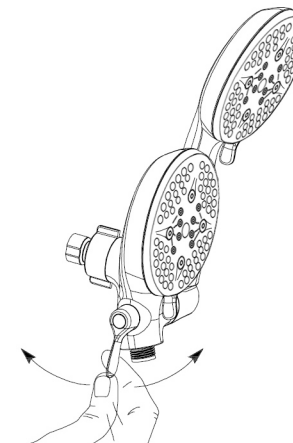

To Use 3-way Diverter
To change between the hand-held or fixed mount spray or combination of both, turn the handle on the 3 in 1 fixed mount shower head clockwise or counter clockwise.

WARNINGS:


- As with all combination showers, using both shower together always cause water pressure to drop in each shower head. Use shower head or hand shower individually to maximize water pressure for high-power performance. Use combined dual-shower application for gentle pampering, wide flow coverage and targeting of different body areas.
- Always ensure the hand-held shower head is properly placed in the bracket, so as to prevent the shower head from falling.
- Do not pull on or tug the flexible hose. This may result in the shower head coming loose and falling.

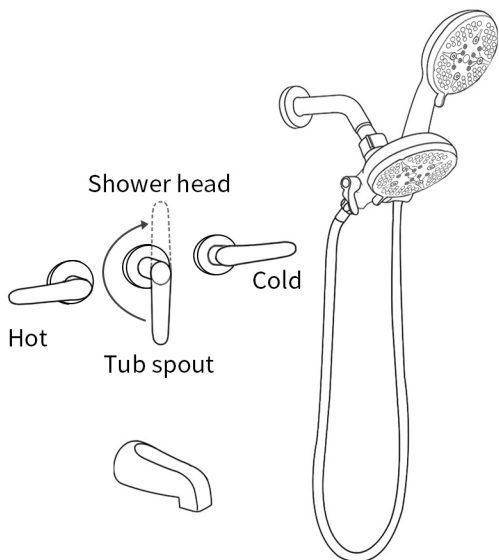



The diagram illustrates the installation of a shower system. On the left, a wall panel with a cross-shaped cutout is shown. To its right, a central valve body is depicted with four outlets. A 'Rain shower' pipe is connected to the top outlet. A 'Hot' water pipe is connected to the bottom-left outlet, and a 'Cold' water pipe is connected to the bottom-right outlet. A 'Tub spout' is connected to the middle outlet. Each pipe connection is secured with a nut and a washer. The pipes are labeled 'Hot', 'Rain shower', 'Tub spout', and 'Cold'.

① A.Wrap the pipe tape to the prepared male water pipe and then connecting to the embedded shower valve.Pay attention to the connection of the water inlet and outlet signs.


B.Measure the installation position of the shower system on the wall according to the needs of theparts and the size of the embedded valve body.Confirming it and mark it with a pen.

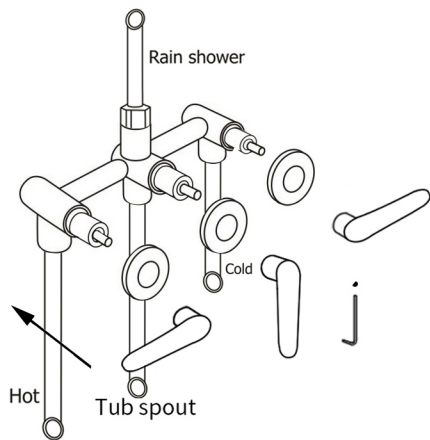


- ③ Use rubber plug to block the top shower spout, Tub spout connector. Open the water source, check the connection of the upper and lower water pipes, and the pressure of the pipe to ensure no leakage. Make sure there are no water leaks then tilling the wall and install the round decorative cover handles.

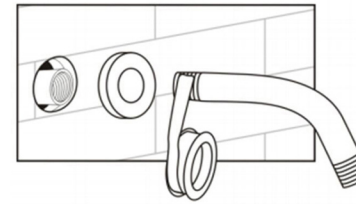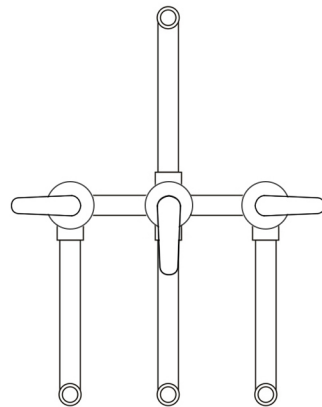

- ④ Wrap the shower arm thread with pipe tape before connect to the water pipe.

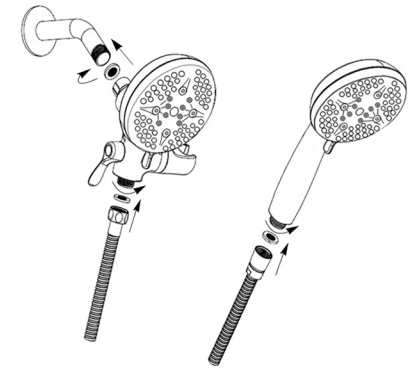

- ⑤ Attach 3 in 1 fixed mount shower head by threading clockwise onto shower arm with rotatable holder to the right and 3-way diverter control handle to the left. Use a wrench to tighten shower head nut to a properly snug fit. Then connect the shower hose to the shower head and hand shower as the pictures shows.

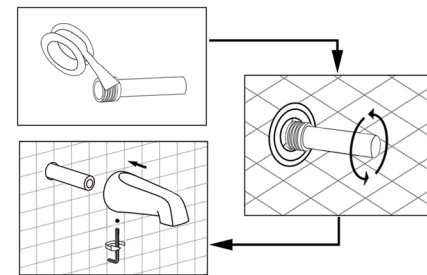

- Tips:**
Lift the button on tub spout to switch water to shower head
Push the button on the tub spout to switch water to tub spout

