

TOOLS NEEDED:

HERRAMIENTAS NECESARIAS:






INSTRUCTIONS:

1. Cut 81" compression (non- magnetic) strip to length and insert into slot in door stop on hinge side.
2. Cut 81" magnetic strip to length and insert into slot in door stop on latch side.
3. Cut 36" magnetic strip to length and insert into slot in door stop at top of door.

INSTRUCCIONES:

1. Corte la cinta de compresión de 2 m (no-magnetica) al largo y insertela en el tope de la puerta con el lado donde estan las bisagras.
2. Corte la cinta magnetica de 2 m al largo y insertela dentro de la ranura en el tope de la puerta en el lado que cierra.
3. Corte la cinta magnetica de 91.4 cm al largo y insertela dentro de la ranura en el tope de la puerta en la parte de arriba de la puerta.

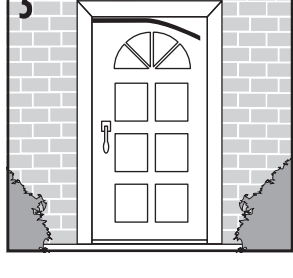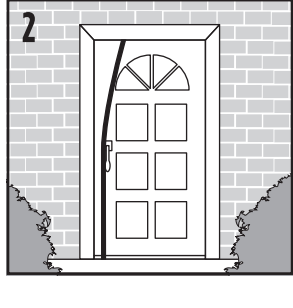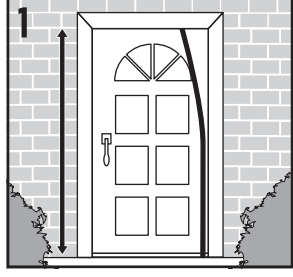

QUESTIONS? | PREGUNTAS?
800.654.8454

MDBUILDINGPRODUCTS.COM

