

**PRIOR TO INSTALLATION:**

- Inspect sink to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- All dimensions are nominal! Be sure to measure your sink prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.
- Two people are recommended to handle and install this product as it is fragile.

SUGGESTED TOOLS & MATERIALS:

Safety
Glasses




Wrench



Pencil




Caulk



Adhesive


1. Verify Sink Location

- Using a pencil mark the location where you want the sink to be onto the floor.

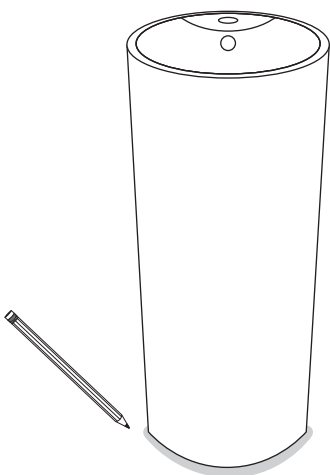


2. Connect Pipes

- Install waste and overflow into sink basin.
- Screw plumbing pipes into basin. Plumbing not included.
- 1 1/2" Discharge pipe location varies between models and may need to be re-plumbed before installation.

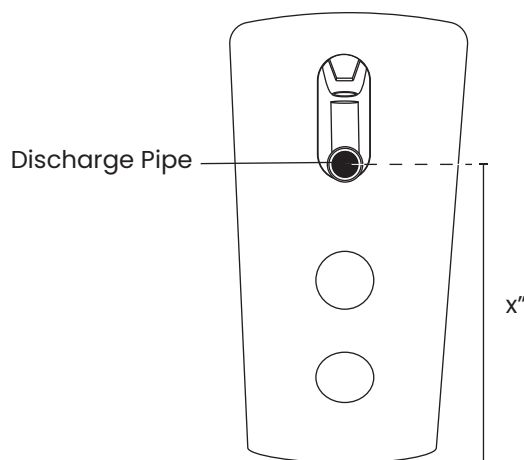

3. Connecting Plumbing

- We recommend installing faucet (not included) while back of sink is accessible.
- Align pipes in basin to plumbing in wall.
- Tighten into place, with clockwise motion.
- Water shutoff valve should be slightly above the 1 1/2" drain line coming out of the wall.

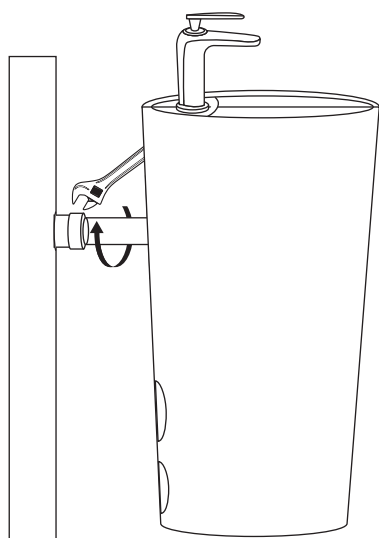

4. Seal Sink – 2 People Required

- Dry fit pedestal sink before final installation.
- Person 1- Slightly tilts sink back, so basin just barely lifts off ground. Person 2- Apply construction adhesive underneath the sink. Then both gently lower basin back to standing position.
- Caulk the sink to the floor with silicone or sealant. Do not use sink until 24 hours after sealing.

