
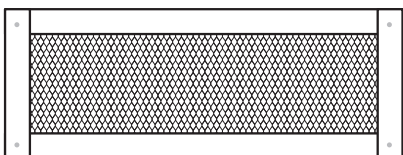
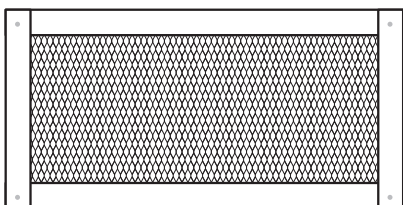


**TW144**


**Size:** 14 in. x 4 in.  
**N.F.V.:** 33 Sq. In.  
**Opening:** 12.5 in. x 2.5 in.


**TW146**


**Size:** 14 in. x 6 in.  
**N.F.V.:** 52 Sq. In.  
**Opening:** 12.5 in. x 4.5 in.


**TW148**


**Size:** 14 in. x 8 in.  
**N.F.V.:** 71 Sq. In.  
**Opening:** 12.5 in. x 6.5 in.


The opening should be *at least* 1 inch smaller than the vent size.

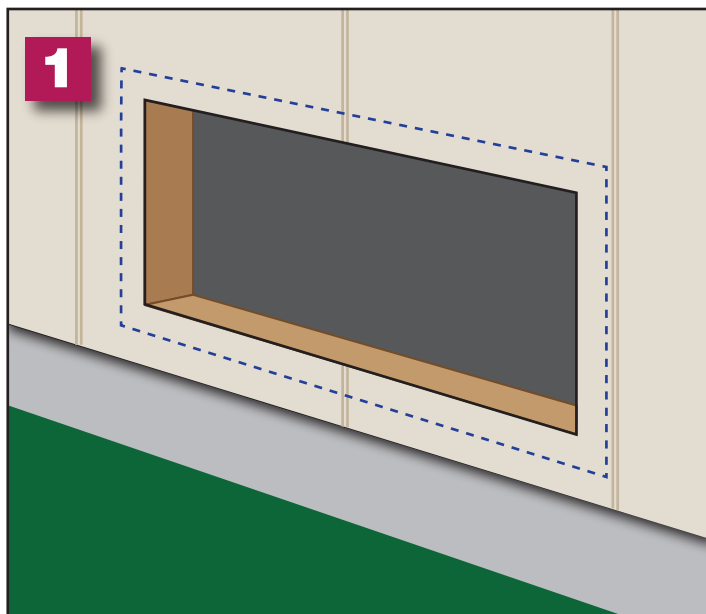

1. Remove old vent and any loose debris from opening.

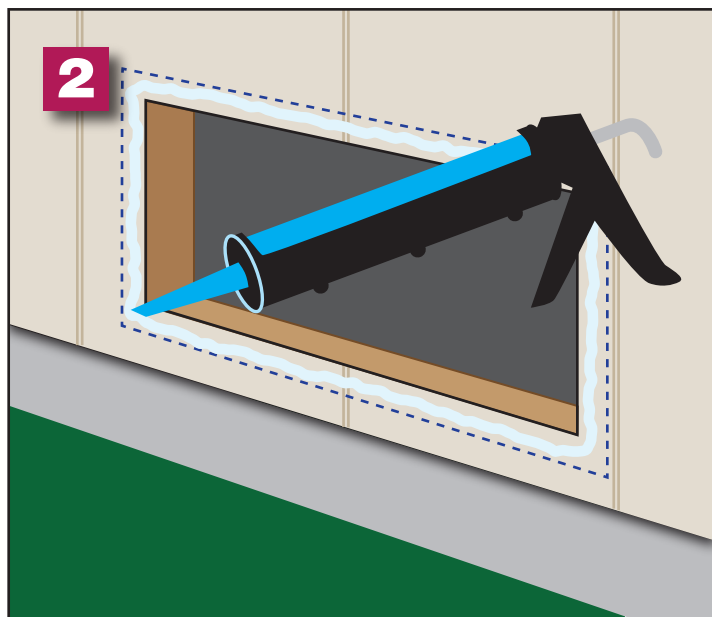

2. Apply a bead of sealant to the vent flange or wall.

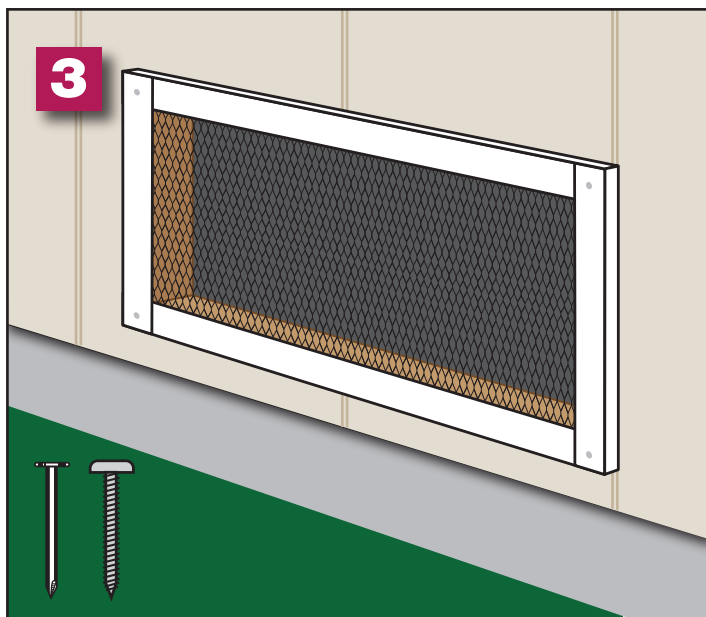

3. Using the partial punched corner fastener guides (4 per vent), fasten vent with nails or screws.

Two Way Vents can have **sharp edges**. Use gloves to prevent injury. This product is not recommended for direct contact with treated lumber. These basic installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.