


TRIM & MOLDING PROFILES

SMARTCORE trims and moldings are designed to coordinate effortlessly with your SMARTCORE floor. Each piece is 94" long and features a waterproof core wrapped in vinyl.

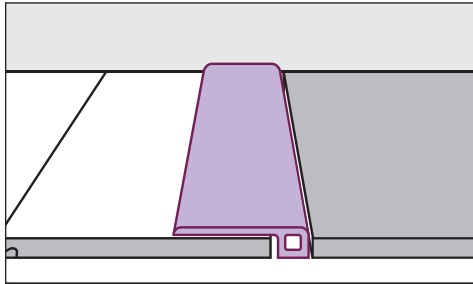


BABY THRESHOLD

Used for transitioning from a hard surface floor (SMARTCORE) to a thicker floor such as high pile carpet. It can also be used to transition between flooring and doorway thresholds, and/or around hearths and sliding glass doors.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Baby Threshold** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

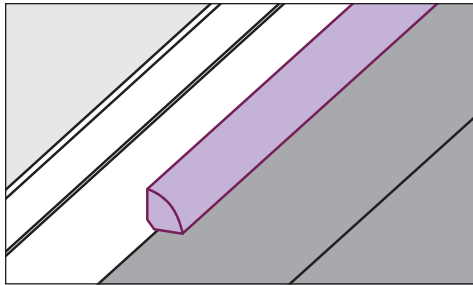


QUARTER ROUND

Used to accent the transition from the baseboards to floor surface.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Quarter Round** using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

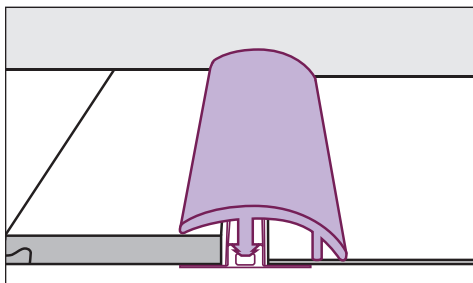


REDUCER

Used to transition from a hard surface floor (SMARTCORE) to a floor with a lower height (ceramic tile, low pile carpet).

INSTALLATION INSTRUCTIONS:

Cut **Reducer** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Reducer** into track to desired depth using rubber mallet.

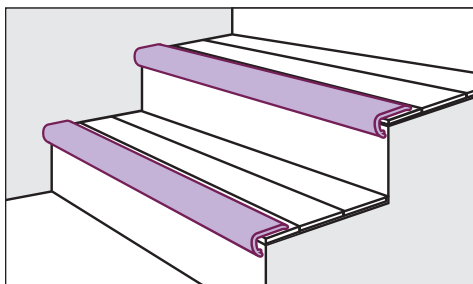


STAIRNOSE

Used to provide the finishing touch to the front stair edge when installing SMARTCORE on stairs.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Stairnose** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

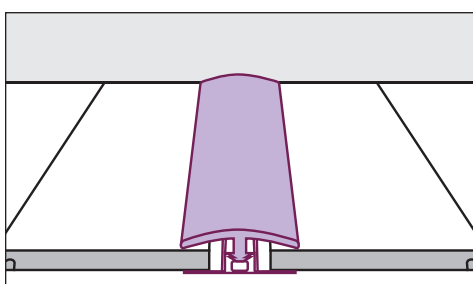






T-MOLDING

Used in doorways to join two adjacent floors that are close to the same height.

INSTALLATION INSTRUCTIONS:

Cut **T-Molding** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **T-Molding** into track to desired depth using rubber mallet.

TRIM INSTRUCTIONS & DETAILS

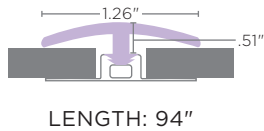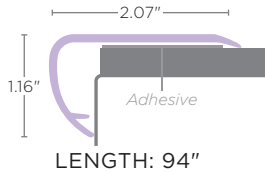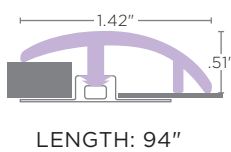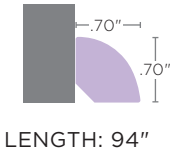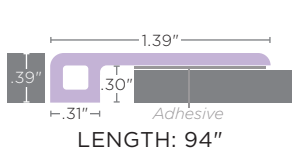

		BABY THRESHOLD		QUARTER ROUND		REDUCER		STAIRNOSE		T-MOLDING	
COLOR	PRODUCT #	SOE/SOS #	MODEL #	SOE/SOS #	MODEL #	STOCK/ SOE/SOS #	MODEL #	SOE/SOS #	MODEL #	STOCK/ SOE/SOS #	MODEL #
Blue Ridge Pine	813596	1524909	LMTSU00603	1524924	LMQSU00603	874725	R50SLVF603	874724	SC50SLVF603	874723	TM50SLVF603
Brunswick Maple	1035195	1524910	LMTSU00604	1524925	LMQSU00604	1053472	R50SLVF604	1053471	SC50SLVF604	1053470	TM50SLVF604
Columbia Oak	1035187	1524912	LMTSU00606	1524927	LMQSU00606	1055615	O1W6700606	1055623	O1W9200606	1055631	O2W5900606
Florence Travertine	1035192	1524918	LMTSU01205	1524932	LMQSU01205	1055620	O1W6701205	1055628	O1W9201205	1055636	O2W5901205
Huntington Oak	1035188	1524913	LMTSU00607	1524928	LMQSU00607	1055616	O1W6700607	1055624	O1W9200607	1055632	O2W5900607
Lexington Oak	813595	1524907	LMTSU00601	1524922	LMQSU00601	874722	R50SLVF601	874721	SC50SLVF601	874720	TM50SLVF601
Lucca Stone	1035194	1524920	LMTSU01207	1524934	LMQSU01207	1055622	O1W6701207	1055630	O1W9201207	1055638	O2W5901207
Midnight Slate	960344	1053814	70BT37405X	1053815	70QR37405XH	1053816	70R37405X	1053817	70ST37405X	1053818	70TM37405X
Norfolk Pine	1035189	1524914	LMTSU00608	1524929	LMQSU00608	1055617	O1W6700608	1055625	O1W9200608	1055633	O2W5900608
Richmond Oak	1035190	1524915	LMTSU00609	1524930	LMQSU00609	1055618	O1W6700609	1055626	O1W9200609	1055634	O2W5900609
Savannah Oak	1035196	1524911	LMTSU00605	1524926	LMQSU00605	1053475	R50SLVF605	1053474	SC50SLVF605	1053473	TM50SLVF605
Siena Stone	1035191	1524917	LMTSU01204	1524931	LMQSU01204	1055619	O1W6701204	1055627	O1W9201204	1055635	O2W5901204
Tivoli Travertine	784528	1524916	LMTSU01202	1524921	LMQSU01202	1053478	R50SLVF1202	1053477	SC50SLVF1202	1053476	TM50SLVF1202
Venice Stone	1035193	1524919	LMTSU01206	1524933	LMQSU01206	1055621	O1W6701206	1055629	O1W9201206	1055637	O2W5901206
Woodford Oak	813594	1524908	LMTSU00602	1524923	LMQSU00602	874719	R50SLVF602	874718	SC50SLVF602	874717	TM50SLVF602