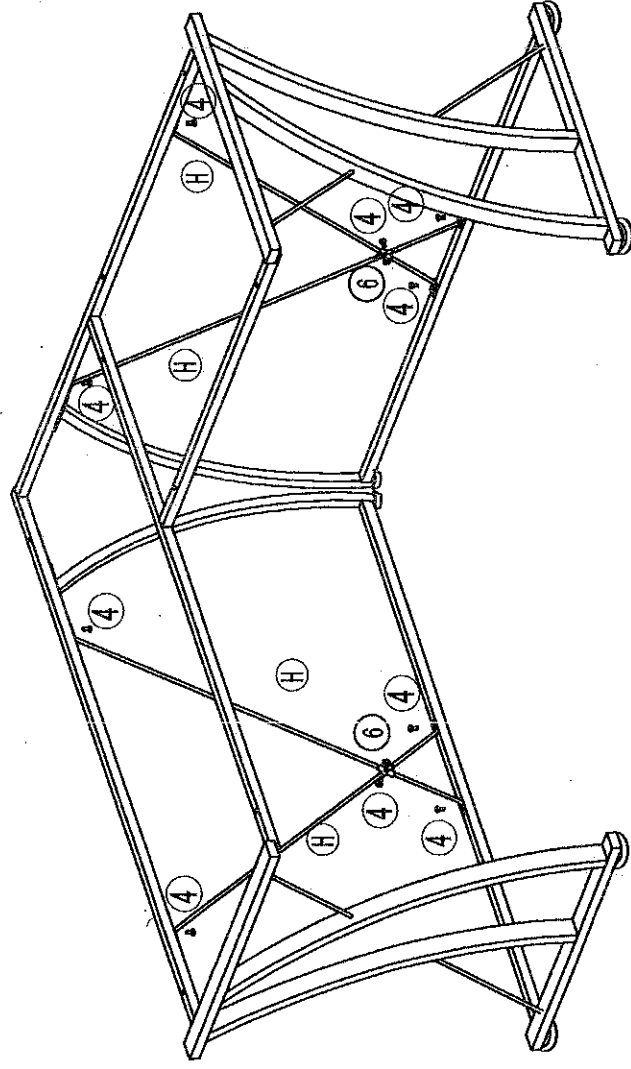
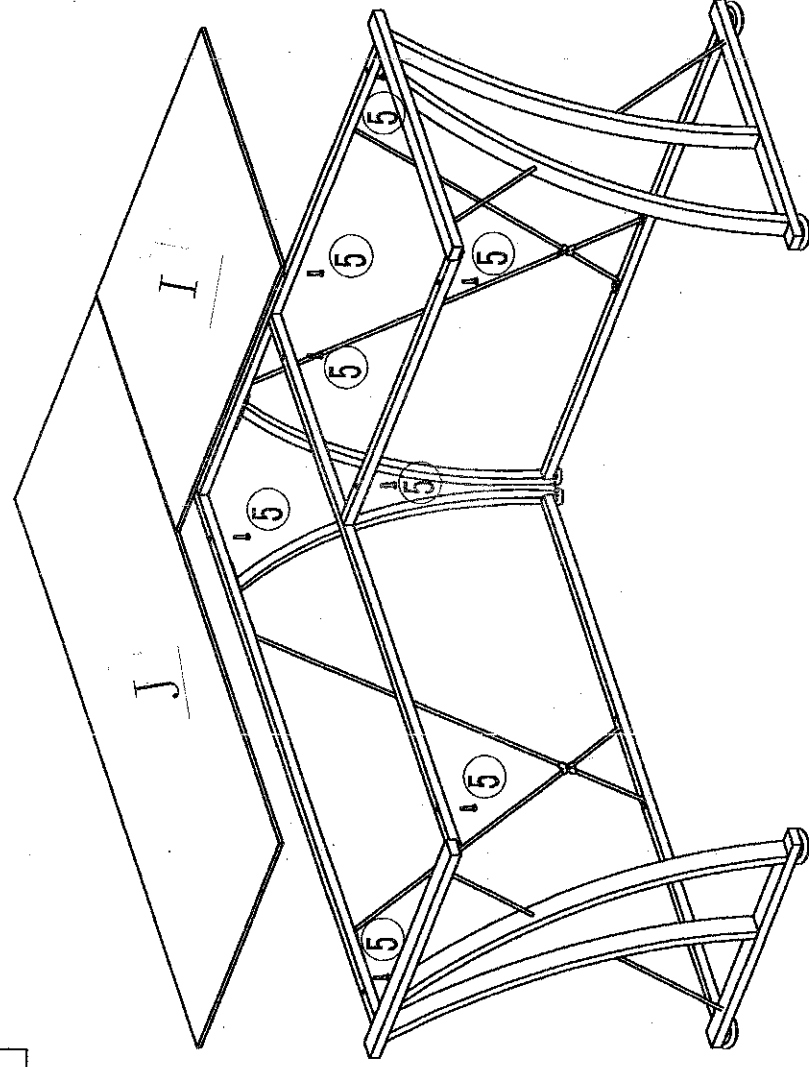


3



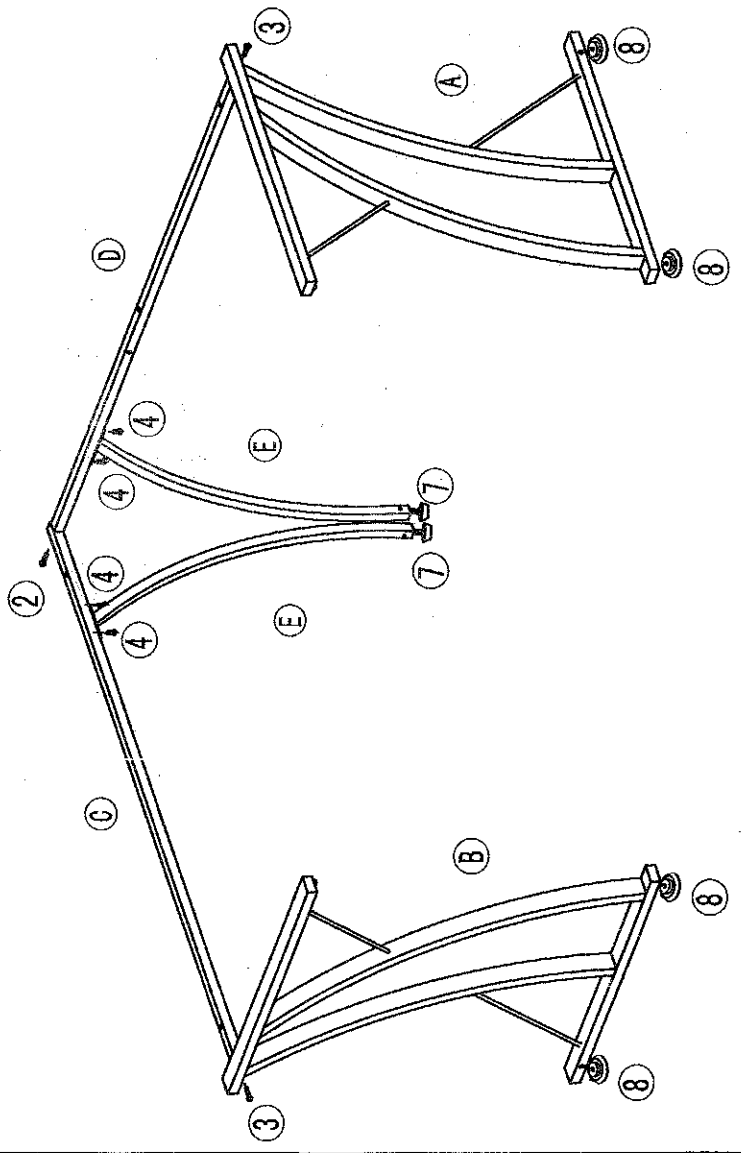
4 X10
6 X2

4




5 X8

1











- 2 X1
- 3 X2
- 4 X4
- 7 X2
- 8 X4

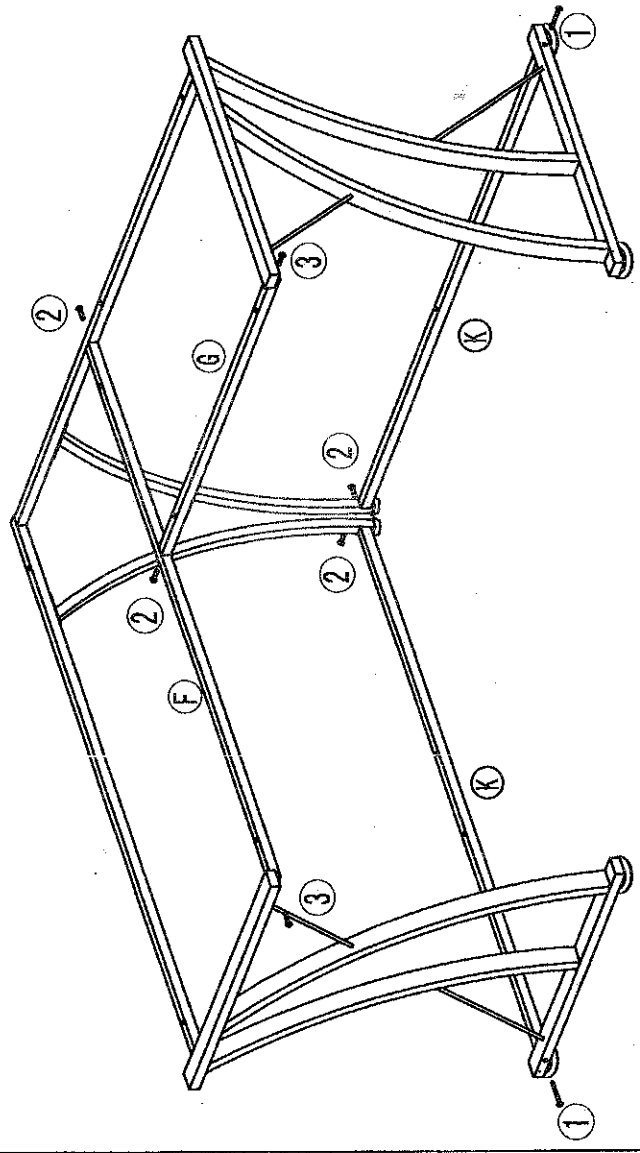2




- 1 X2
- 2 X4
- 3 X2

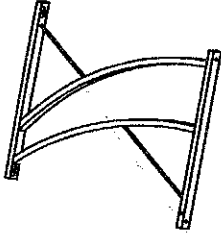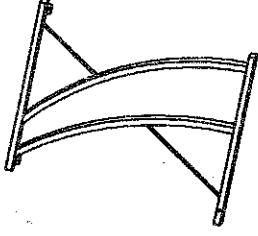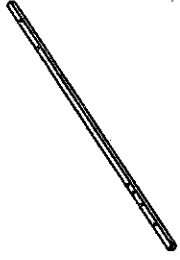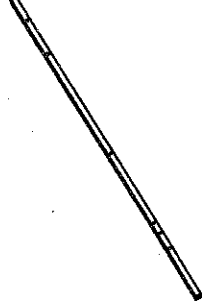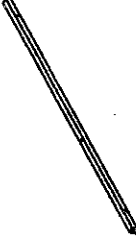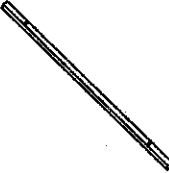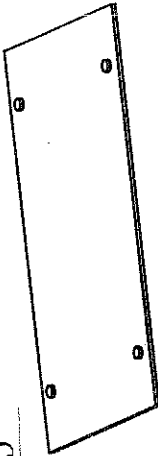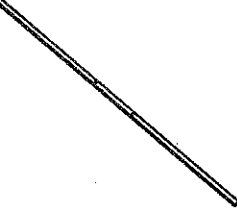PART

A  x1	B  x1	C  x1
D  x1	E  x2	F  x1
G  x1	H  x4	J  x1
I  x1	K  x2	
1  M6x55 X2	5  M6X25 X8	
2  M6X35 X5	6  X2	
3  M6X20 X4	7  M6 X2	
4  M6X12 X14	8  X4	

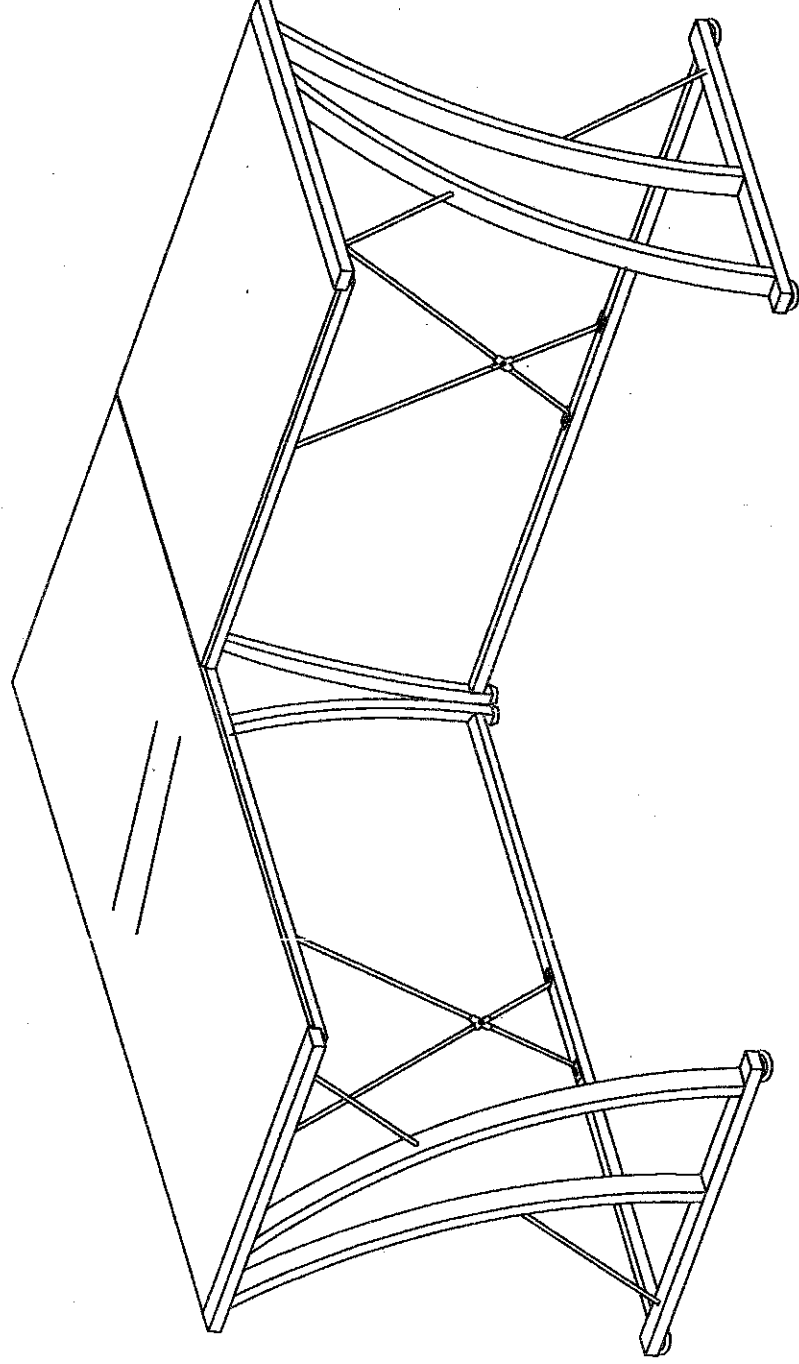NAN-WK-096-GG



IMPORTANT: DON'T FASTEN BOLTS UNTIL ALL PARTS IN POSITION.