

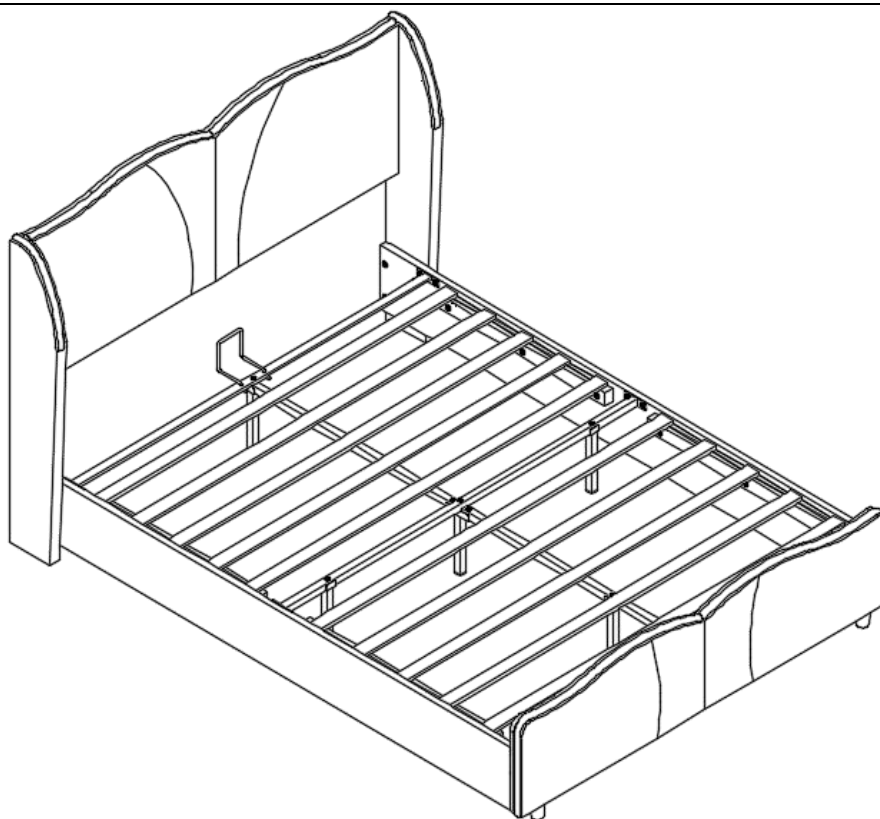
Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
 - ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  • Do not put hot items directly on furniture surface.
 - ⊘  • Do not clean furniture with harsh cleansers or polish.
 - ⊘  • Do not place furniture under direct sunlight.
 - ⊘  • Do not place furniture near heating or cooling vents.
 - ⊘  • Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  • Do not place furniture outside . For indoor use only.
 - ⊘  • Stains may be removed with mild soap solution and damp cloth.
 - ⊘  • Children should not climb or jump on the furniture.
-
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

BED













NOTE : This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.


The Daybed is **HEAVY**.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.

Parts List

Label	Picture	Description	QTY
A1		Front and back support feet	2
A2		Middle support foot	1
A3		Side support foot	2
A4		Angle iron	2
A5		Bedside connecting rod	1
A6		Middle connecting rod of the bed	1
A7		Bed tail connecting rod	1
A8		The connecting rod in front of the bed	1
B1		The head of the bed	1
B2		The end of the bed	1
B3		The side panel of the bed on the left	1
B4		The side panel of the bed on the right	1
B5		Headboard side panel	1
B6		Headboard side panel	1
B7		Bed frame support strip	2
B8		Angle iron	1
C		Plastic feet	2









Hardware

Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolt(M8 x 50mm)	19
③		Bolt(M8 x 20mm)	18
④		Washer	37





Assembly Preparation

Before
Beginning
Assembly:

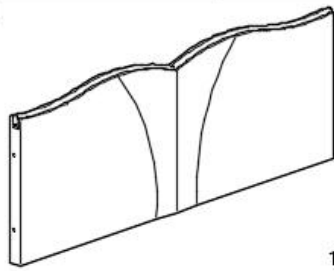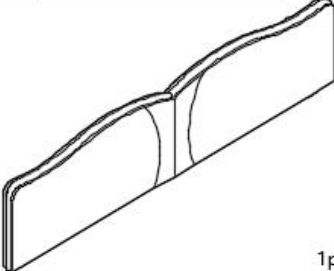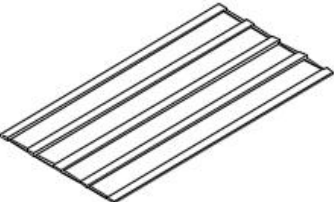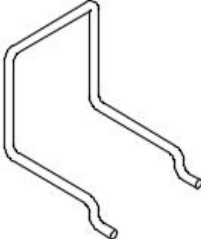N761P261920

A1  2pcs	A2  1pcs	A3  2pcs	A4  2pcs	A5  1pcs	A6  1pcs
C  2pcs	1  M8	2  M8*50	3  M8*20	4  M8*19	37pcs
B1  1pcs	B2  1pcs	B5  1pcs	B6  1pcs	B7  2pcs	B8  1pcs

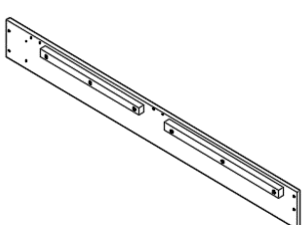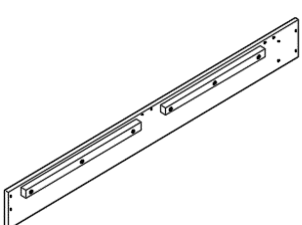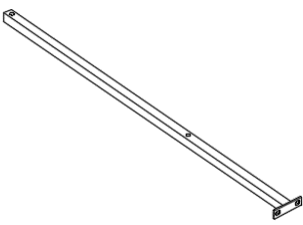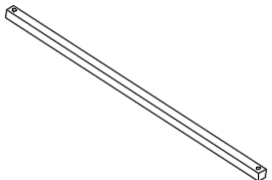N761P261919

B3  1pcs	B4  1pcs	A7  1pcs	A8  1pcs
---	---	--	---



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



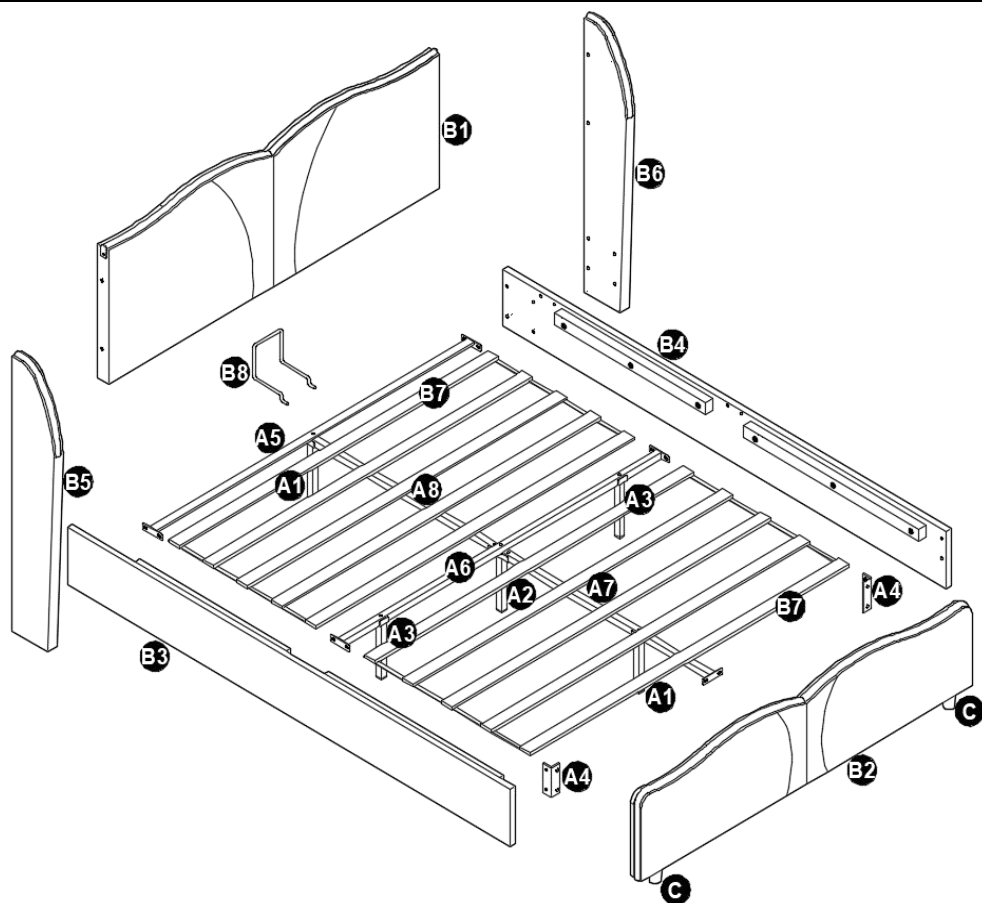
- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-



This Bed has multiple parts and may require up to 60 minutes to assemble.
To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective.
Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1


- | | | |
|---|--|----|
| ① | | X1 |
| ② | | X4 |
| ④ | | X4 |

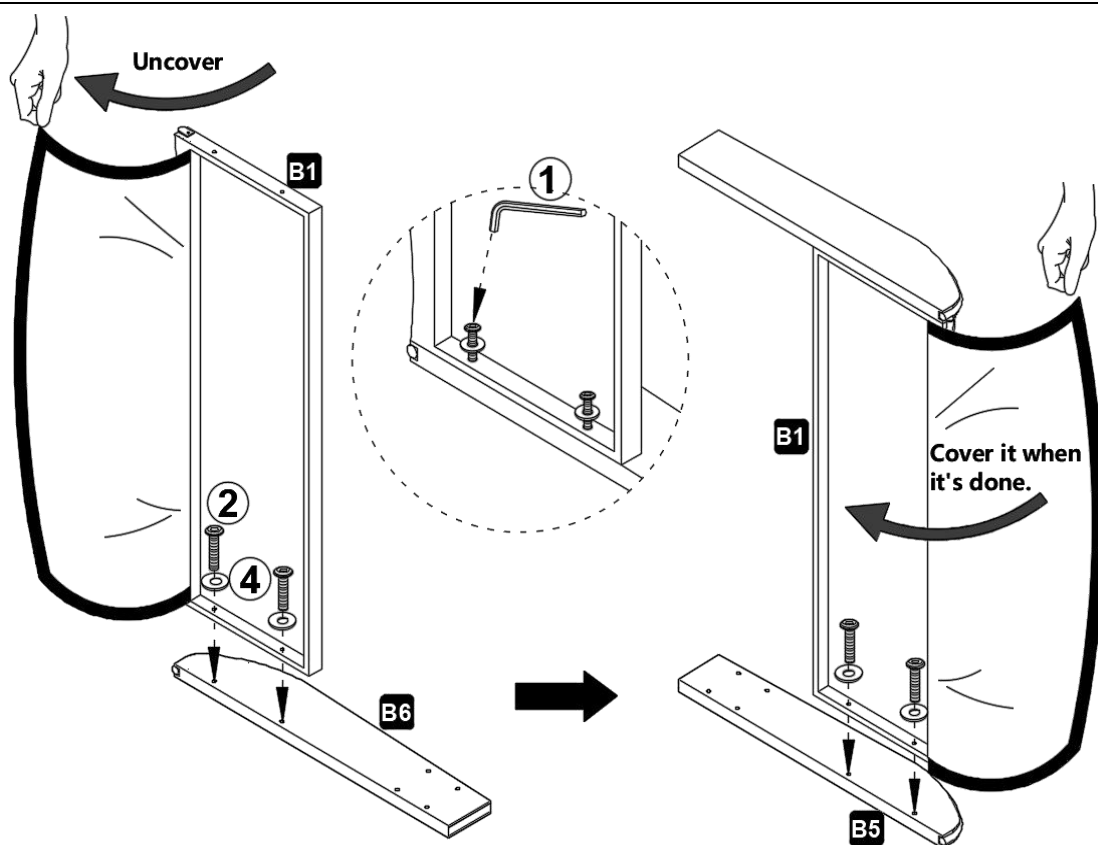

First of all, uncover the cover cloth behind the headboard (B1), correspond to the bedside sideboard (B5&B6) on the left and right sides, corresponding to the holes, use the Allen wrench (1), screw (2) and gasket (4) to fix them, and then cover the cover cloth.


Step 2

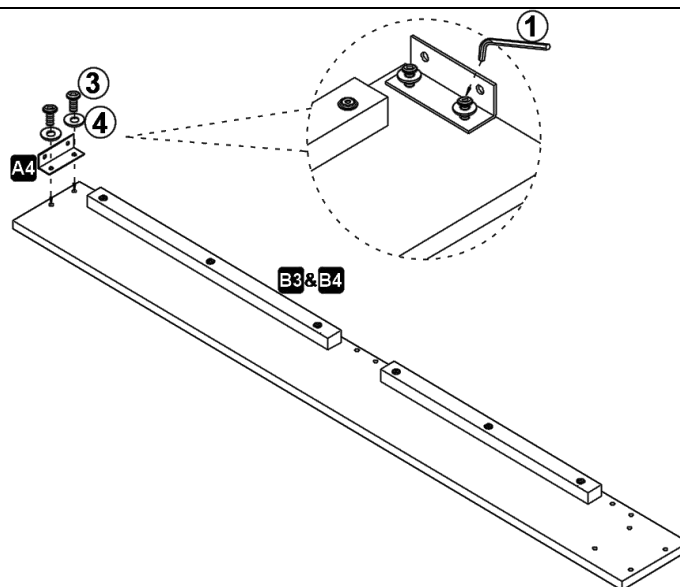- ①  X1
- ③  X4
- ④  X4



Use the Allen wrench (1), screw (3) and gasket (4) to secure the angle iron (A4) to the bed side plate (B3&B4).

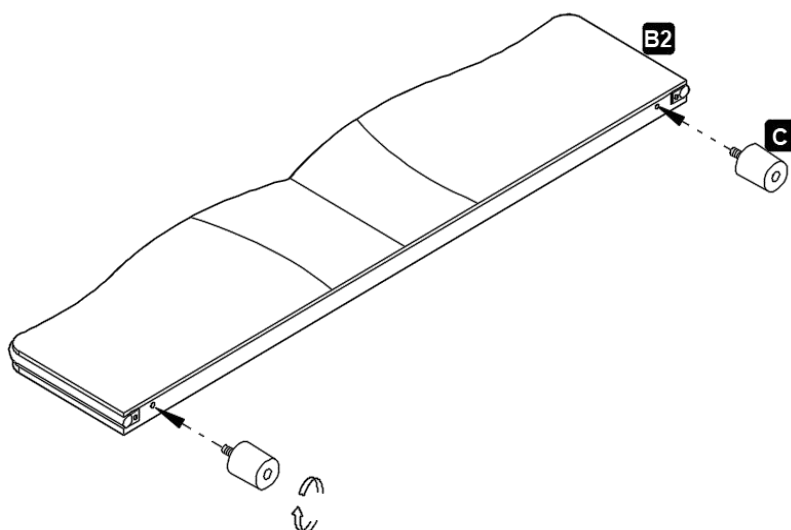
Step 3



The plastic foot (C) is fixed clockwise on the corresponding position at the end of the bed (B2).

Step 4

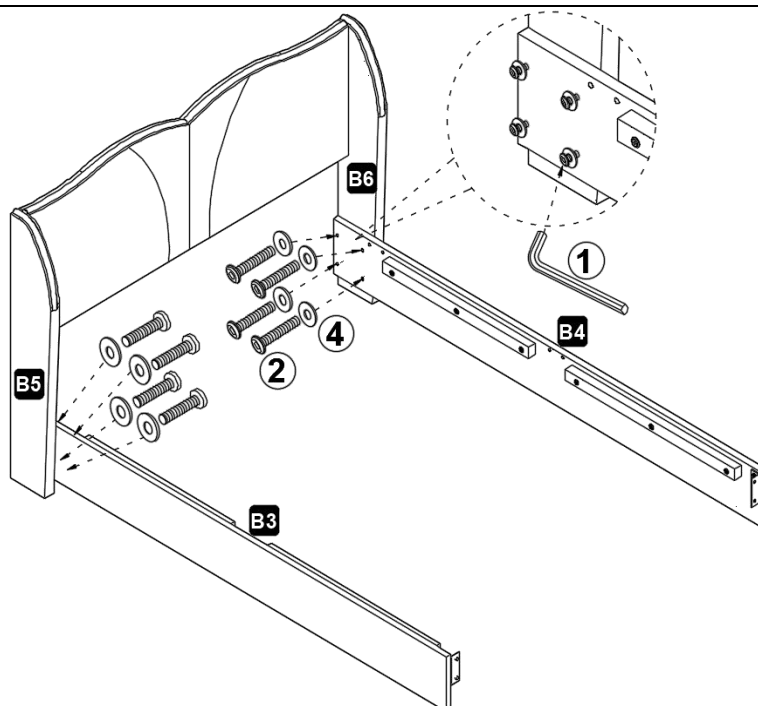- ①  X1
- ②  X8
- ④  X8




Use Allen wrench (1), screw (2) and gasket (4) to fix the bed side panel (B3&B4) to the headboard side panel (B5&B6).

Step 5

① X1

③ X4

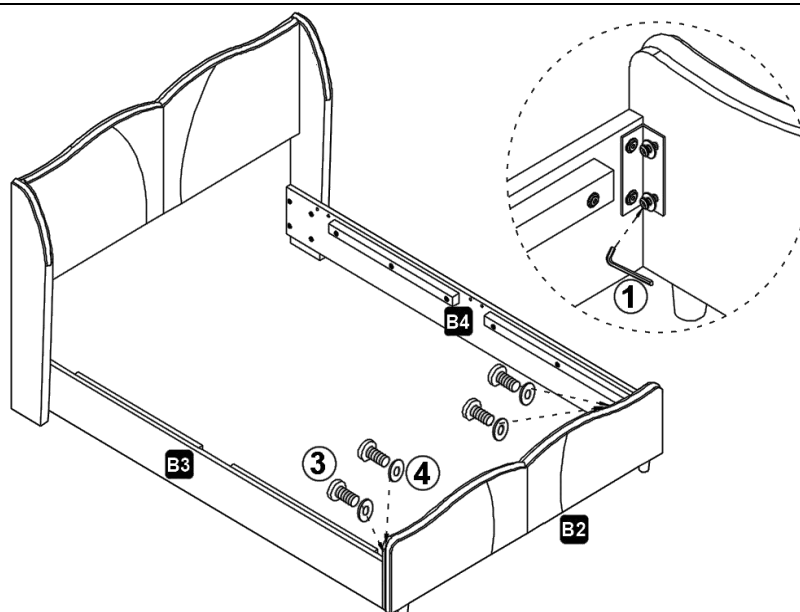④ X4




Use Allen wrench (1), screw (3) and gasket (4) to fix the bed side panel (B3&B4) to the end of the bed (B2)

Step 6

① X1

② X3

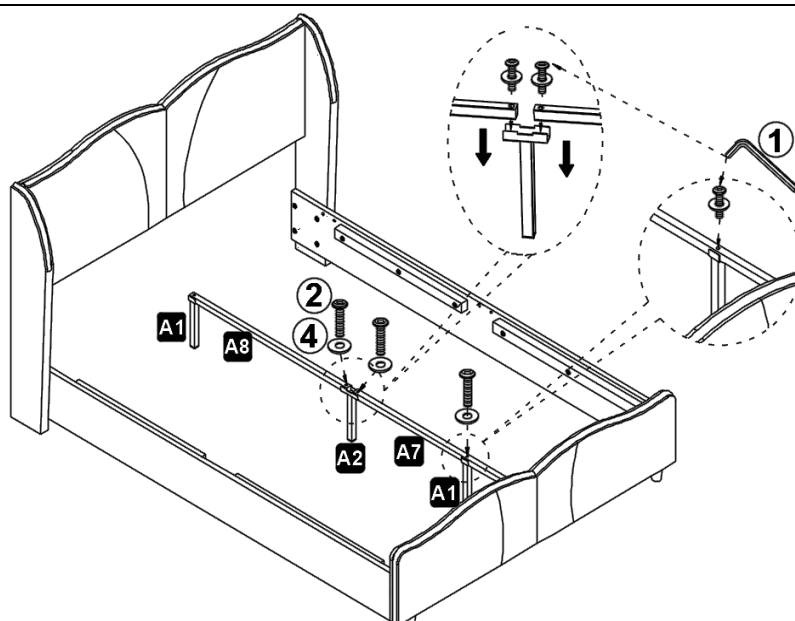④ X3




Use Allen wrench (1), screw (2) and gasket (4) to assemble the front and rear feet (A1), the in-bed (A2), the front connecting rod (A8) and the end of the bed (A7) as shown in the figure.

Step 7

① X1

③ X10

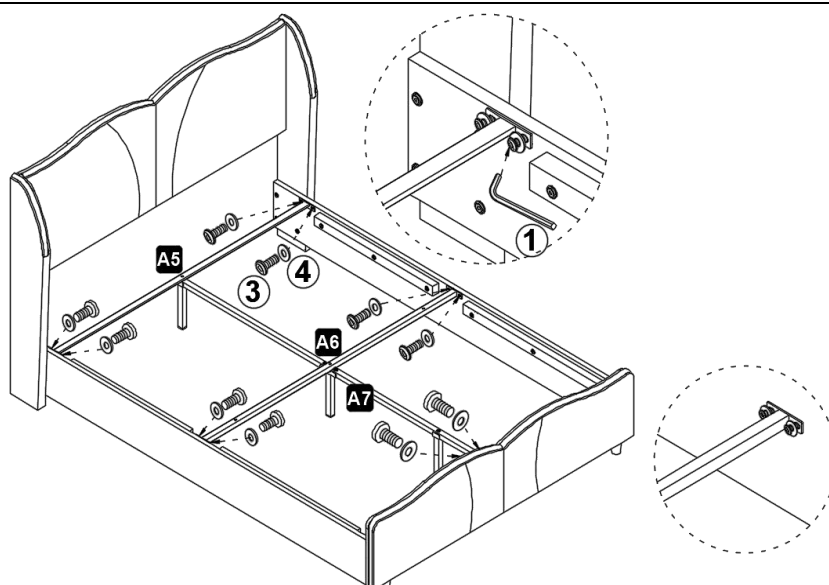
④ X10



As shown in the figure, place the bedside connecting rod (A5) and the in-bed connecting rod (A6) in the corresponding position, use Allen wrench (1), screw (3) and gasket (4) to fix it on the side of the bed, and finally fix the connecting rod (A7) at the end of the bed.


Step 8

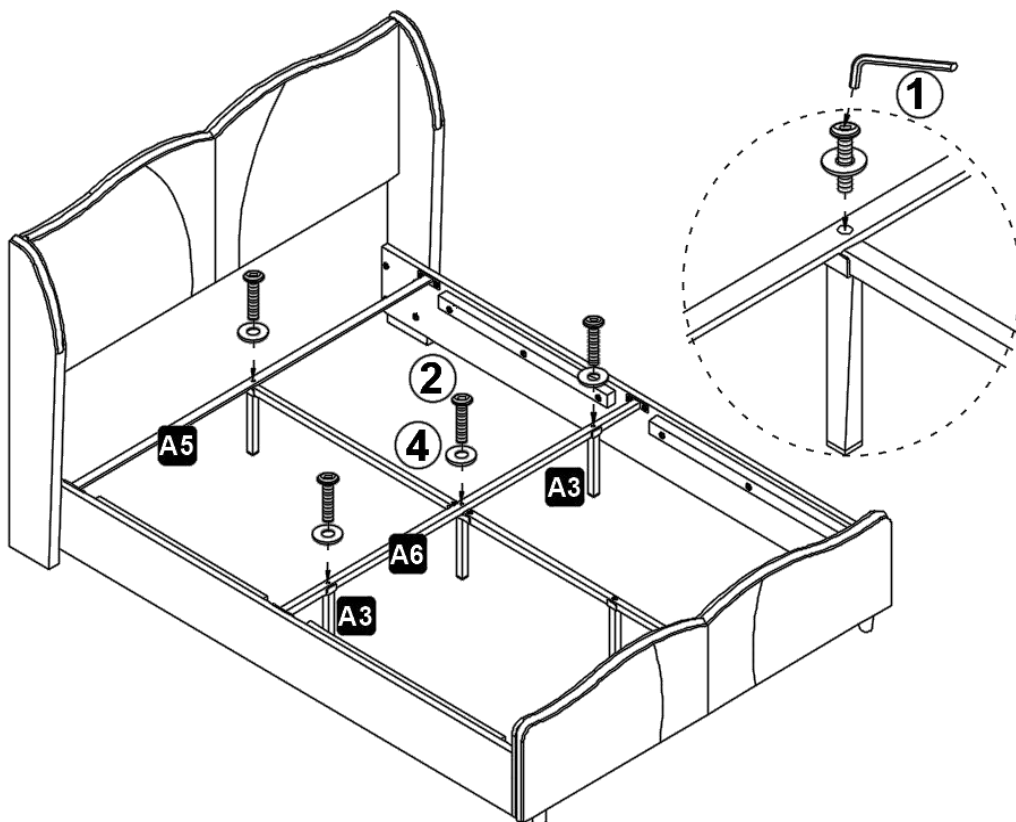- ①  X1
- ②  X4
- ④  X4




As shown in the figure, use the Allen wrench (1), screw (2) and shim (4) to secure the bed side foot (A3) and the bedside connecting rod (A5) and the bed connecting rod (A6).

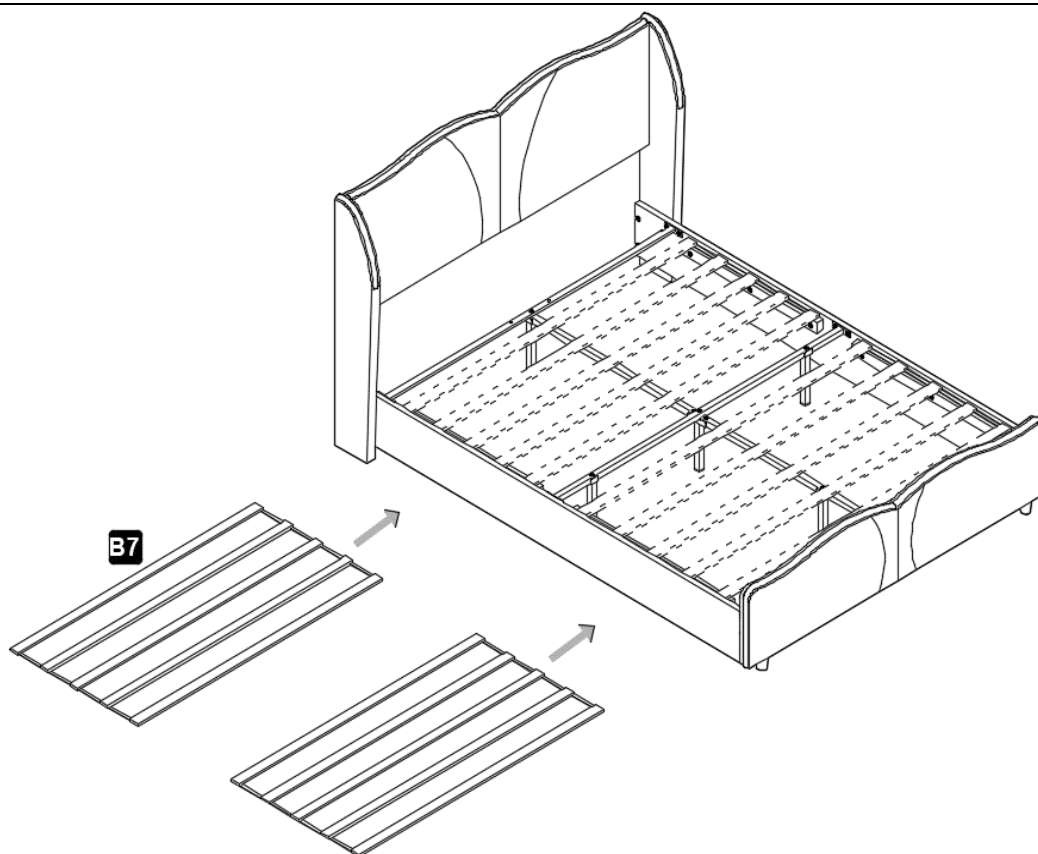Step 9




Place the bed frame strip (B7) on the assembled bed frame and paste the magic strip into place.

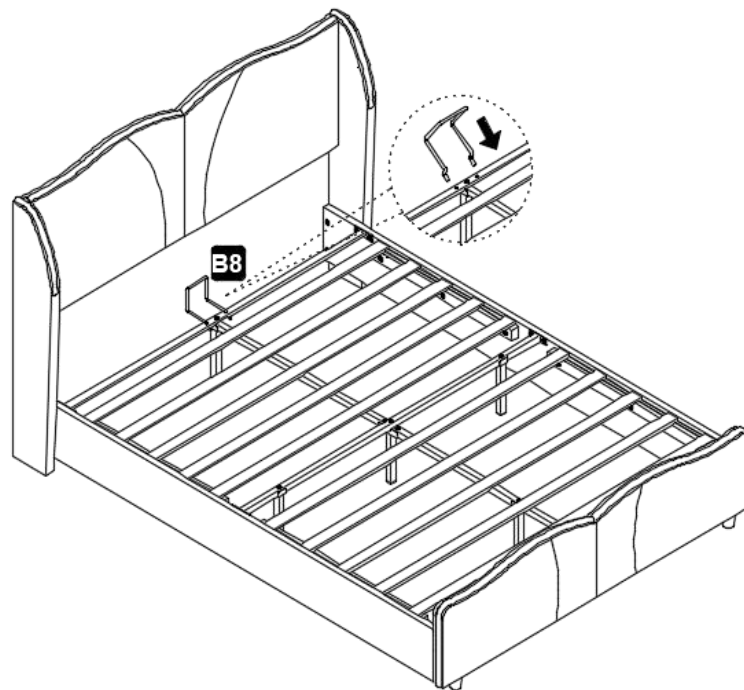Step 10



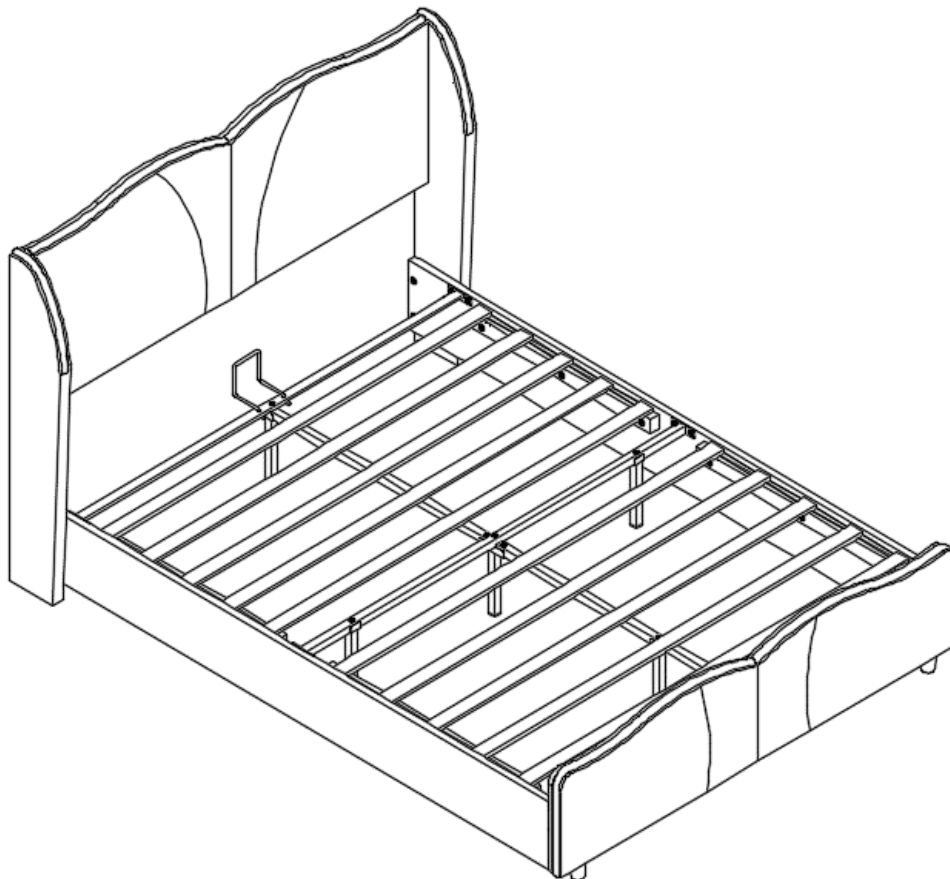Insert the angle iron (B8) diagonally into the corresponding hole and place it straight.



Your bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.

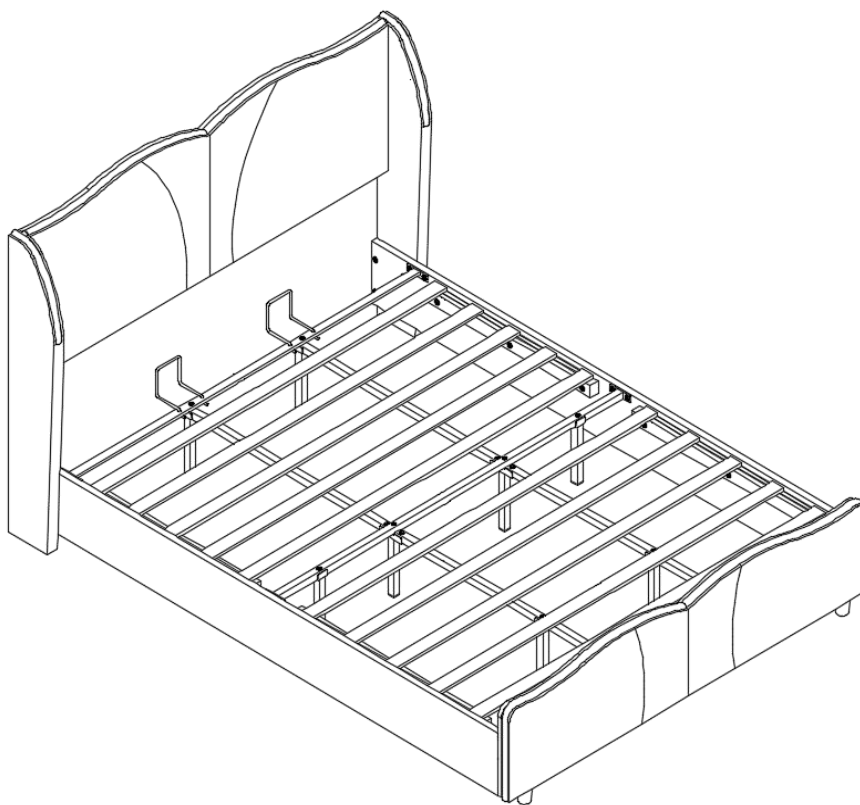
Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  Not for commercial use. For residential use only.
 - ✓  Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  Do not put hot items directly on furniture surface.
 - ⊘  Do not clean furniture with harsh cleansers or polish.
 - ⊘  Do not place furniture under direct sunlight.
 - ⊘  Do not place furniture near heating or cooling vents.
 - ⊘  Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  Do not place furniture outside . For indoor use only.
 - ⊘  Stains may be removed with mild soap solution and damp cloth.
 - ⊘  Children should not climb or jump on the furniture.
-
- ✓  Dust and pick-up spills using a clean, non-colored, lint-free cloth.

BED












NOTE : This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.


The Daybed is **HEAVY**.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.

Parts List

Label	Picture	Description	QTY
A1		Front and back support feet	4
A2		Middle support foot	2
A3		Side support foot	2
A4		Angle iron	2
A5		Bedside connecting rod	1
A6		Middle connecting rod of the bed	2
A7		Bed tail connecting rod	2
A8		The connecting rod in front of the bed	2
B1		The head of the bed	1
B2		The end of the bed	1
B3		The side panel of the bed on the left	1
B4		The side panel of the bed on the right	1
B5		Headboard side panel	1
B6		Headboard side panel	1
B7		Bed frame support strip	2
B8		Angle iron	2
C		Plastic feet	2


Hardware

Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolt(M8 x 50mm)	24
③		Bolt(M8 x 20mm)	20
④		Washer	44


Assembly Preparation

Before
Beginning
Assembly:

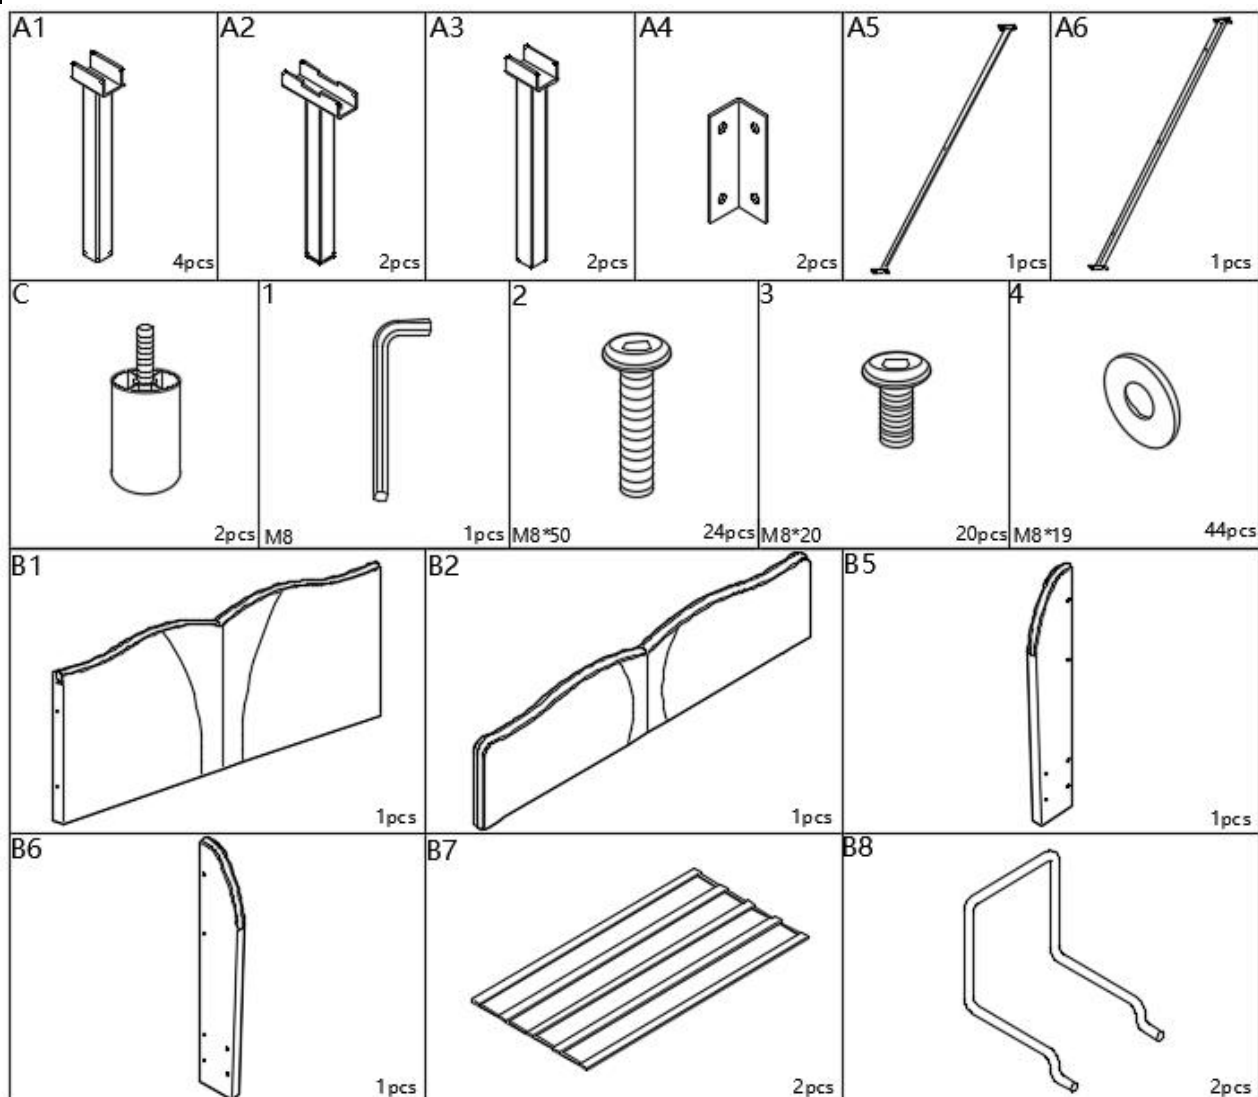N761P262153



N761P262156

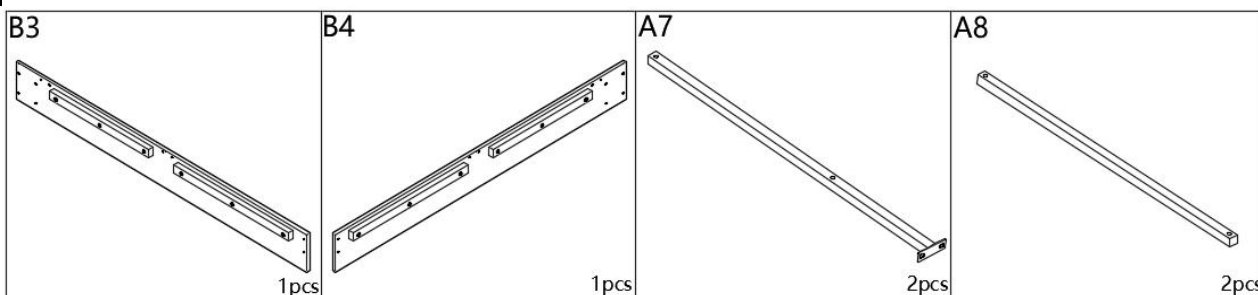

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



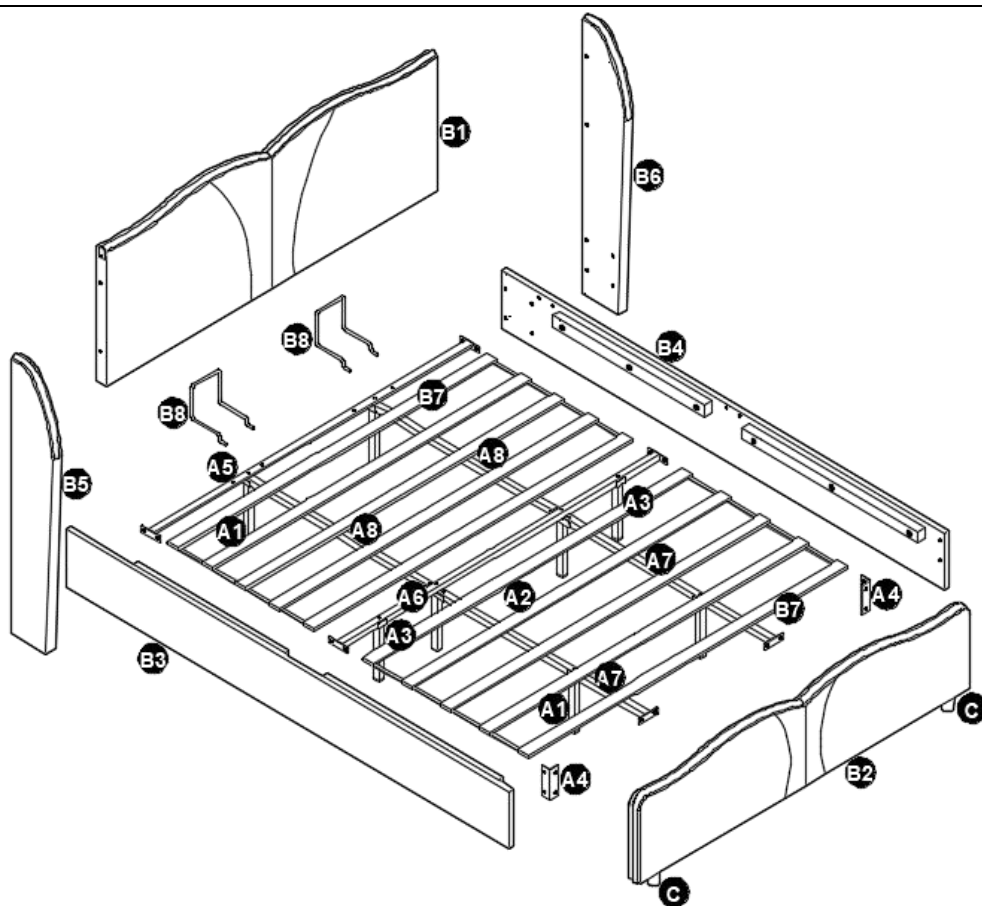
- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-



This Bed has multiple parts and may require up to 60 minutes to assemble.
To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective.
Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

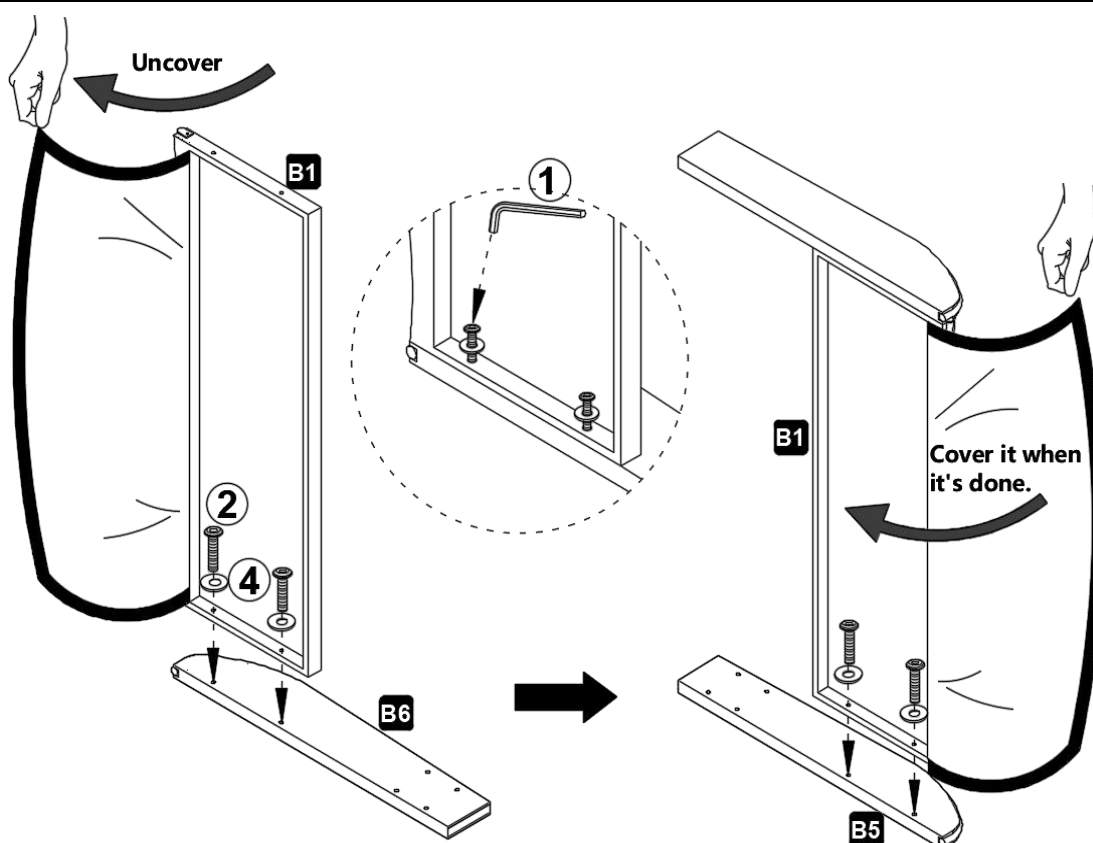
- ①  X1
- ②  X4
- ④  X4



First of all, uncover the cover cloth behind the headboard (B1), correspond to the bedside sideboard (B5&B6) on the left and right sides, corresponding to the holes, use the Allen wrench (1), screw (2) and gasket (4) to fix them, and then cover the cover cloth.


Step 2

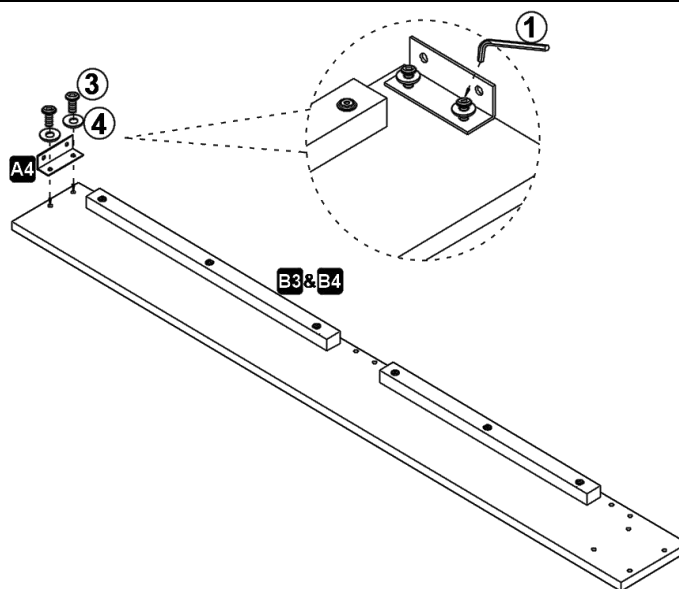- ①  X1
- ③  X4
- ④  X4



Use the Allen wrench (1), screw (3) and gasket (4) to secure the angle iron (A4) to the bed side plate (B3&B4).

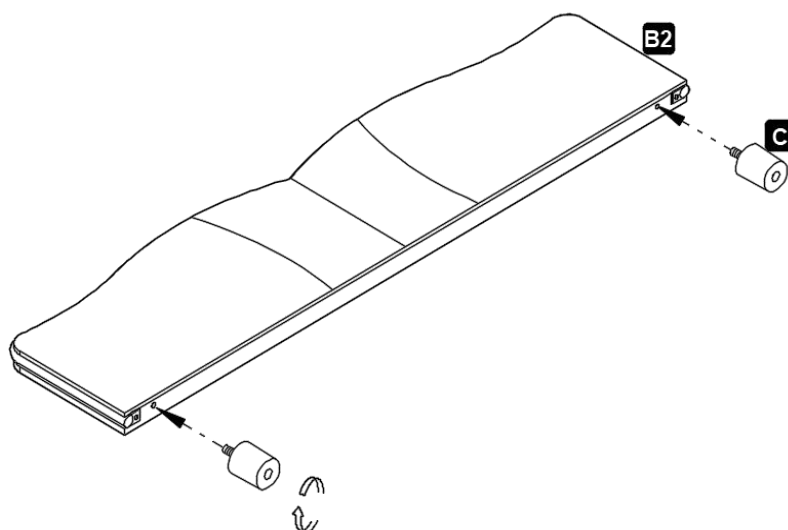
Step 3



The plastic foot (C) is fixed clockwise on the corresponding position at the end of the bed (B2).

Step 4

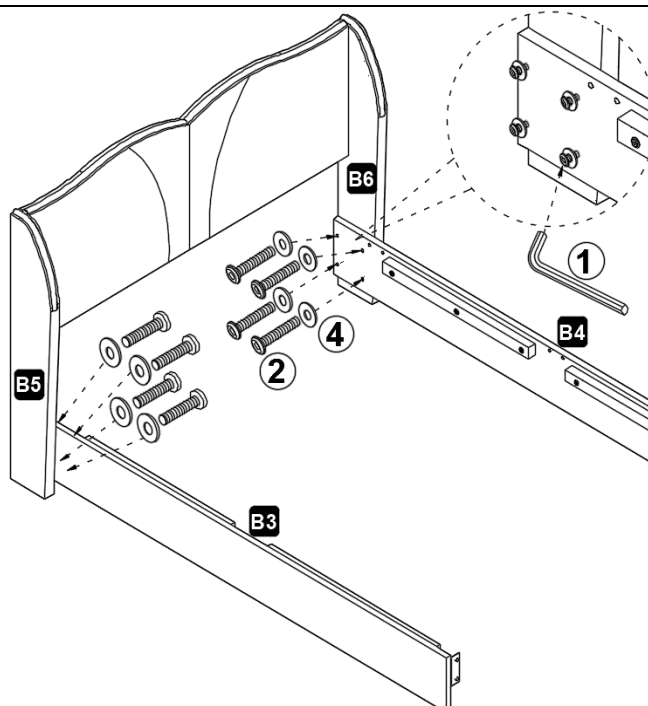
- ①  X1
- ②  X8
- ④  X8



Use Allen wrench (1), screw (2) and gasket (4) to fix the bed side panel (B3&B4) to the headboard side panel (B5&B6).

Step 5

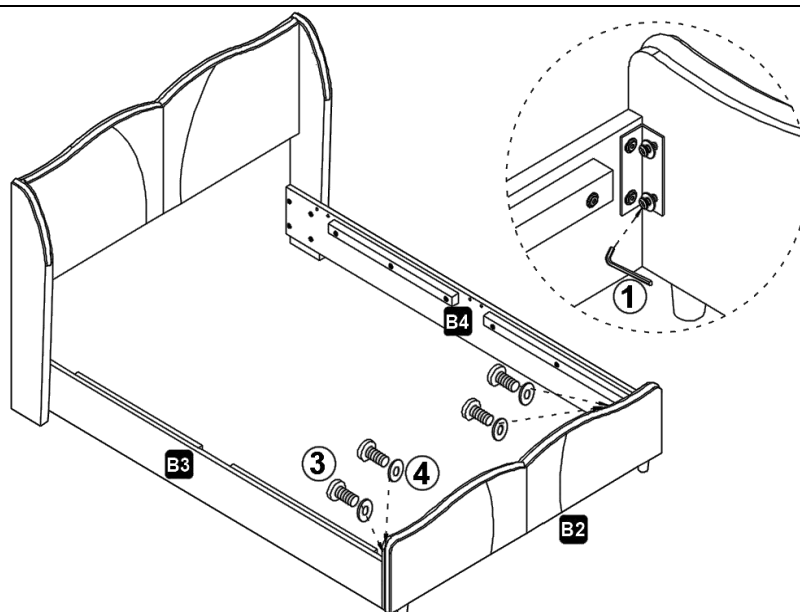
- ①  X1
- ③  X4
- ④  X4



Use Allen wrench (1), screw (3) and gasket (4) to fix the bed side panel (B3&B4) to the end of the bed (B2)

Step 6

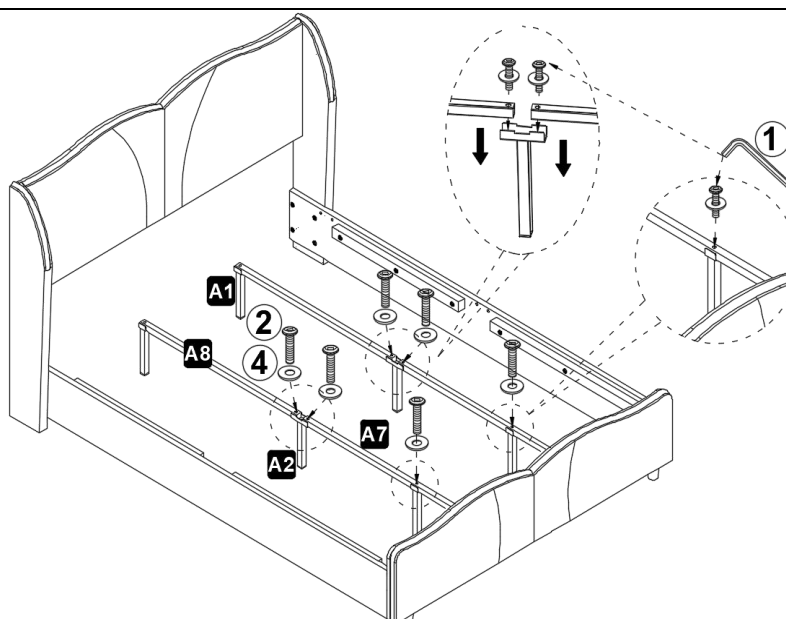
- ①  X1
- ②  X6
- ④  X6



Use Allen wrench (1), screw (2) and gasket (4) to assemble the front and rear feet (A1), the in-bed (A2), the front connecting rod (A8) and the end of the bed (A7) as shown in the figure.

Step 7

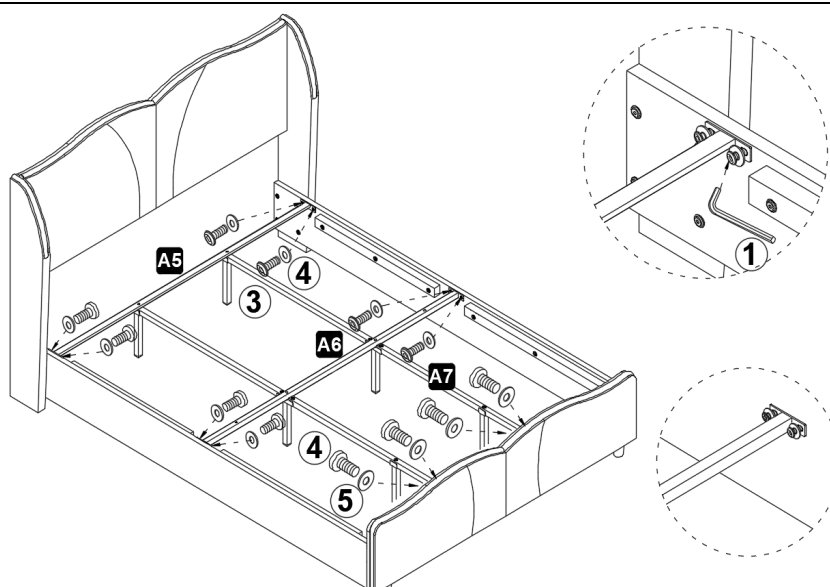
- ①  X1
- ③  X12
- ④  X12



As shown in the figure, place the bedside connecting rod (A5) and the in-bed connecting rod (A6) in the corresponding position, use Allen wrench (1), screw (3) and gasket (4) to fix it on the side of the bed, and finally fix the connecting rod (A7) at the end of the bed.


Step 8

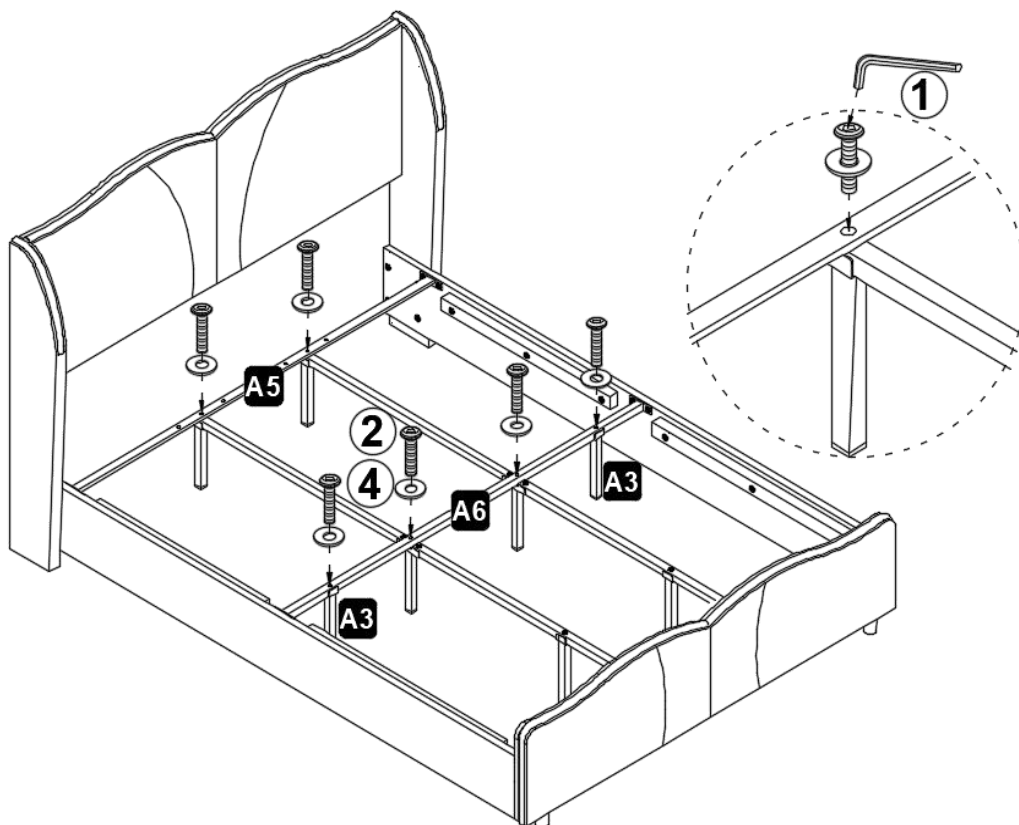- ①  X1
- ②  X6
- ④  X6




As shown in the figure, use the Allen wrench (1), screw (2) and shim (4) to secure the bed side foot (A3) and the bedside connecting rod (A5) and the bed connecting rod (A6).

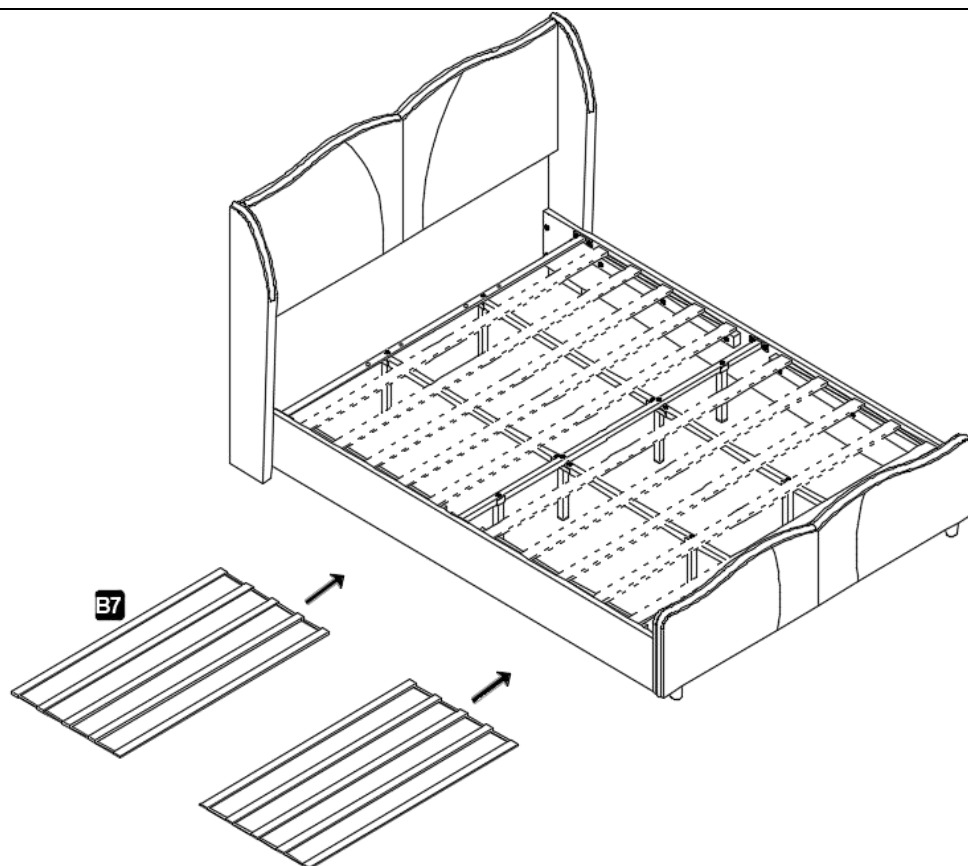Step 9




Place the bed frame strip (B7) on the assembled bed frame and paste the magic strip into place.

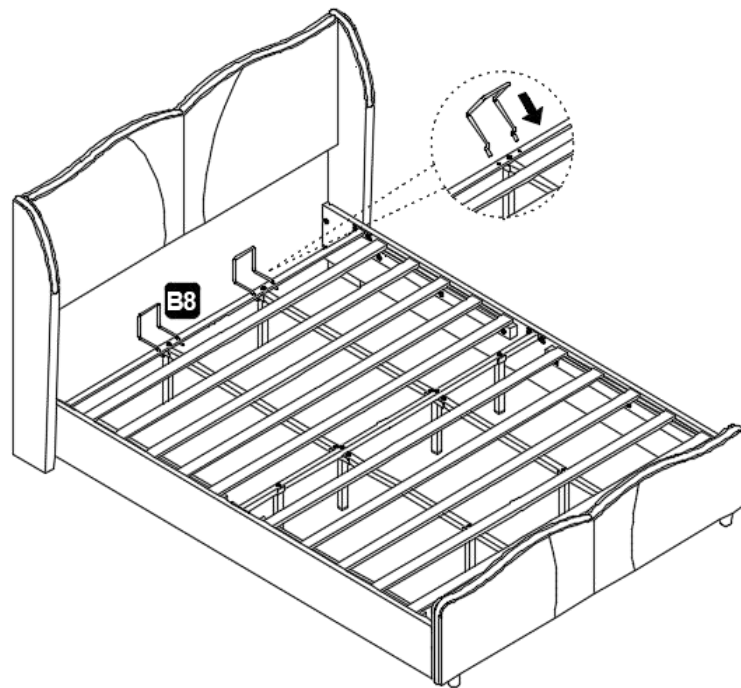Step 10



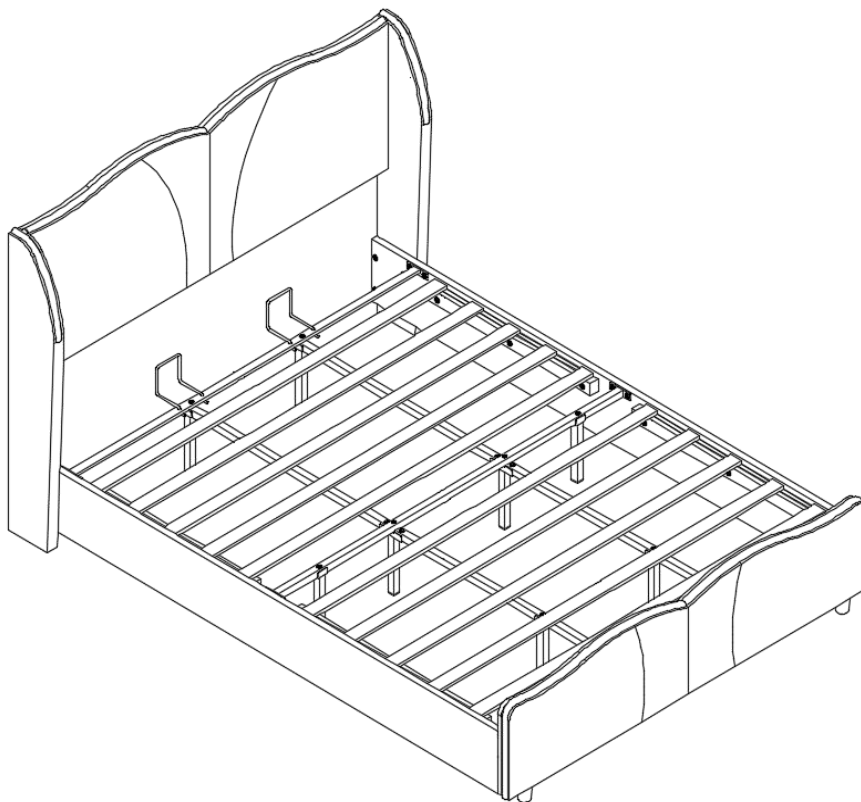Insert the angle iron (B8) diagonally into the corresponding hole and place it straight.



Your bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.