




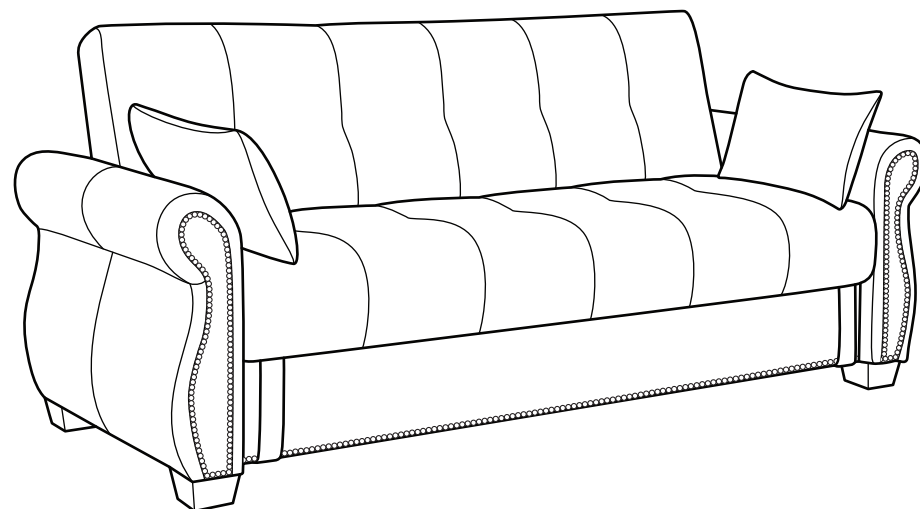


AVANZO 2

ASSEMBLY INSTRUCTIONS


PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

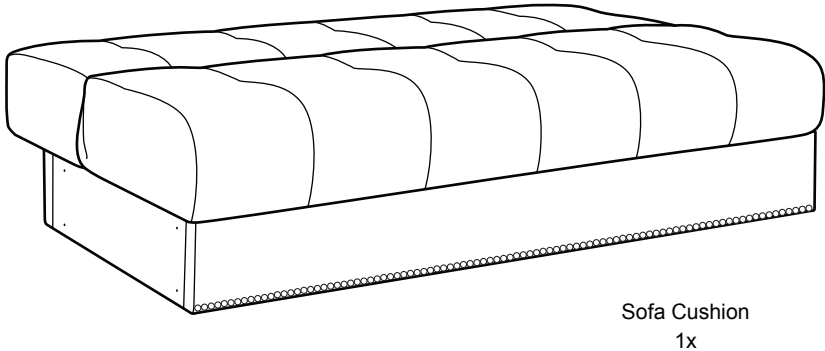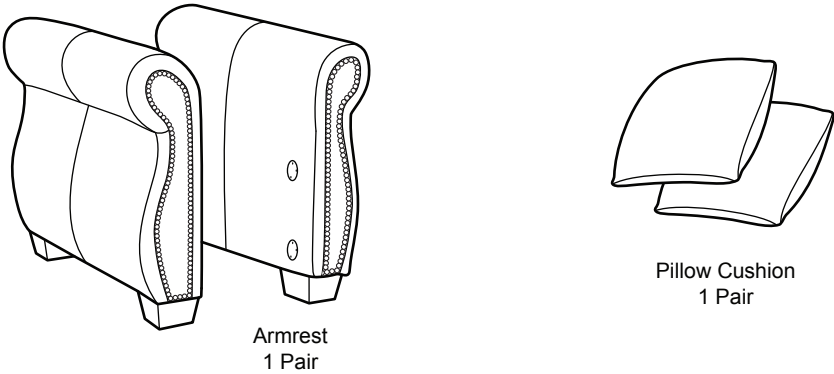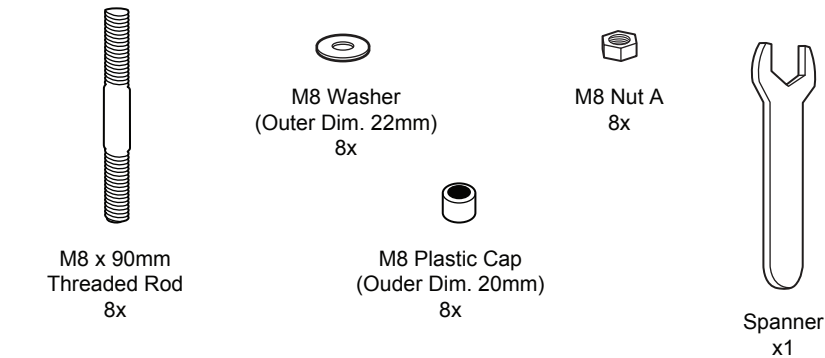


IMPORTANT

Ensure that the support legs are extended out (behind the backrest) when using it as a bed.

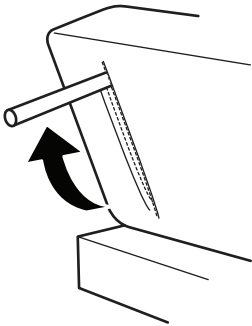


Accessing Storage Compartment

Simply lift the sofa seat cushion up from the front. Keep closed at all times.

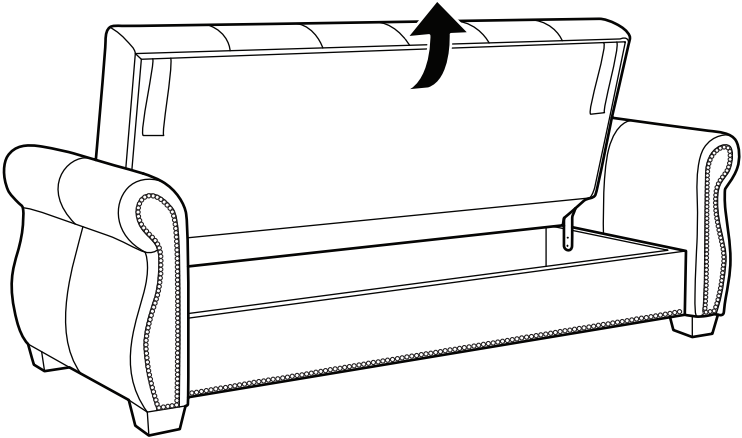


When not using storage compartment, secure safety strap with velcro to sofa base.

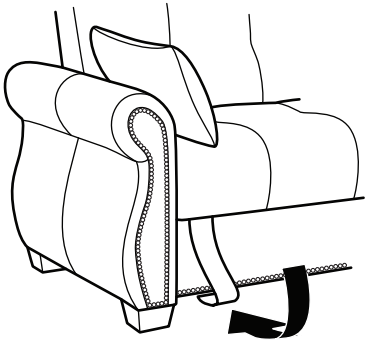

OPERATING YOUR UNIT


Converting to Sofa

Standing at the side of the unit (from bed position), lift backrest to the desired position and secure in place by releasing to the sound of a click.

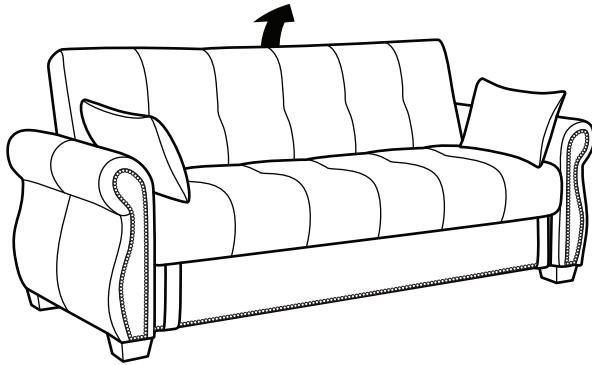


Converting to Lounger

In bed position, lift backrest upwards with each click sound until the desired lounge position is reached.

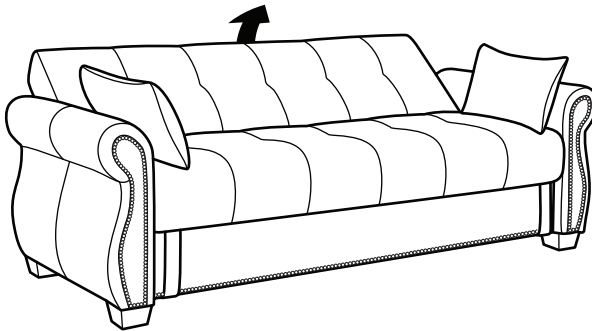

Converting to Bed

From sofa or lounge position, lift backrest all the way upwards until the last click is heard which unlocks the mechanism and carefully return to a flat position.

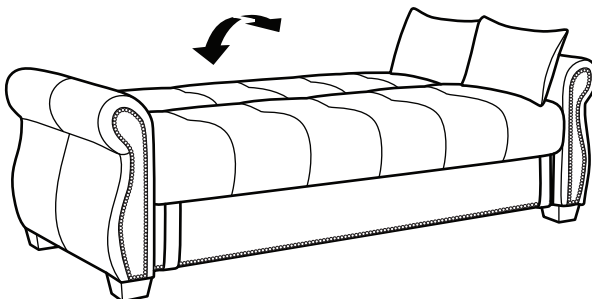


ASSEMBLY INSTRUCTIONS


CAUTION: At least two adults are required to safely complete performing this task.
Other lifting attempts may risk back injury due to large and heavy part(s).



- 1 Carefully place sofa body unit on a clean flat surface as below.
Unpack hardware from the storage compartment.

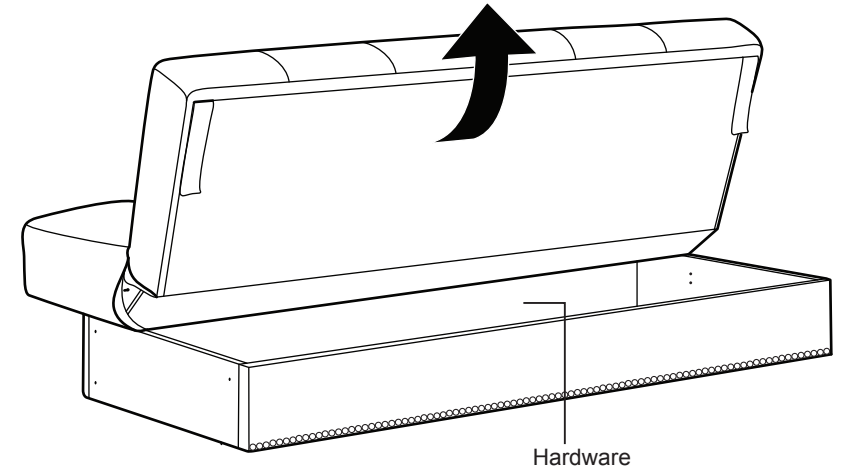


- 2 Screw in four threaded rods into pre-drilled holes on the inner side of armrest by hand until about half of the thread is exposed. Repeat step for other armrest.

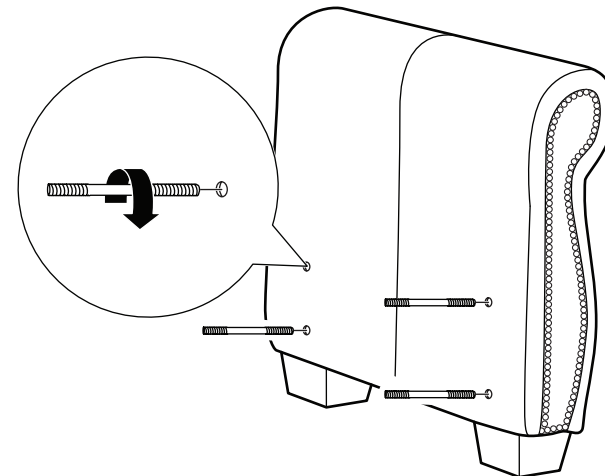


3 Locate pre-drilled holes on the side of storage body and match the orientation with the correct armrest.

Now, carefully join armrest (with the four threaded rods exposed) with storage body by aligning and going through the four pre-drilled holes at the side of storage body.

Secure all four threaded bolts with washers and nuts from inside with spanner, making sure there is no movement.

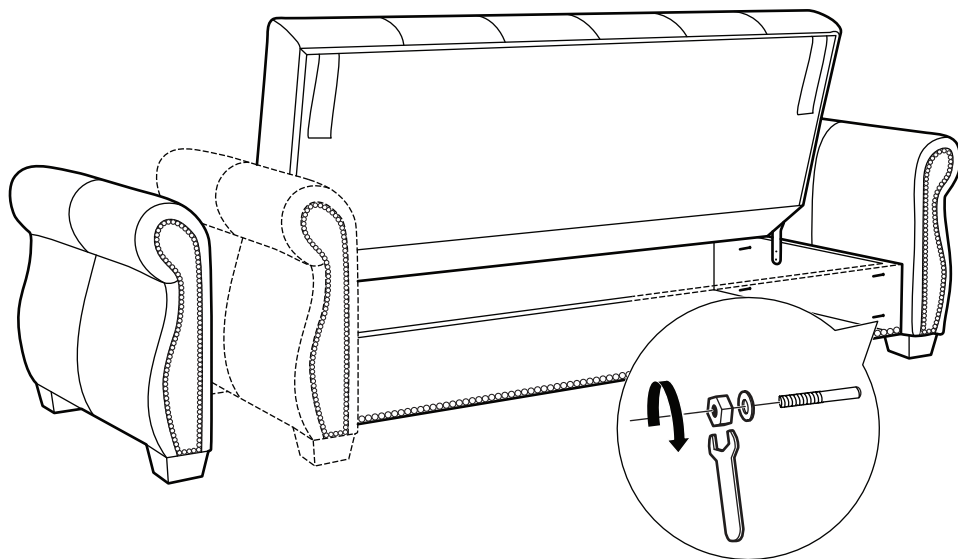

4 Use the plastic cap to conceal expose threaded rod.

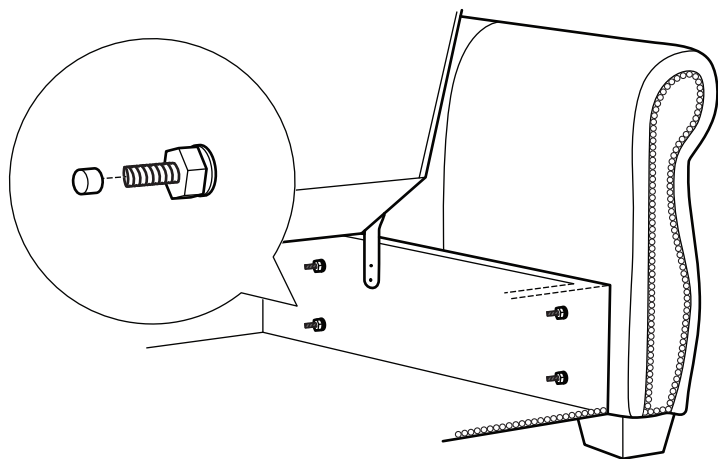

5 Repeat step for other armrest, ensuring both are fully secured.

