



# FrenchPorte®


**LOWE'S** NEVER STOP IMPROVING

## Overhead French Style Garage Doors



# Garage Door Installation Guide



Torsion Spring

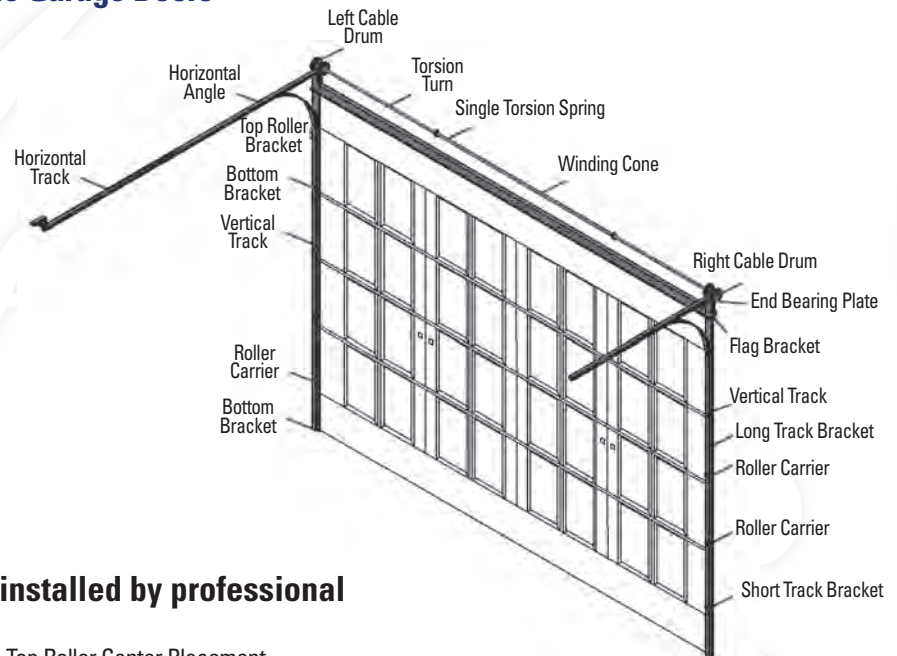

**WARNING: TORSION SPRING must be installed by professional**

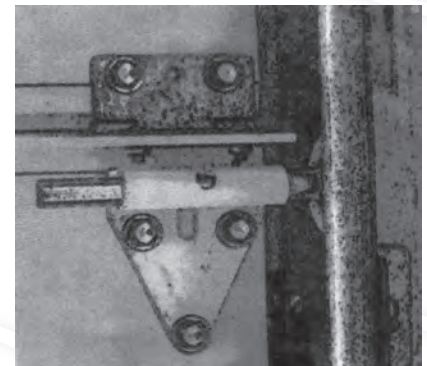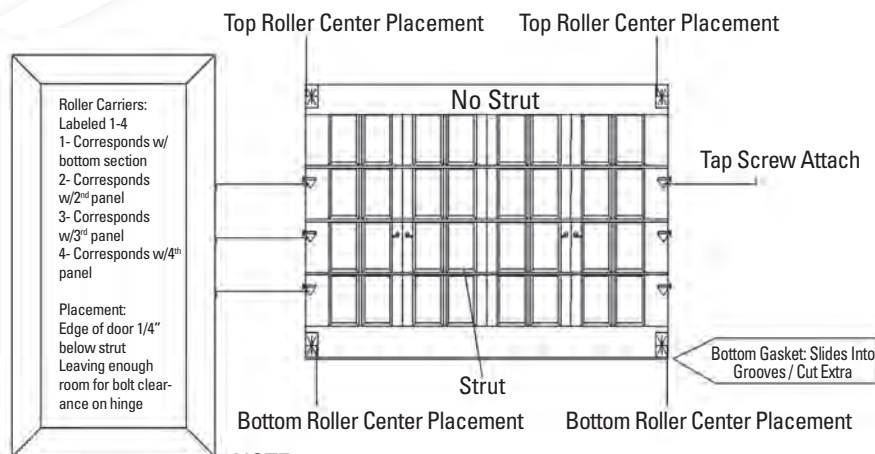

NOTE:

Handles: ALWAYS ask customers preference when mounting handles. CHECK CLEARANCE BEFORE MOUNTING TO DOOR.

Top Roller Carrier: Place at bottom edge of the 1st panel

Alignment of Door: IMPORTANT to always check alignment w/panes, due to style of door alignment is very important. All Holes must be drilled (NO PREDRILLED HOLES). Always attach center hinge than outer. Once hinge are in place attach roller carrier to the lower panel (this will hold panel in place). Sections will FOLD into place at 75 degree angle.

