


# ASSEMBLY INSTRUCTION


---

If you have any questions, please feel free to contact us.  
Email: [lowesteam@aminalife.com](mailto:lowesteam@aminalife.com)

## **SWING**

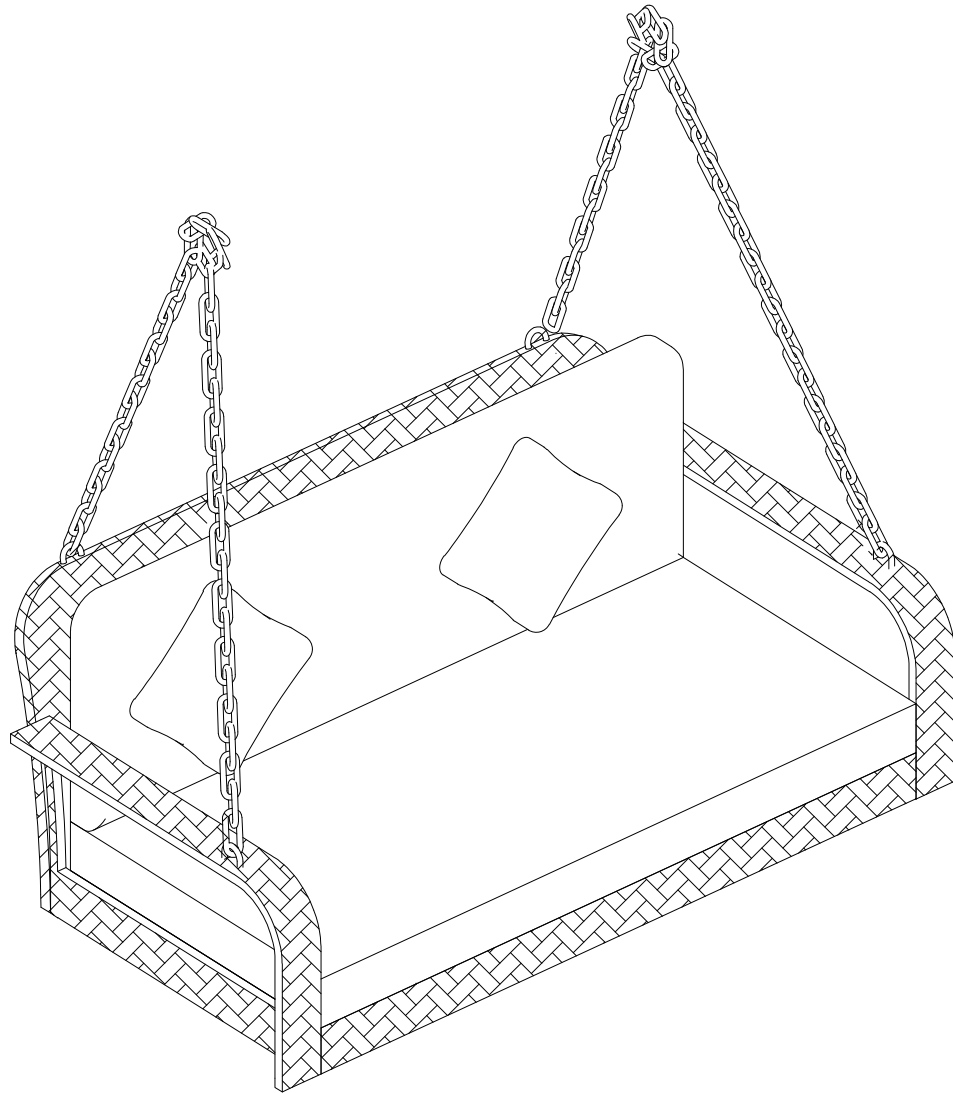

**WF320681**

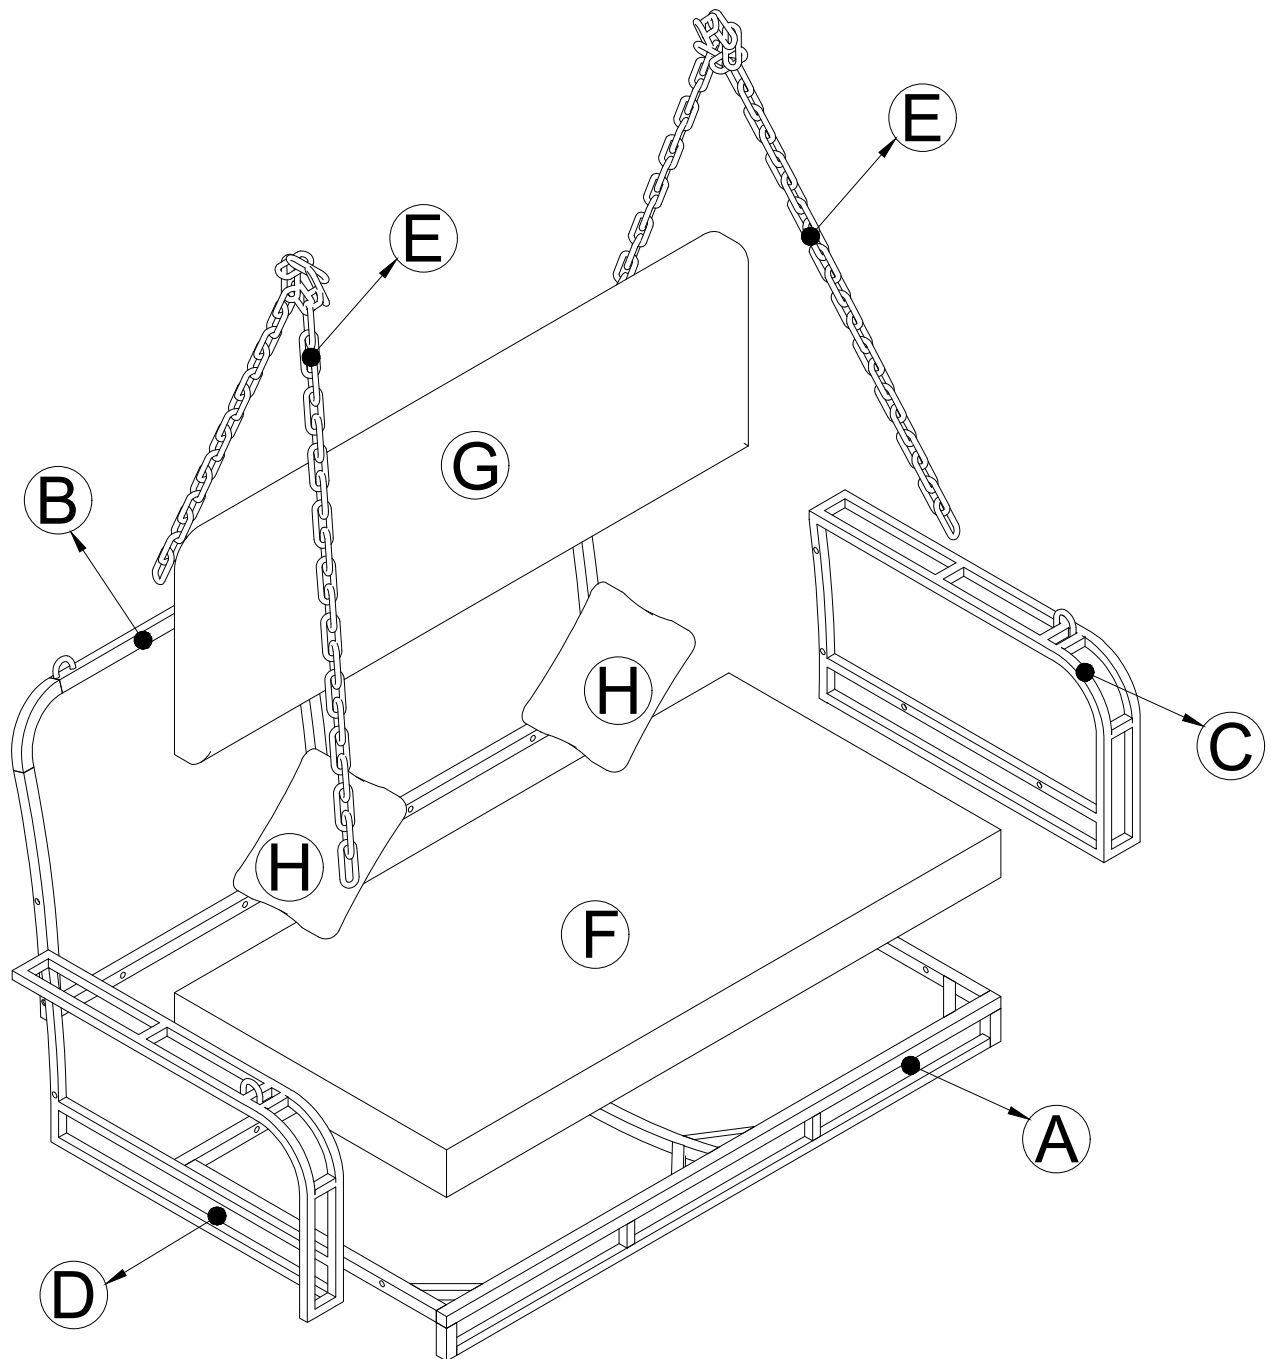


**Notes:**


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill..
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

CARTON CONTENT:


**WF320681**

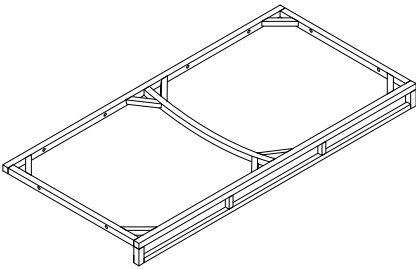


**A** x1

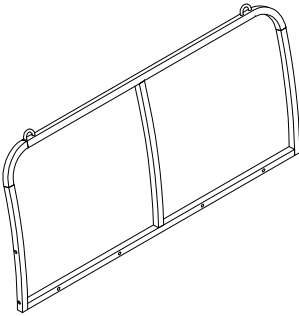

**B** x1

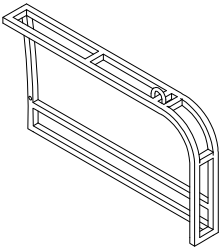


**C** x1

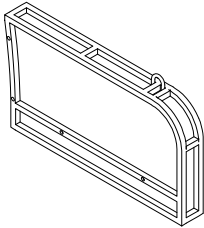


**D** x1




**E** x2

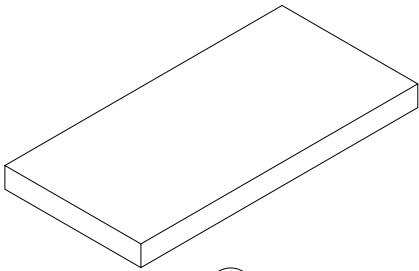


**F** x1

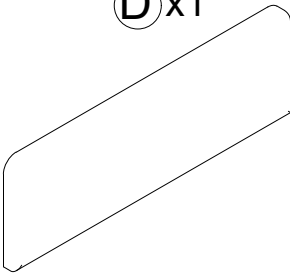

**G** x1









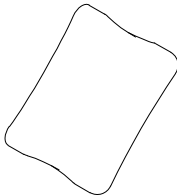


**H** x2

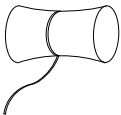

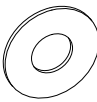




**Hardware**
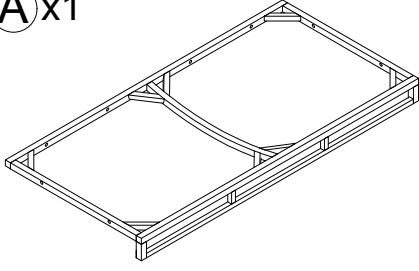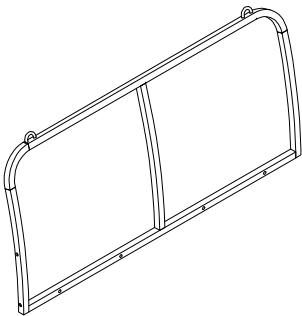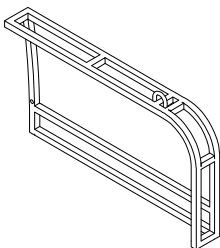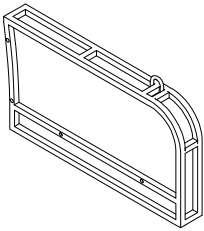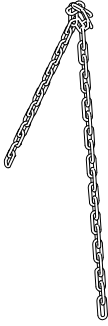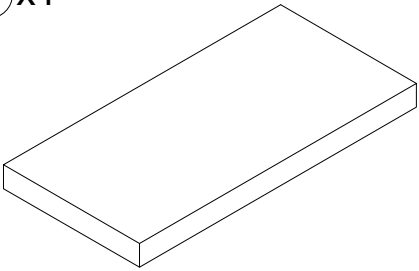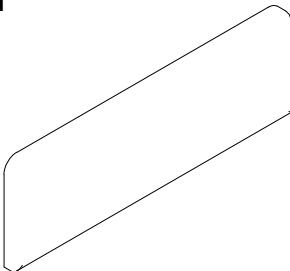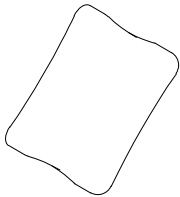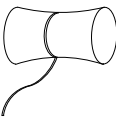
## Past List:

<b>A</b> x1  SEAT FRAME	<b>B</b> x1  BACK FRAME	<b>C</b> x1  LEFT FRAME
<b>D</b> x1  RIGHT FRAME	<b>E</b> x2  SUPPORT WIRE	<b>F</b> x1  SEAT CUSHION
<b>G</b> x1  BACK CUSHION	<b>H</b> x2  PILLOT	 HARDWARE
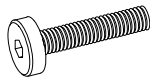
## Hardware List:

<b>①</b> x 2 pcs  BOLT M6x30MM	<b>②</b> x 12 pcs Extra 2 pcs  BOLT M6x35MM	<b>③</b> x 14 pcs Extra 2 pcs  WASHER M6	<b>④</b> x 1 pc  ALLEN KEY
<b>⑤</b> x 4 pcs  CONNECTOR			


## Step 1:

Ⓐ x 1

Ⓑ x 1

② x 4

③ x 4

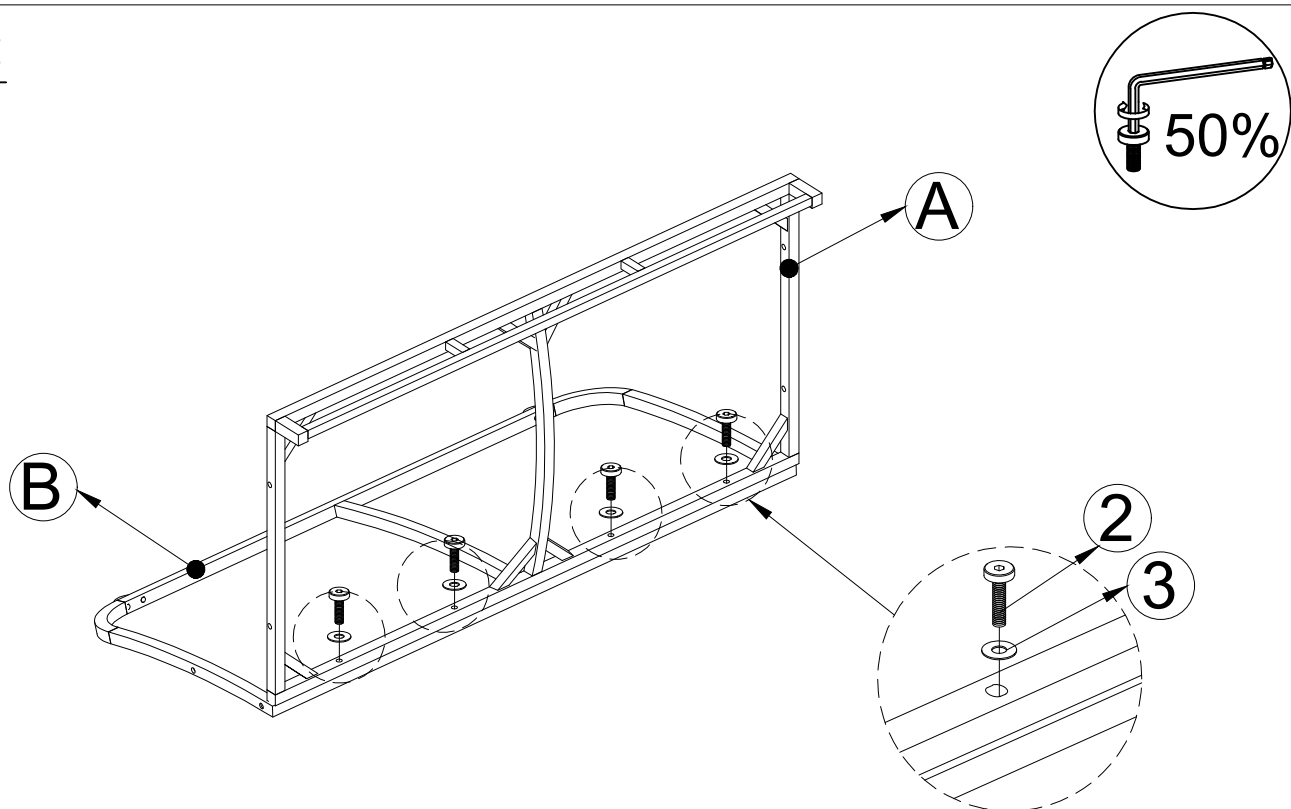

Connect The Seat Frame (A) & Back Frame (B) tighten Bolt (2), Flat Washer (3) with Allen Key (4).


## Step 2:

Ⓒ x 1

① x 1

② x 2

③ x 3

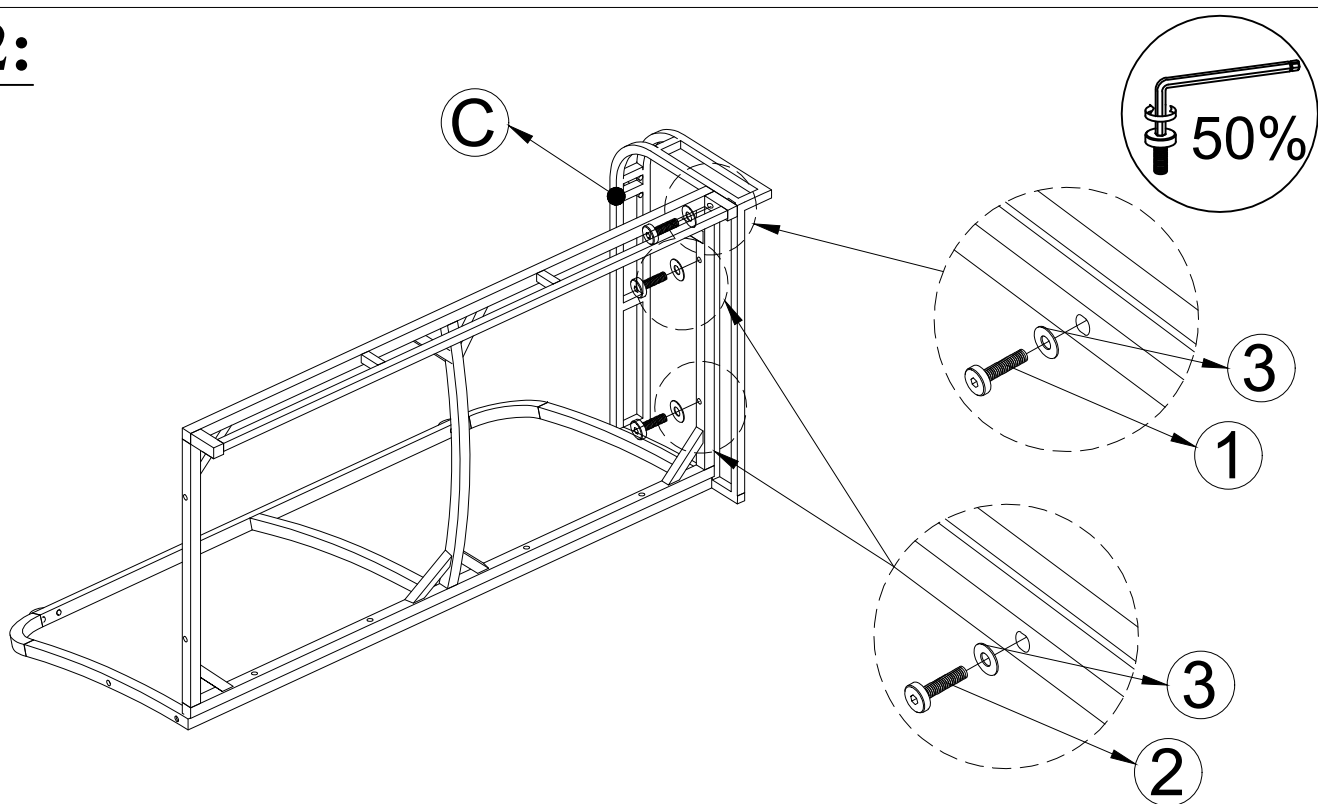

Connect The Part from Step 1 & Right Frame (D), tighten Bolt (1), tighten Bolt (2), Flat Washer (3) with Allen Key (4).


### Step 3:

Ⓓ x 1

① x 1

② x 2

③ x 3

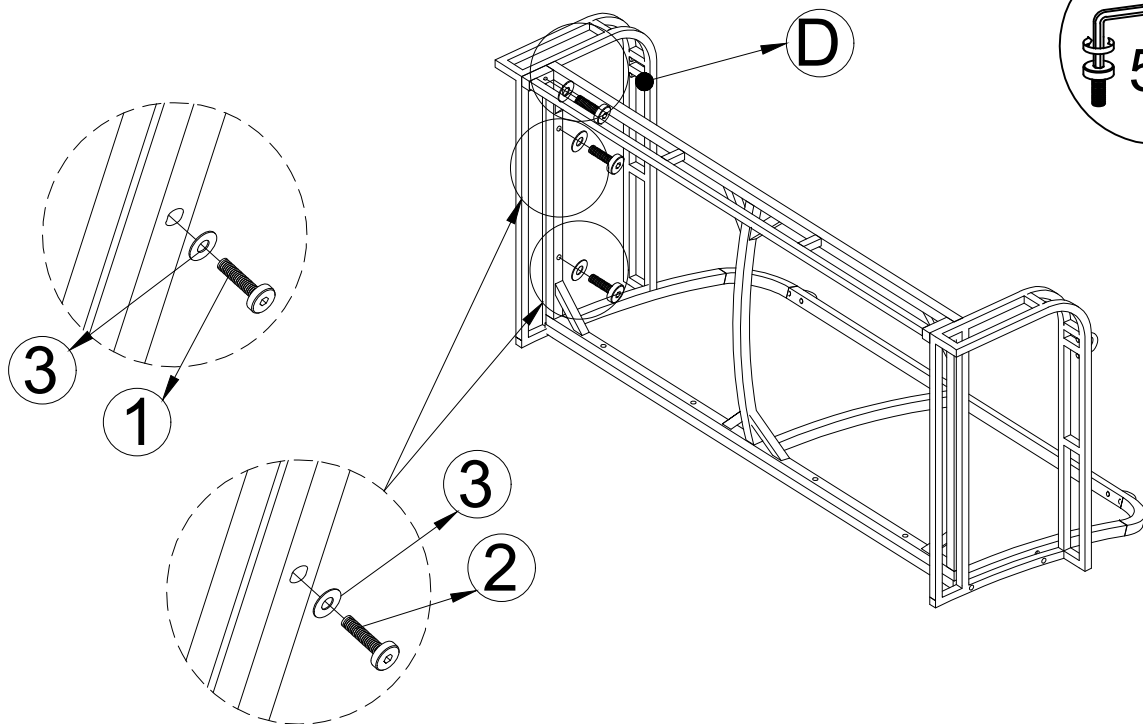


Connect The Part from Step 2 & Right Frame (D), tighten Bolt (1), tighten Bolt (2), Flat Washer (3) with Allen Key (4).

### Step 4:

② x 4

③ x 4

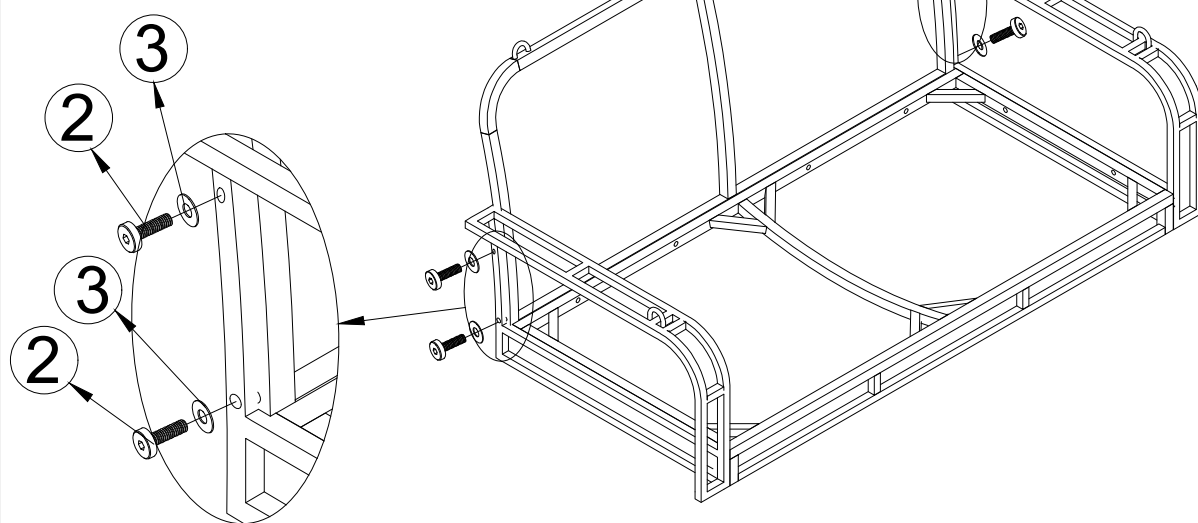


Use Bolts (2) and Flat Washer (3) with Allen Key (4) to reconnect the remaining positions. Tighten all bolts.

## **Step 5:**

Ⓔ x 2

Ⓢ x 4

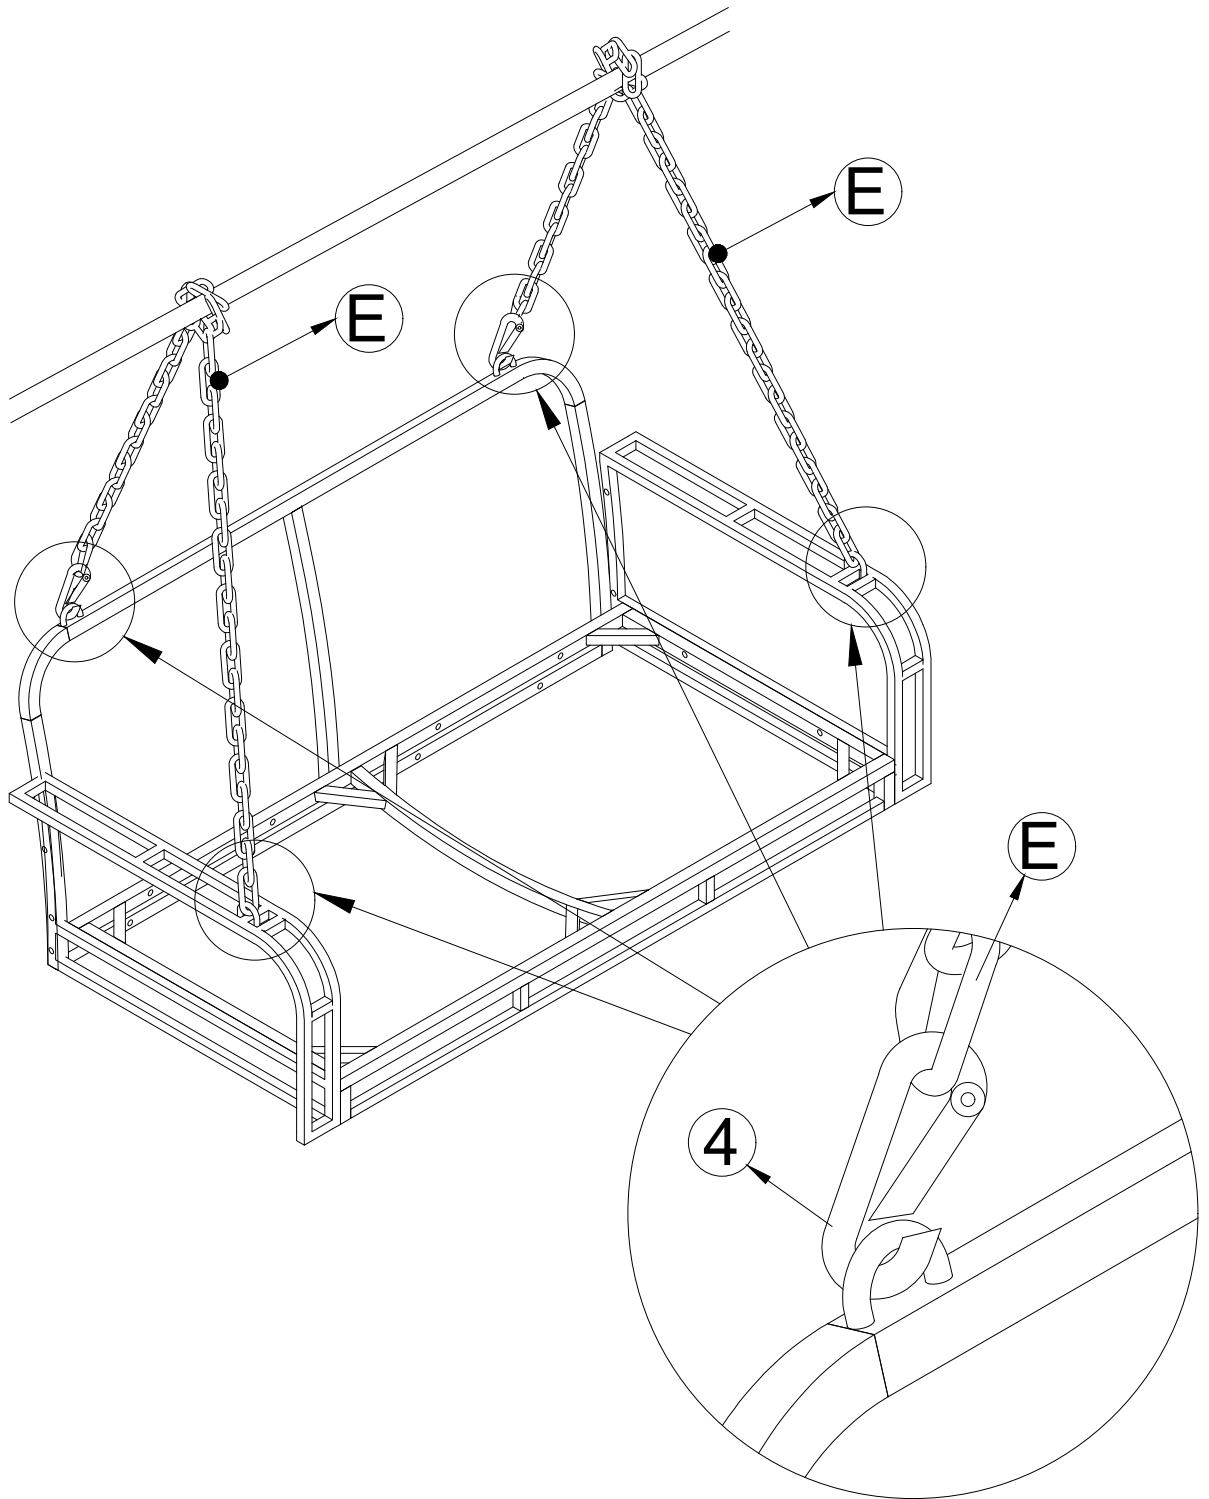


Connect The Part from Step 4 & Support Wire (E) with Connector (5). Hang the swing with Support Wire.

## Step 6:

ⓕ x 1


ⓖ x 1

ⓓ x 2

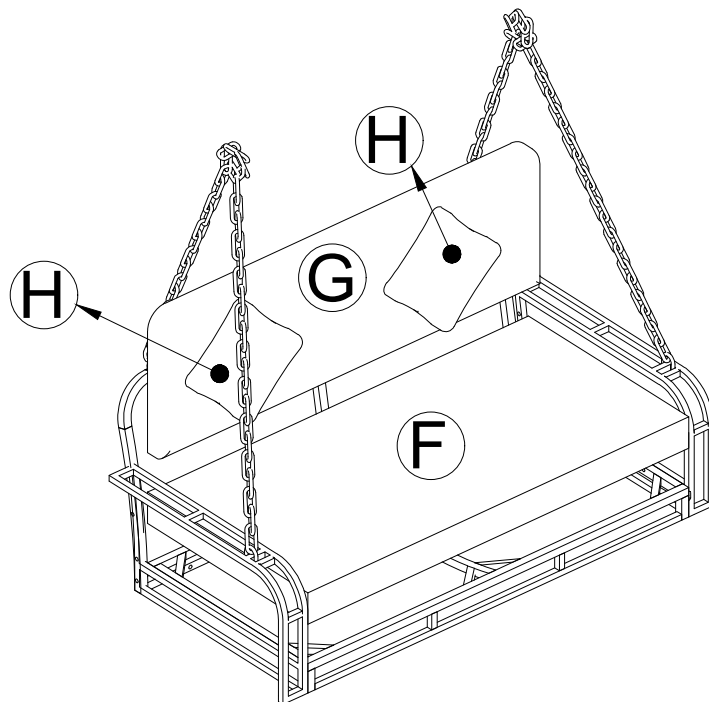

Put on Seat Cushion (F), Back Cushion (G), Pilot (H) to Swing.

## Step 7:

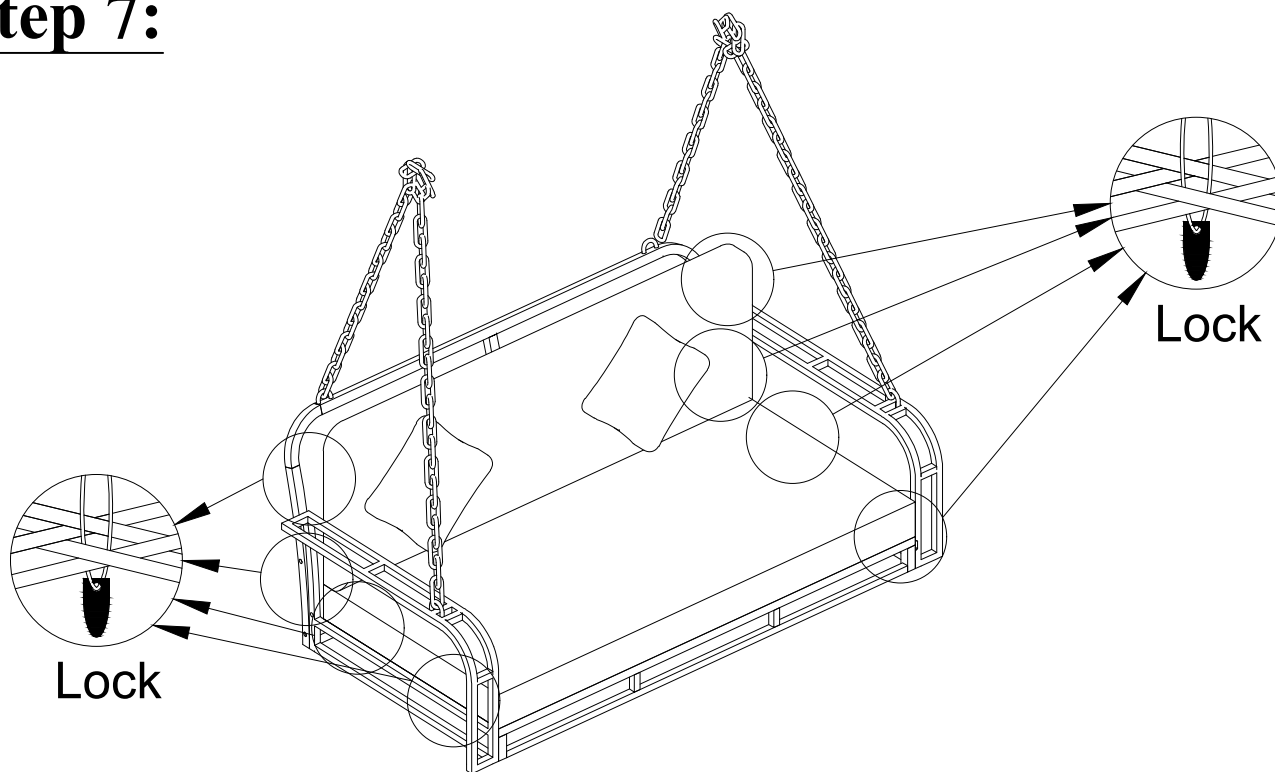

Secure the seat cushion and back cushion with lock. Completed.