
"SICILIAN" HARVEST FIREPLACE
FA927500TX-IVORY
FA927600TX- BLACK W/ GOLD TIPPING
FA927700TX-MAHOGANY
ASSEMBLY INSTRUCTION

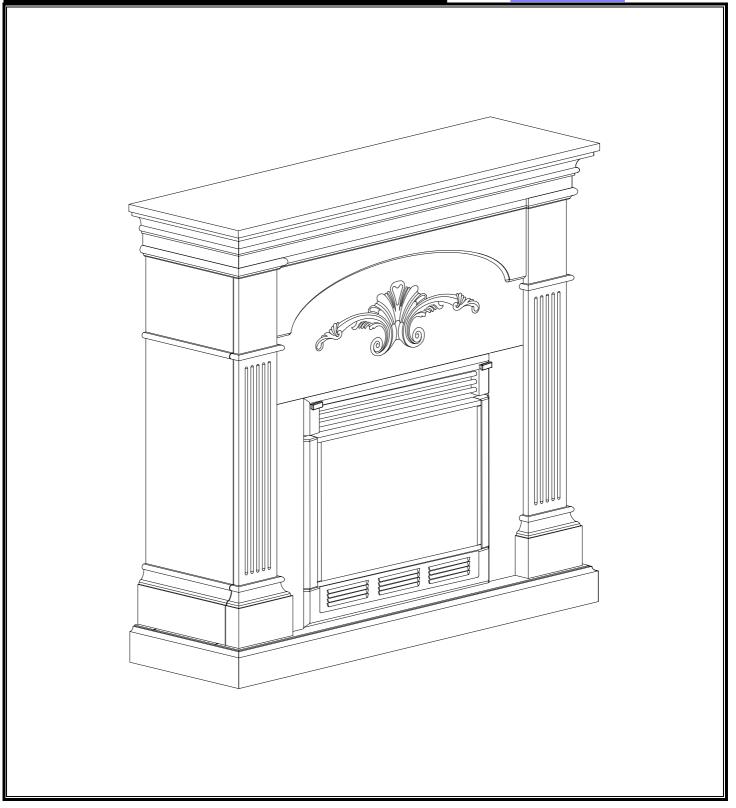


For assistance with assembly contact:
 Southern Enterprises Inc.
Customer Service 1-800-633-5096
 <u>service@seidal.com</u>
 www.seidal.com



"SICILIAN" HARVEST FIREPLACE

Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the

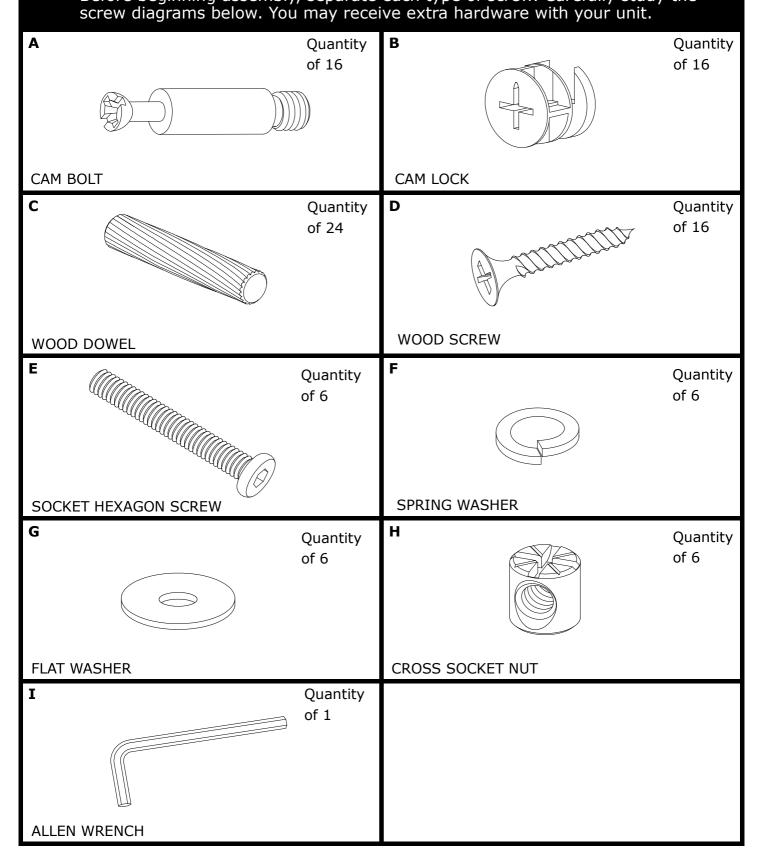


"SICILIAN" HARVEST FIREPLACE

Parts List


Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra

hardware with your unit.

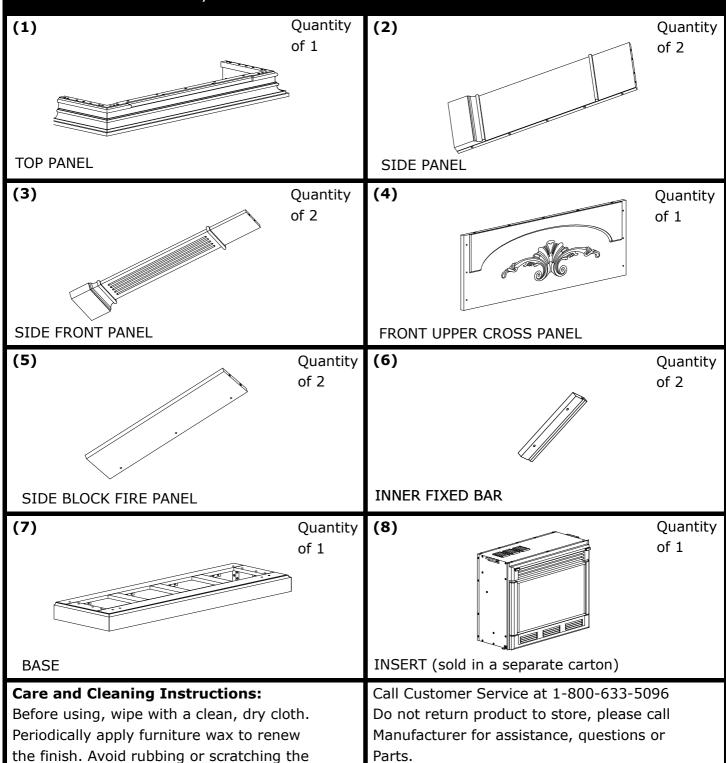


surface with rough or abrasive objects. For replacement parts or questions, please

Assembly Tool Required No.2 Phillips Screwdriver (Not Included)




"SICILIAN" HARVEST FIREPLACE **Assembly Instructions**

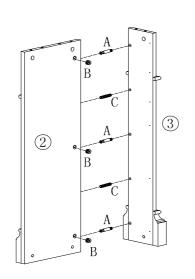


INSERT(A)CAM BOLT &(C)WOOD DOWEL

TO THE RELATED HOLES, THEN USE (B) CAM LOCK TO CONNECT (2) SIDE PANEL&(3) SIDE FRONT PANEL.

Figure 1

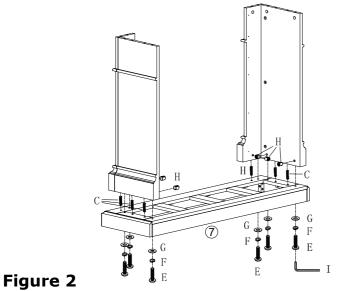

INSERT (C) WOOD DOWEL & (H) CROSS SOCKET NUT TO CORRESPONDING HOLES ,THEN USE (E) SOCKET HEXAGON SCREW THROUGH (F) SPRING WASHER &(G) FLAT WASHER TO CONNECT (7) BASE.

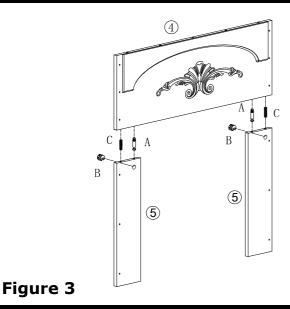

FIRST INSERT (B) CAM LOCK INTO CORRESPONDING HOLES OF (5) SIDE BLOCK FIRE PANEL, THEN PUSH (A) CAM


BOLT & (C) WOOD DOWEL INTO

CORRESPONDING HOLES OF INSERT (A)

CAM BOLT & (C) WOOD DOWEL TO

CORRESPONDING HOLES OF (4) FRONT UPPER CROSS PANEL.FINALLY USE SCREWDRIVER TO SECURE TIGHTLY.

"SICILIAN" HARVEST FIREPLACE Assembly Instructions

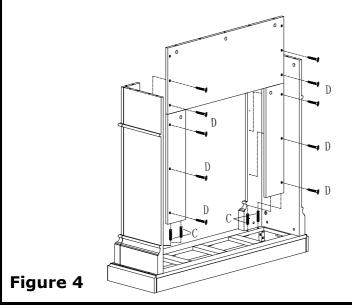

INSERT (C)WOOD DOWEL TO CORRESPONDNIG HOLES OF BASE THEN PUSH THE COMPLETED FIGURE (3) TO THE BACK OF SIDE FRONT PANEL THEN INSERT (D)WOOD SCREW TO CORRESPONDING HOLES TO CONECT (3) SIDE FRONT PANEL.FINALLY USE SCREWDRIVER TO SECURE TIGHTLY.

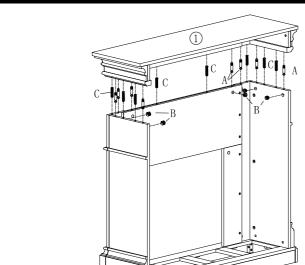



Figure 5

INSERT (A) CAM BOLT & (C) WOOD

DOWEL INTO CORRESPONDING

HOLES, THEN INSERT (B) CAM LOCK TO

ATTACH (1) TOP PANEL.

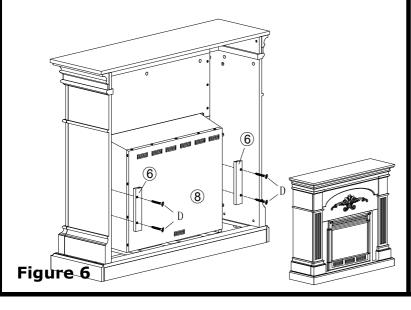

INSERT (J) INSERT TO THE RELATED PLACE OF MAIN BODY, THEN INSERT (D) WOOD SCREW TO CONNECT (6) INNER FIXED BAR WITH MAIN BODY. FINALLY USE SCREWDRIWER TO SECURE IT.



Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc. 600 Freeport Parkway, Suite 200 Coppell, Texas, 75019

FA927500T	X/FA927600TX/FA9	27700TX - Parts Repla	acement Form
Customer Information	1		
Name			
Address			
City/State/Zip Code			
Phone Number Please indicate where	you purchased this item:	Store/Website/Catalog	
Please indicate color/s	size/style number:		
Style No F	Parts Letter	Parts Description	Quantity Needed

Missing or damaged hardware and/or parts will be replaced free of charge. We do not sell parts. Southern Enterprises Inc. will provide replacement parts for only those items purchased within the last 9 months. If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled. Parts will be sent if available from SEI

Please contact Southern Enterprises at 800-633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues with your purchase. Please ask for a customer service representative for issues involving damages or replacement parts. Please ask for a technical assistance representative for any issues with product assembly and product construction.

Please contact the retailer that you purchased from for returns.

We'd love to hear from you! Email us photos of our products in your home at sei@seidal.com and we might feature it on our site or use it to model one of our inspirational photos.