

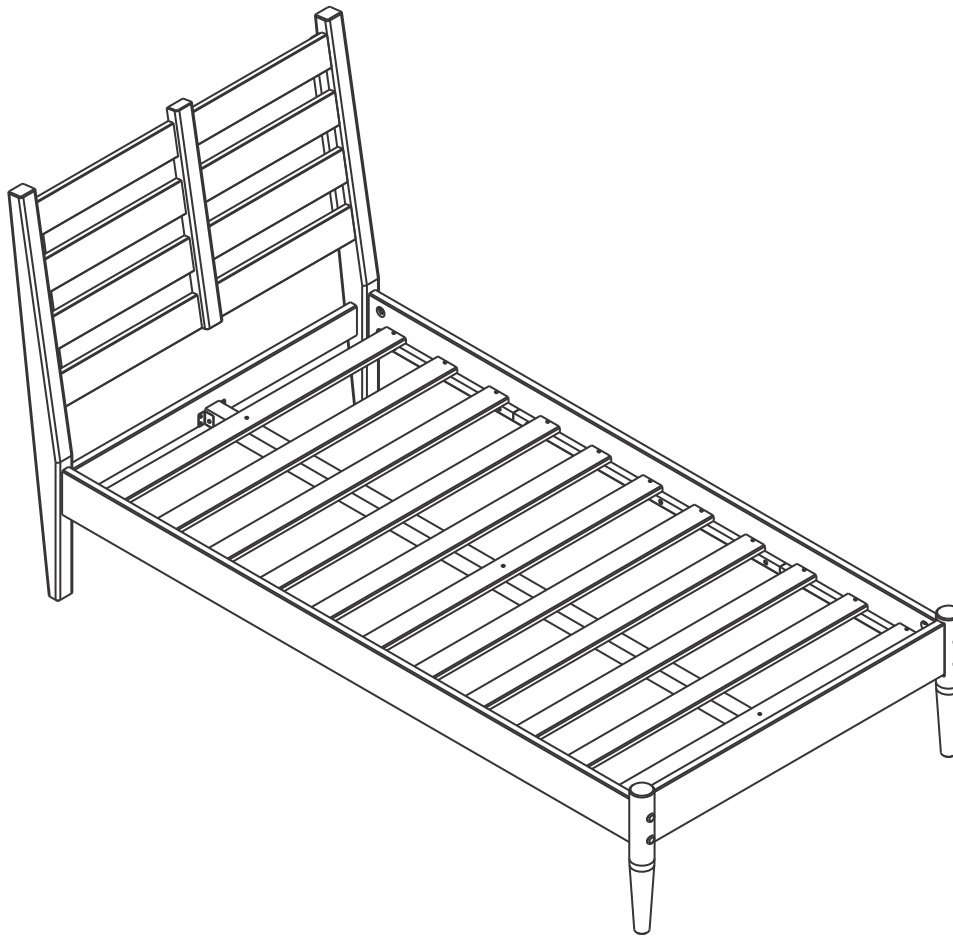
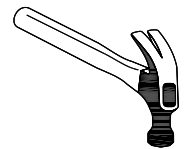


# ASSEMBLY INSTRUCTIONS

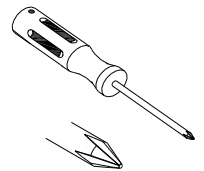


Mid-Century Slat Bed - Twin Size

01:20 Hs

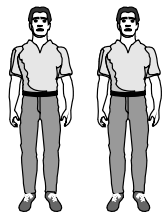

## HARDWARE INCLUDED



A - 10x50 Wood Dowel  
Qty. 18



B - 4,0x40 Screw  
Qty. 8




C - 3,5x16 Screw  
Qty. 40




D - 3,5x30 Screw  
Qty. 31




E - Screw Nut  
Qty. 8




F - Hex Key  
Qty. 1




G - 1/4x50 Screw  
Qty. 8



H - 1/4x100 Screw  
Qty. 8



J - Bed Frame  
Separator 104mm  
Qty. 02

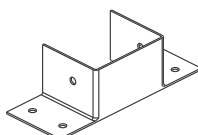


K - Support Bar  
Qty. 2




L - Wood Hole Cover  
Qty. 4

# PARTS INCLUDED

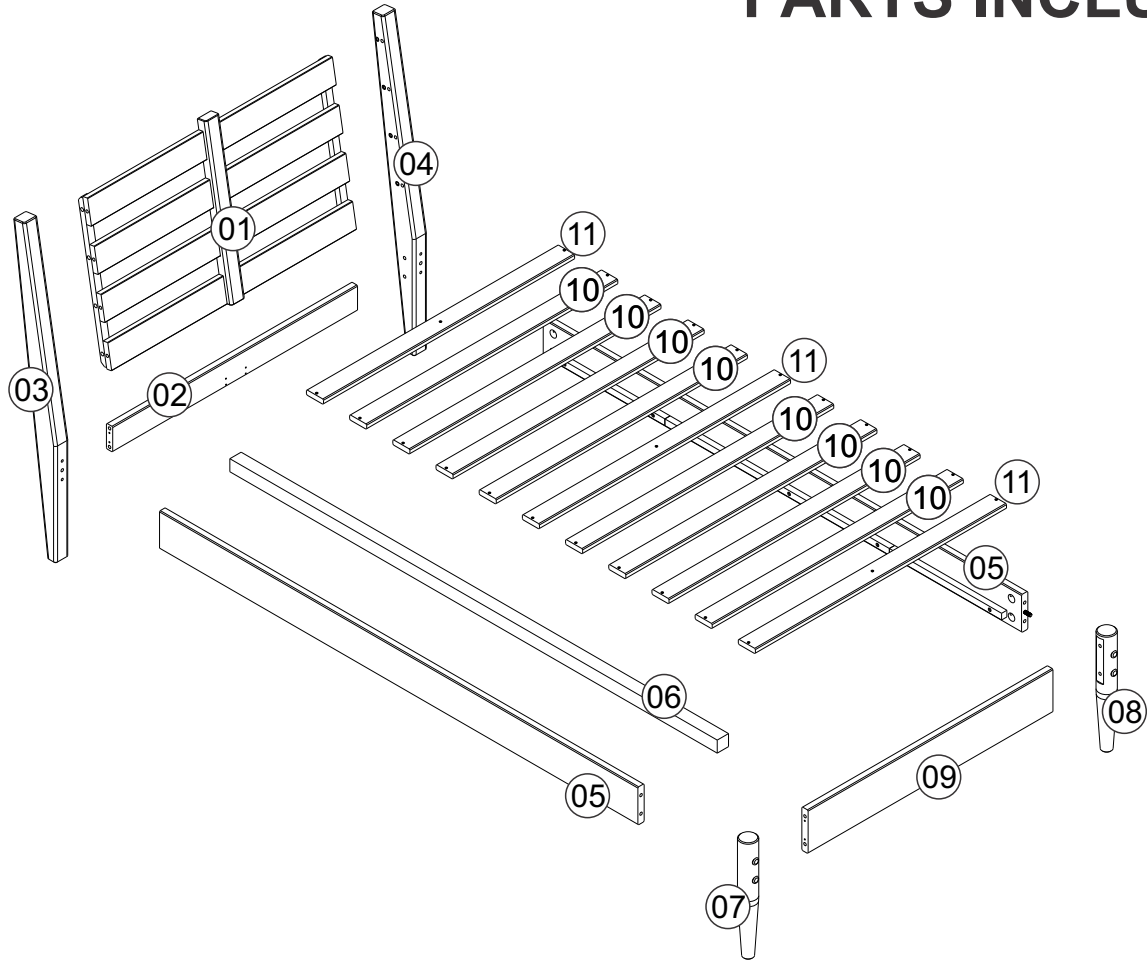


## STEP 1

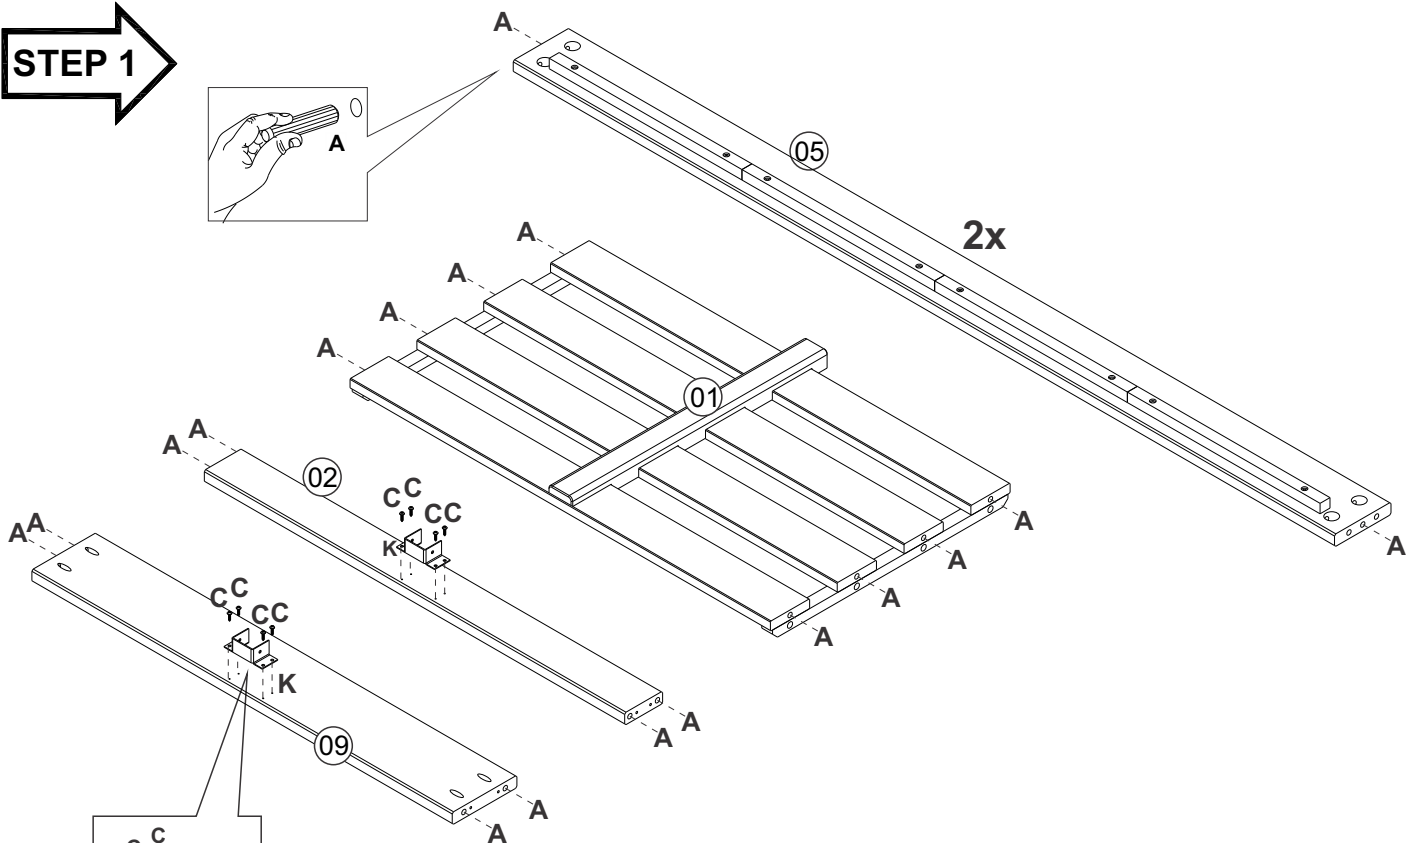

A - 10,0x50 Wood Dowel  
Qty. 18




C - 3,5x16 Screw  
Qty. 8




K - Support Bar  
Qty. 04


# STEP 2

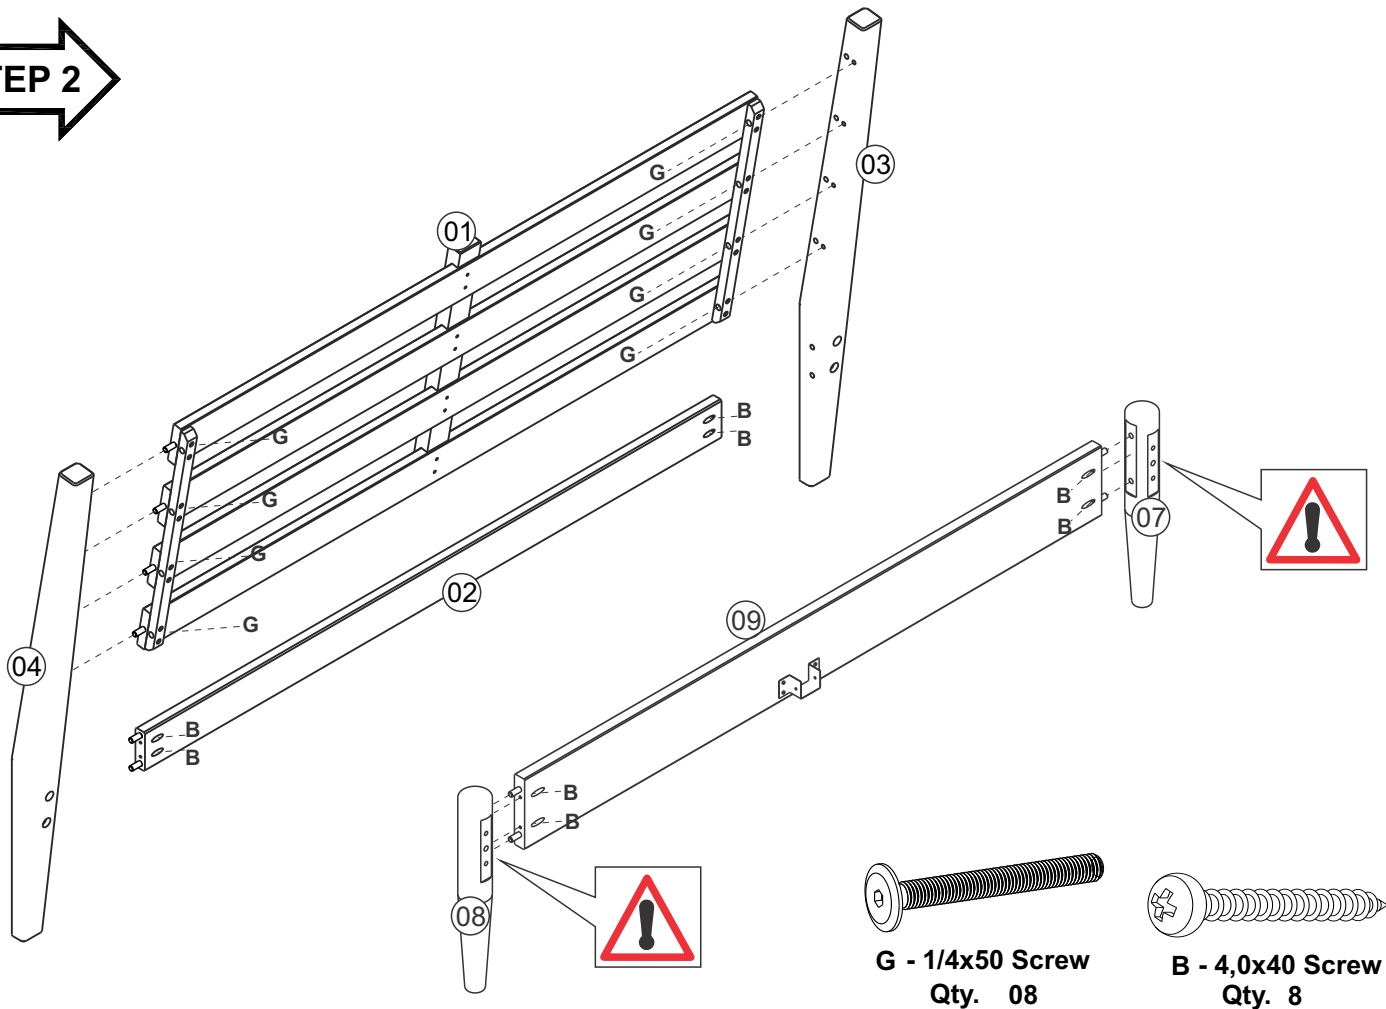


# STEP 3

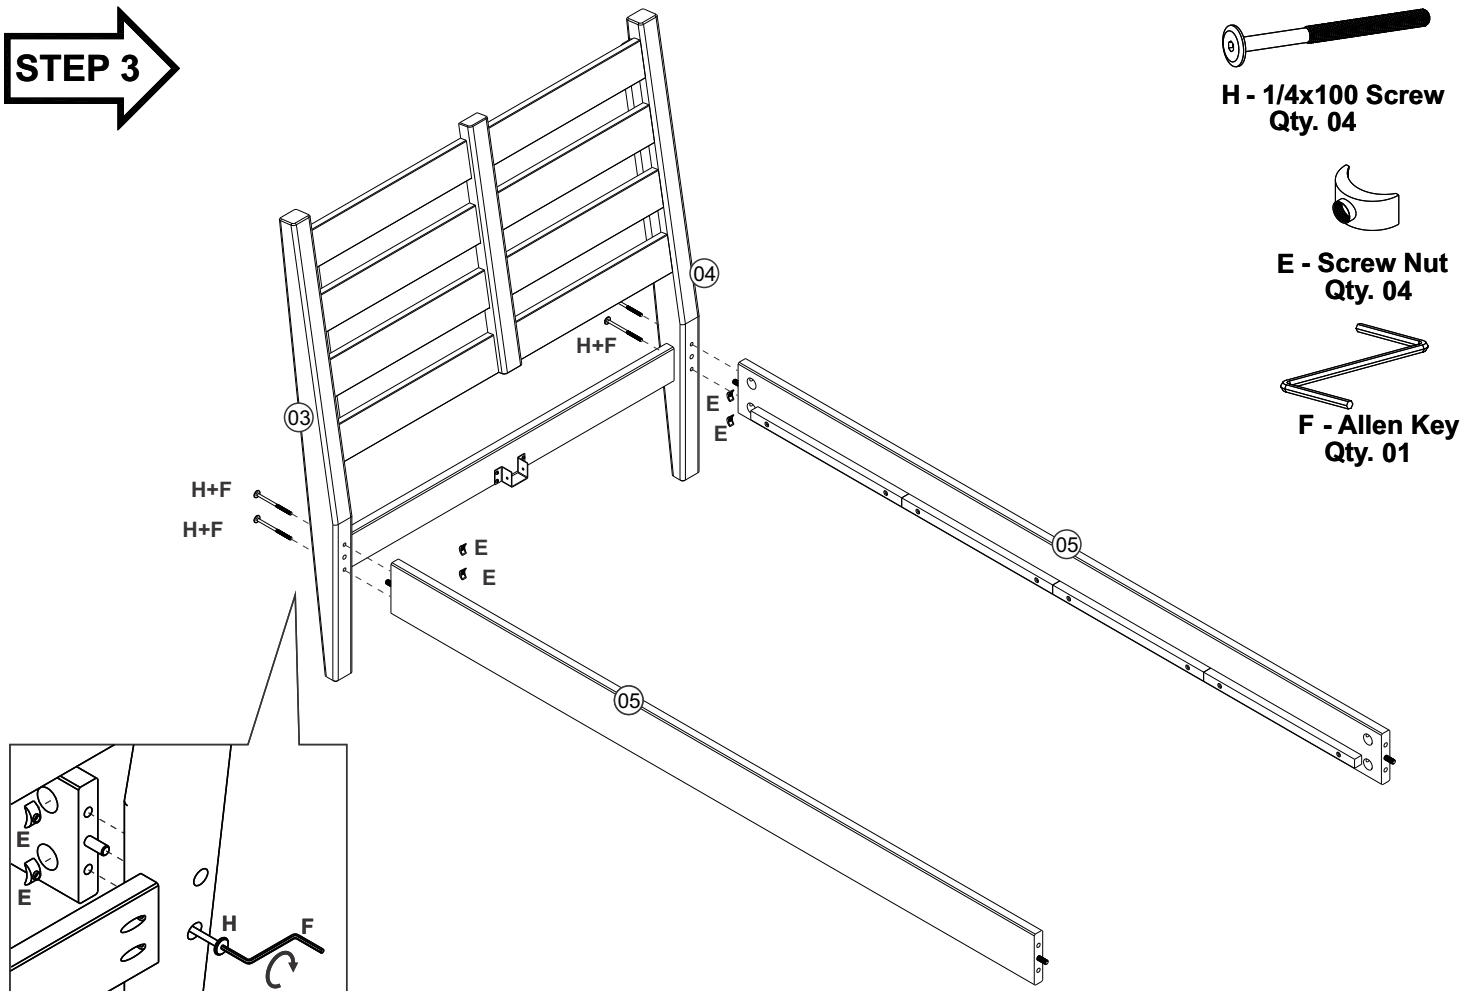


## STEP 4

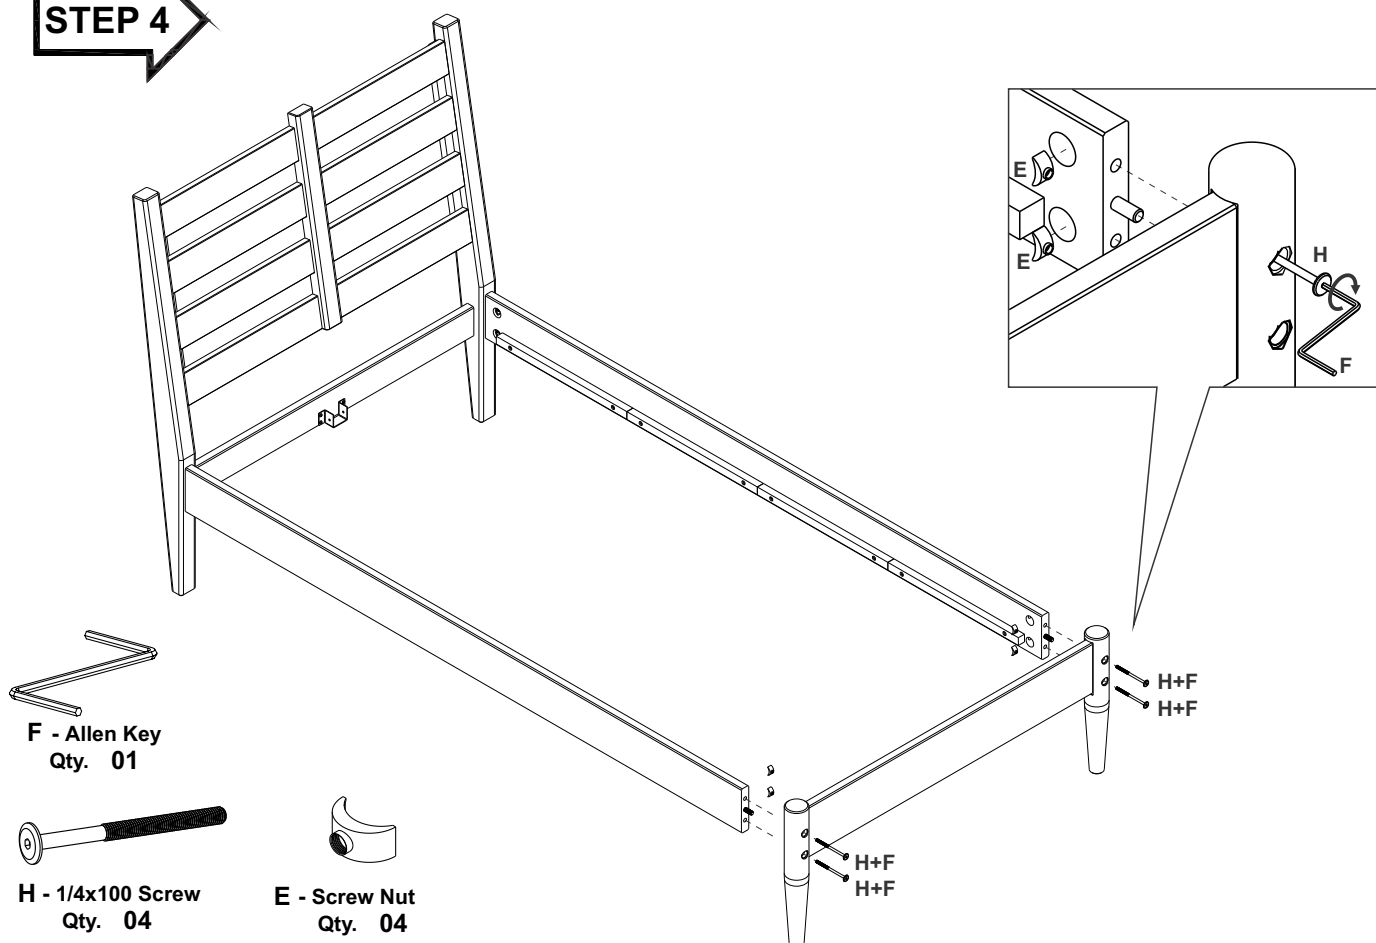


## STEP 5

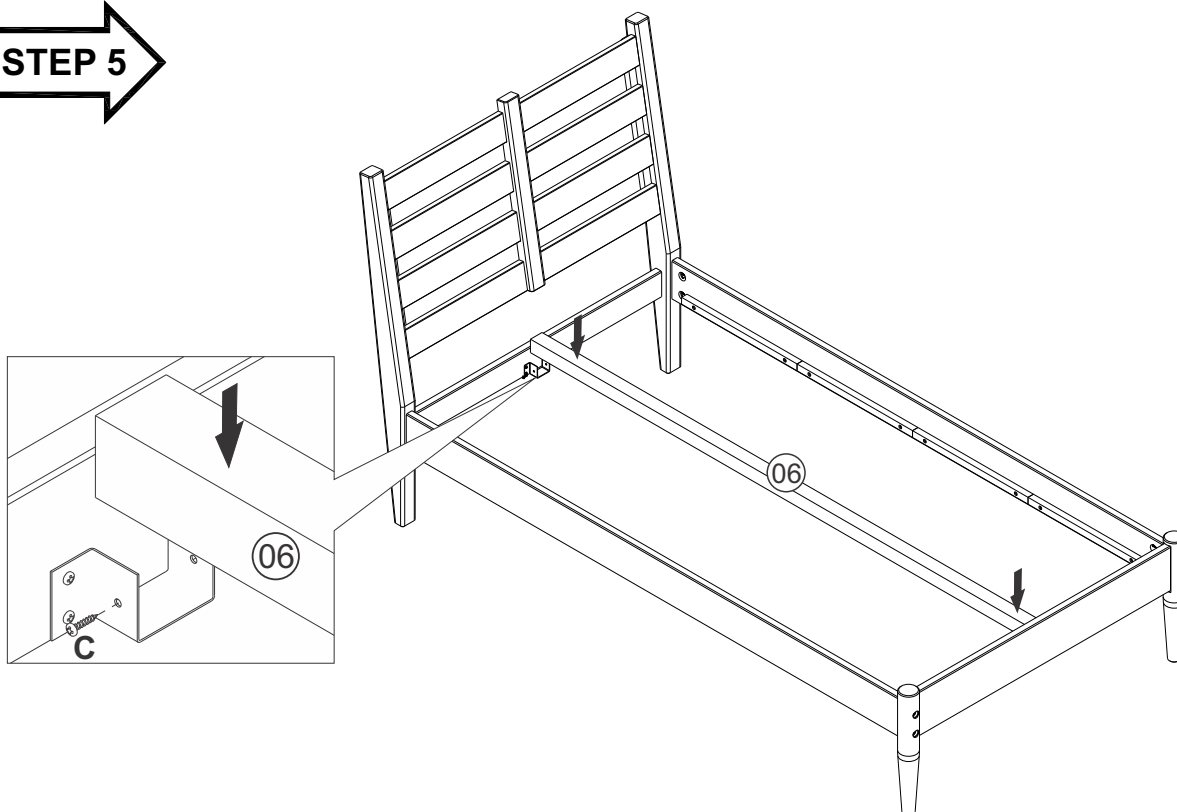

**STEP 6**

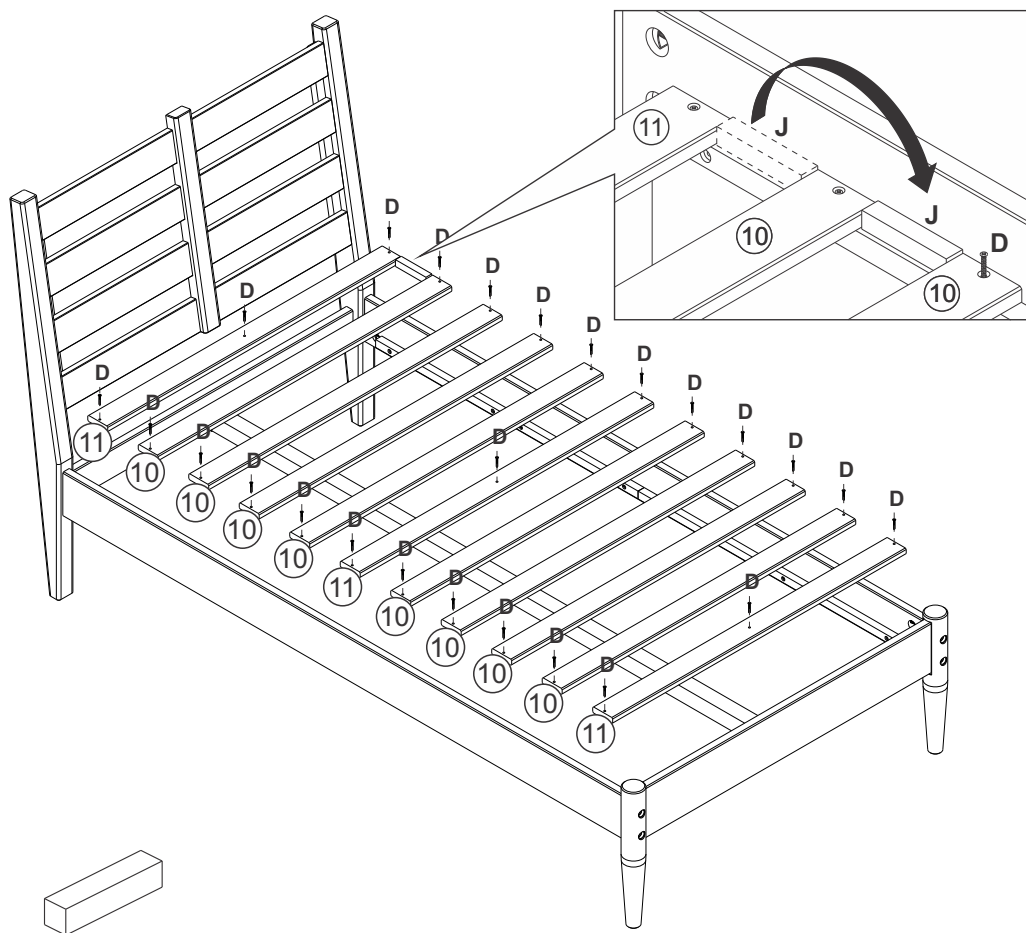


**D - 3,5x30 Screw**  
Qty. 25



**J -Bed Frame Separator 104mm**  
Qty. 02

**STEP 7**

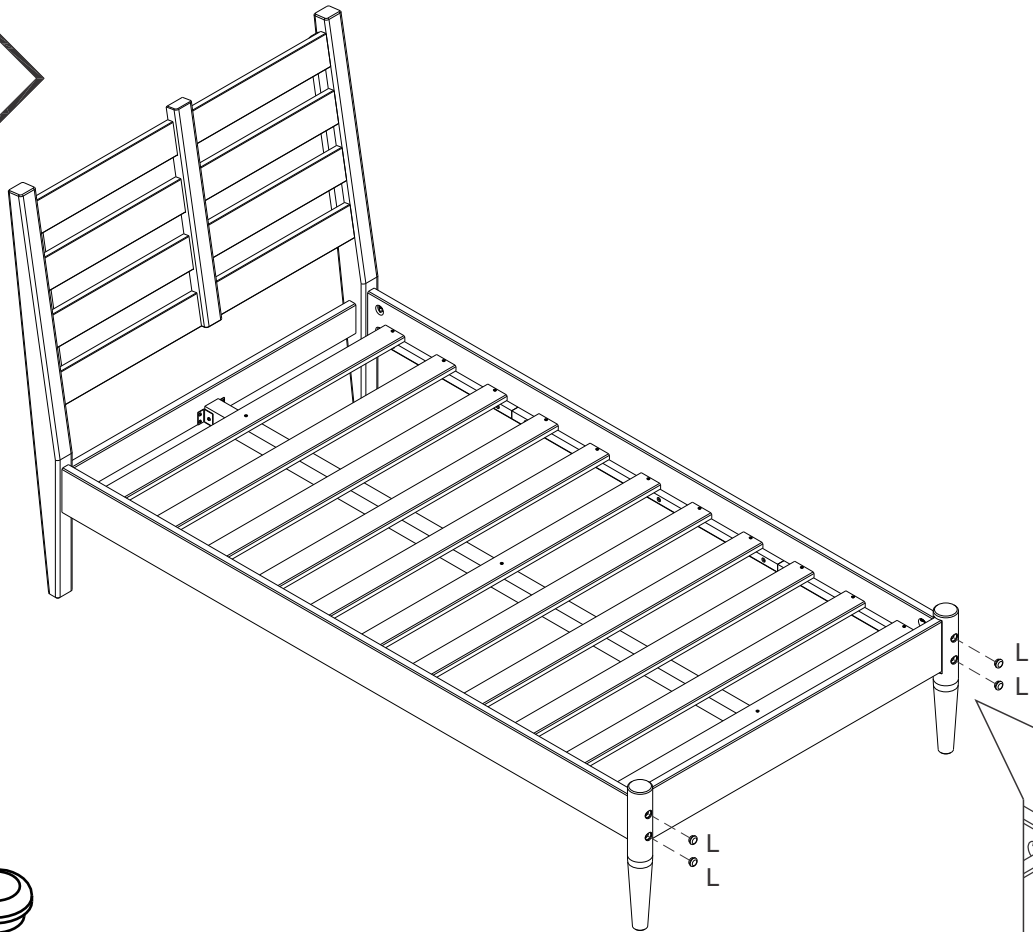

**L - Wood Hole Cover - Qty. 04**

