DOUBLE CUBE PLUS





Included



16 Pins



4 Vertical zBoards adhesive strips on 2 edges



2 Backer Boards thin and has no adhesive



2 Horizontal zBoards with groove on 1 side



1 Middle zBoard with grooves on 2 sides



Important



Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.




- · Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only




• When moving your Way Basics furniture, lift from the bottom



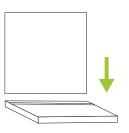


Fit backboard into horizontal zBoard groove.



Carefully remove the 3M protective layer from adhesive.




Place alignment pins in vertical zBoards.

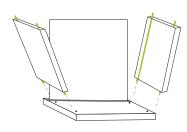


Arrange vertical zBoard with grooves facing backboard as shown.




Align vertical zBoard to backboard.

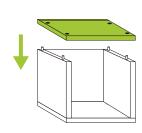

Align middle zBoard.

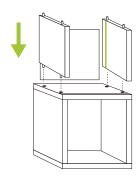

Repeat steps 1 - 5 for next tier.

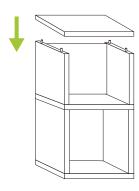

Align horizontal zBoard and press firmly to secure unit together. Visit links below for more details.

Enjoy building possibilities!




IT'S NOT WOOD! Thank you for saving trees

















Paper products are recycled after use

We use this recycled paper to create **ZBoard**

zBoard products create a healthier world, healthier you!



Thank you for choosing Way Basics. At Way Basics we stand behind our products with a LIFETIME GUARANTEE. Your happiness is important to me and it's our goal to provide a 5-star-service with every purchase. Please call, text, or email me for help!

Way Basics Founder jimmy@waybasics.com 949-229-1662

