NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key


CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non-abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.



Model#: BST3900

Product Dimension: 20"W x 22'D x 38.60"H

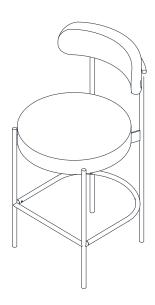



Weight capacity: 275 LBS


WARNING: DO NOT STAND ON CHAIR WARNING: DO NOT OVER TORQUE BOLT

PART LIST				HARDWARE LIST			
PIECE	DESCRIPTION	PICTURE	Q'TY	PIECE	DESCRIPTION	PICTURE	Q'TY
A	SEAT		1 X	HW1	Long Bolt		2 X
В	BACKREST		1 X	HW2	Short Bolt	(4) JIJIJIJIJ	16 X
С	FRONT LEG FRAME	***	1 X	HW3	Screw	Omm	4 X
D	BACK LEG FRAME		1 X	HW4	Allan Key		1 X
Е	SIDERAIL	:-	2 X				
F	STRETCHER		2 X				

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product. * Estimated Assembly Time: 10 minutes.


- * Tools Required for Assembly (included): Allen Key, (Not included): Phillips Screwdriver

 * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

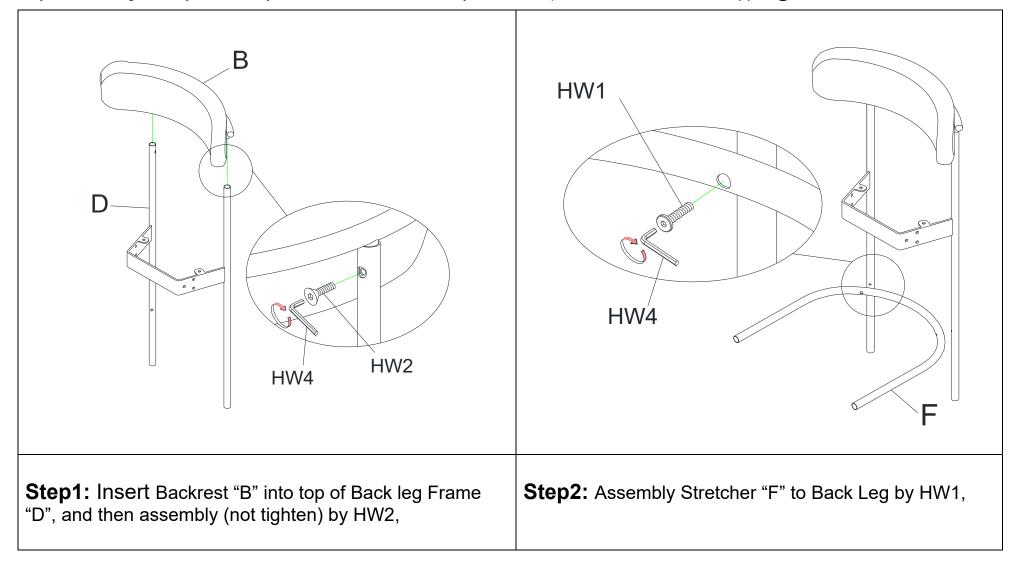

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
 * If any part is missing or damaged, do not attempt to assemble the product.
 * Estimated Assembly Time: 10 minutes.
 * Tools Required for Assembly (included): Allen Key, (Not included): Phillips Screwdriver

- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

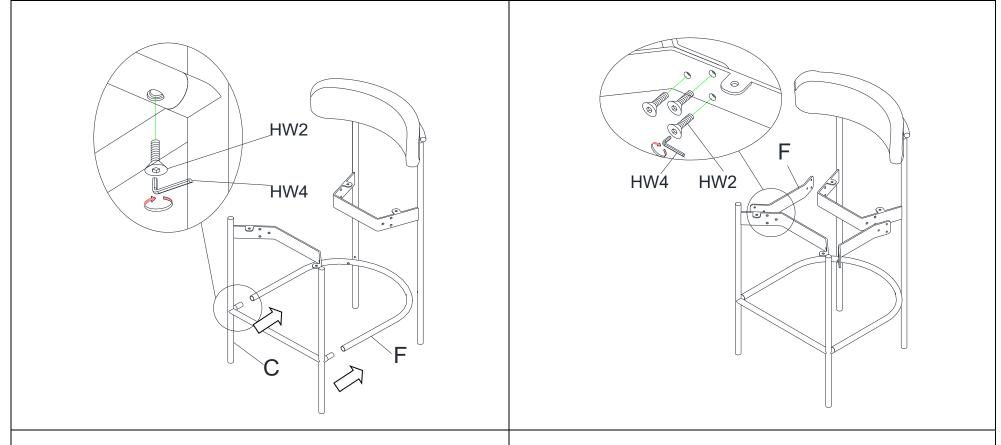

Step3: Insert the tenon on Front leg "C" into stretcher "F", and then assembly (not tighten) by HW2,

Step4: Assembly the Siderial "F" to Front & Back Leg by HW2 (not tighten),


PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

 * If any part is missing or damaged, do not attempt to assemble the product.

 * Estimated Assembly Time: 10 minutes.

- * Tools Required for Assembly (included): Allen Key, (Not included): Phillips Screwdriver
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

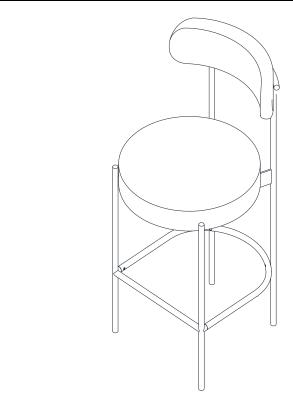

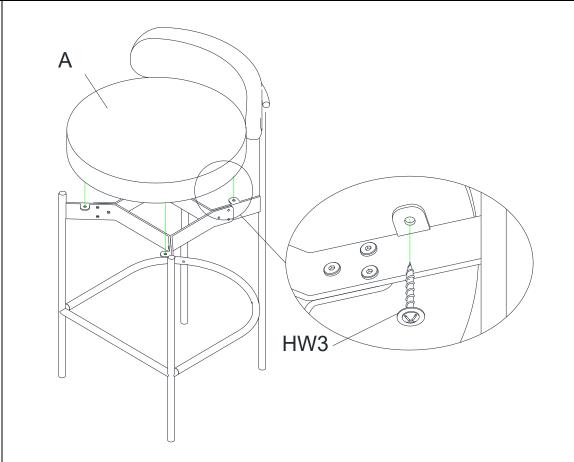

Step5: Place the chair onto even floor and then tighten all Bolt,

IMPORTANT: Tighten firm but do not over tighten,

Step6: Then to place Seat "A" onto top frame with Seat edge totally to closing to both front leg, And then screwing the HW2 into the hold on metal pad by screwdiver,