


Kitchen Island Carts

Assembly Instructions -Please keep for future reference

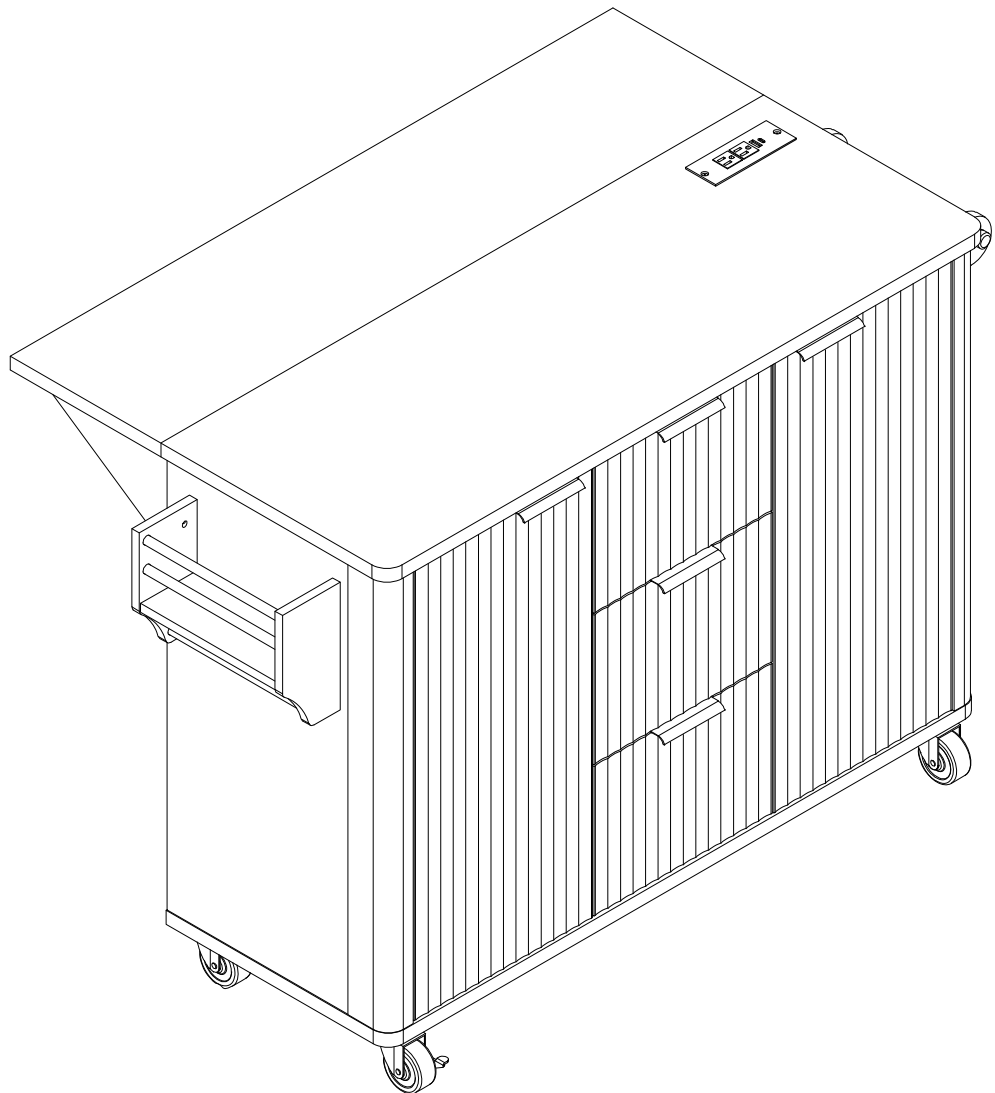

Important- Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose













Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

Components - Fittings



Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 58+2	(B)  Cam lock x 58+2	(C)  6*30mm Dowel x 50+2	(D)  4*35mm Screw x 12+1
(E)  3.5*12mm Screw x 36+2	(F)  4*50mm Screw x 10+1	(G)  3.5*14mm Screw x 42+2	(H)  3*14mm Screw x 16+1
(I)  7*45mm Screw x 4	(J)  6*45mm Screw x 4	(K)  Hinge x 4	(L)  Suction sheet x 4
(M)  Tool x 1	(N)  Laminate support x 8	(O)  Hinge x 4	(P)  Hinge x 3
(Q)  5*20mm Screw x 16	(R)  Pulley x 1	(S)  Handle x 5set	(T)  Plastic Nail x 18+1
(U)  Hole Patch x 4+2	(V)  3.5*12mm Screw x 10	(W)  3.5*14mm Screw x 2	
(CL)  Slide x 3	(CR)  Slide x 3	(DL)  Slide x 3	(DR)  Slide x 3

Tools required

Ruler -Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (40mm screw shown).


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

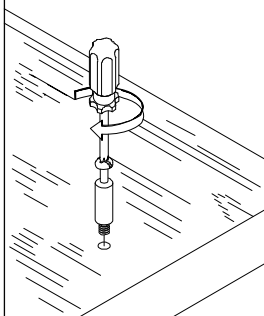

Step 2

Push the male camlock into the entry hole.

2

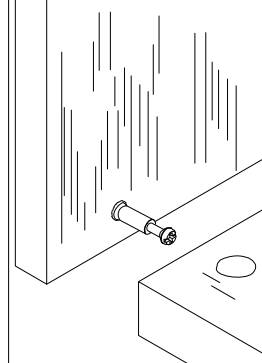


Step 3

Insert the female camlock as shown in the instruction.

Note ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

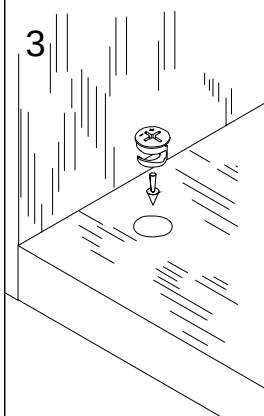


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.






























4

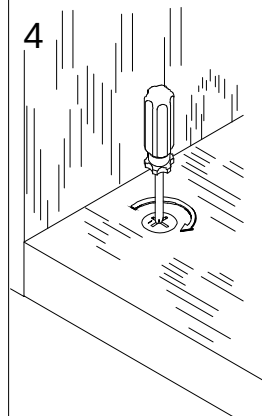




Assembly Instructions

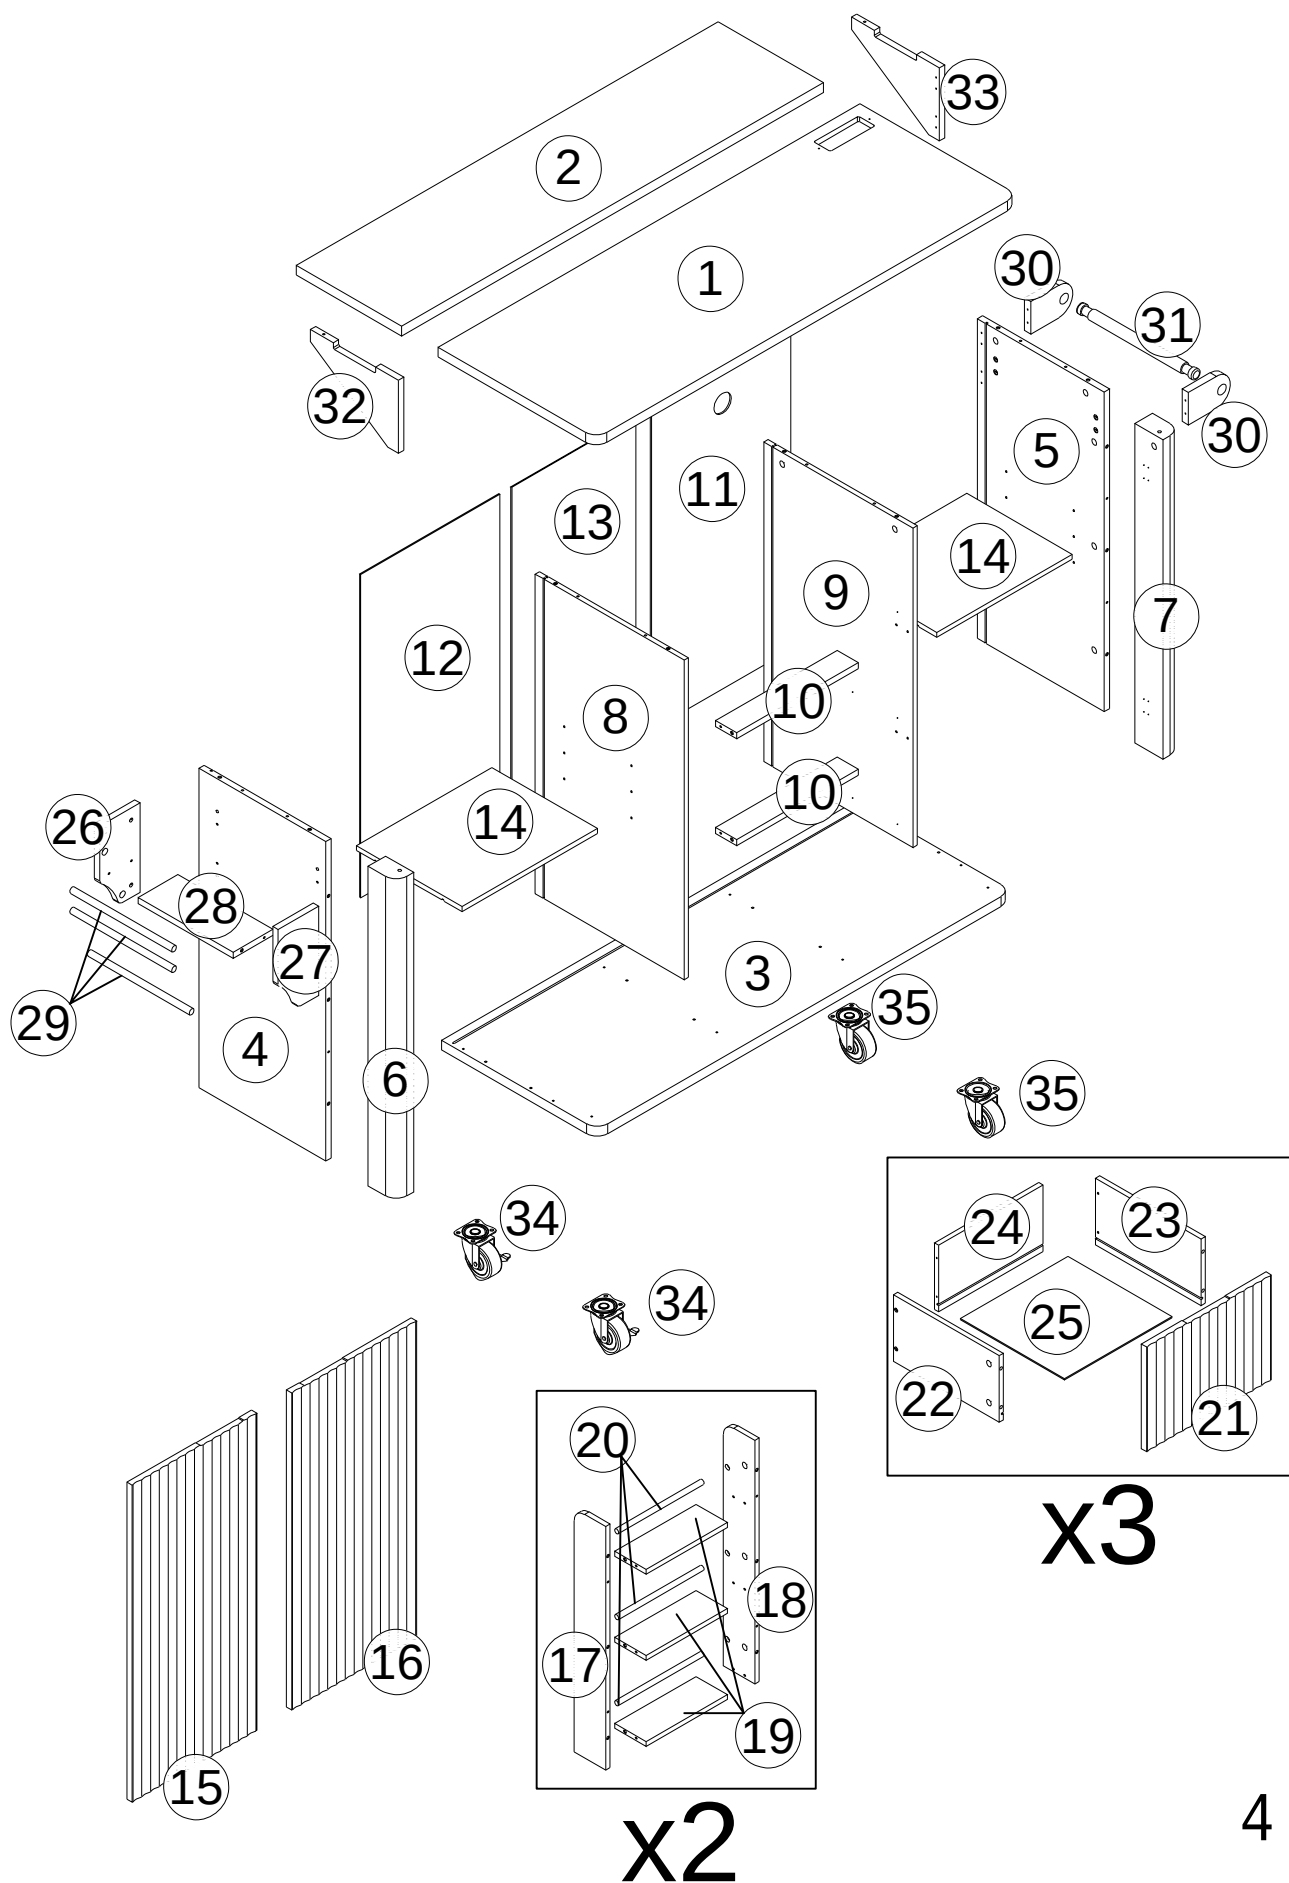

Assembly Instructions

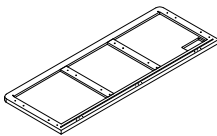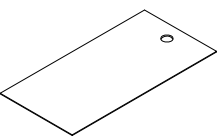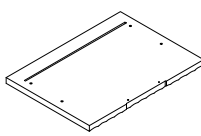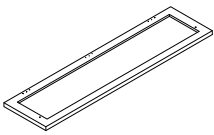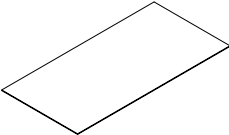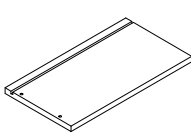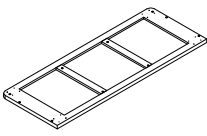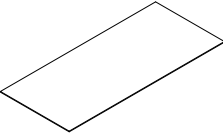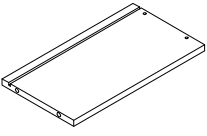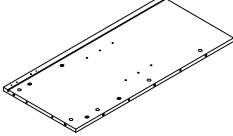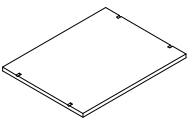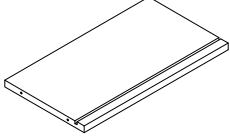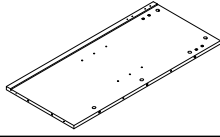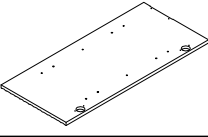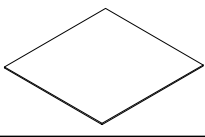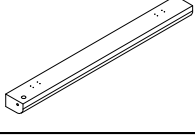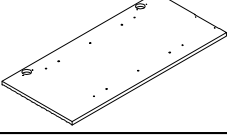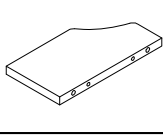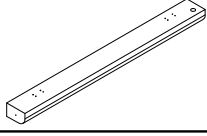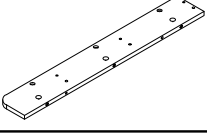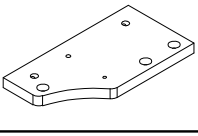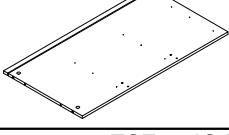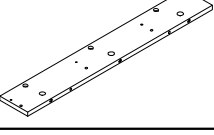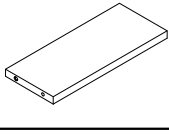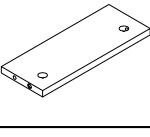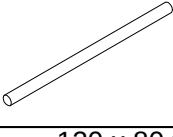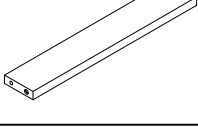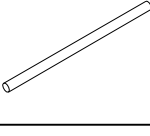① 1200 x 450 x 24 mm  1	⑪ 796 x 396 x 3 mm  1	⑲ 355 x 258 x 15 mm  3
② 1200 x 300 x 24 mm  1	⑫ 796 x 396 x 3 mm  1	⑳ 300 x 164 x 12 mm  3
③ 1179 x 442 x 24 mm  1	⑬ 796 x 353 x 3 mm  1	㉑ 300 x 164 x 12 mm  3
④ 787 x 361 x 15 mm  1	⑭ 385 x 300 x 12 mm  2	㉒ 297 x 164 x 12 mm  3
⑤ 787 x 361 x 15 mm  1	⑮ 781 x 355x 15 mm  1	㉓ 306 x 296 x 3 mm  3
⑥ 787 x 80 x 50 mm  1	⑯ 781 x 355 x 15 mm  1	㉔ 220 x 115 x 15 mm  1
⑦ 787 x 80 x 50 mm  1	⑰ 600 x 90 x 12 mm  2	㉕ 220 x 115 x 15 mm  1
⑧ 787 x 424 x 12 mm  1	⑱ 600 x 90 x 12 mm  2	㉖ 270 x 113 x 15 mm  1
⑨ 787 x 424 x 12 mm  1	㉑ 231 x 89 x 12 mm  6	㉗ 290 x 15 x 15 mm  3
⑩ 346 x 60 x 15 mm  2	㉒ 242 x 12 x 12 mm  6	㉘ 120 x 80 x 18 mm  2


Assembly Instructions





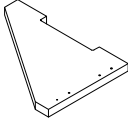
31	330 x 24 x 24 mm		1
32	250 x 180 x 15 mm		1
33	250 x 180 x 15 mm		1
34			2
35			2

Assembly Instructions

Step 1



x3

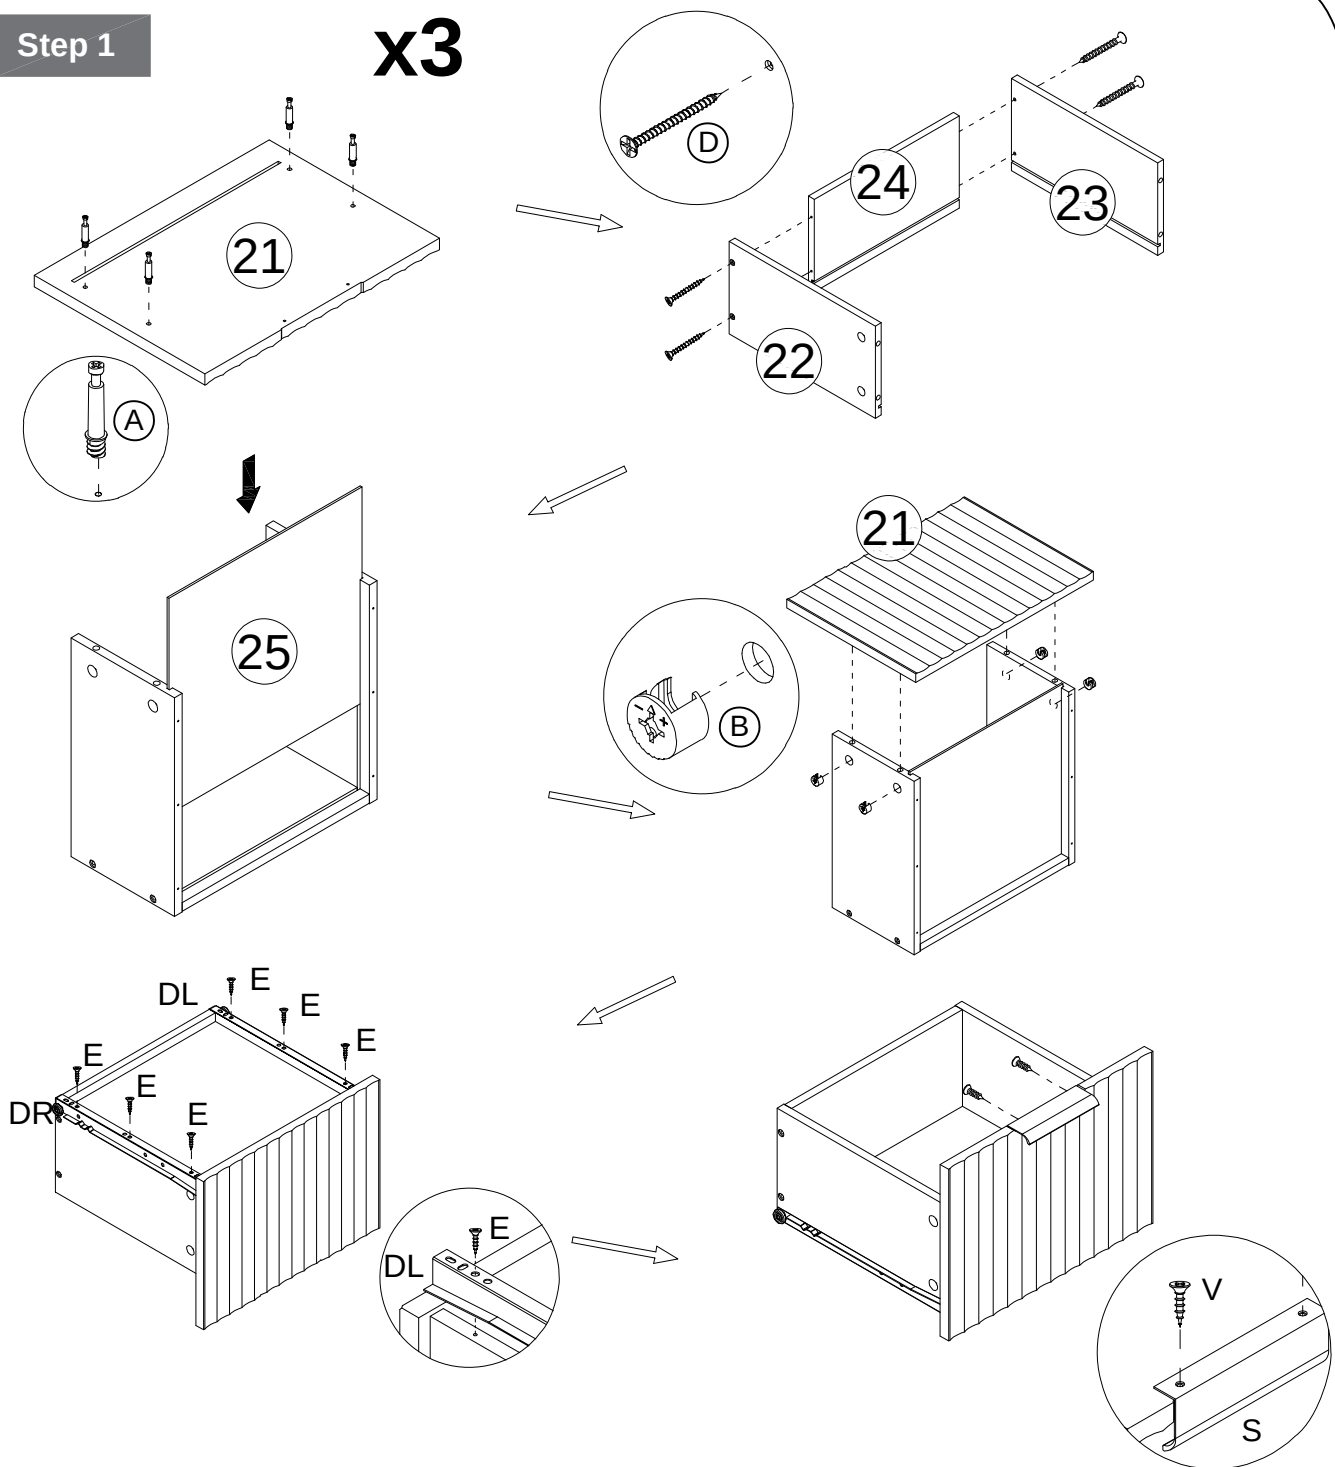

DL  Slide x 3	DR  Slide x 3	S  Handle x 3	D  4*35mm Screw x 12
E  3.5*12mm Screw x 18	V  3.5*12mm Screw x 6	A  Cam Bolt x 12	B  Cam lock x 12




Assembly Instructions

Step 2

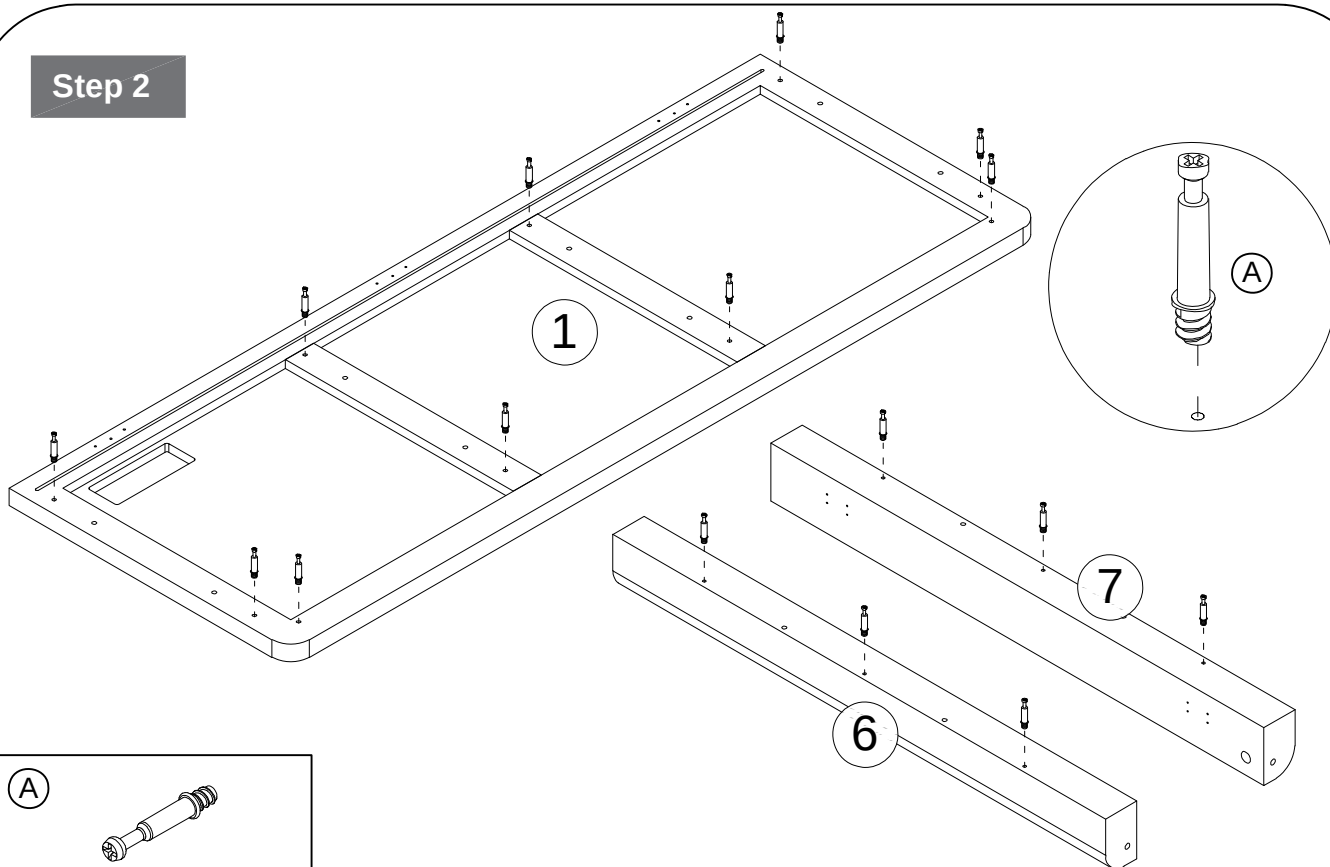

Cam Bolt x 16


Step 3

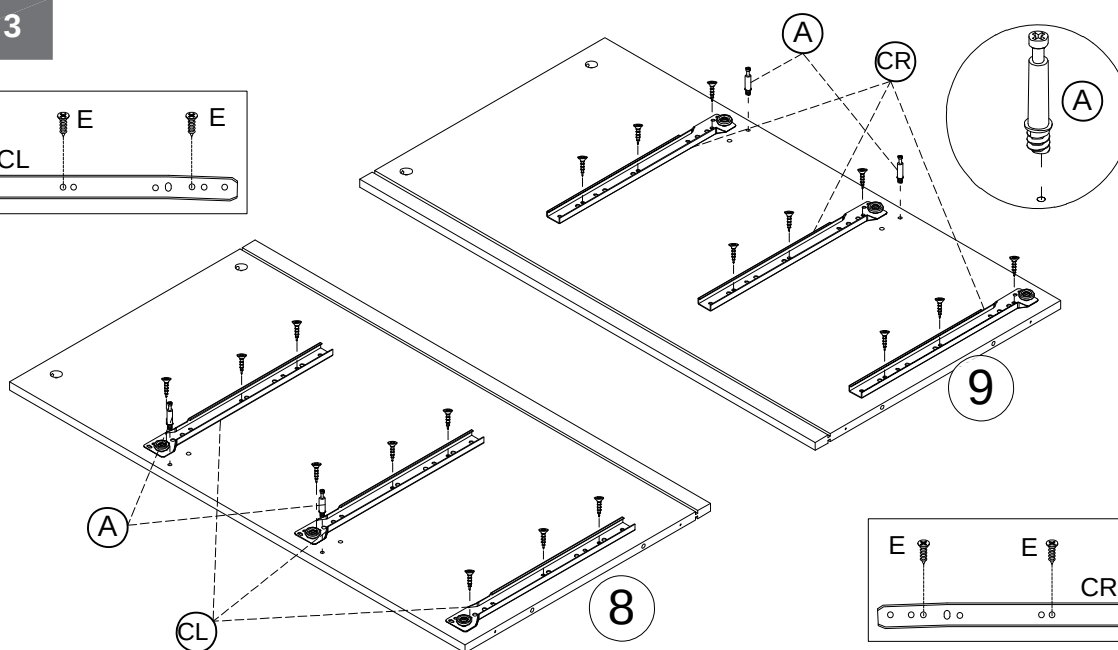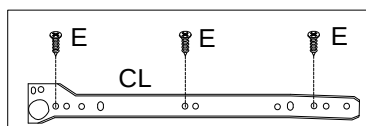


Cam Bolt x 4



3.5*12mm Screw x 18




Slide x 3




Slide x 3

Assembly Instructions

Step 4


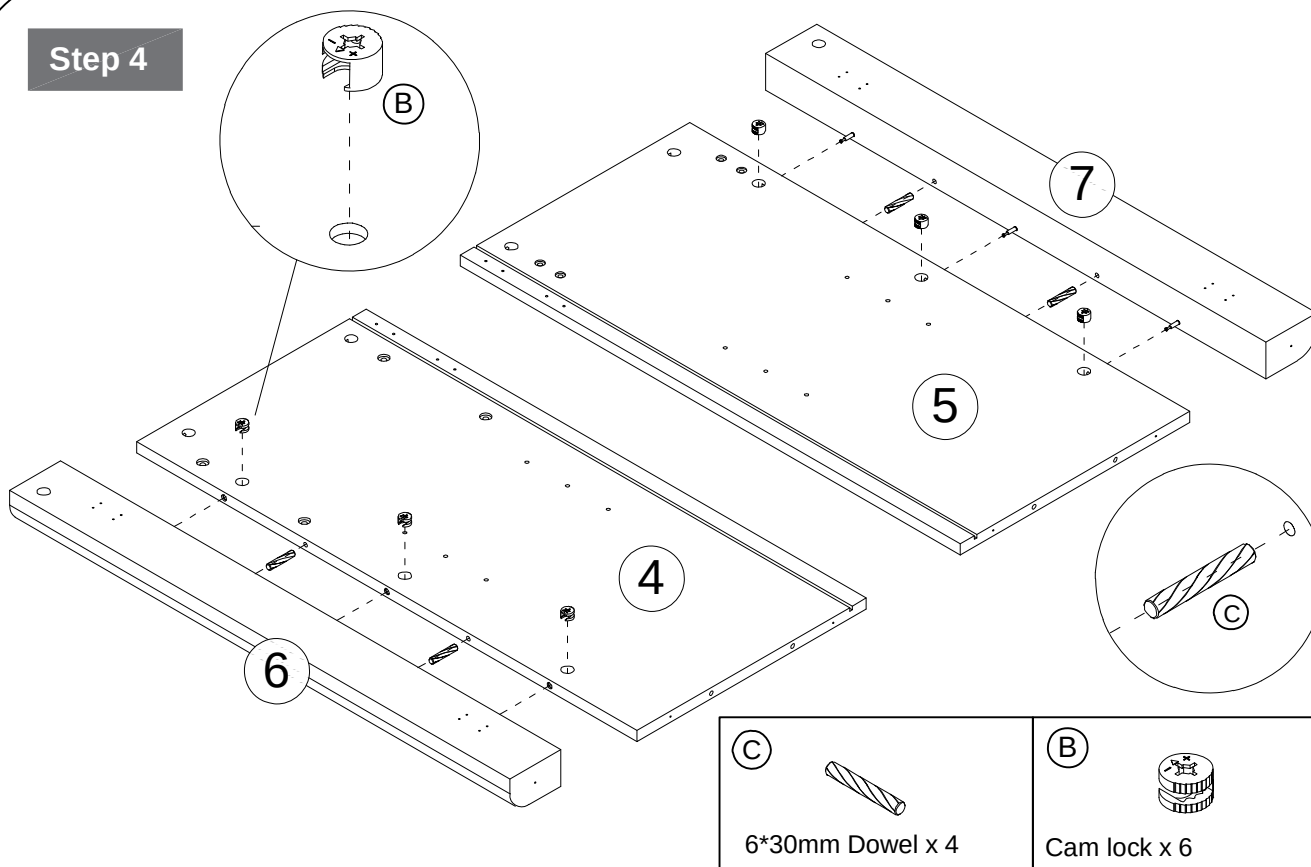



Step 5

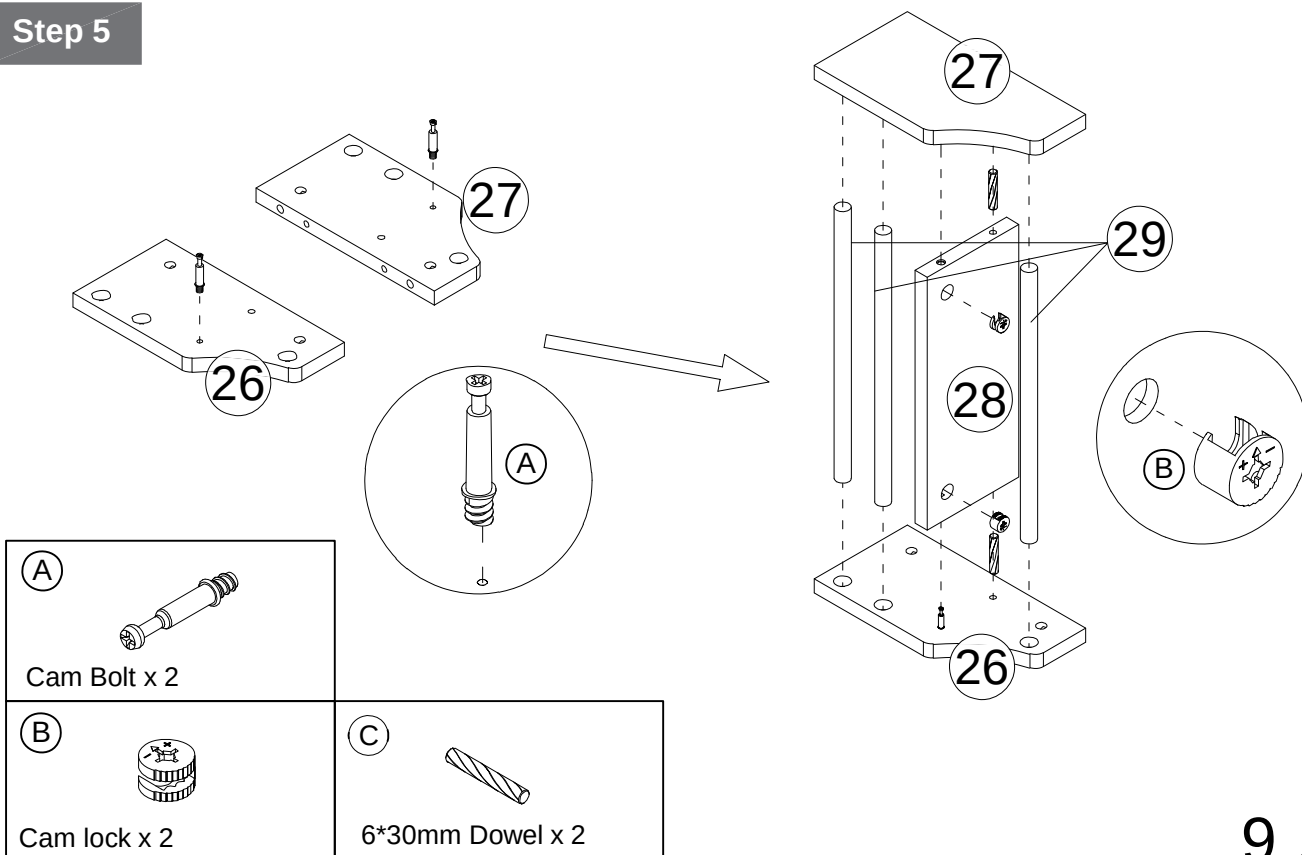



Assembly Instructions

Step 6

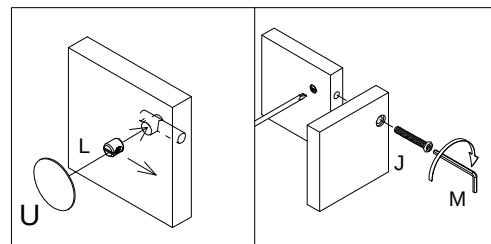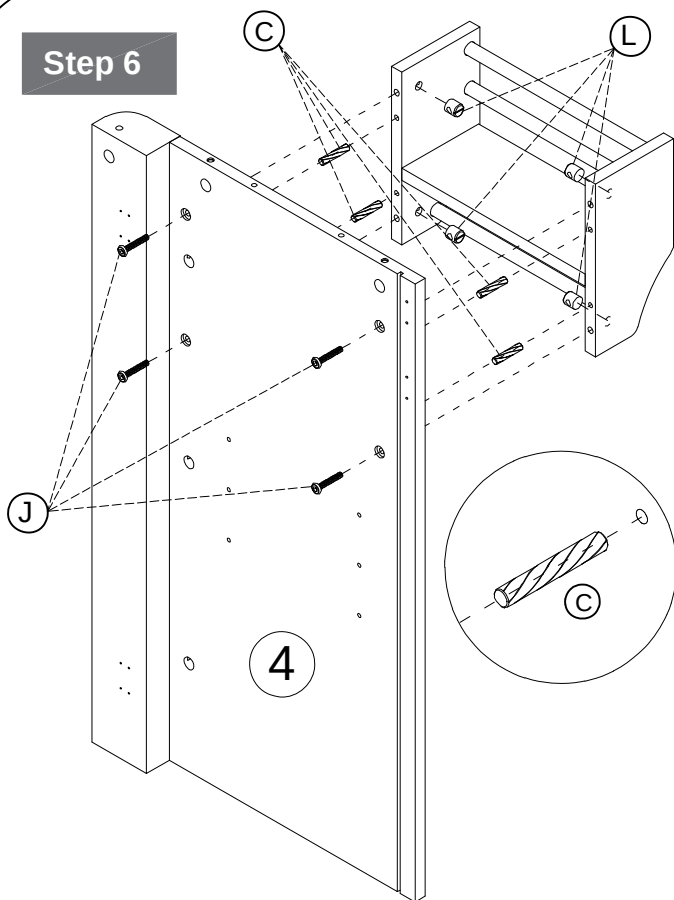

U  Hole Patch x 4	C  6*30mm Dowel x 4
J  6*45mm Screw x 4	L  Suction sheet x 4


Step 7

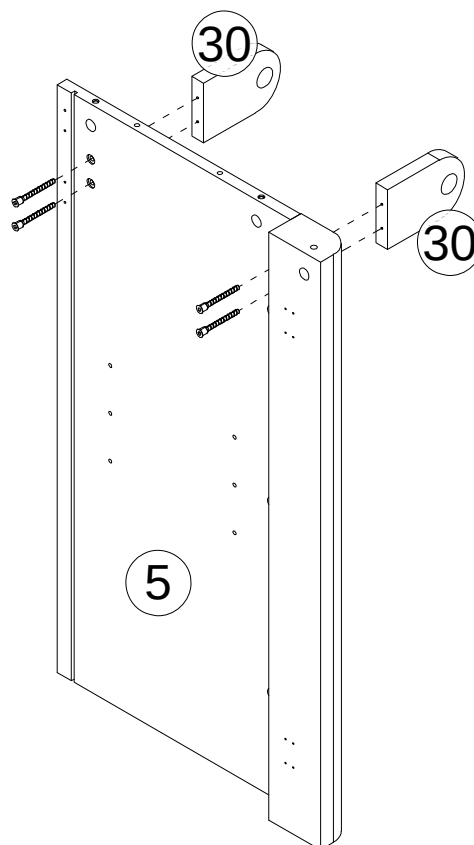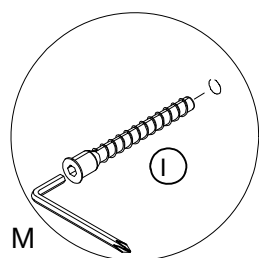


I  7*45mm Screw x 4
M 

Assembly Instructions

Step 8

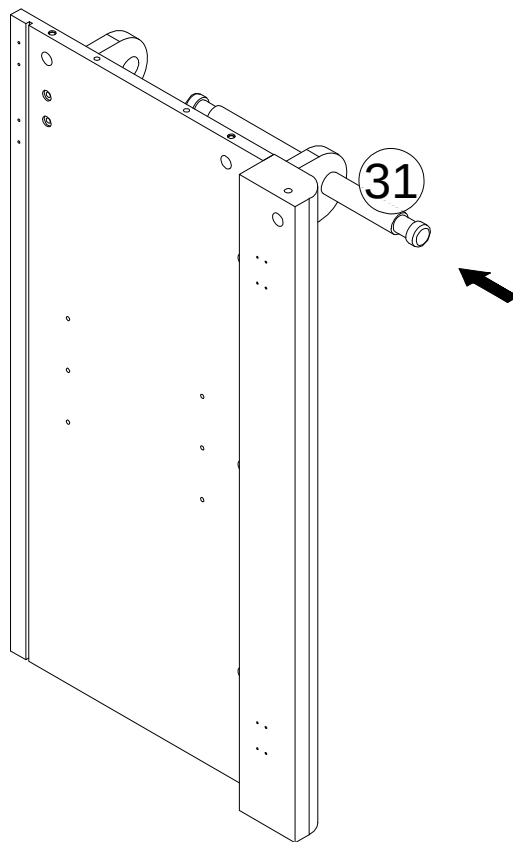

Step 9

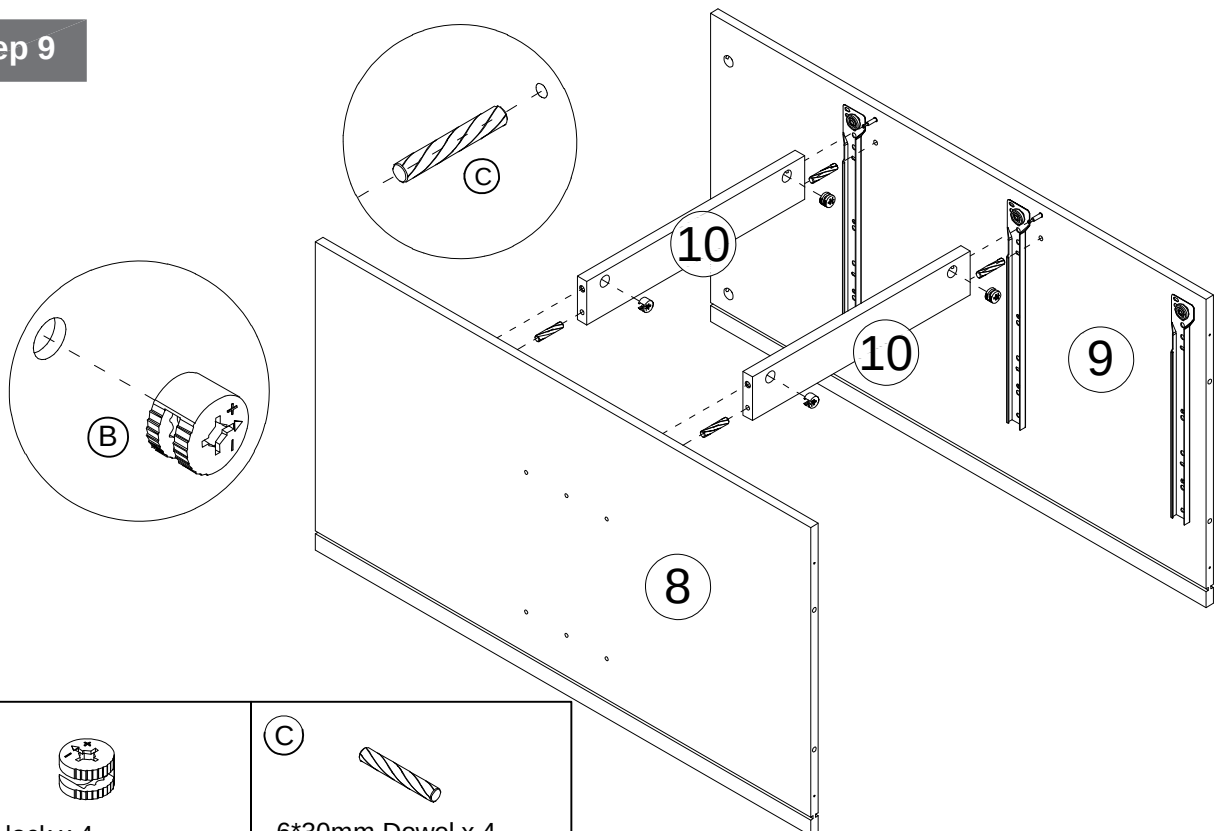

(B)



Cam lock x 4


(C)




6*30mm Dowel x 4

Assembly Instructions

Step 10

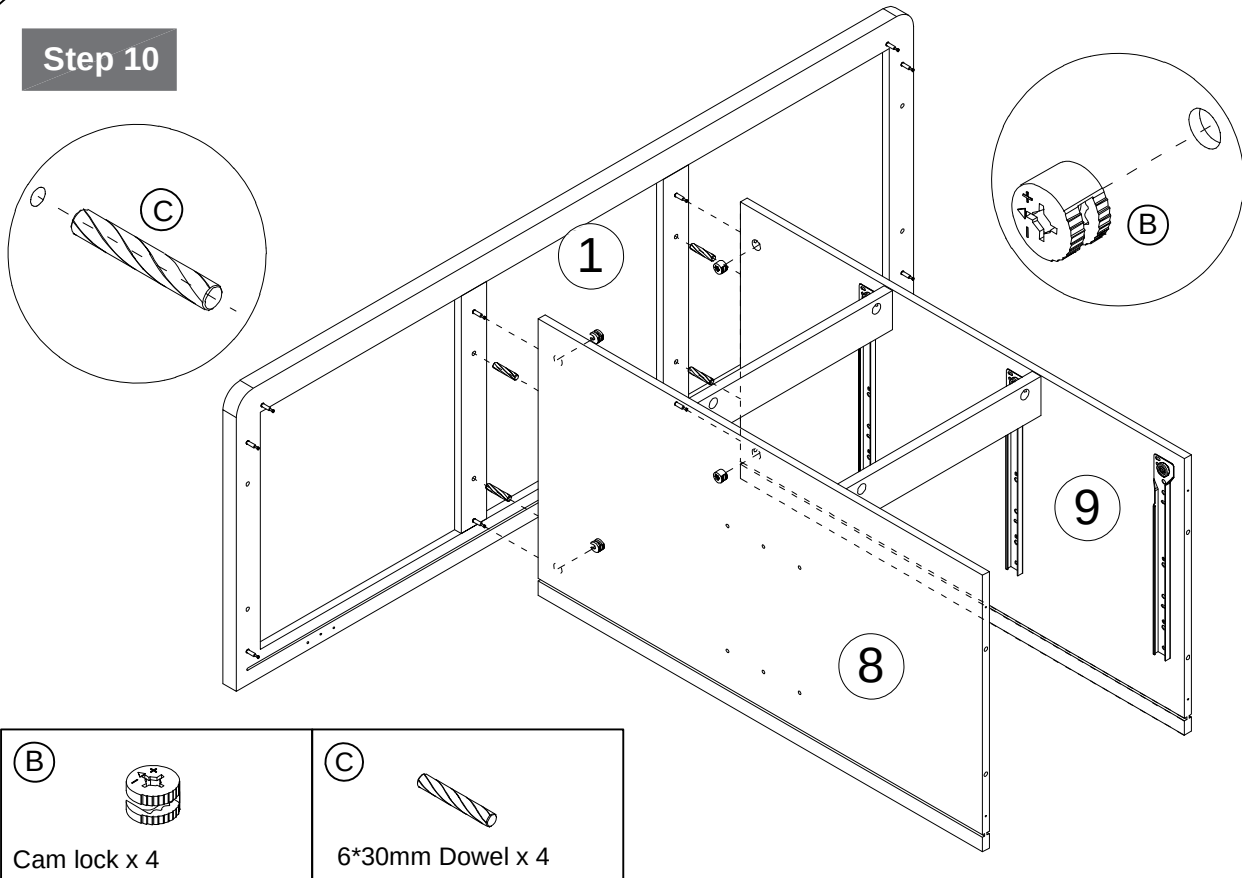


Step 11

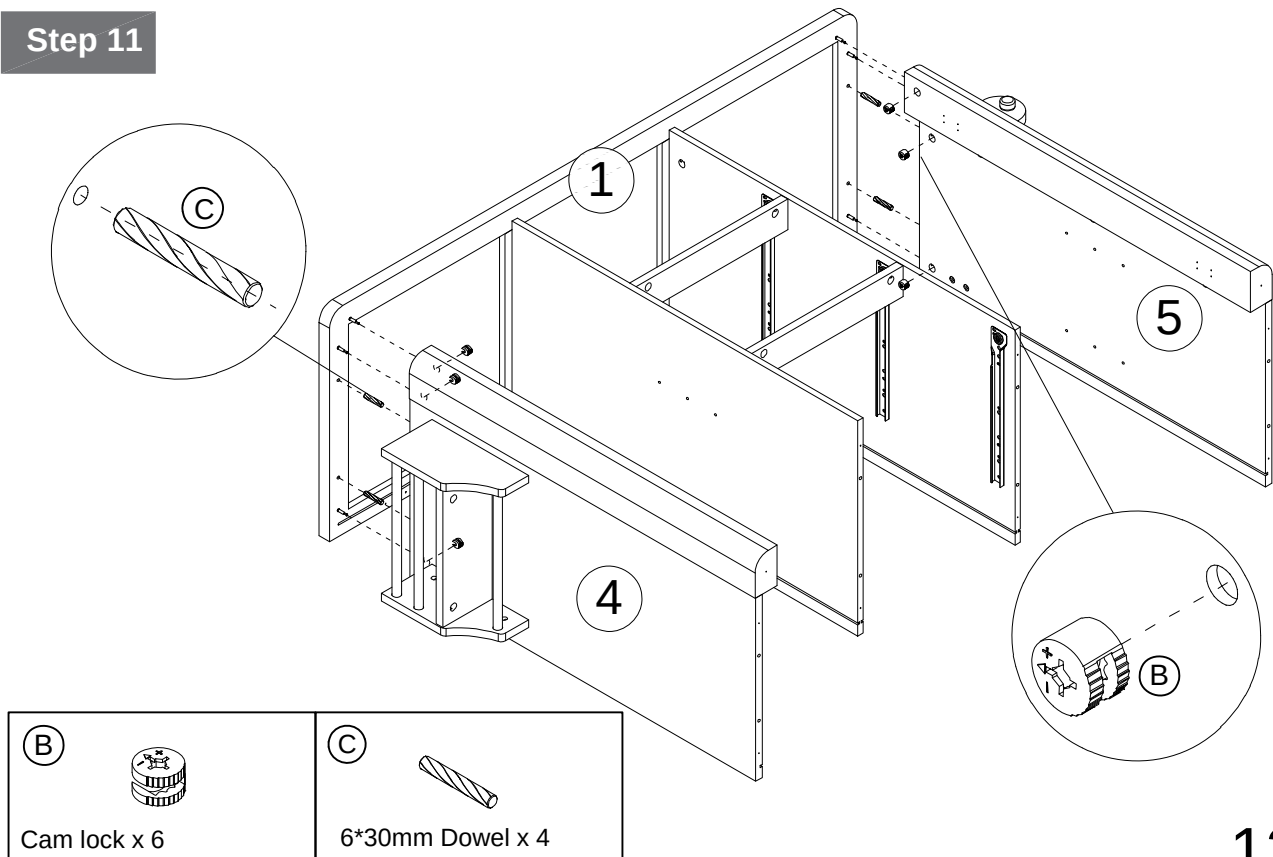


Assembly Instructions

Step 12


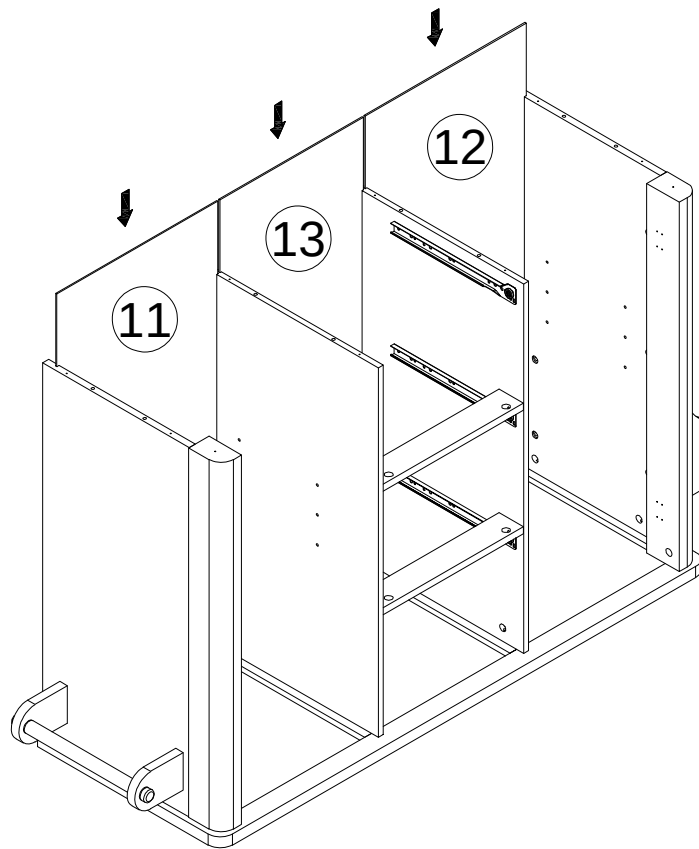


Step 13



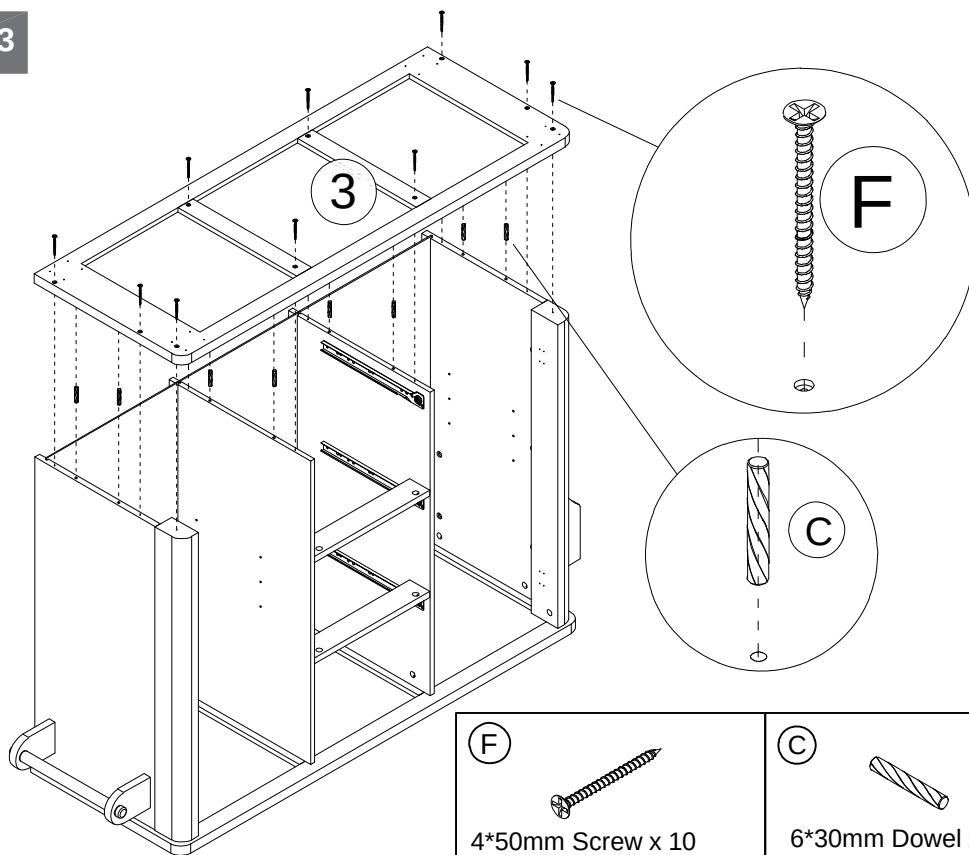


Assembly Instructions

Step 14

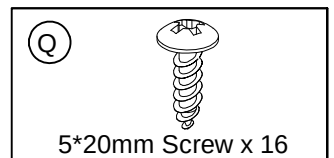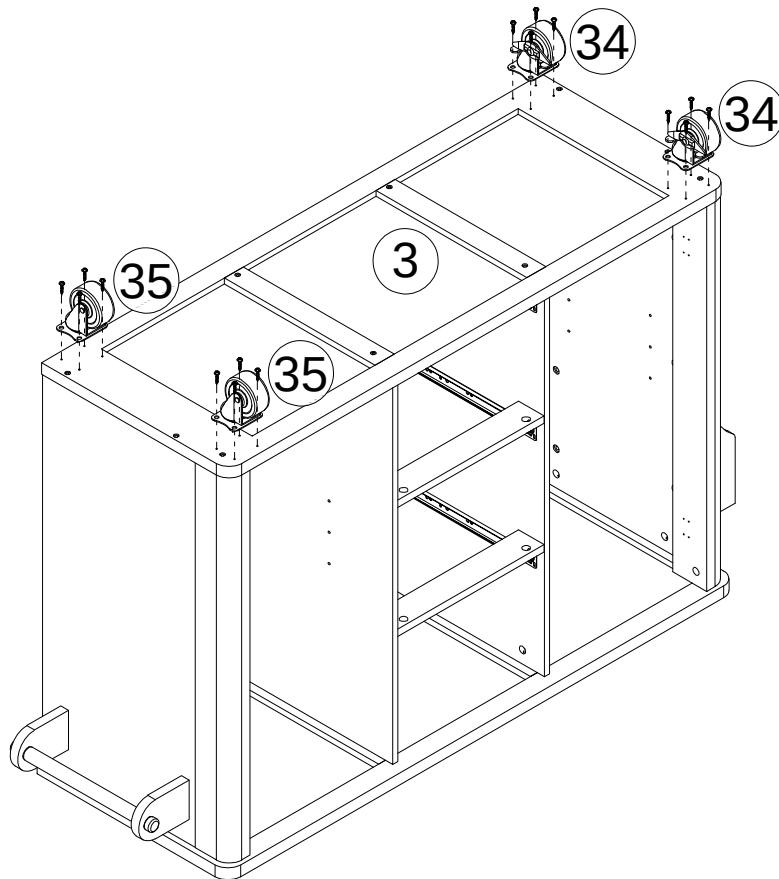


Step 15

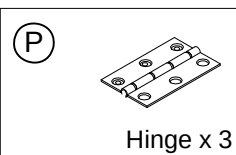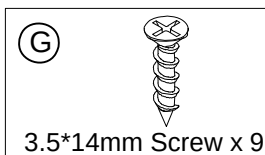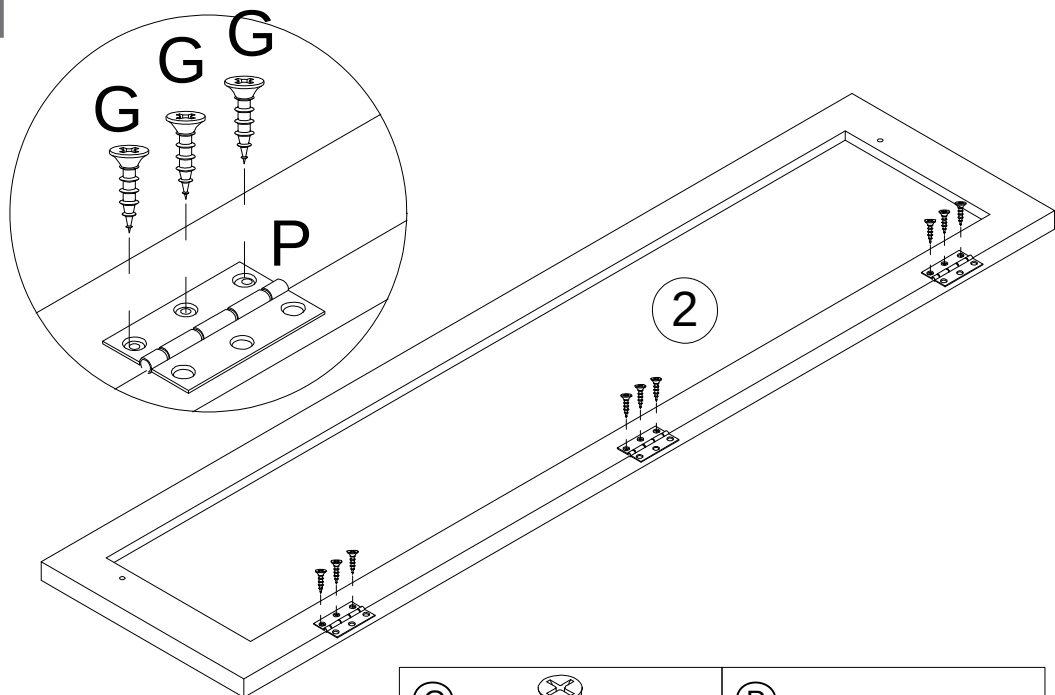


Assembly Instructions

Step 16

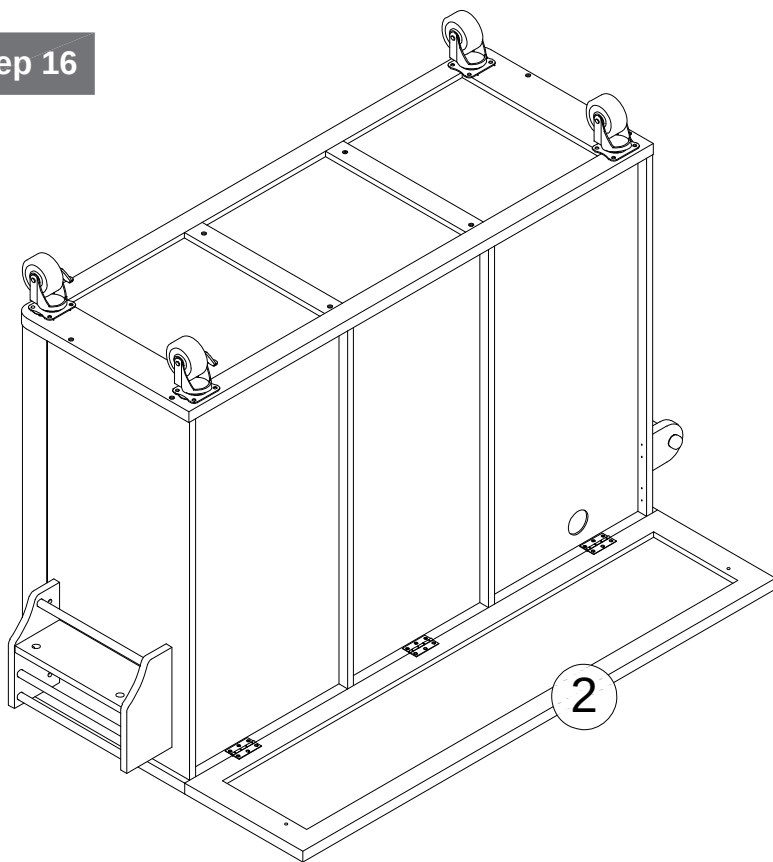

Ⓔ 3.5*14mm Screw x 9


Step 17

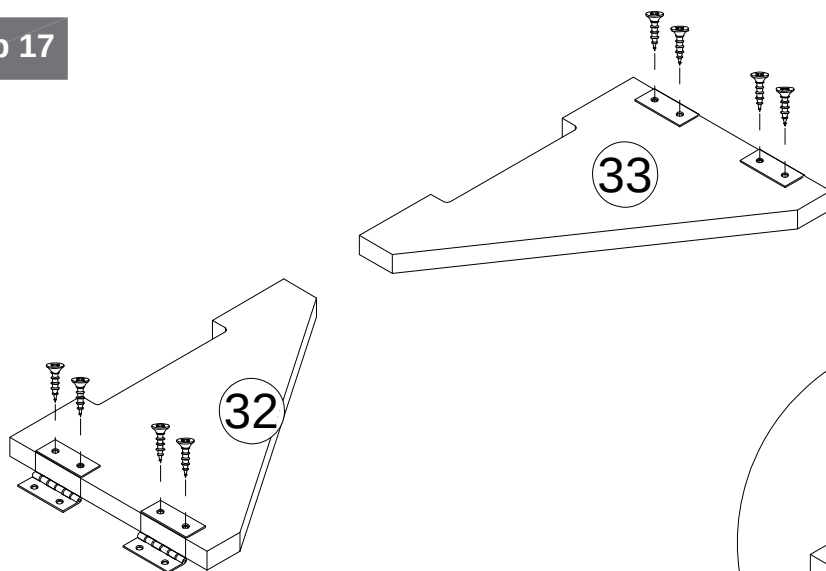


Ⓕ

3*14mm Screw x 8

Ⓖ





Hinge x 4

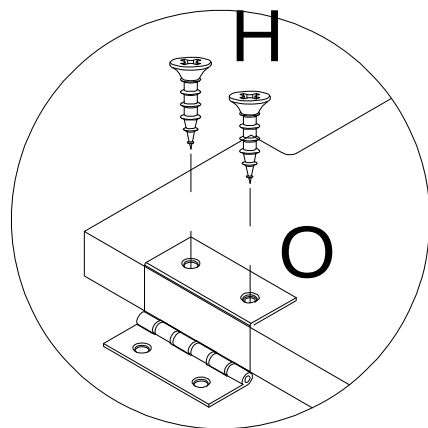

Assembly Instructions

Step 18

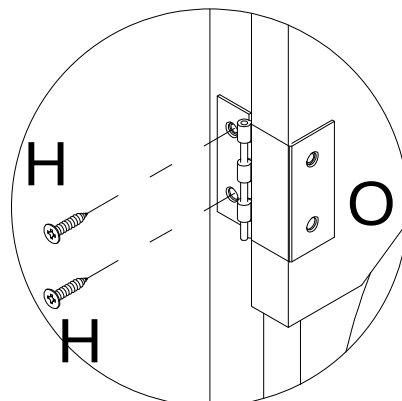
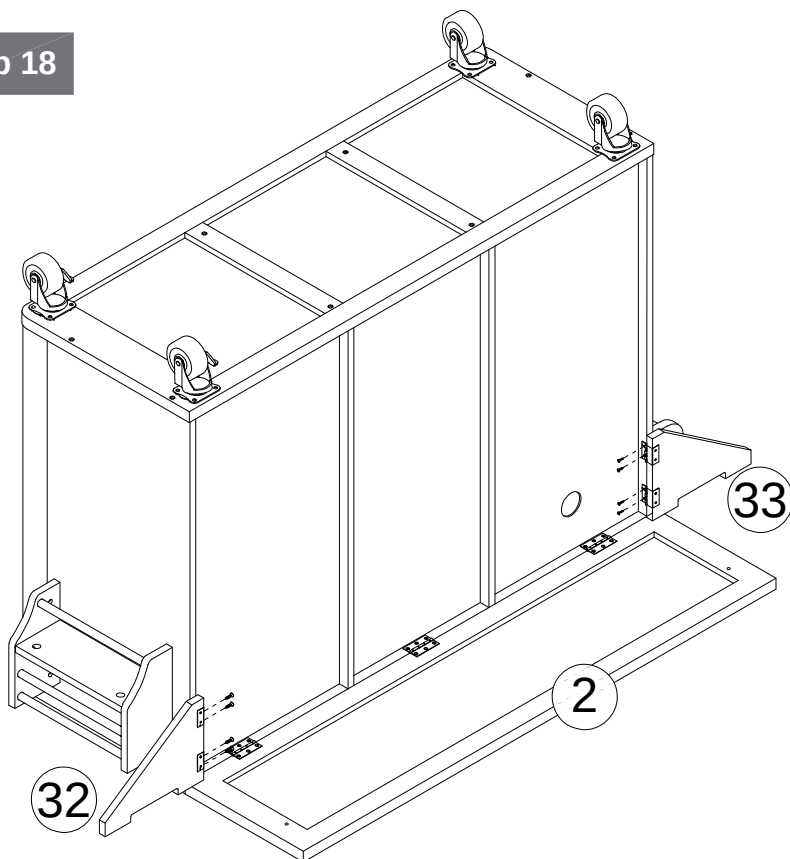


(H)




3*14mm Screw x 8

Step 19

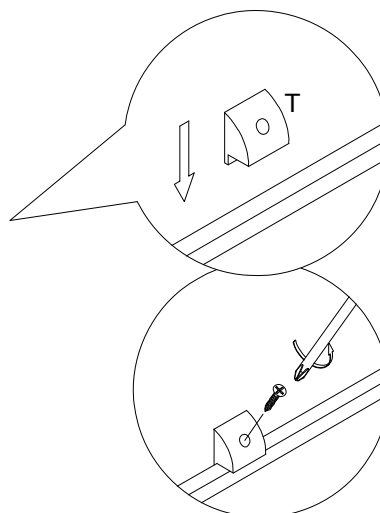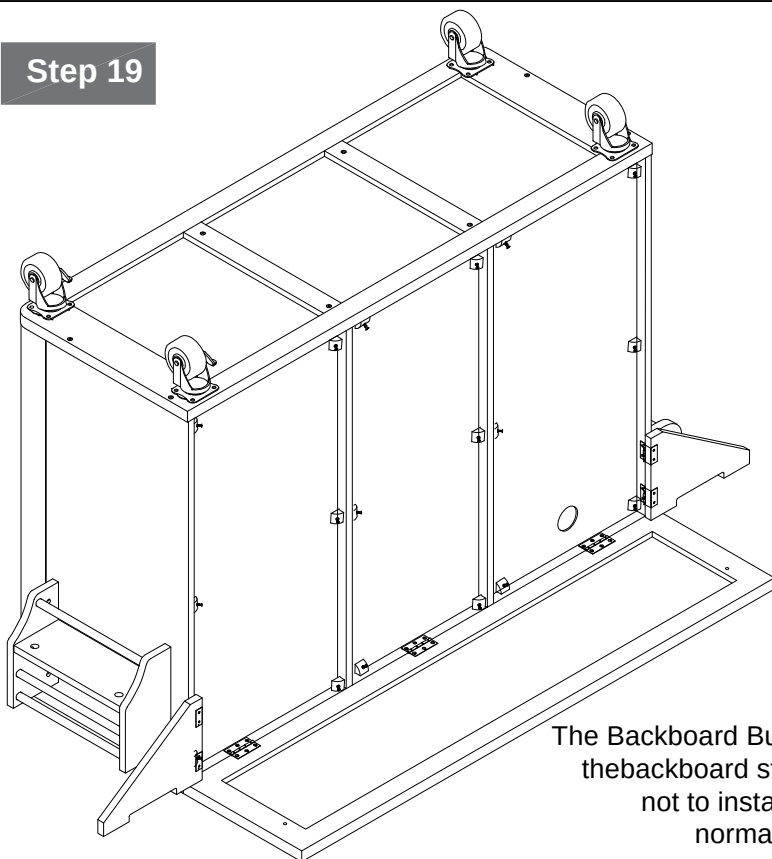

(T)





Plastic Nail x 18

The Backboard Buckle T serves to assist in stabilizing the backboard structure. You can choose to install or not to install at will. This product can be used normally. When you choose to install it, you can directly screw in the screw T at the gap of the backboard.

Assembly Instructions


Step 20

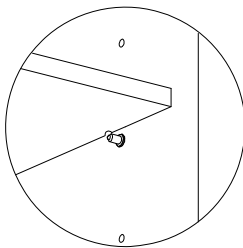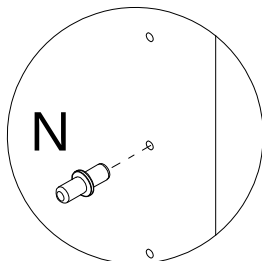


(N)




Laminate support x 8

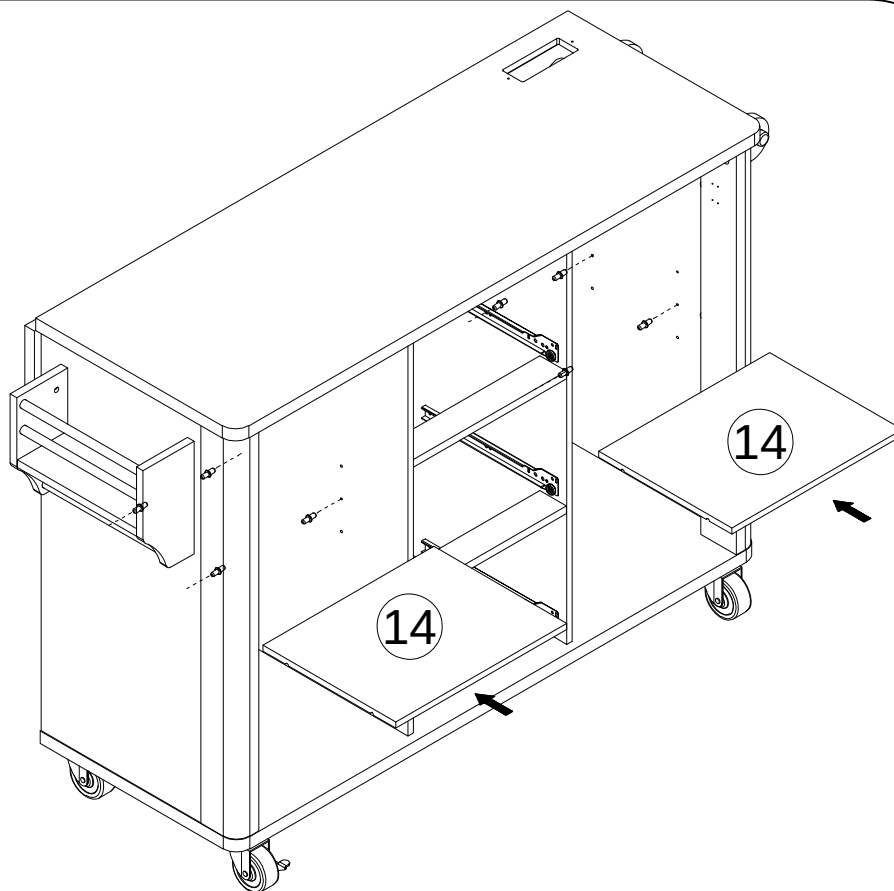

Step 21

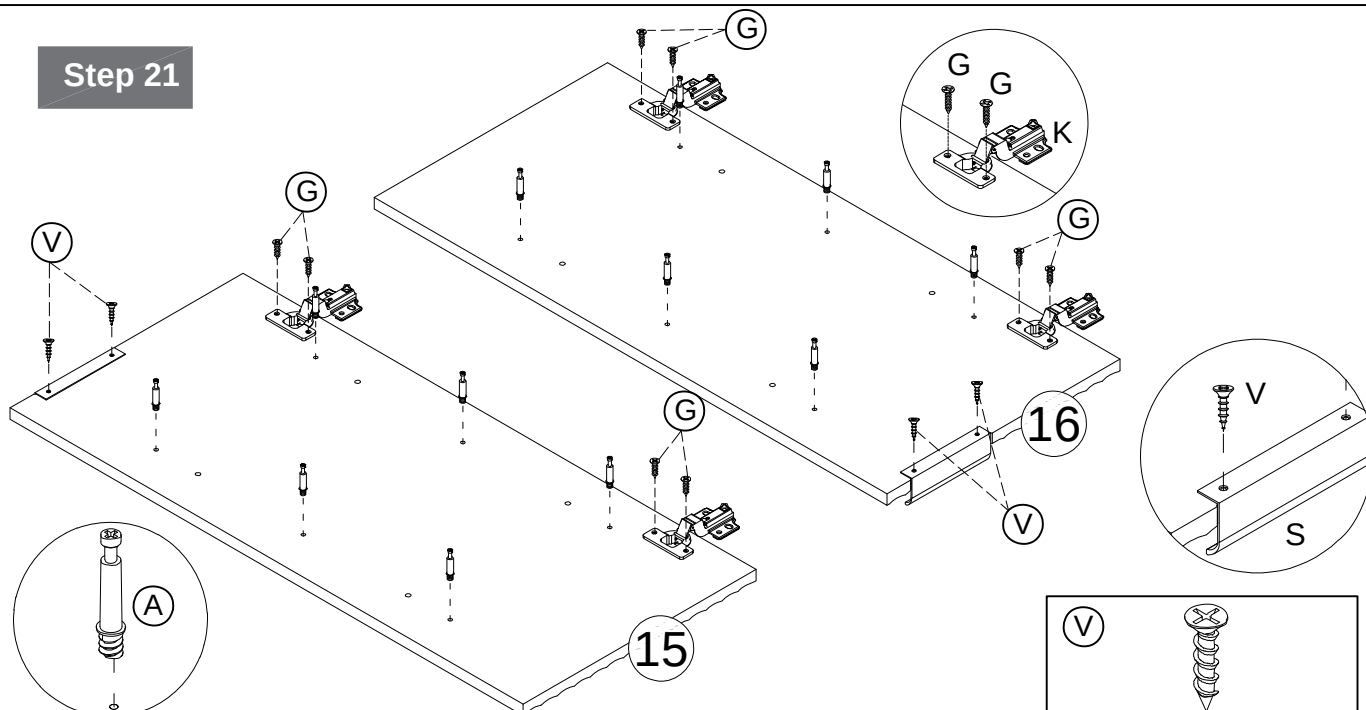


(K)



Hinge x 4

(S)



Handle x 2

(G)




3.5*14mm Screw x 8

(V)



3.5*12mm Screw x 4

(A)




Cam Bolt x 12

17


Assembly Instructions

Step 22

x2

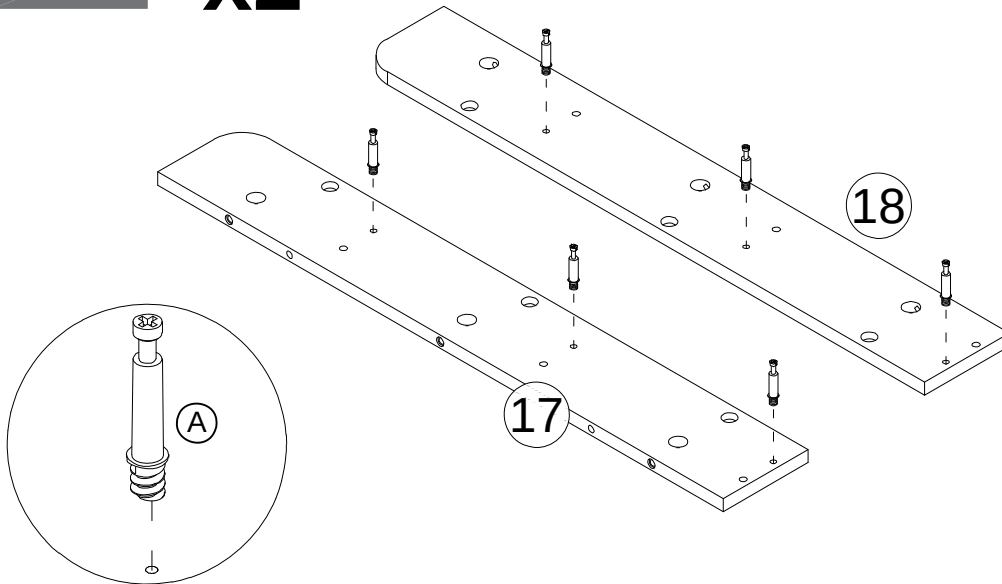


(A)



Cam Bolt x 12

Step 23

x2

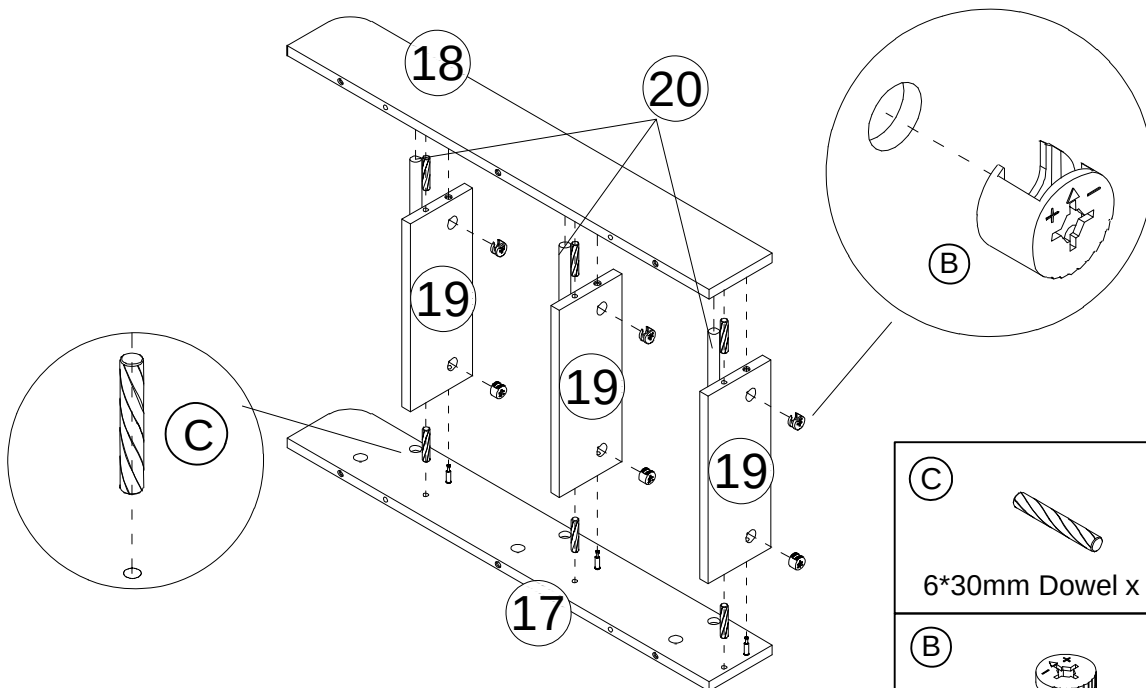

(C)



6*30mm Dowel x 12

(B)






Cam lock x 12

18




Assembly Instructions

Step 24

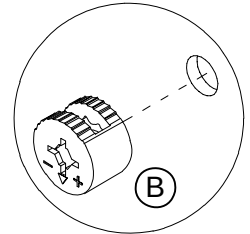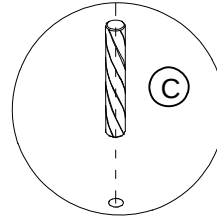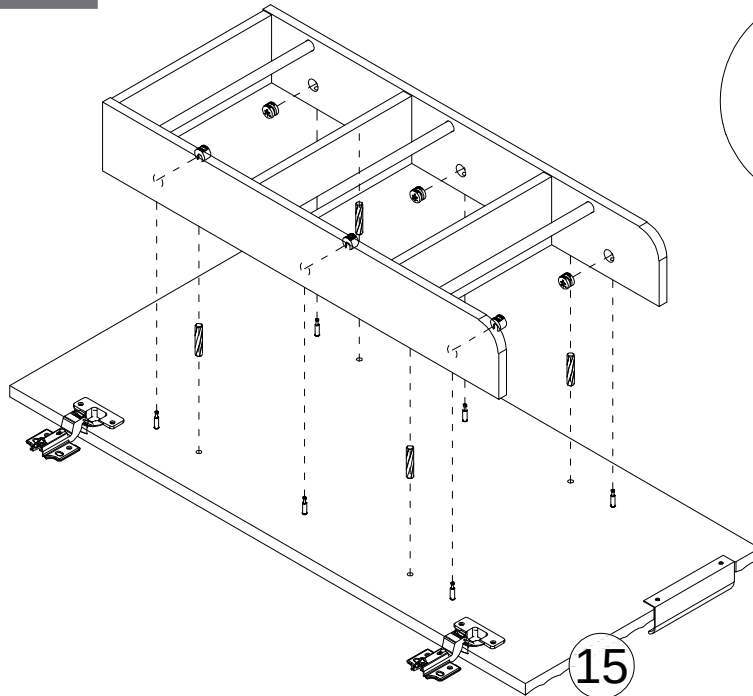

(C)	
6*30mm Dowel x 4	
(B)	
Cam lock x 6	


Step 25

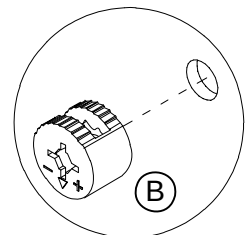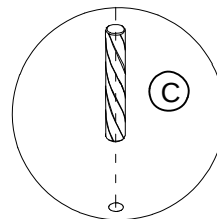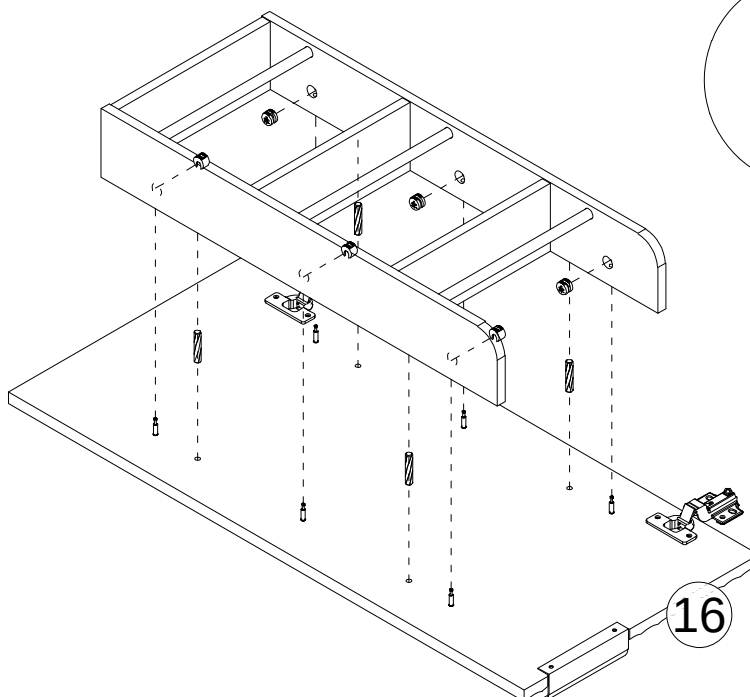


(C)	
6*30mm Dowel x 4	
(B)	
Cam lock x 6	

Assembly Instructions


Step 26

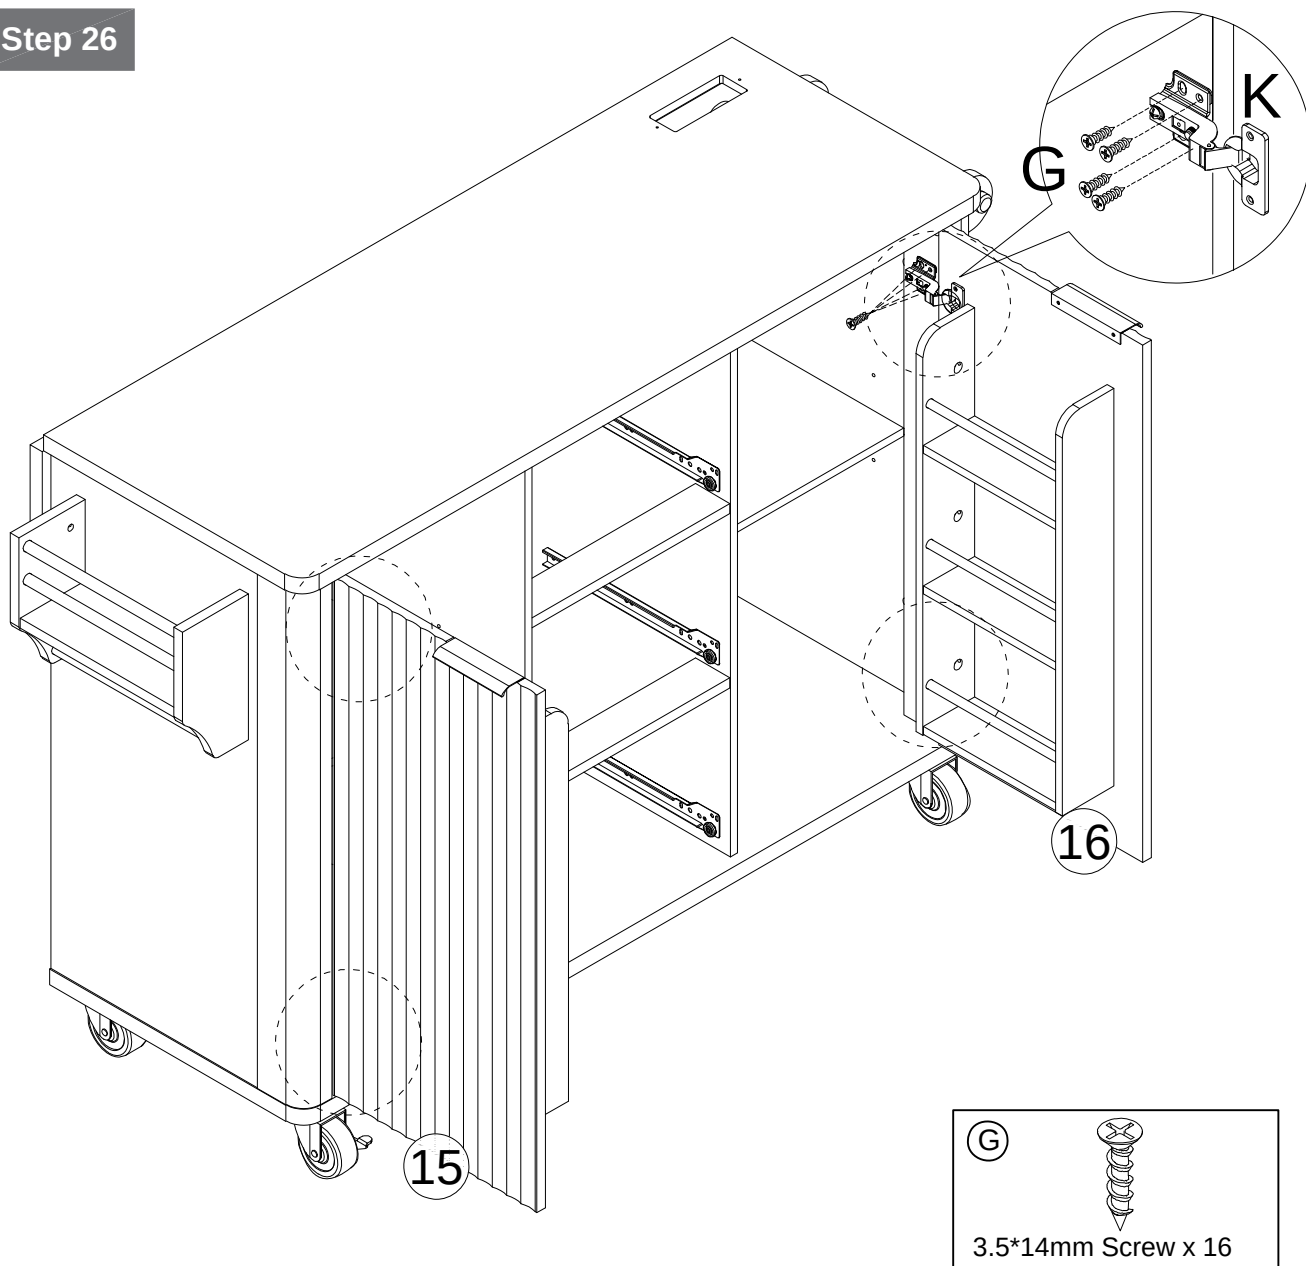


If the door can't close, please adjust the hinges as below.

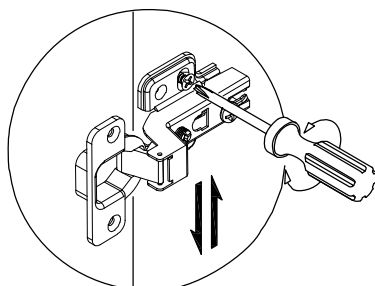

This is used to adjust the door panel in the up and down direction.

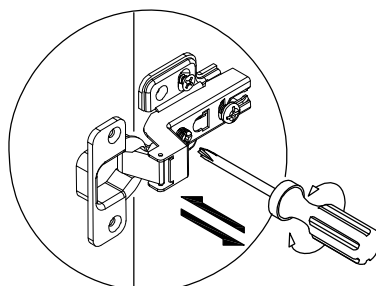


This is used to adjust the door panel in the left and right direction.

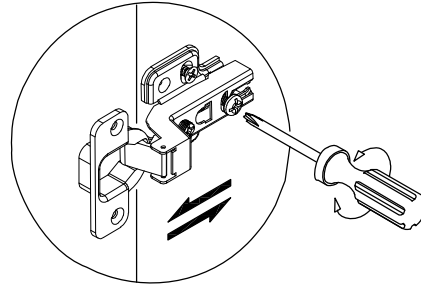


This is used to adjust the door panel in the front and rear.

Assembly Instructions

Step 27



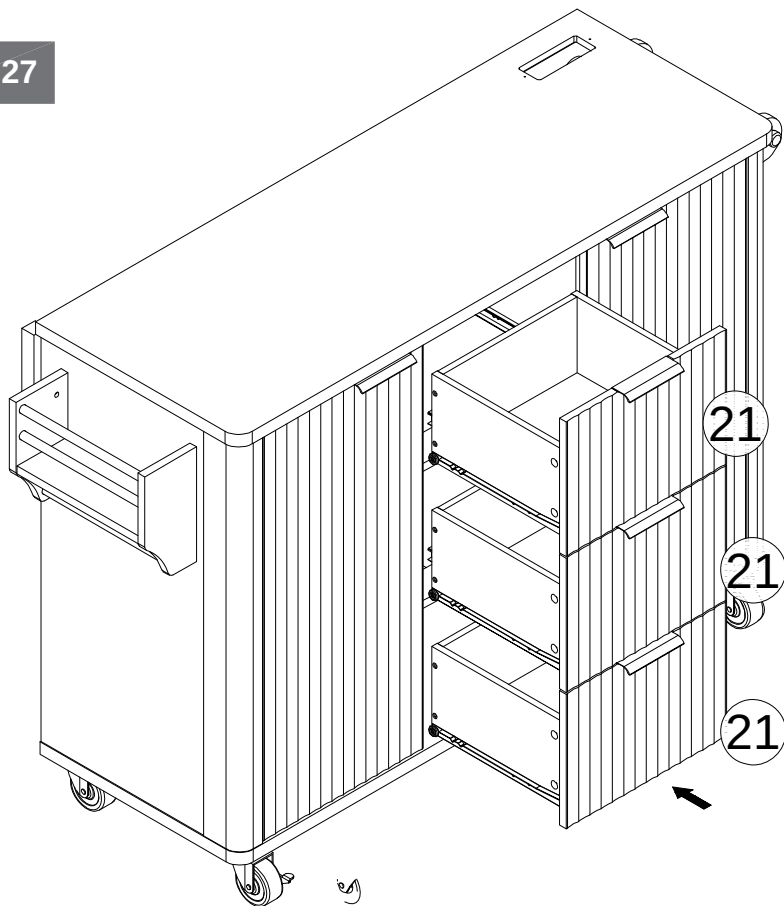


Step 28

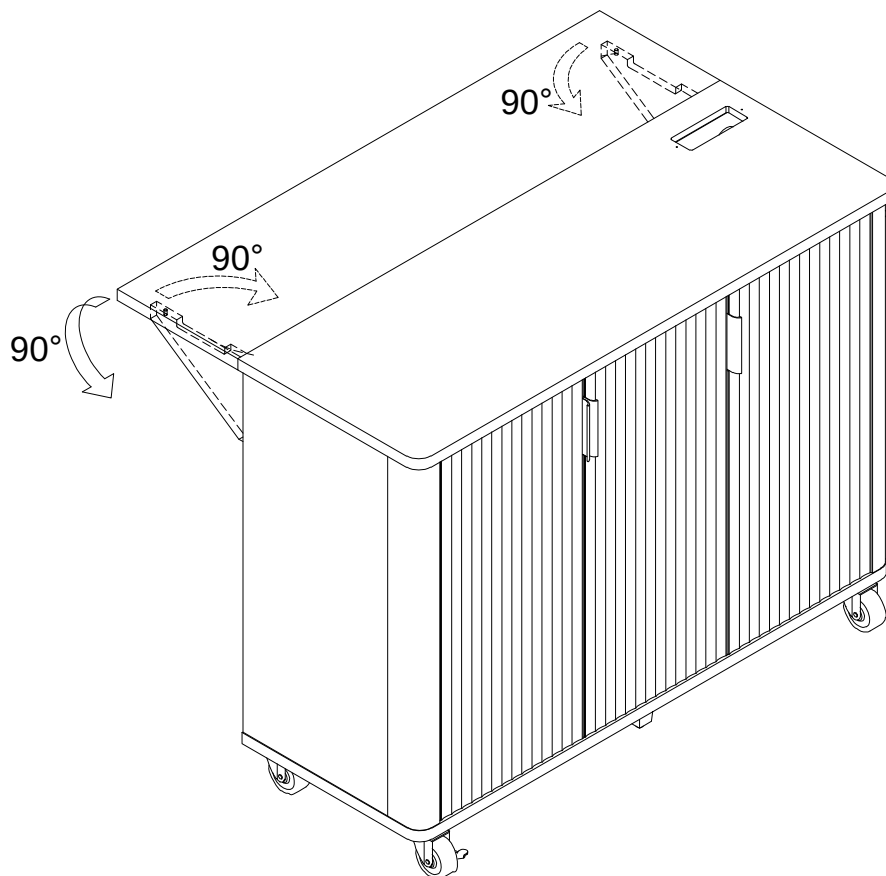

Assembly Instructions

Step 29

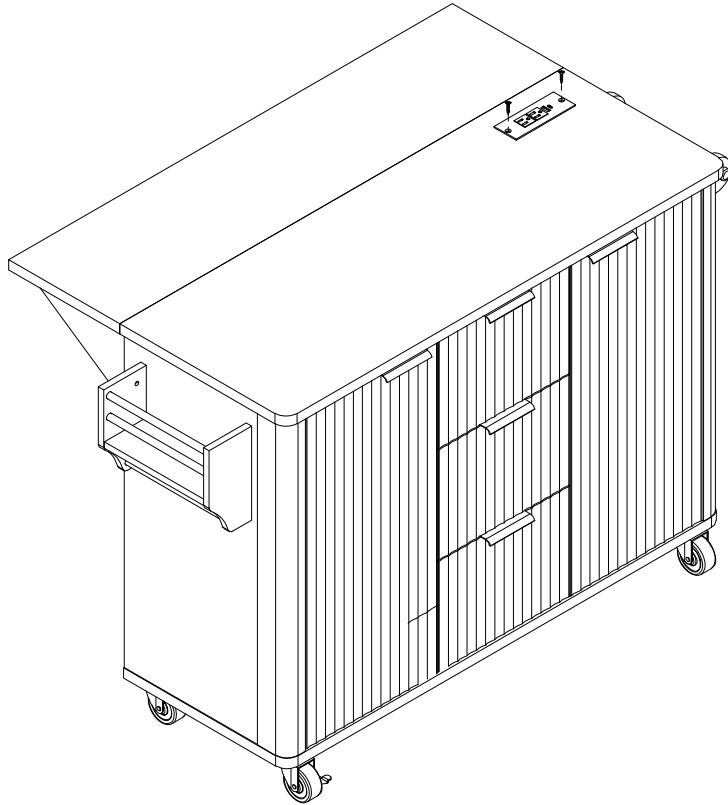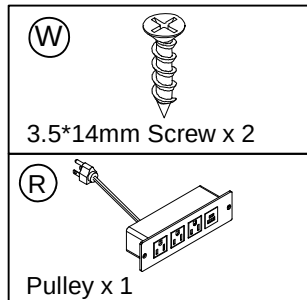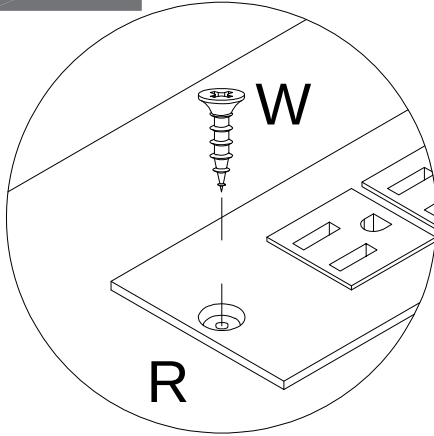

Step 30

