



Color Pine Wood Barn Door - Frame

Installation Manual






SAFETY PRECAUTIONS

!CAUTION!

- Power tools can cause serious damage if not professionally used. Safety gear must be worn before installation to prevent unexpected injuries.
- Pick an area free of hazardous condition before you start on the project. Please use tools and power tools responsibly any loss of control and accident deaths may occur due to abuse of tools.
- Big objects required in this project are needed to be carefully and responsibly moved. Be sure to wear safety gloves and shoes to prevent any serious injury.
- Be extremely careful to not put any parts of your body against a moving part of the hardware. This may cause bruising, punctures, and other results of injuries when for example when fingers are caught in the closing area of the doors.
- Precautions should be taken when opening or closing the door(s). Handles should be used when attempting to slide the door(s). Always keep you and children aware and safe from any unexpected situations.
- Any extreme uncontrolled pressure opening or closing the door(s) can damage the hardware gradually. Use handle(s) to open and close the door(s) with care at all times.

HARDWARE INCLUDED

Please check that you have the correct quantity of hardware before installation.
Different door sizes comes with different quantity of hardware.

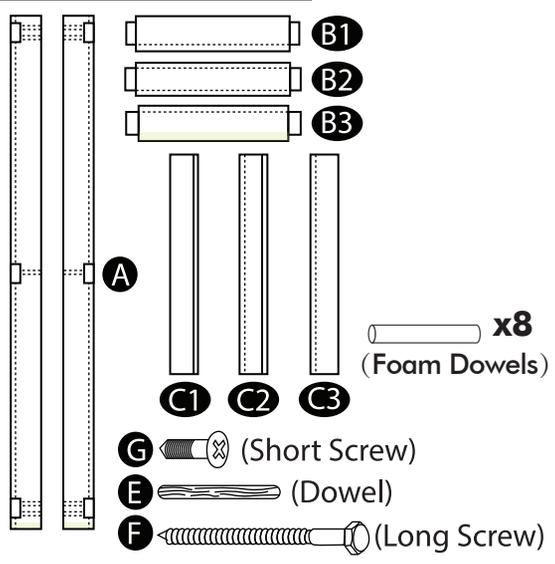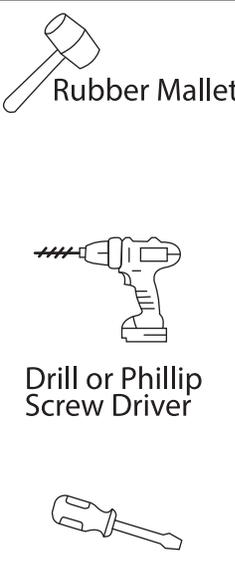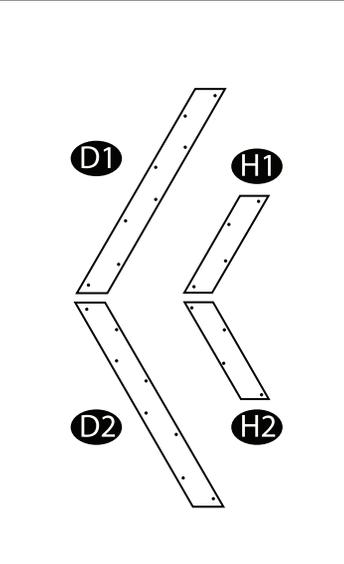Main Components	Tools Needed	Decorative Panels
		

Checklist for items you should have for each door size.

Size	A	B1	B2	B3	C1	C2	C3	E	F	G
20in	2	1	1	1	2	2	2	10	10	64
22in	2	1	1	1	2	2	2	10	10	64
24in	2	1	1	1	2	4	2	10	10	64
26in	2	1	1	1	2	4	2	10	10	64
28in	2	1	1	1	2	6	2	10	10	64
30in	2	1	1	1	2	6	2	10	10	64
32in	2	1	1	1	2	6	2	10	10	64
34in	2	1	1	1	2	8	2	10	10	64
36in	2	1	1	1	2	8	2	10	10	64
38in	2	1	1	1	2	10	2	10	10	64
40in	2	1	1	1	2	12	2	10	10	64
42in	2	1	1	1	2	12	2	10	10	64
44in	2	1	1	1	2	12	2	10	10	64
46in	2	1	1	1	2	14	2	10	10	64
48in	2	1	1	1	2	14	2	10	10	64
54in	2	1	1	1	2	16	2	10	10	64
60in	2	1	1	1	2	22	2	10	10	64

NOTICE

G Screws
This hardware may come with more than needed. You can use the screws according to your door design that you have ordered.

Please check list below for the panels you need to build your door design.

Door Design	D1	D2	H1	H2
H	0	0	0	0
Single X	1	1	2	2
Left Arrow	2	2	4	4
Right Arrow	2	2	0	0


INSTRUCTIONS

STEP 1

Components Needed

- x1  **B1**
- x1  **B2**
- x1  **B3**
- Wooden Dowel **E** x5
- Long Screw **F** x5

Tools: Drill or Phillip Screw Driver, Rubber Mallet



x1 **A**

Top View



Bottom View

Side View

Labels: B1, B2, B3, A, E, F, Wooden Dowel, Long Screw

STEP 2

Components Needed

- x2  **C1**
- x2  **C3**
-  **C2**

PANEL C2 quantity varies from the size of the doors you have, please go to page 2 for the checklist.

Panel A

White Foam Dowels x4

Before starting Step 2 installation, install the white foam dowels into panel A groove. Follow the diagram for the location of the foam dowels. The reason for this installation is to help equally stabilize the C1, C2, and C3 panels so it does not form a gap.

Bottom View


Labels: C1, C2, C3, B1, B2, B3, A


STEP 3

Components Needed


Wooden Dowel
E  x5

Long Screw
F  x5



x1 **A** 

Drill or Phillip Screw Driver 

Rubber Mallet 

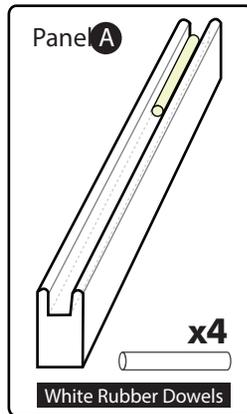

Before starting Step 3 installation, install the white foam dowels into panel A groove. Follow the diagram for the location of the foam dowels. The reason for this installation is to help equally stabilize the C1, C2, and, C3 panels so it does not form a gap.

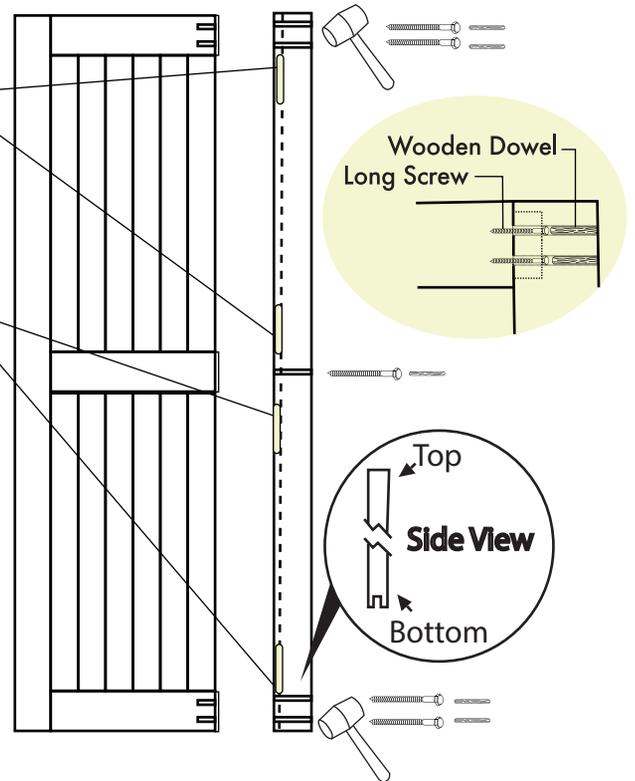

If you order the H design, your installation is complete!


NOTICE

But if you order other designs besides H, please continue to page 5.

Before installing the decorative panels make sure to differentiate the top and the bottom of the door(s). That way you can place the panels, and position it in the desired design.




Single X Door Design

Follow the diagram below by using the screws included.

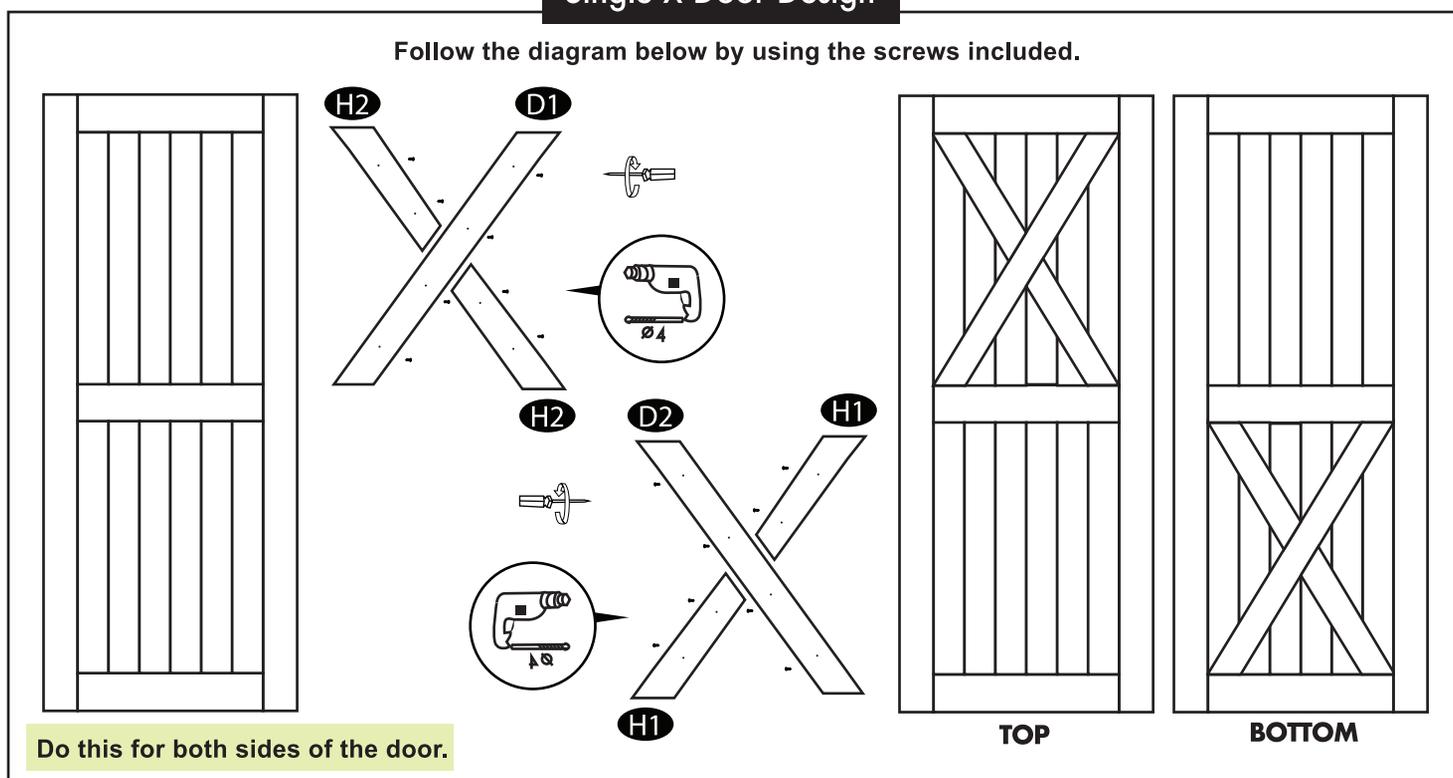

Left Arrow Door Design




Follow the diagram below by using the screws included.

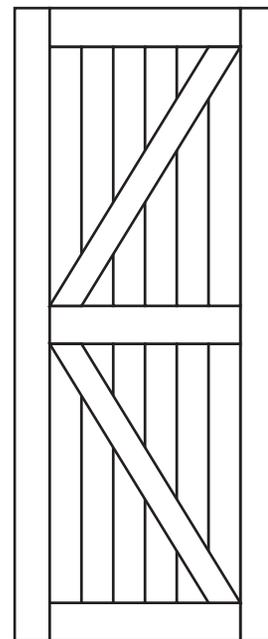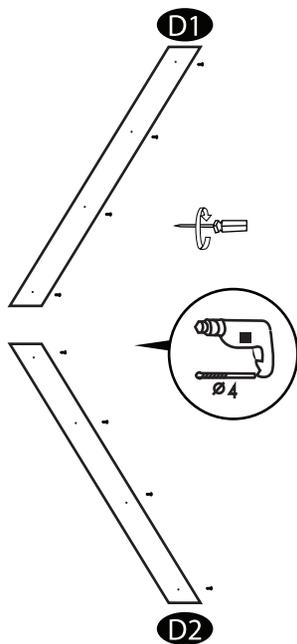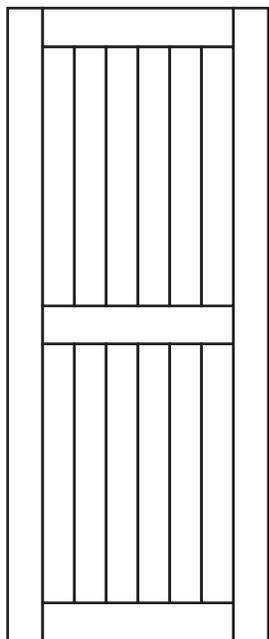

Do this for both sides of the door.

Right Arrow Door Design

Follow the diagram below by using the screws included.

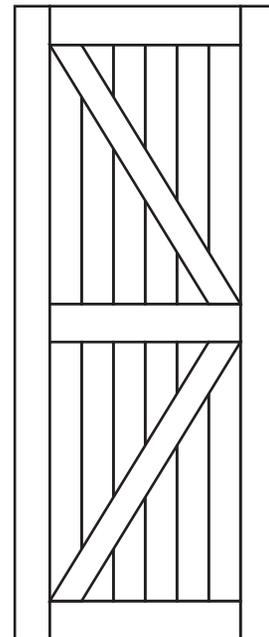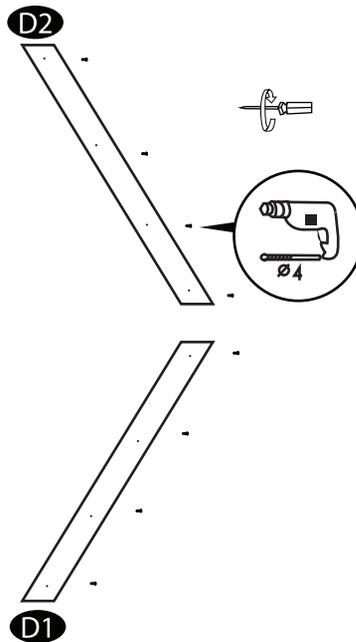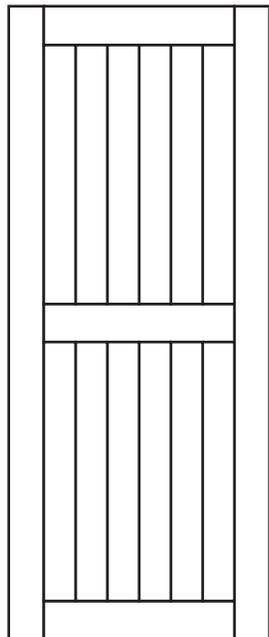

Do this for both sides of the door.

YOUR INSTALLATION IS COMPLETE!



SLIDING HARDWARE / BARN DOORS

High Quality • Exquisite Design • Outstanding Services

ABOUT US

At Homacer, our goal is to provide the finest sliding barn door hardware products and services for our valued customers. We keep polishing our products to make their quality better, prices lower and installation easier. We make it possible for you to get everything you need from us when you think about installing sliding barn doors.

CONTACT US

Customer Services

Office #: 1(770) 864-5437

Website: www.homacer.com

Email us: info@homacer.com

Bulk Order Program

To learn more about bulk order program you may contact us at

Office #: 1(770)-559-5849

Website: www.homacer.com/pages/membership-program

Email us: sales@homacer.com

LOCATION

1885 Beaver Ridge Cir, Ste A
Norcross, GA 30071