


ASSEMBLY INSTRUCTION

PATIO SOFA SET

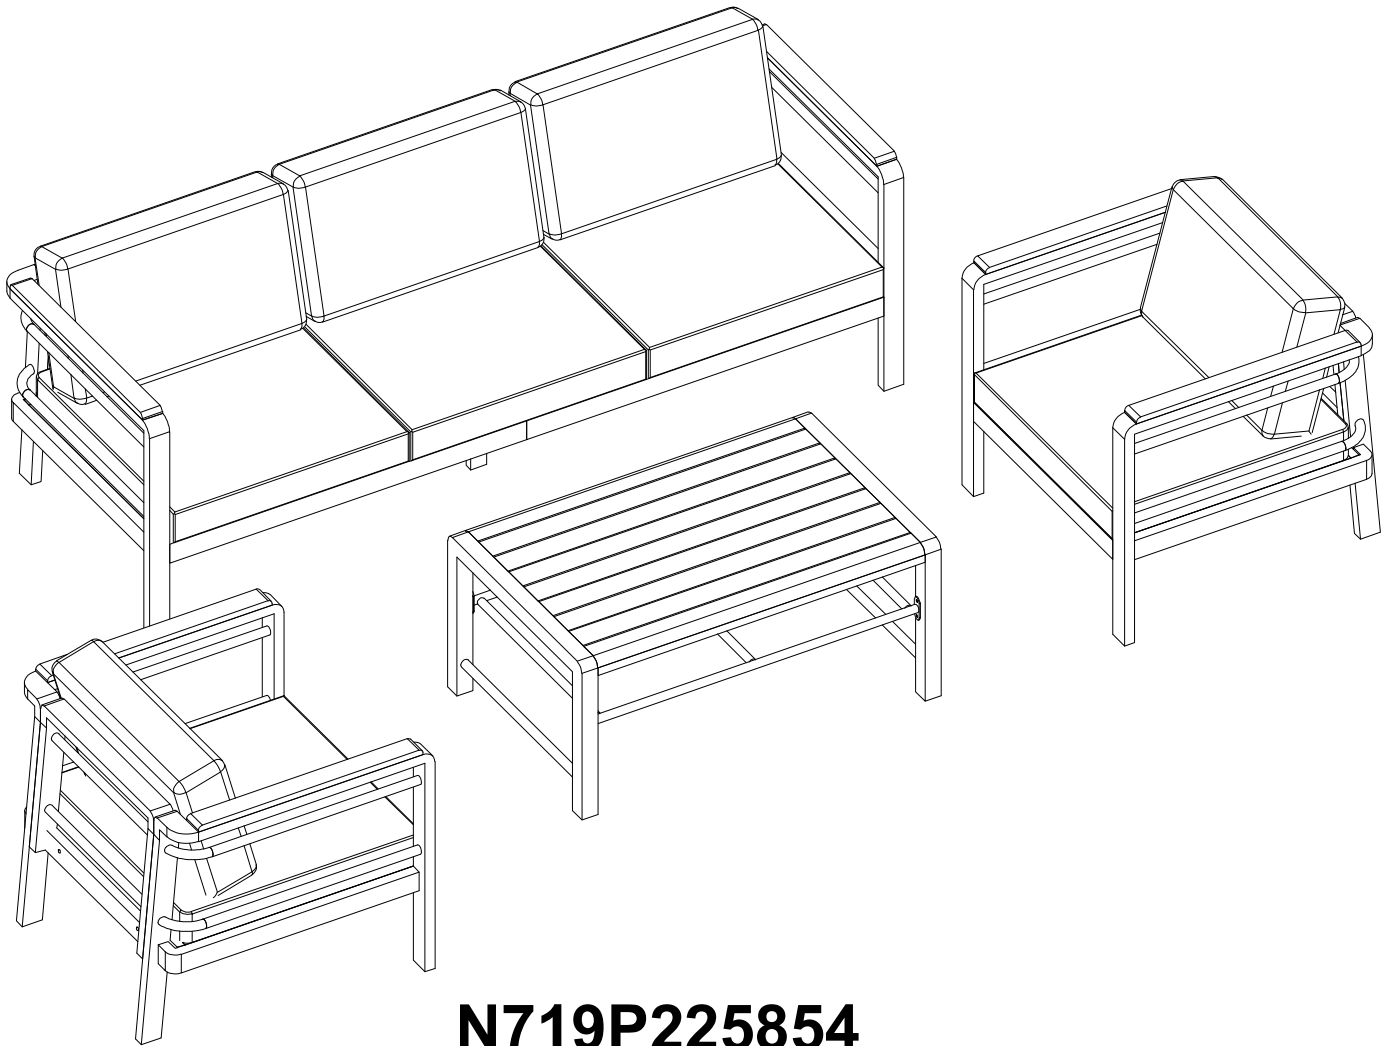

N719P225854


N719P225855

N719P225856


Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


x1

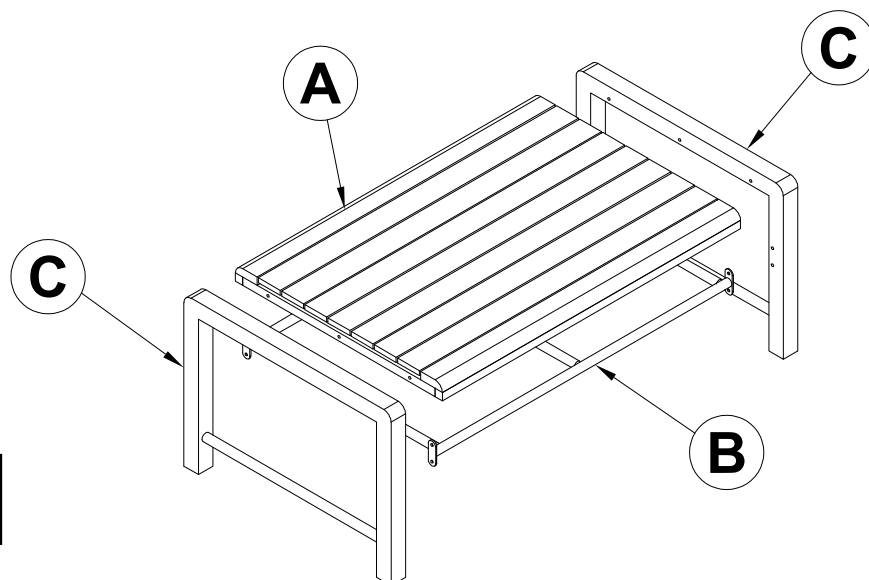

x2

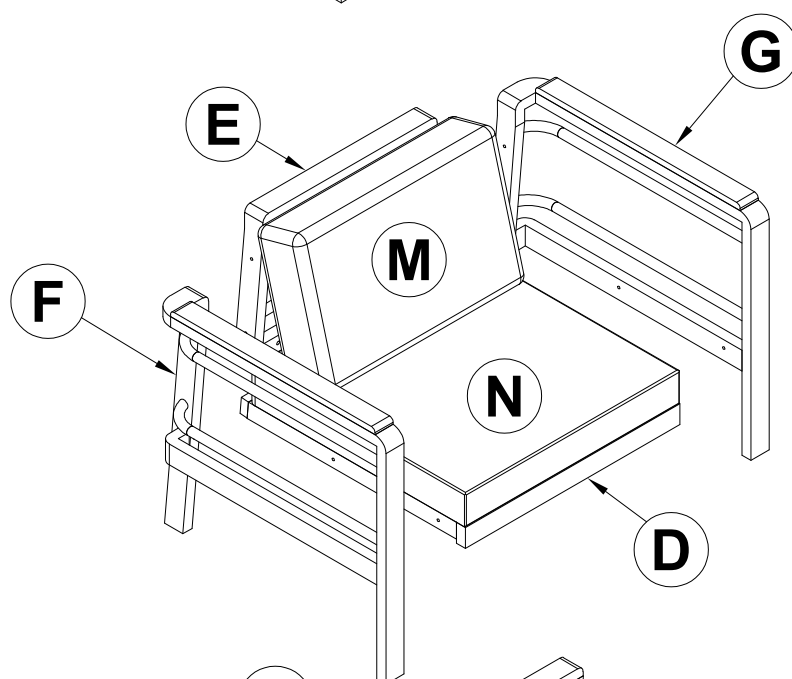

x1

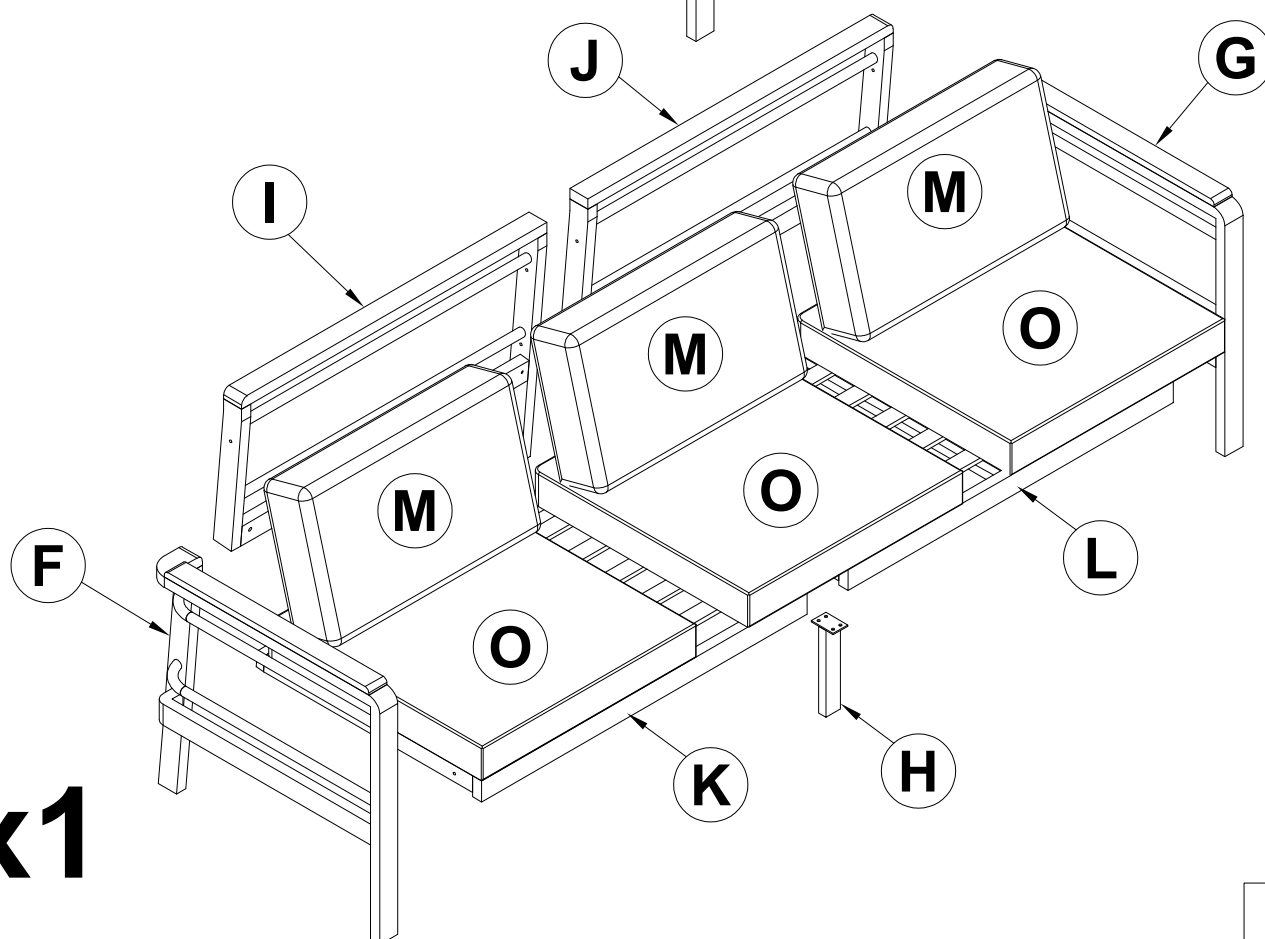


Parts List :

<div>A</div> <div>A rectangular wooden table with a slatted top and a simple frame.</div> <div>Top Table (1pc)</div>	<div>B</div> <div>A rectangular wooden frame with a central divider, designed to connect two tables.</div> <div>Connect Table (1pc)</div>	<div>C</div> <div>A wooden frame with two legs, designed to support a table.</div> <div>Leg Table (2 pcs)</div>	<div>D</div> <div>A rectangular wooden frame with a slatted top, designed for a chair seat.</div> <div>Seat Chair Frame (2 pcs)</div>
<div>E</div> <div>A wooden frame with a slatted top and a curved backrest, designed for a chair back.</div> <div>Back Chair Frame (2 pcs)</div>	<div>F</div> <div>A wooden frame with a slatted top and a curved backrest, designed for a chair back.</div> <div>Left Armless (3 pcs)</div>	<div>G</div> <div>A wooden frame with a slatted top and a curved backrest, designed for a chair back.</div> <div>Right Armless (3 pcs)</div>	<div>H</div> <div>A single wooden leg with a flange at the top, designed to support a table.</div> <div>Middle Support Leg (1 pc)</div>
<div>I</div> <div>A wooden frame with a slatted top and a curved backrest, designed for a bench back.</div> <div>Left Back Bench (1 pc)</div>	<div>J</div> <div>A wooden frame with a slatted top and a curved backrest, designed for a bench back.</div> <div>Right Back Bench (1 pc)</div>	<div>K</div> <div>A rectangular wooden frame with a slatted top, designed for a bench seat.</div> <div>Left Seat Bench (1 pc)</div>	<div>L</div> <div>A rectangular wooden frame with a slatted top, designed for a bench seat.</div> <div>Right Seat Bench (1 pc)</div>
<div>M</div> <div>A rectangular wooden cushion with a slatted top, designed for a chair back.</div> <div>Back Cushion (5 pcs)</div>	<div>N</div> <div>A square wooden cushion with a slatted top, designed for a chair seat.</div> <div>Seat Chair Cushion (2 pcs)</div>	<div>O</div> <div>A square wooden cushion with a slatted top, designed for a chair seat.</div> <div>Seat Chair Cushion (3 pcs)</div>	


Hardware :

1

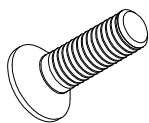


Bolt M6x20 (12 pcs)
Extra (2 pcs)

2

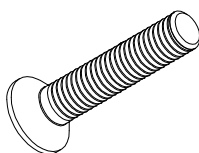


Bolt M6x40 (40 pcs)
Extra (3 pcs)

3

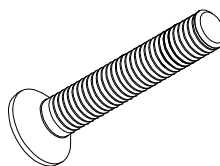


Bolt M6x50 (2 pcs)
Extra (1 pc)

4

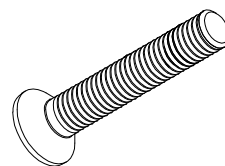


Bolt M6x60 (3 pcs)
Extra (1 pc)

5




Flat Washer M6 (62 pcs)
Extra (5 pcs)

6

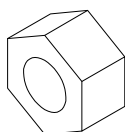


Nut M6 (5 pcs)
Extra (1 pc)

7

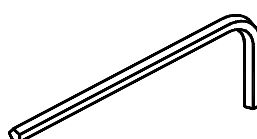

Allen Key (2 pcs)


8

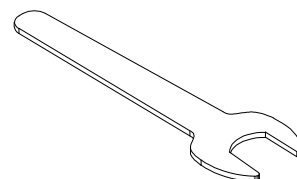


Key (1 pc)

CARTON CONTENT:


N719P225854

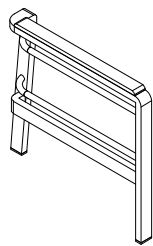


Ⓕ x2

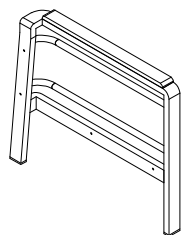


Ⓖ x2

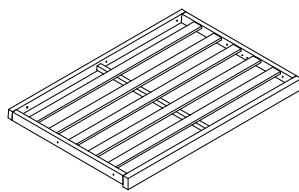

Ⓚ x1

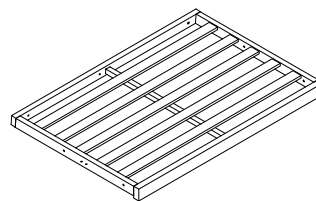


Ⓛ x1

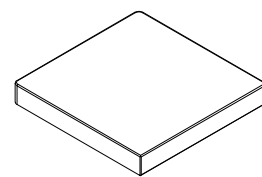


Ⓝ x2


N719P225855

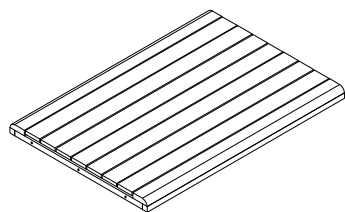


Ⓐ x1

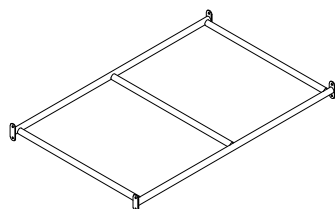


Ⓑ x1

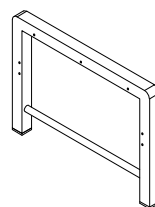


Ⓒ x2

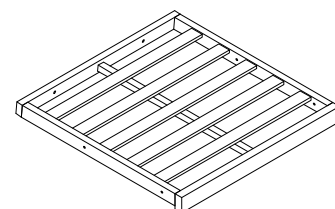

Ⓓ x2

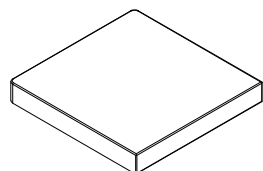


ⓞ x2

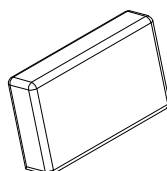


Ⓜ x3


N719P225856

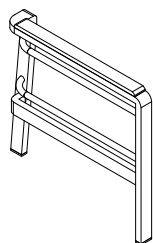


Ⓕ x1

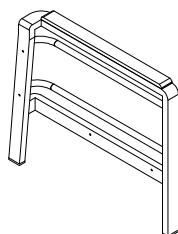


Ⓖ x1

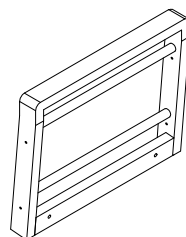


Ⓔ x2

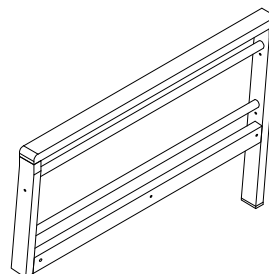


Ⓢ x1

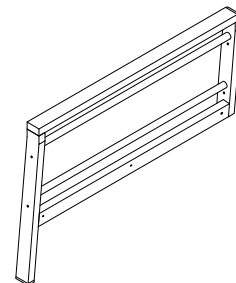


Ⓝ x1




Ⓕ x1

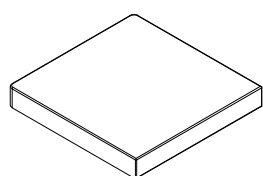

ⓞ x1

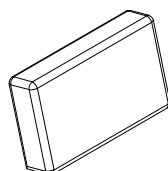


Ⓜ x2

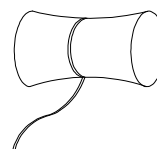

Hardware

STEP 1


- A x1
- C x2
- ② x6
- ⑤ x6

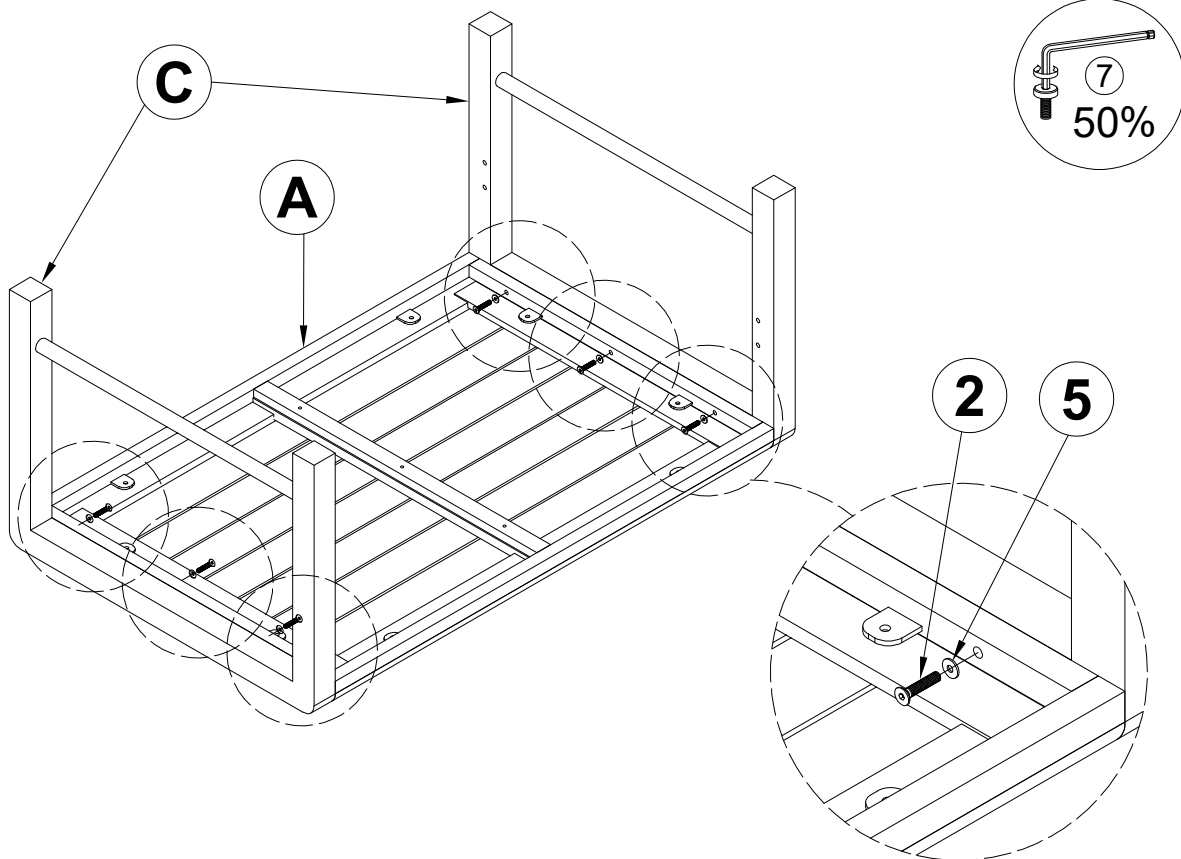

Connect Leg Table (C) & Top Table (A), tighten Bolt (2) & flat washer (5) with Allen Key (7).



STEP 2

- B x1
- ① x8
- ⑤ x8

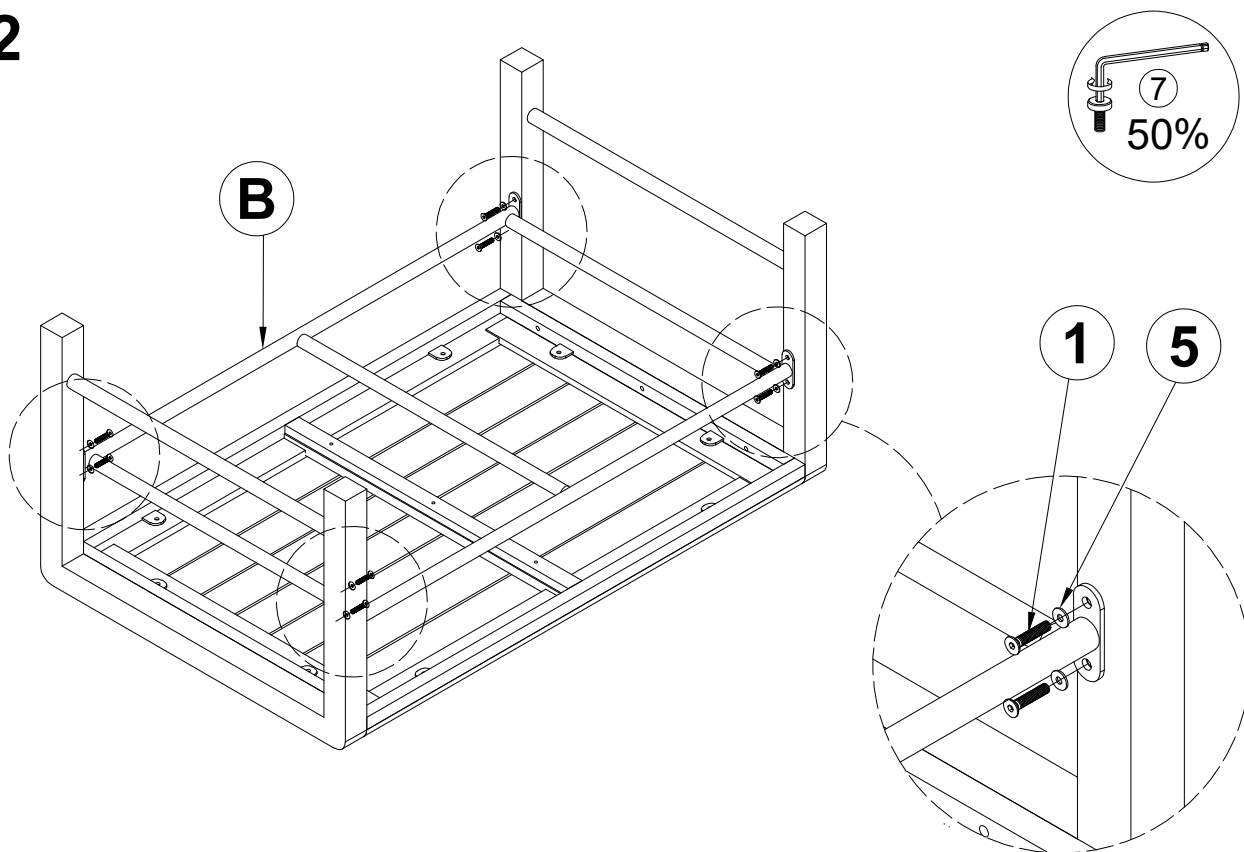

Connect Leg Table (C) & Connect Table (B), tighten Bolt (1) & flat washer (5) with Allen Key (7).

STEP 3

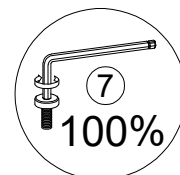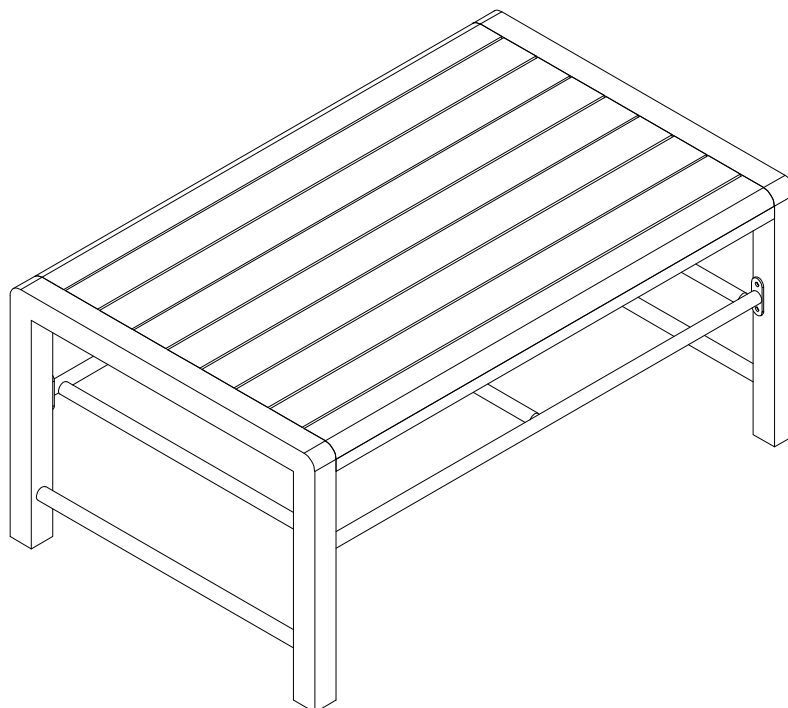

Put The table upright, then firmly tighten Bolts with Allen Key (7) to finish Table.


STEP 4

D x1

E x1

② x2

⑤ x2

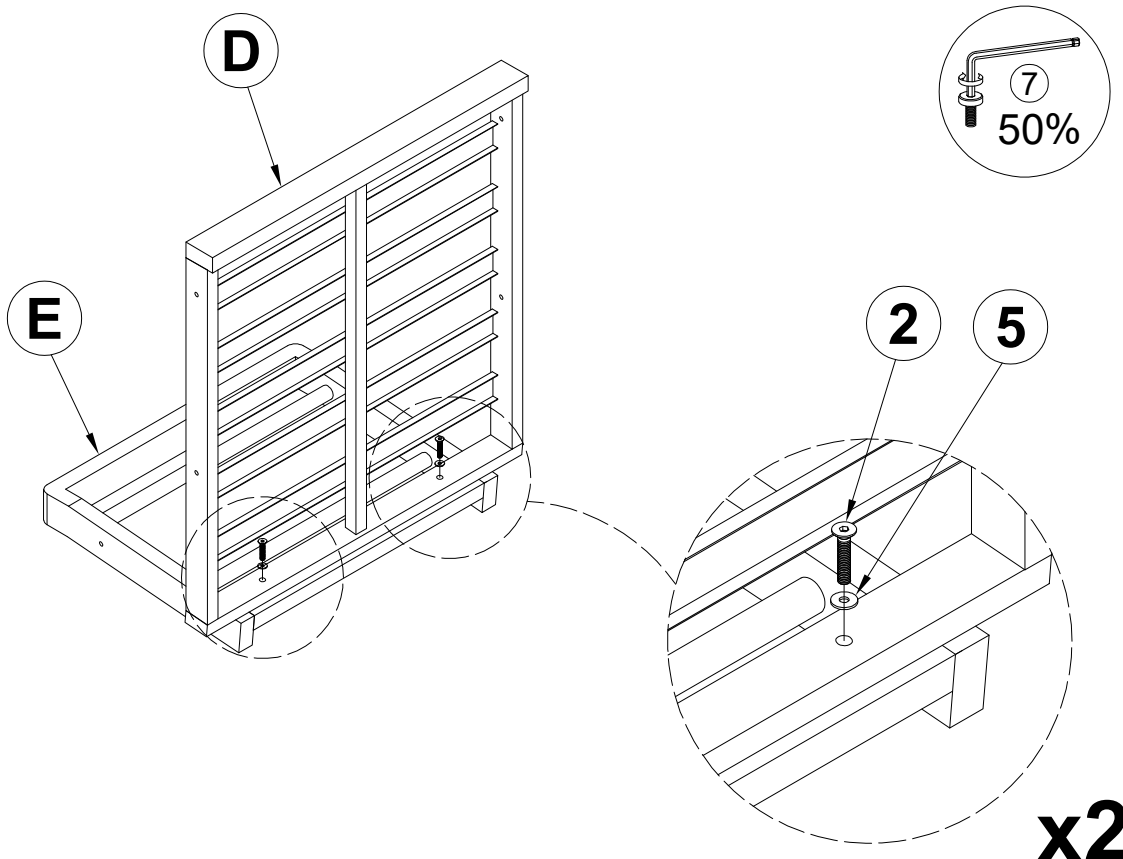


Connect Seat Chair Frame (D) & Back Chair Frame (E), tighten Bolt (2) & Flat Washer (5) & Allen Key (7).

STEP 5

F x1

② x4

⑤ x4

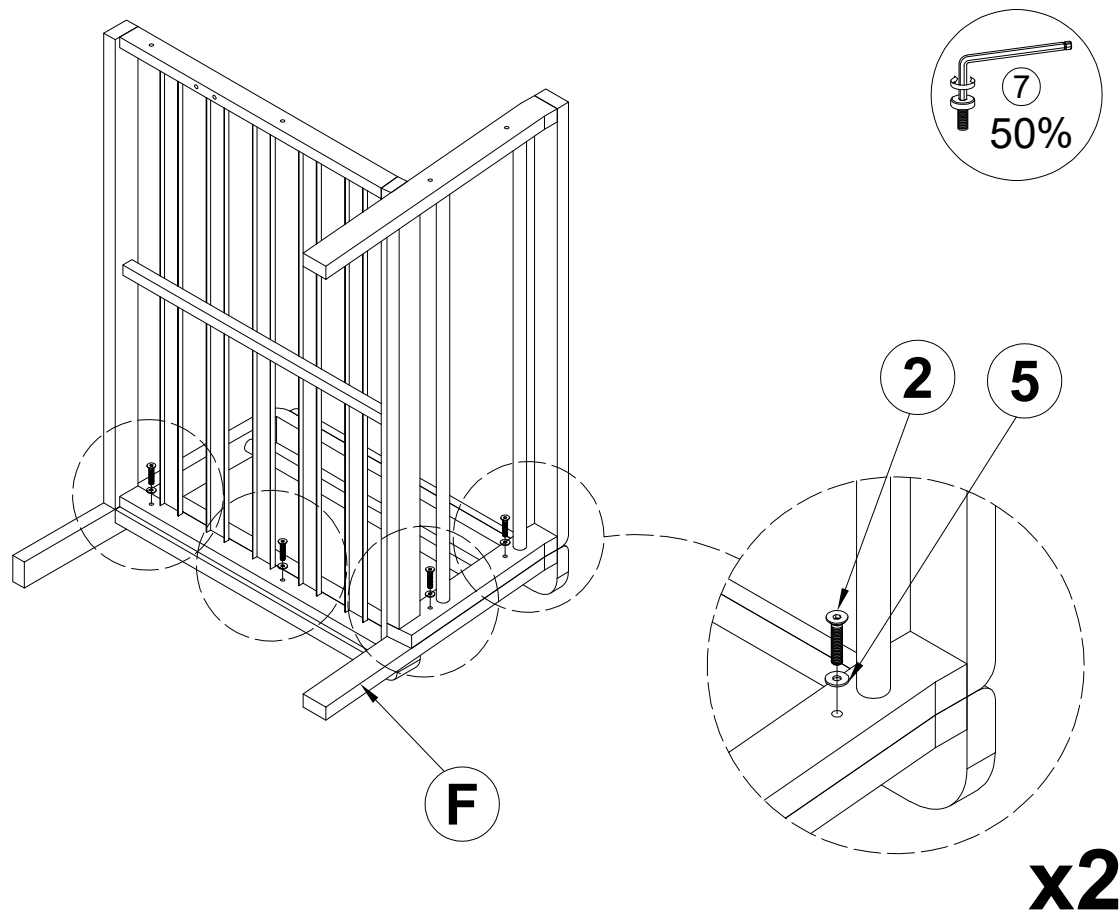


Connect The part from Step 4 & Left Armless (F), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).

STEP 6

G x1



② x4

⑤ x4

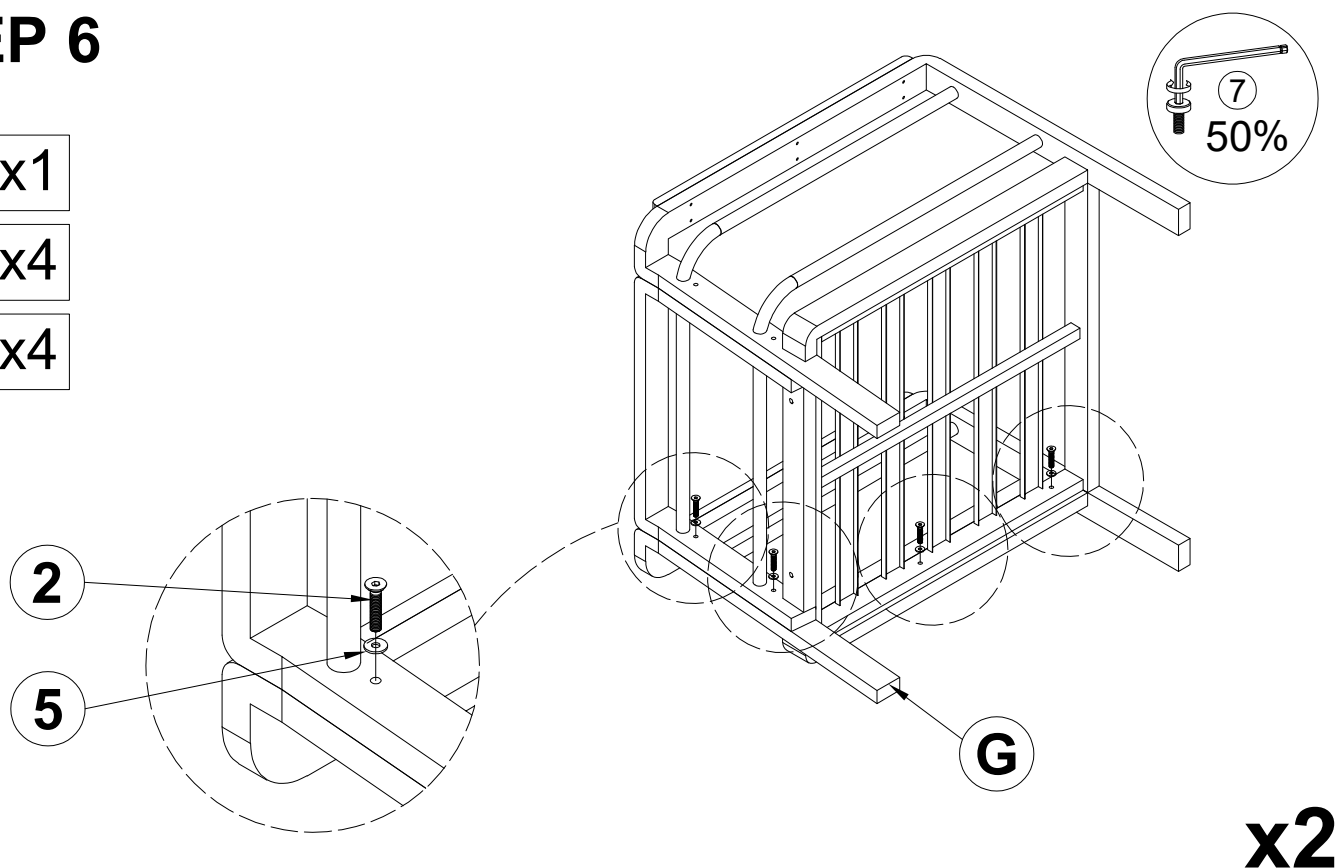

Connect The part from Step 5 & Right Armless (G), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).

STEP 7

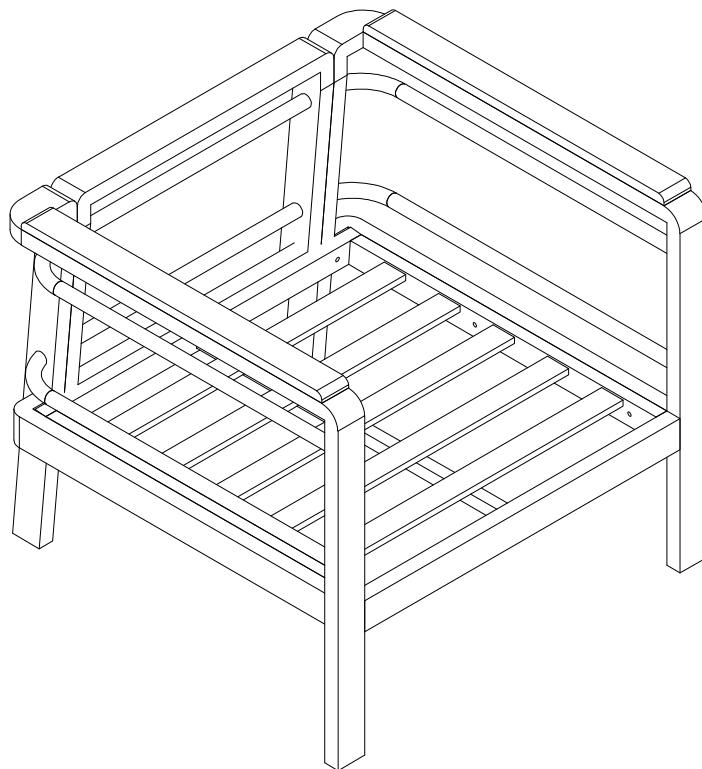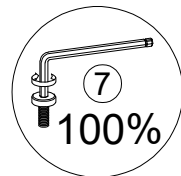


x2

Put The chair upright, firmly tighten Bolts with Allen Key (7) to finish Chair.

STEP 8

M x1


N x1

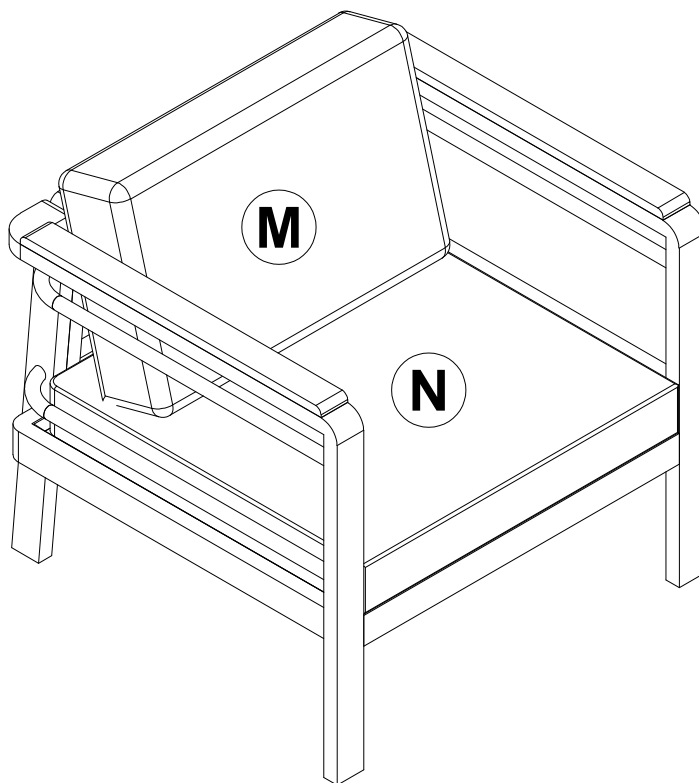

x2

Open all the vacuum bags, adjust the cushions. Set up the Cushions (M) + (N) to finish Chair.

STEP 9

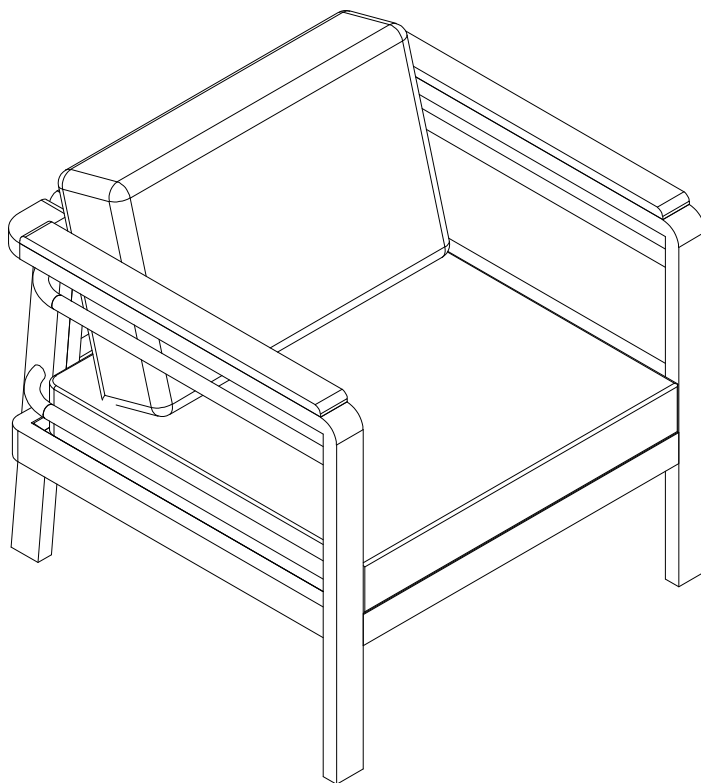

x2

Finish Chair.

STEP 10


I x1

J x1

4 x3

5 x6


6 x3

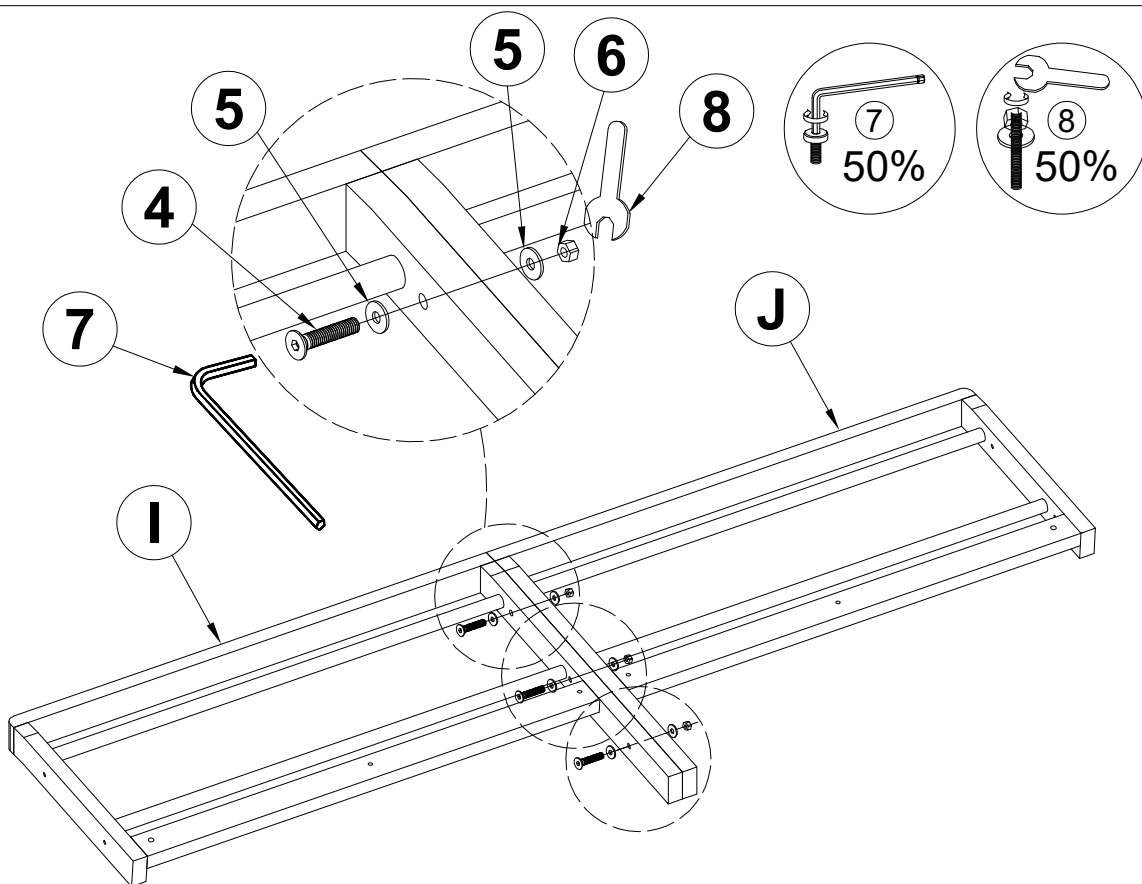

Connect Back Bench Frames (I) & (J), tighten Bolt (4) & Flat Washer (5) & Nut (6) with Allen Key (7) & Key (8).

STEP 11


- K** x1
- L** x1
- 3** x2
- 5** x4
- 6** x2

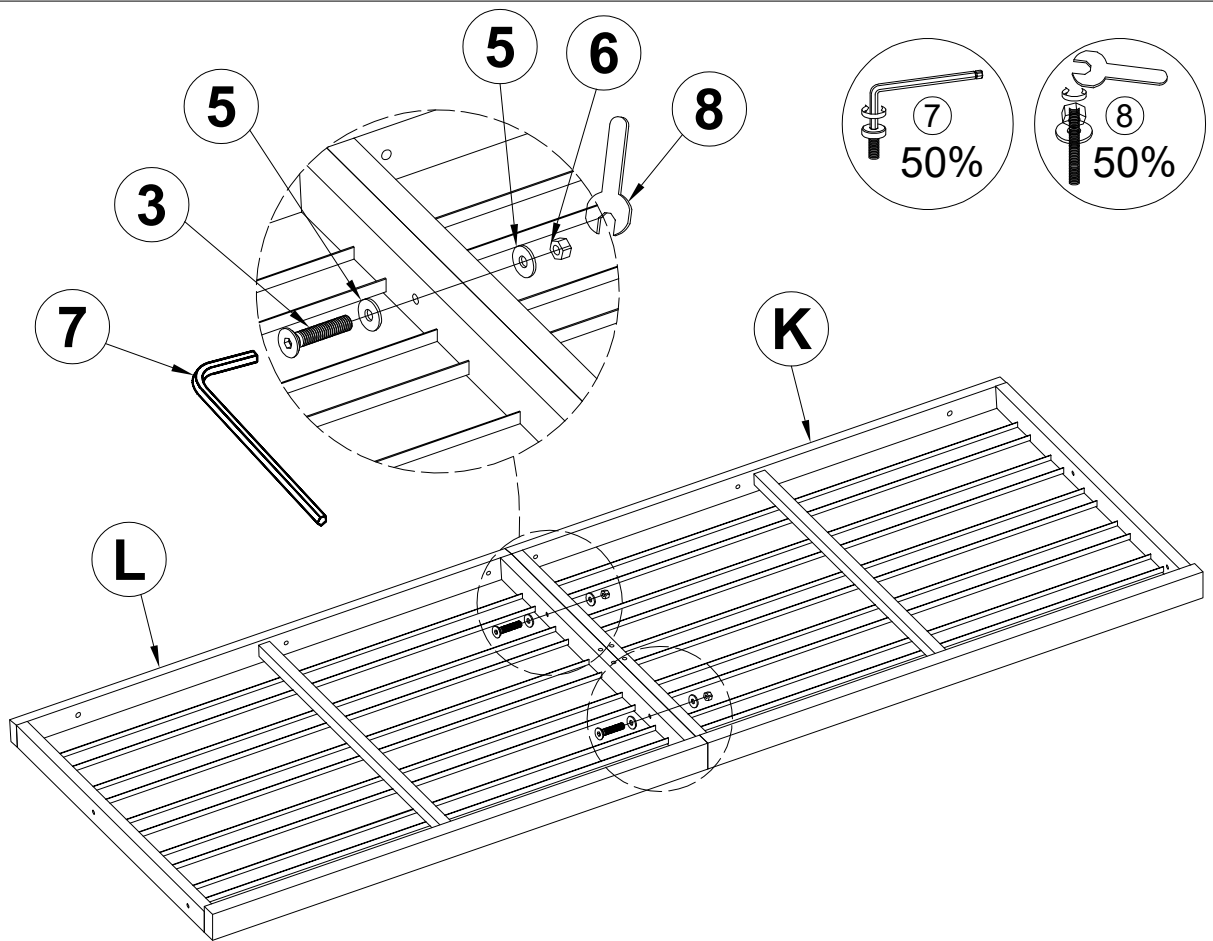

Connect Right Seat Bench (L) & Left Seat Bench (K), tighten Bolt (3) & Flat Washer (5) & Nut (6) with Allen Key (7) & Key (8).

STEP 12

- 2** x6
- 5** x6

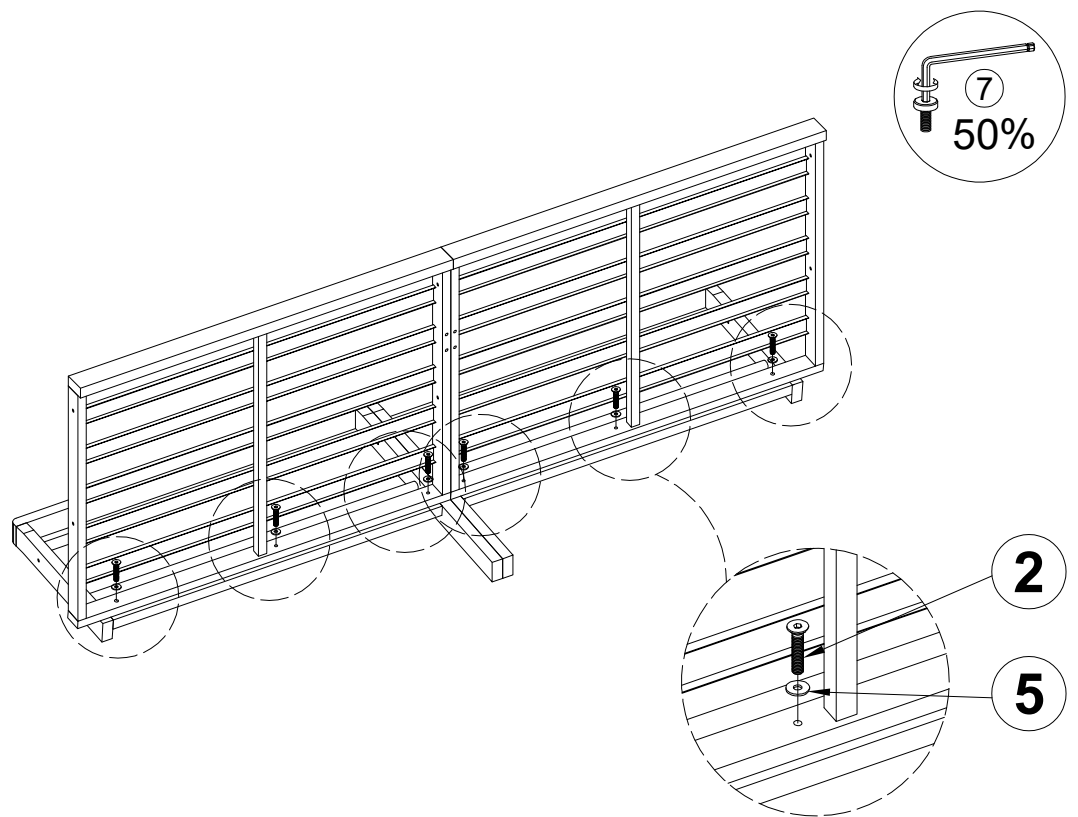


Connect The part from Step 10 & The part from Step 11, tighten Bolt (2) & Flat Washer (5) & Allen Key (7).

STEP 13

F x1

② x4

⑤ x4

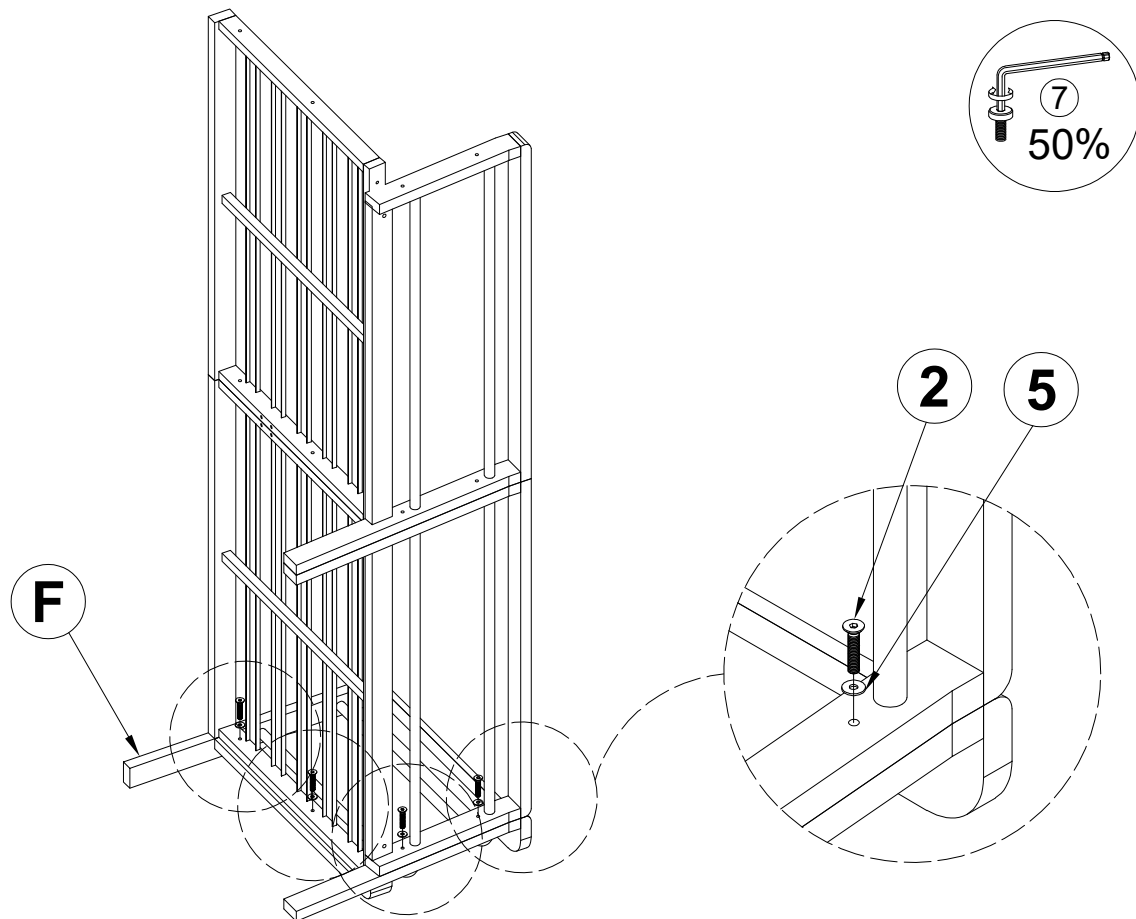


Connect The part from Step 12 & Left Armless (F), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).

STEP 14

G x1

② x4

⑤ x4

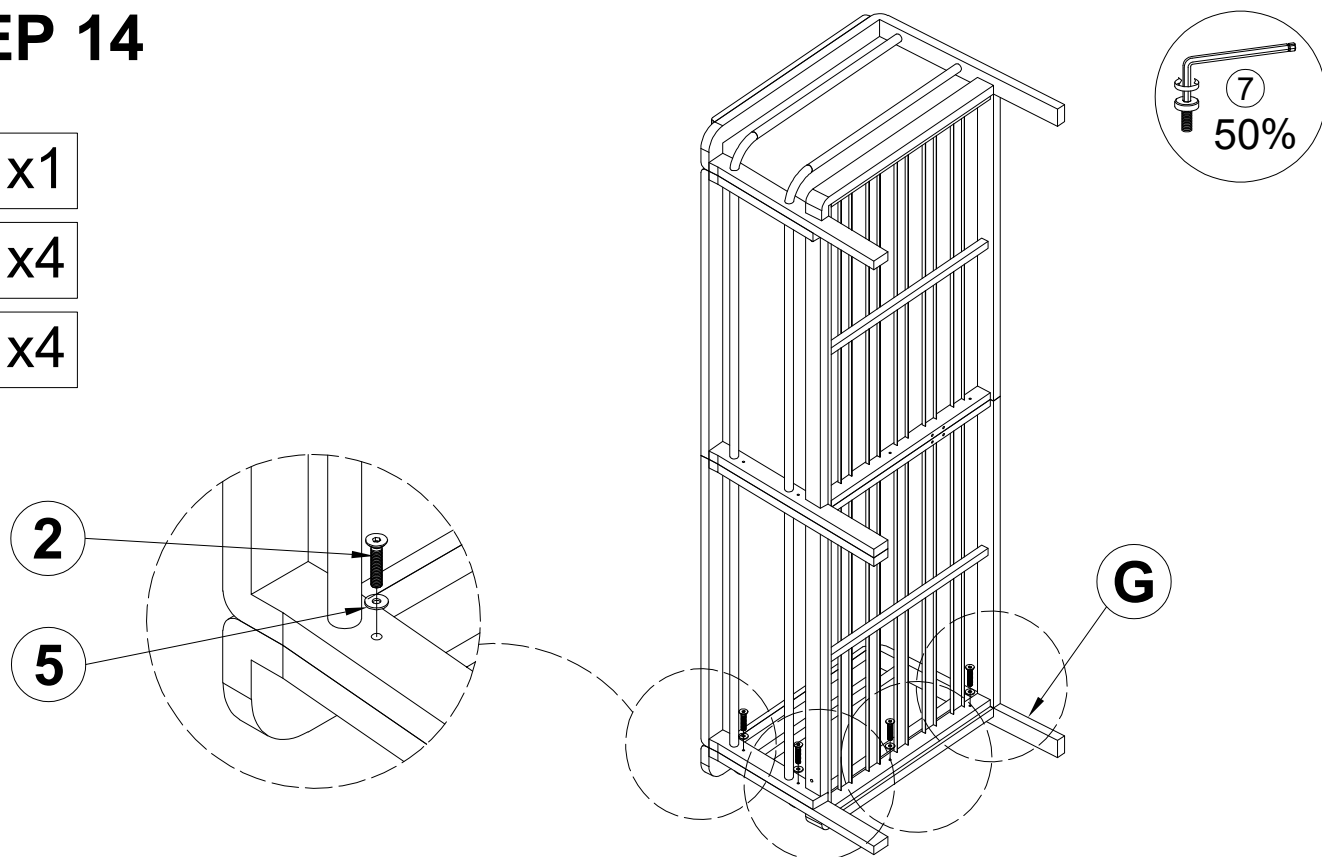




Connect The part from Step 13 & Right Armless (G), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).

STEP 15

H x1



① x4

⑤ x4

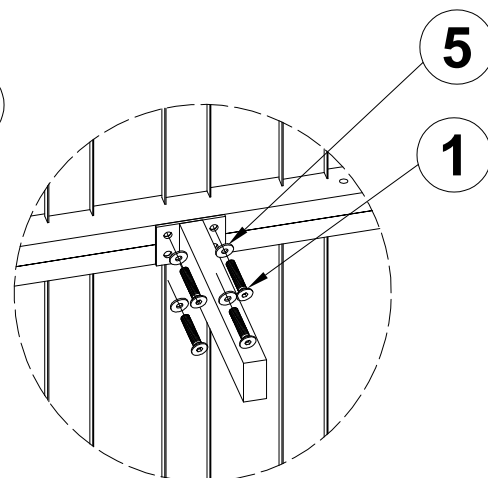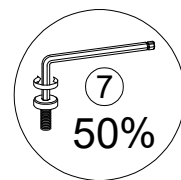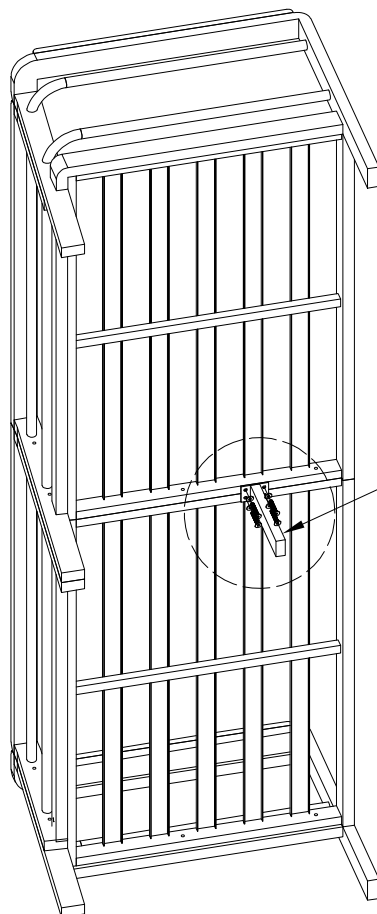



Connect The part from Step 14 & Middle Support Leg (H), tighten Bolt (1) & Flat Washer (5) with Allen Key (7).

STEP 16

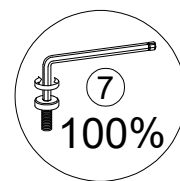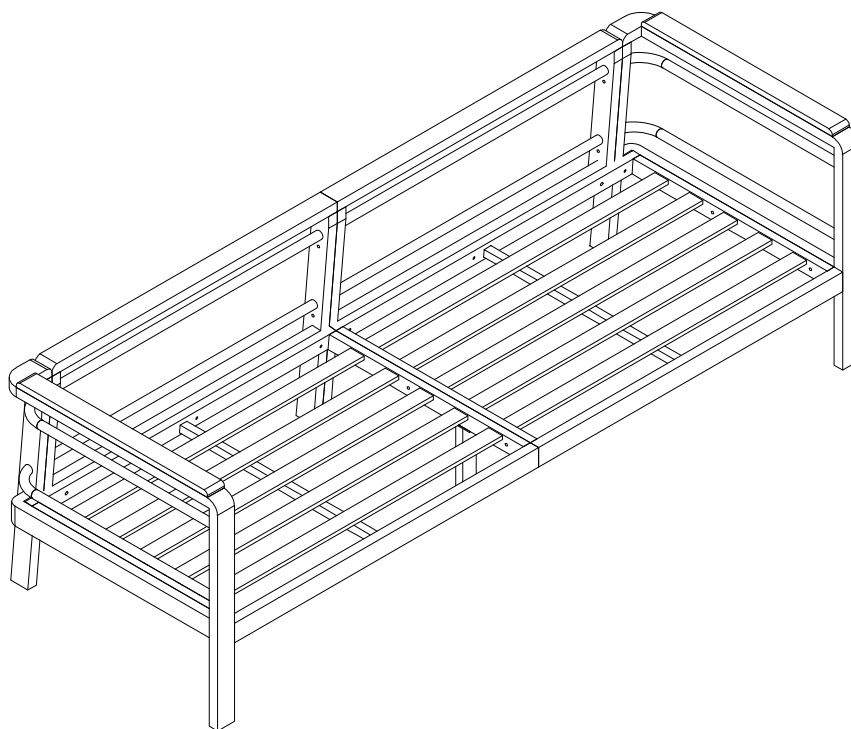


Put the Bench upright, firmly tighten Bolts with Allen Key (7), to finish Bench.

STEP 17

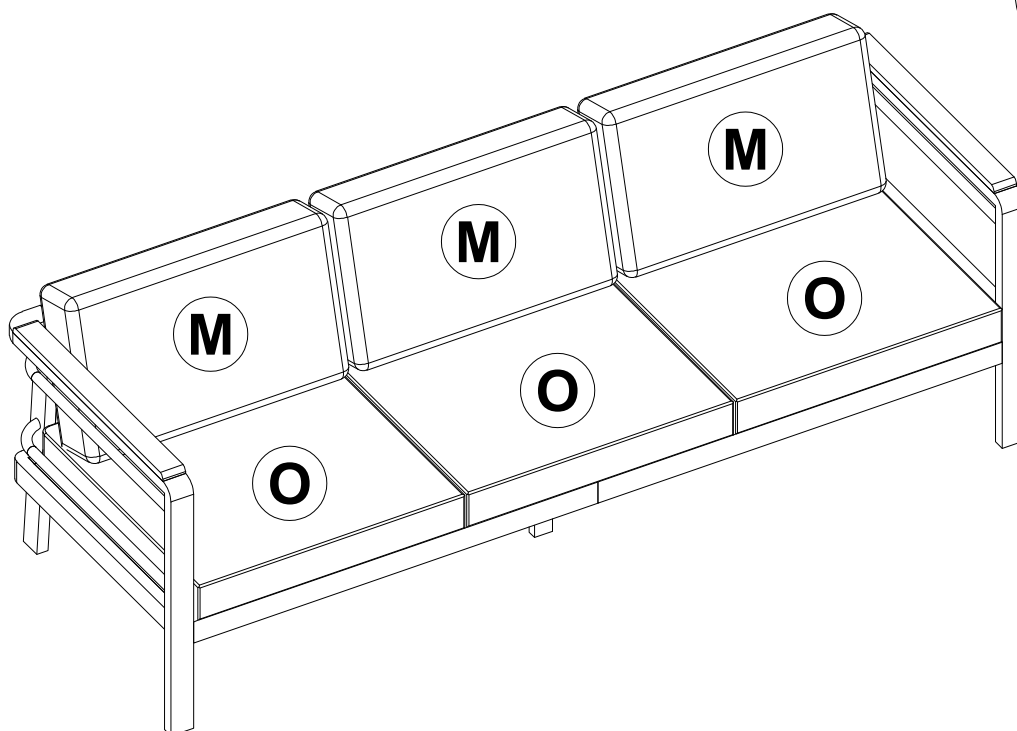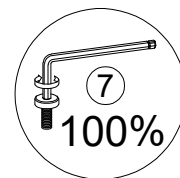

Open all the vacuum bags, adjust the cushions. Set up the Cushions (M) + (O) to finish Bench.

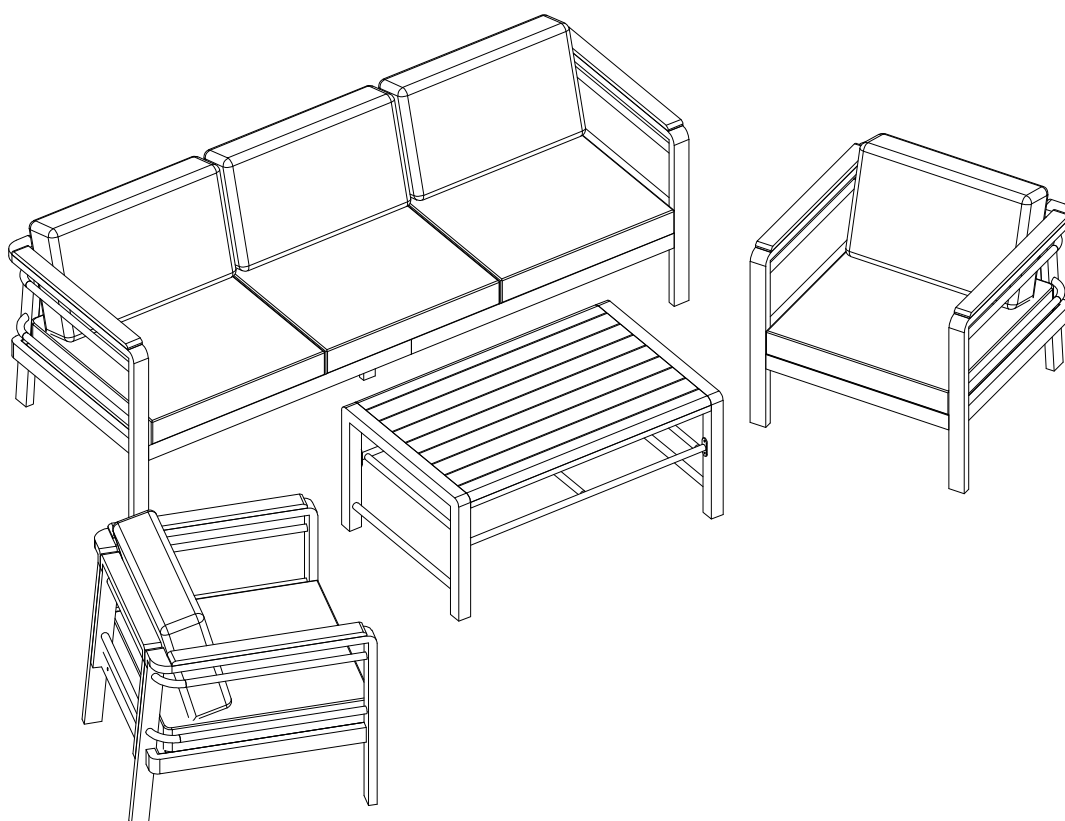

Finish