



BED FRAME

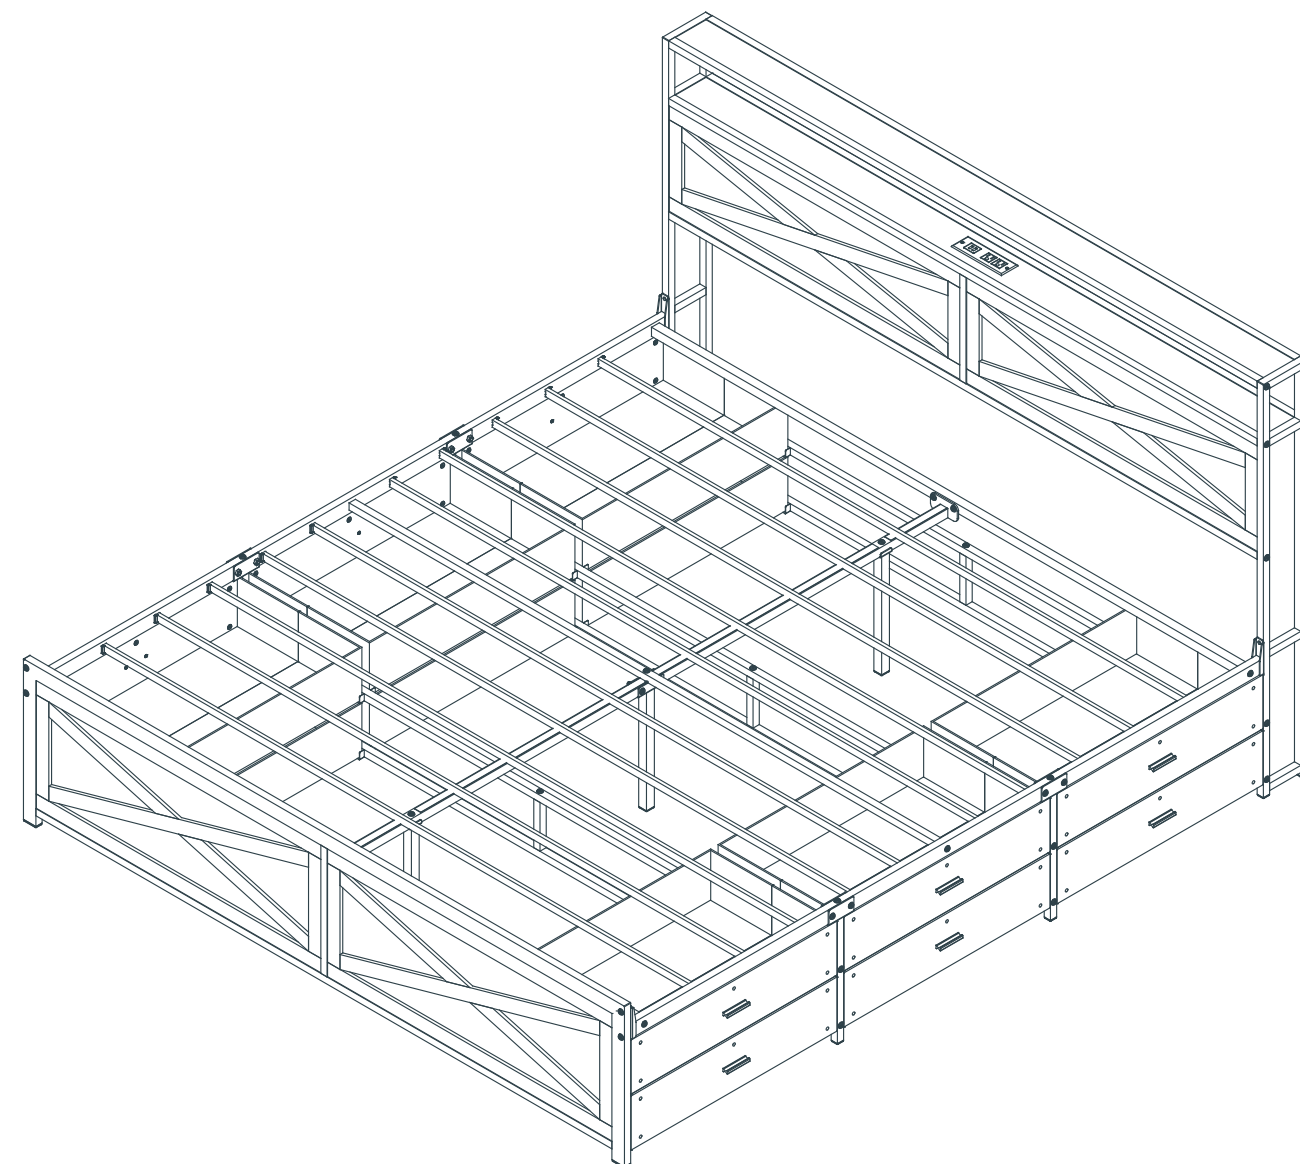


Thank you for choosing our products, please assemble and use it following the instructions.

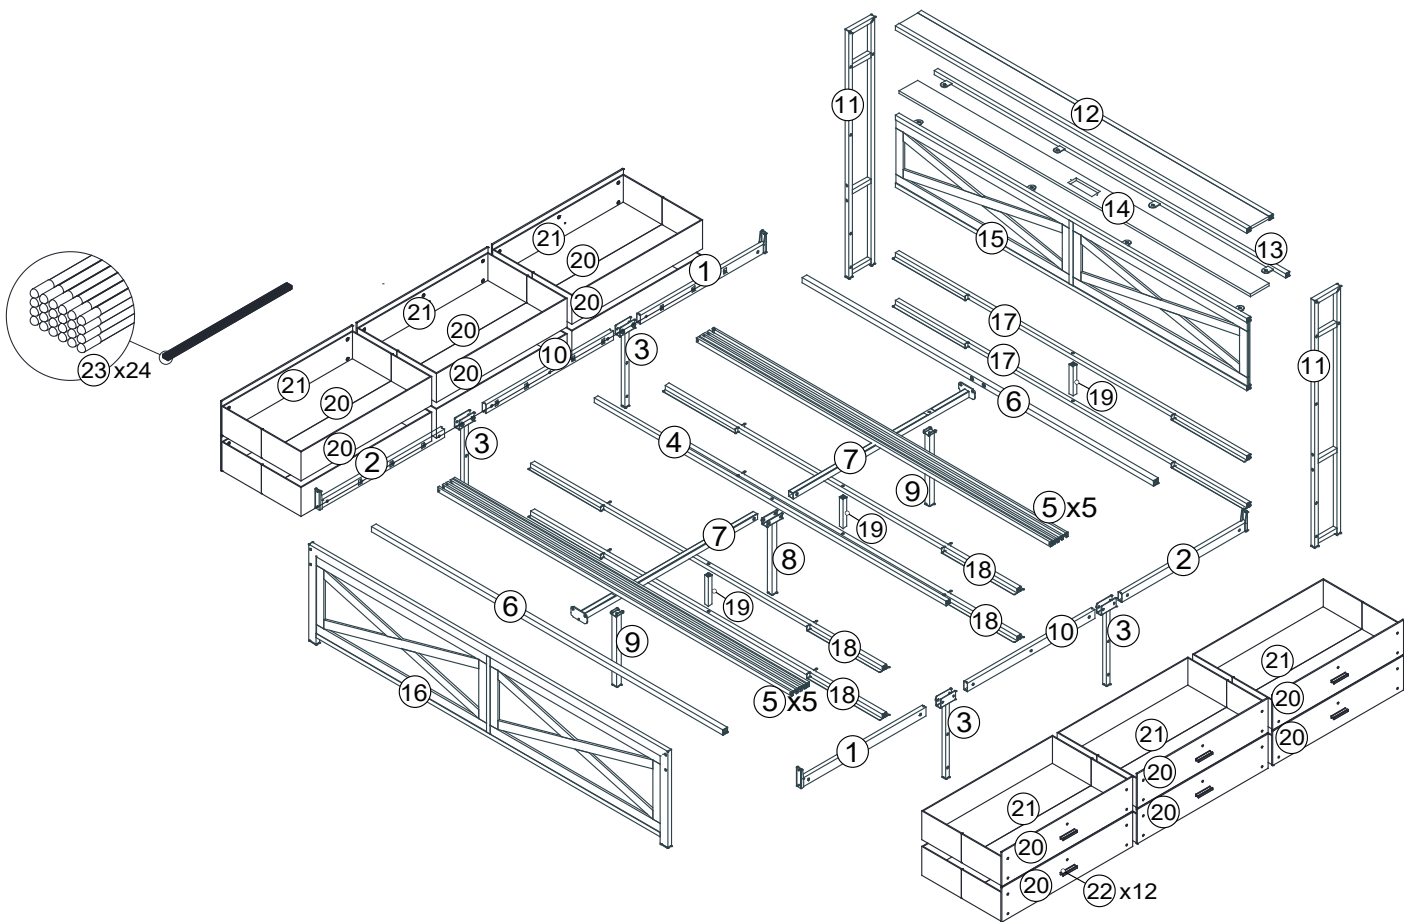


B408-K Important Note


HARDWARE NOTE :
1.Two or more people are required for assembly
2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

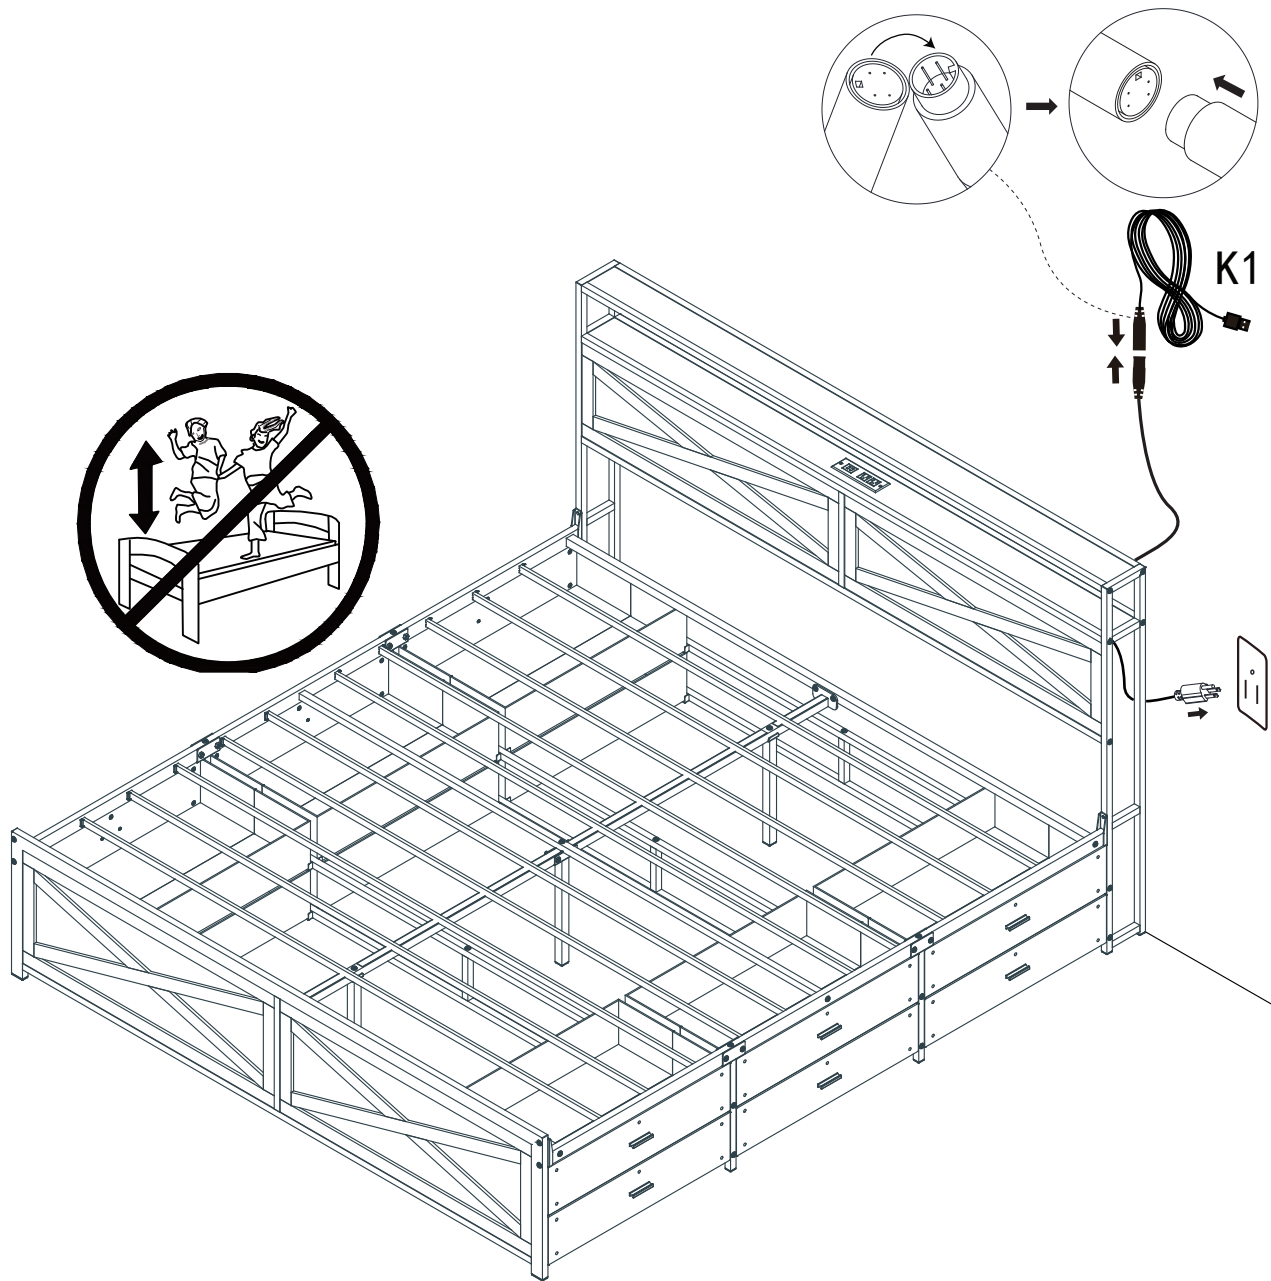

Finish



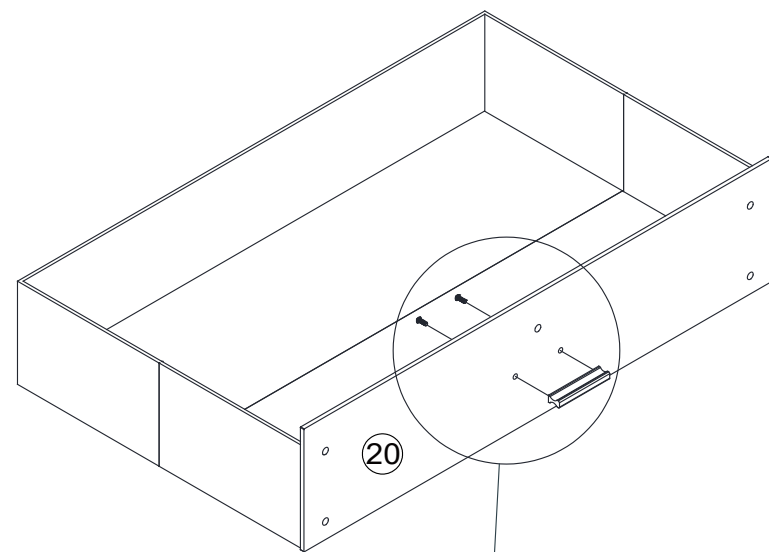


21
x12


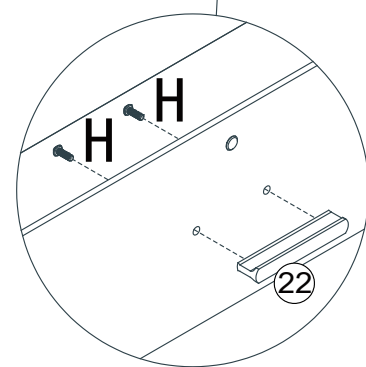


H		24pcs
---	---	-------

Components

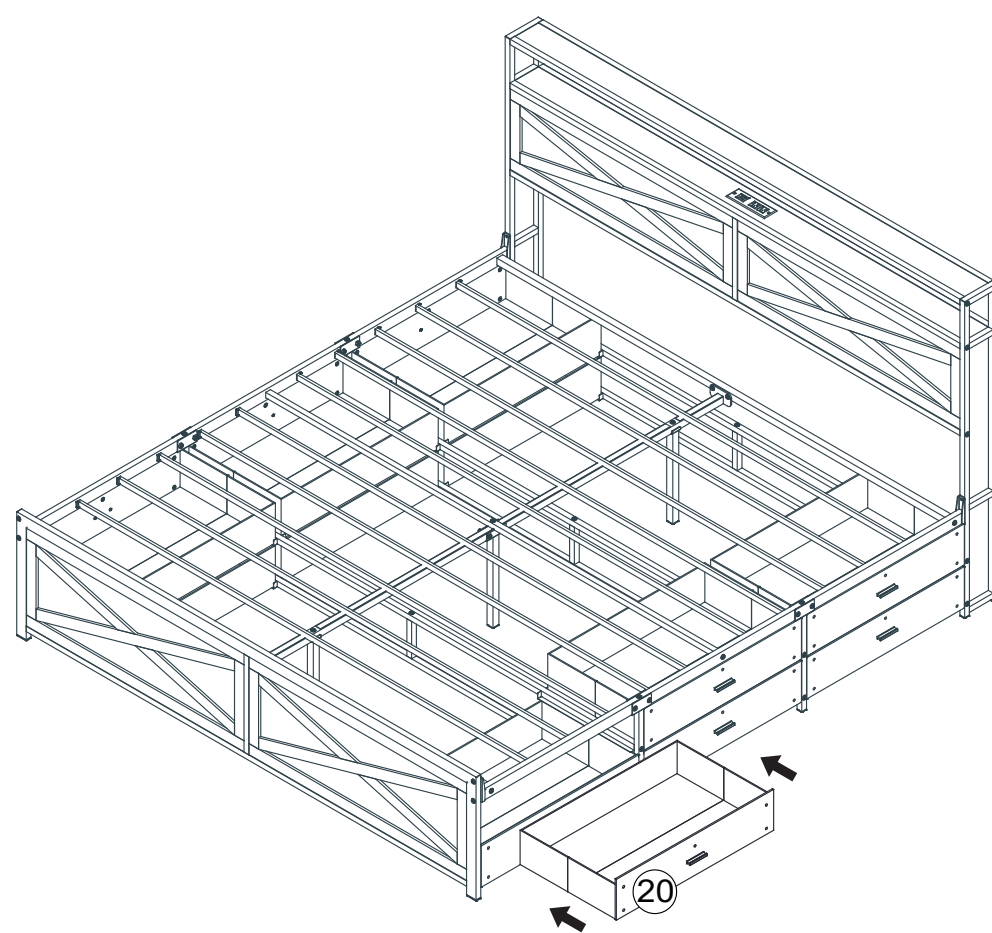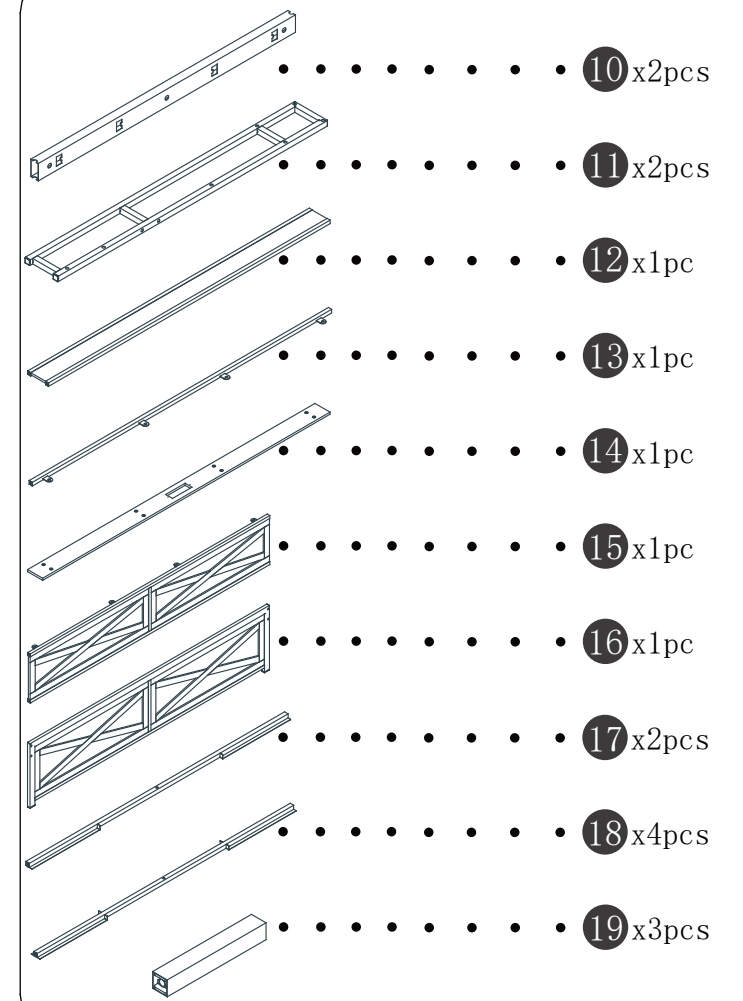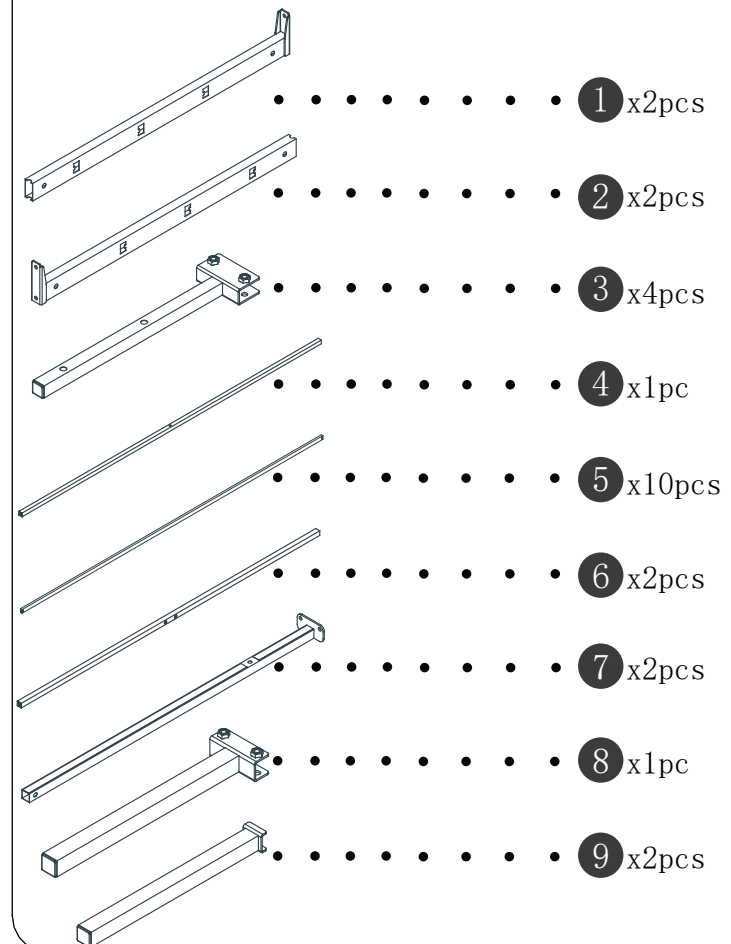

22

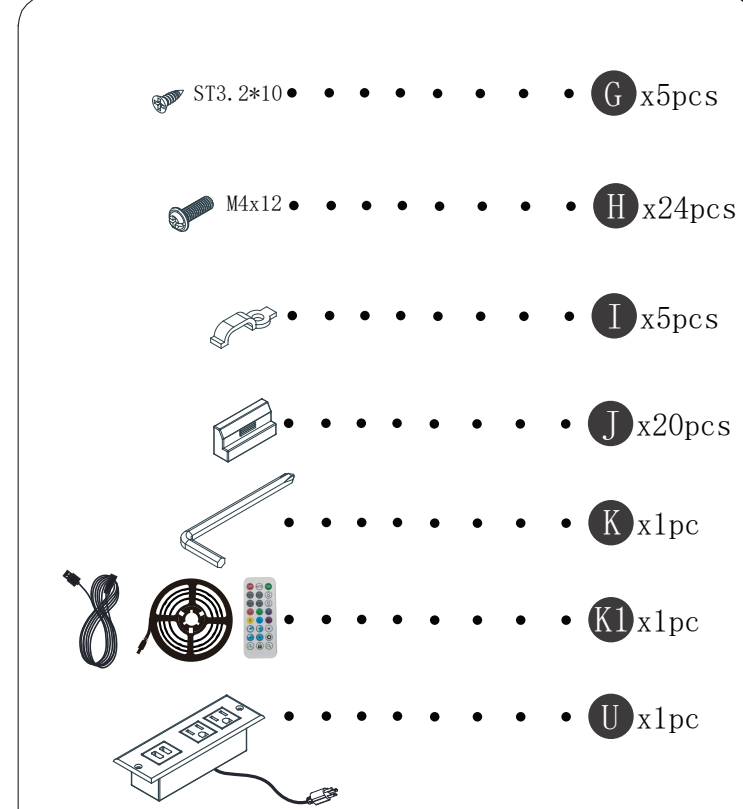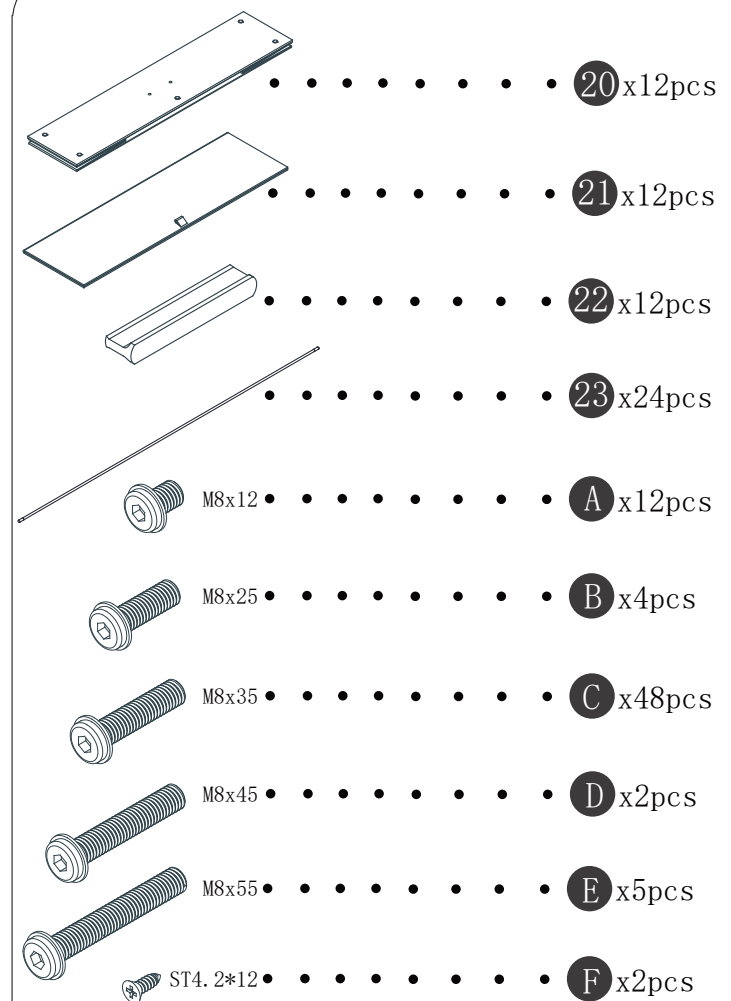

1

Accessory H is not locked tight at first

Tear double-sided adhesive tape apart.

Fastening accessories G

G	ST3. 2x10	5pcs
I		5pcs
K1		

2

Tear double-sided adhesive tape apart.

F	ST4. 2x12	2pcs
K1		

19

x12

21		
23		

3

weld marks facing up

A	M8x12	4pcs
K1		


4

A	M8x12	4pcs
K1		

20


x12

21		
23		

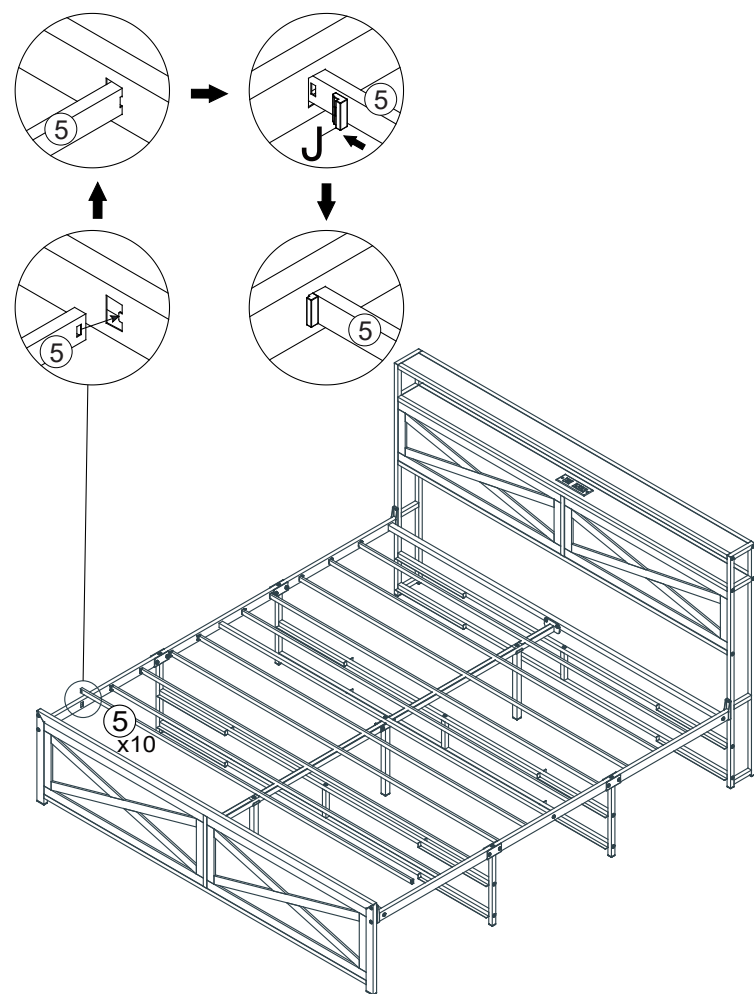


17

J		20pcs
---	---	-------

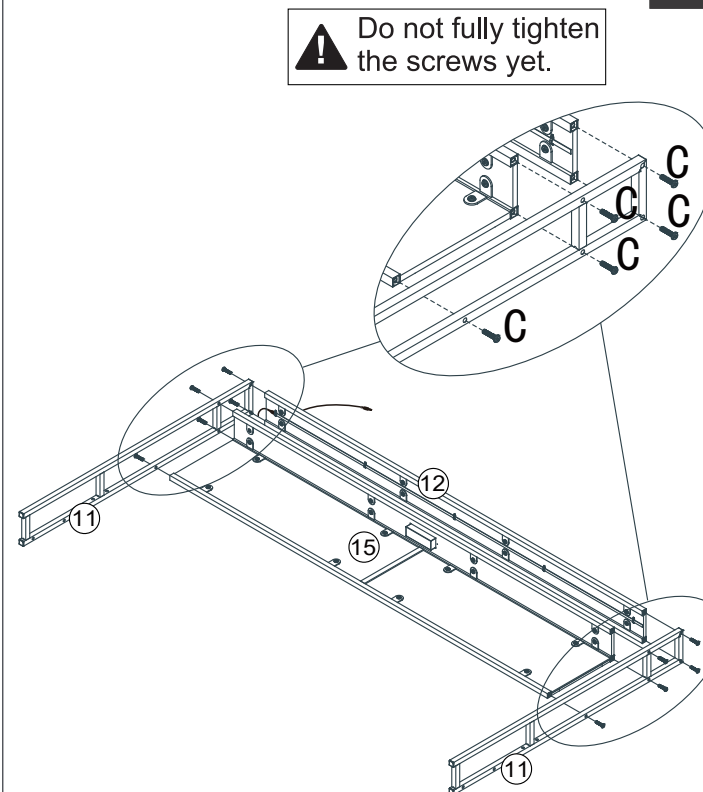


5

C		10pcs
---	---	-------

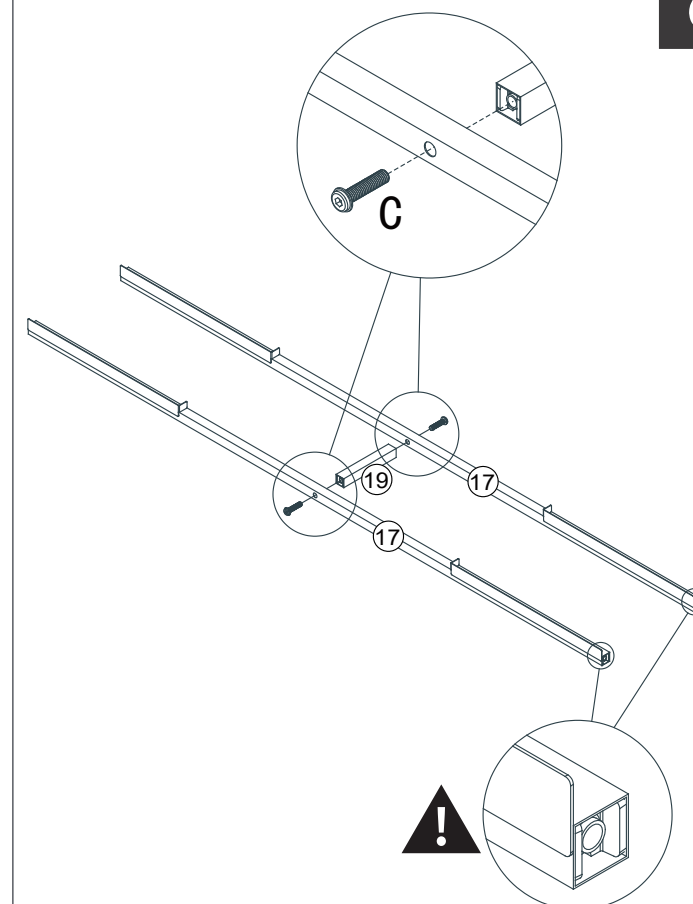


6

C		2pcs
---	---	------

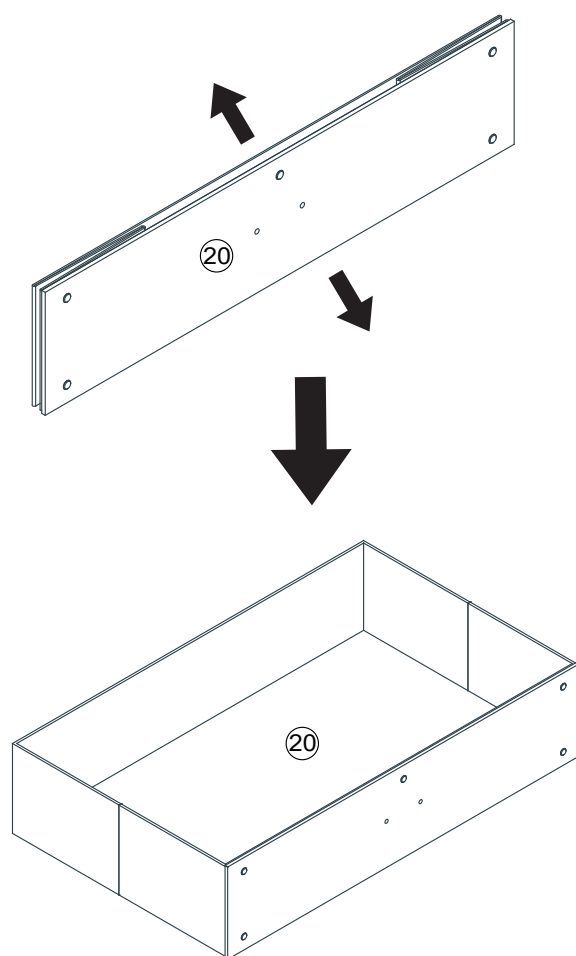

x12


18

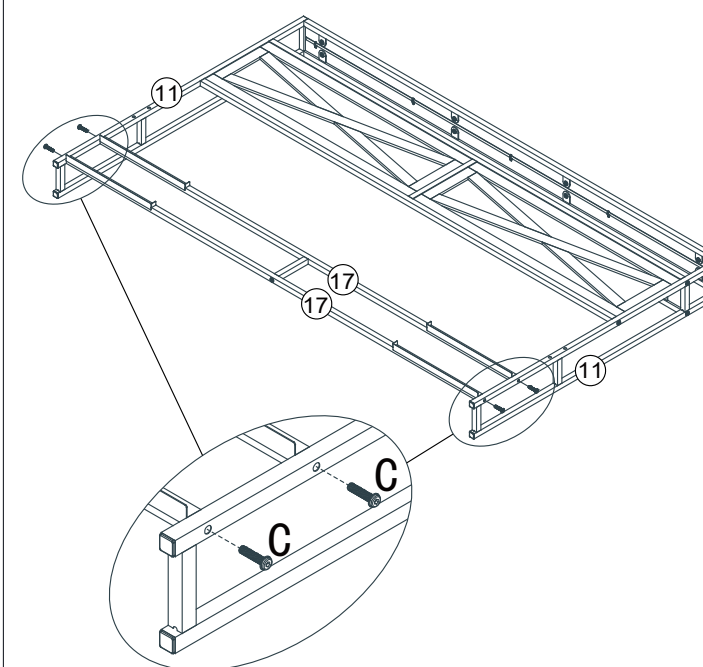

7

! Fully tighten all the screws.

C		4pcs
---	---	------

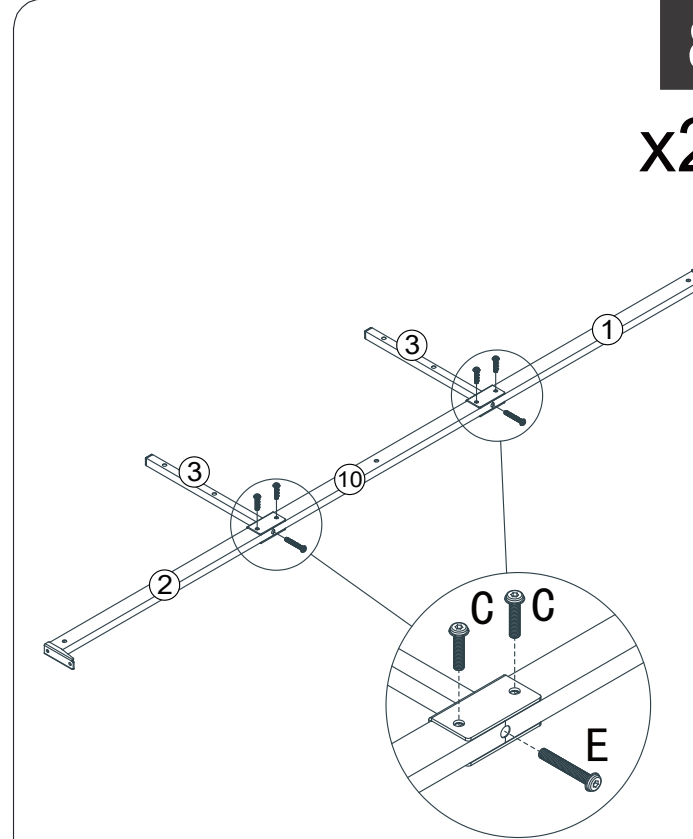


8

x2


C		8pcs
E		4pcs

9

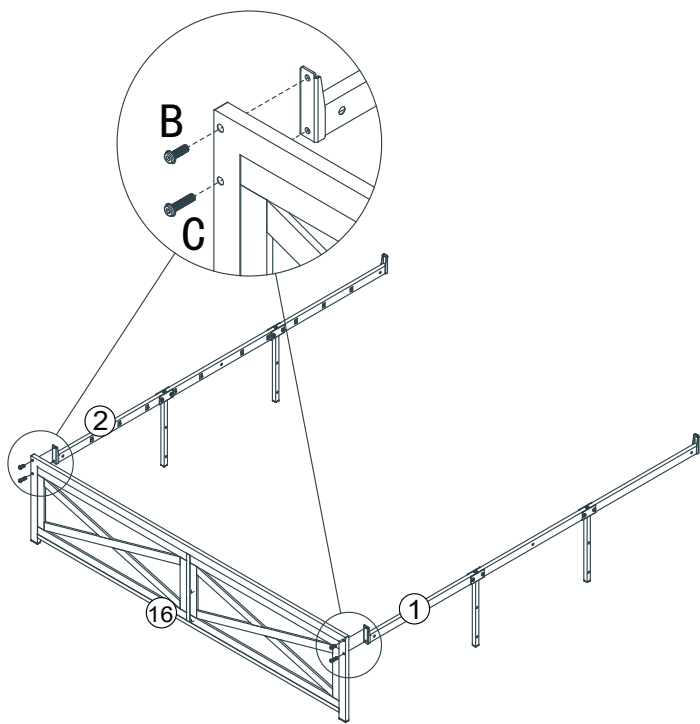


B		2pcs
C		2pcs

10

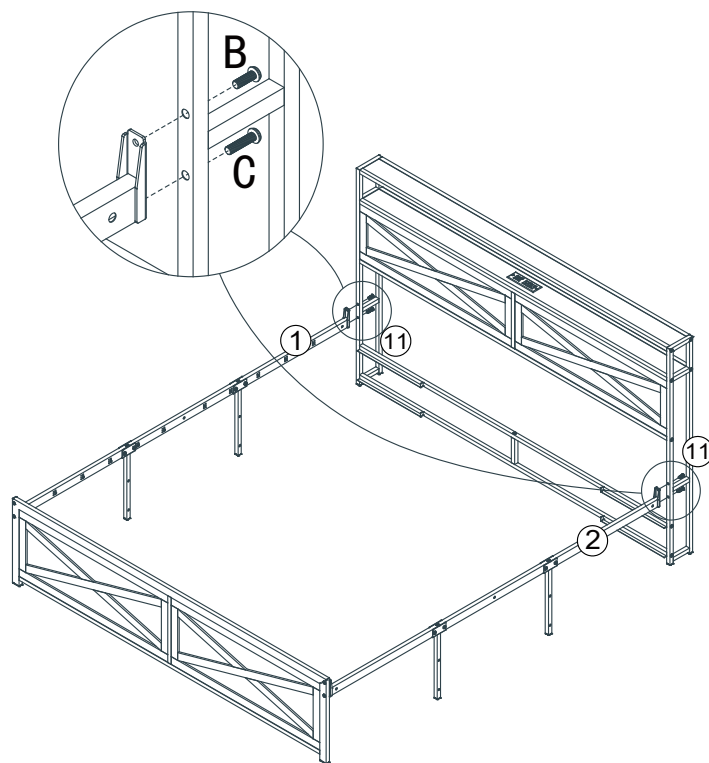

B		2pcs
C		2pcs


13

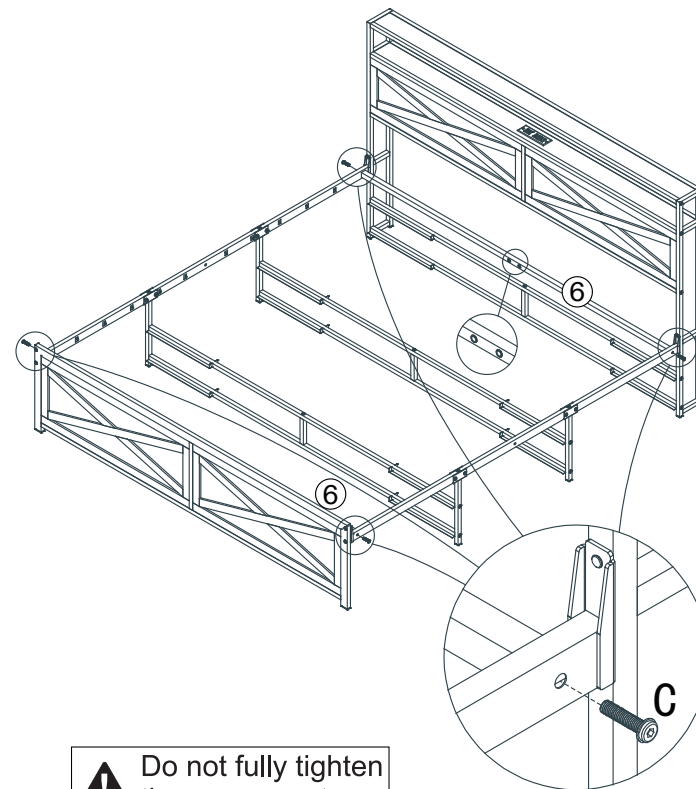

⚠ Do not fully tighten the screws yet.

C		4pcs
---	---	------

14

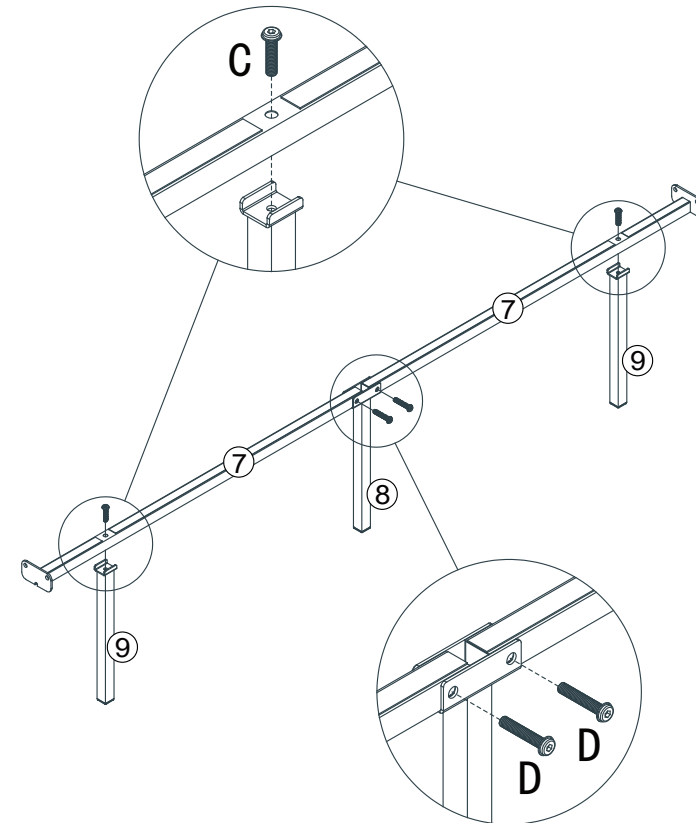


⚠ Do not fully tighten the screws yet.

C		2pcs
D		2pcs


11

x2

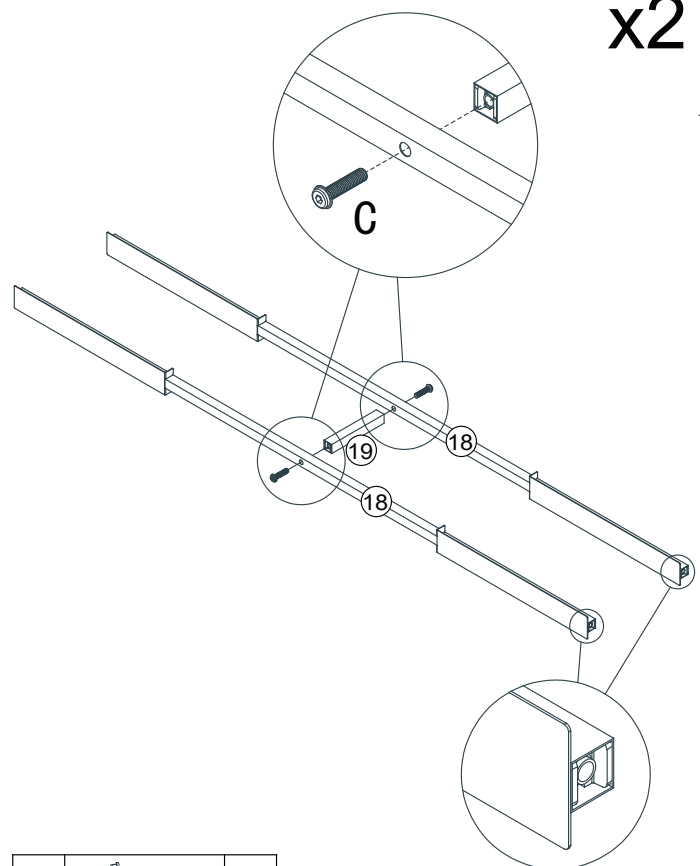

C		4pcs
---	---	------


12

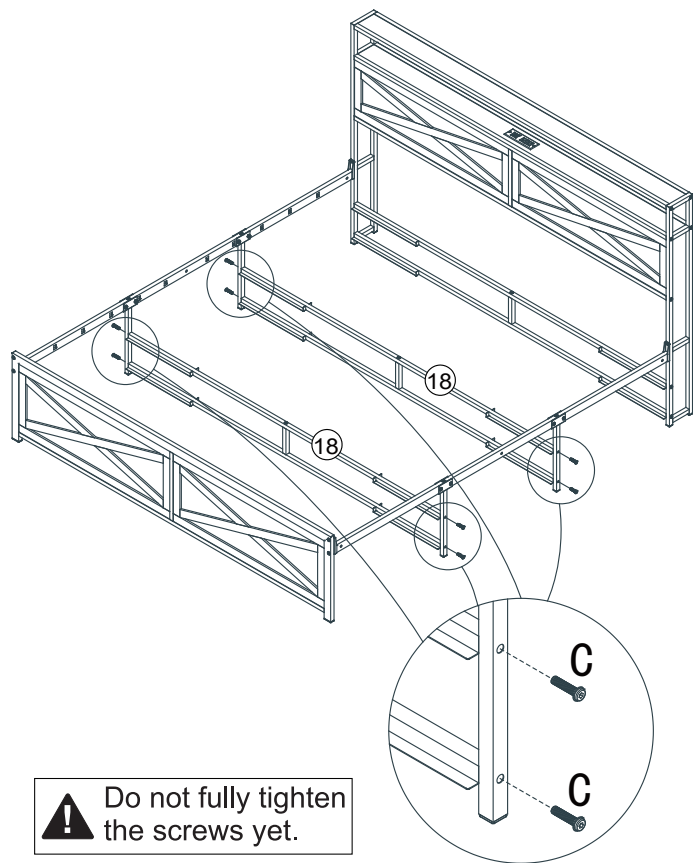

⚠ Do not fully tighten the screws yet.


C		8pcs
---	---	------

15

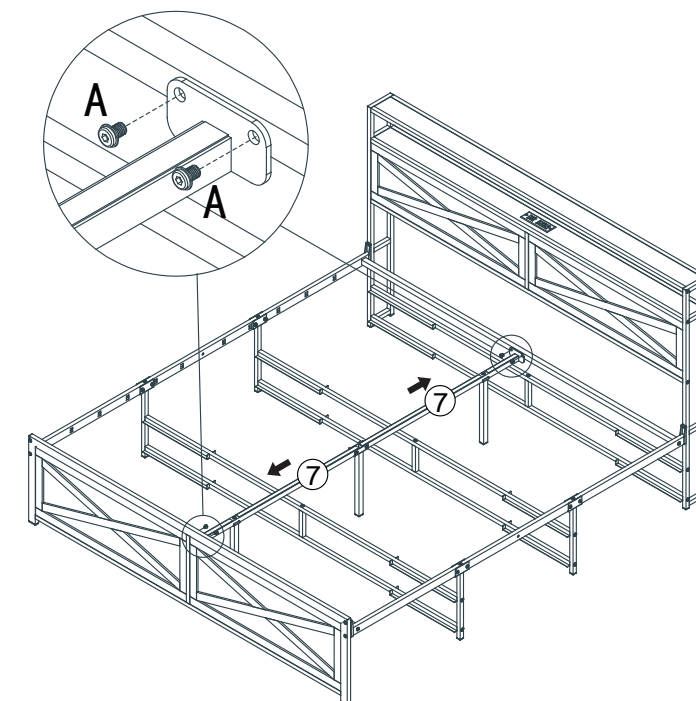

A		4pcs
---	---	------

16

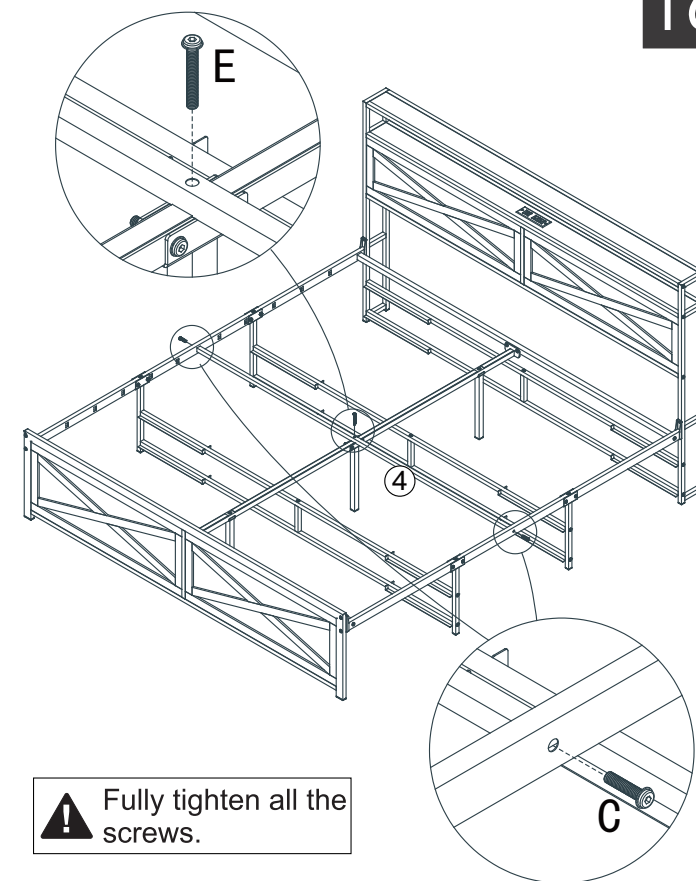

⚠ Fully tighten all the screws.

C		2pcs
E		1pc