




HEAVY DUTY Window Kit

Installation Instructions




1 STEP

Apply tape to top edge of window. Remove liner.

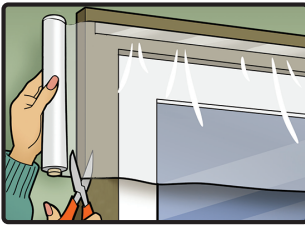

2 STEP

Starting on the right side of your window, roll film across the tape towards the left side and cut to size. Important: make sure the loose edge of the film is applied to the tape, not the folded edge.

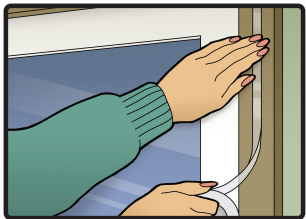


3 STEP

Apply tape to sides and bottom of window. Remove liner.



4 STEP

Unfold film. Press firmly to tape.

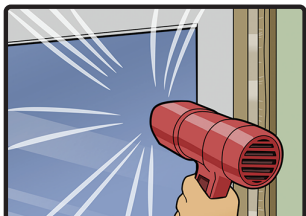

5 STEP

Shrink film with hair dryer to remove wrinkles.