



OUTDOOR PATIO ALUMINUM POLYWOOD SLAT TABLE


ASSEMBLY INSTRUCTION

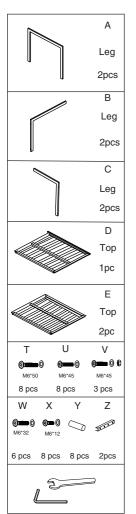

■ Conect the Part A with Part B using connector Part Z and Bolt X as shown in diagram.

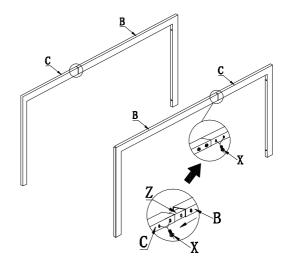


Attach Part A to Part C and Part 11 as shown in diagram.

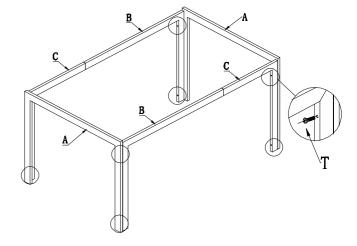


3 Step1:Link Part D&Part E to PartC&B using bolt U.

Fix Part D and Part E using Bolt V as shown in diagram

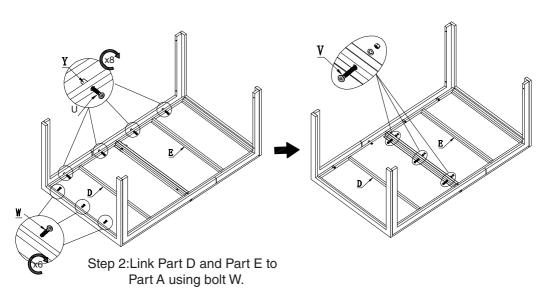

5 Eventually, check all bolts are fixed tightly before using.

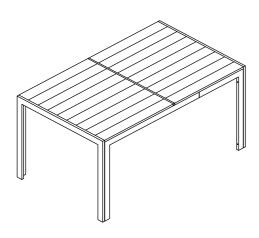

SUPPORT:

Toll free: 1-866-355-0018

www.kozyard.com

email: support@kozyard.com

SOCIAL MEDIA:

Follow us on Instagram www.instagram.com/kozyard

Upload a picture of your Kozyard product in your home, with the hashtag #kozyard to share your friends