


ASSEMBLY INSTRUCTIONS

ITEM#:BM279049

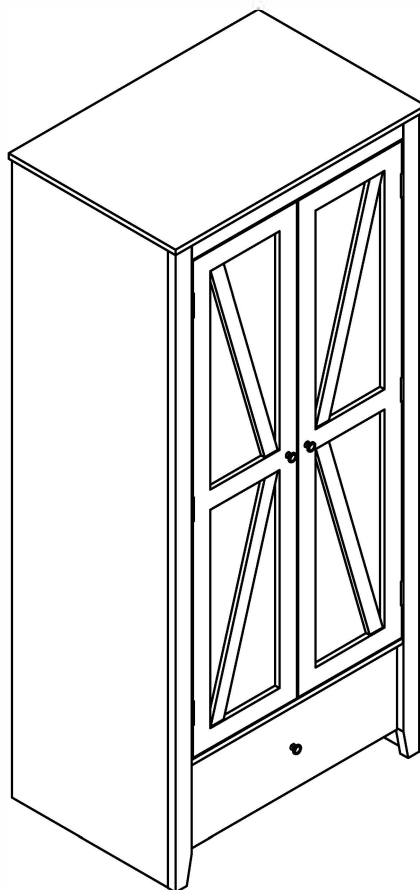

ASSEMBLY INSTRUCTIONS


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: BM279049

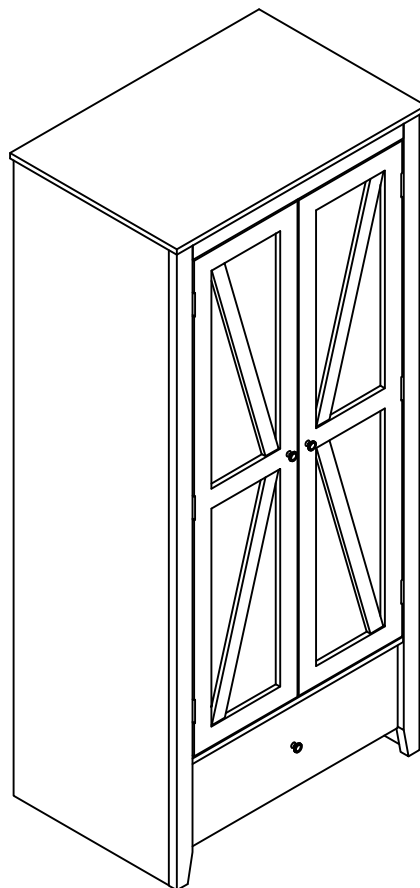

PARTS IDENTIFICATION









ITEM : BM279049

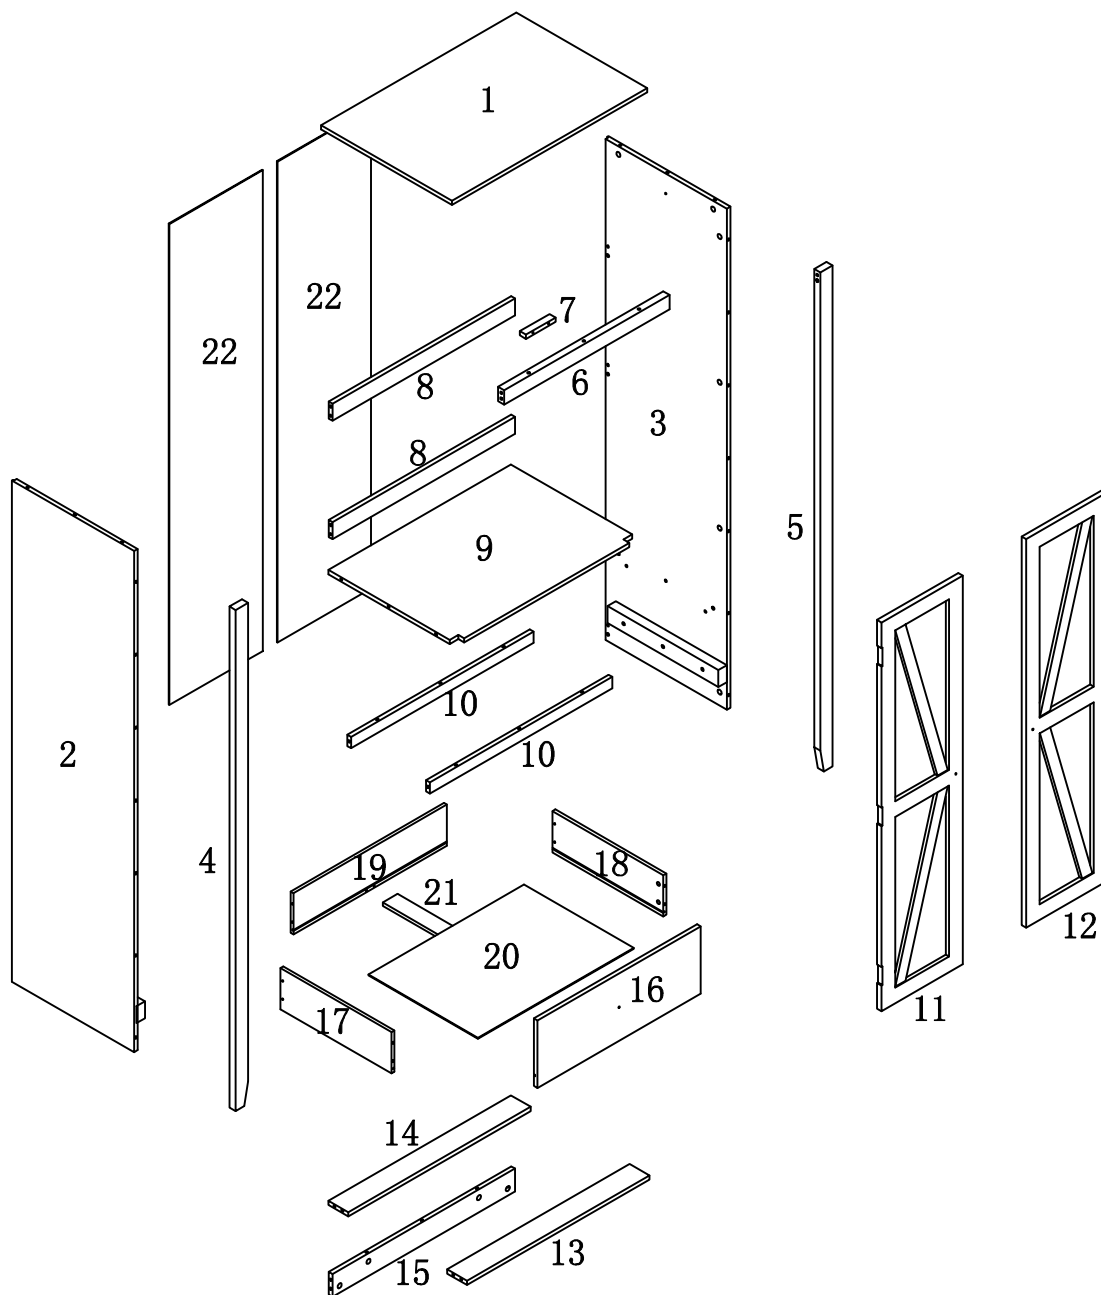

(1)	1pc	(8)	2pcs	(15)	1pc	(22)	2pcs
(2)	1pc	(9)	1pc	(16)	1pc		
(3)	1pc	(10)	2pcs	(17)	1pc		
(4)	1pc	(11)	1pc	(18)	1pc		
(5)	1pc	(12)	1pc	(19)	1pc		
(6)	1pc	(13)	1pc	(20)	1pc		
(7)	1pc	(14)	1pc	(21)	1pc		


HARDWARE IDENTIFICATION

ITEM#: BM279049

A		L29	34pcs
B		Ø15	34pcs
C		Ø8 x 25	32pcs
D		Ø22	10pcs
E			50pcs
F		Ø16	4pcs
G		Ø4 x 35	2pcs
H			2pcs
I		Ø3 x 16	4pcs
J		Ø4 x 30	6pcs
K		L20	4pcs
L		Ø12	4pcs
M		Ø6 x 30	2pcs
N			3pcs
O		Ø4 x 22	3pcs
P		L733	1pc
Q			2pcs
R		Ø4 x 16	40pcs
S		64 x 25	6pcs
T			2pcs
U		Ø3 x 12	4pcs
V		Ø8x40	1pc
W		Ø12x12x1	2pcs
X		Ø5x40	1pc
Y		Ø4x25	1pc
Z		197 x 5 x 1	1pc
A1		Glue: For securing please apply to wood dowel first before inserting into panel	1pc


ASSEMBLY INSTRUCTIONS

ITEM: BM279049

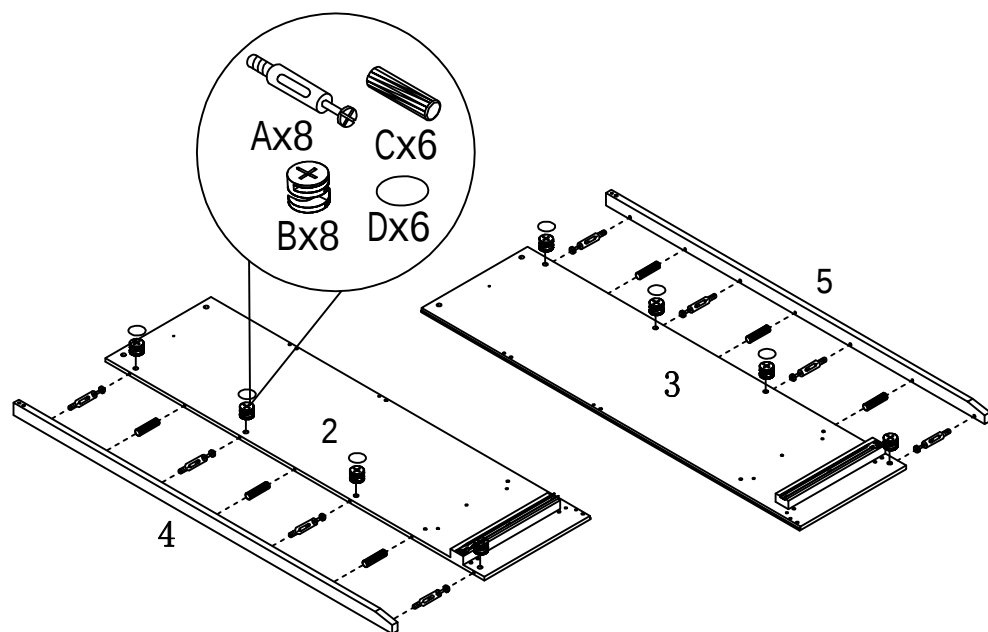


STEP1

STEP2

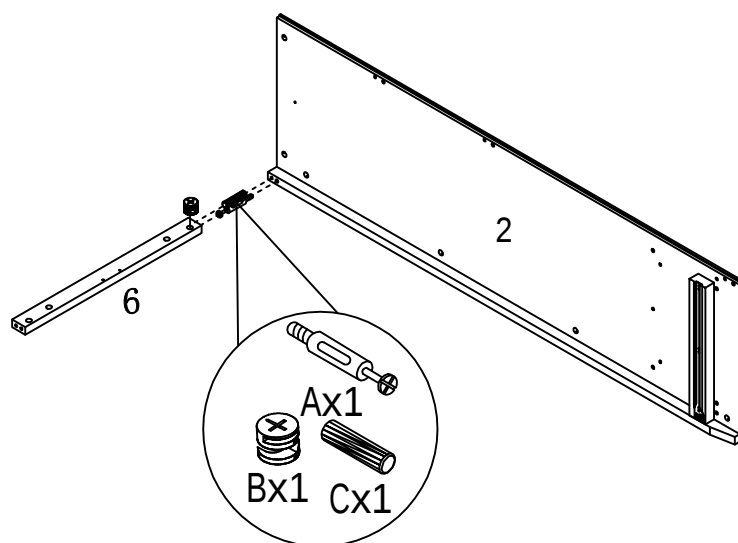


ASSEMBLY INSTRUCTIONS

ITEMS : BM279049

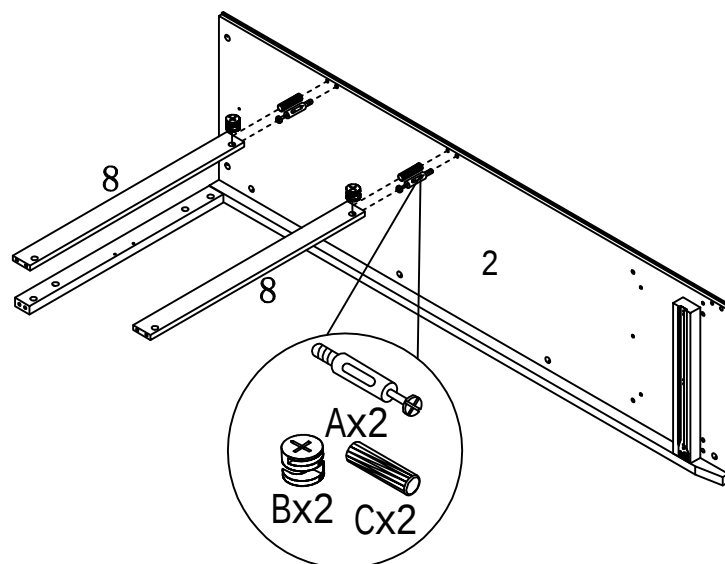


STEP3

STEP4

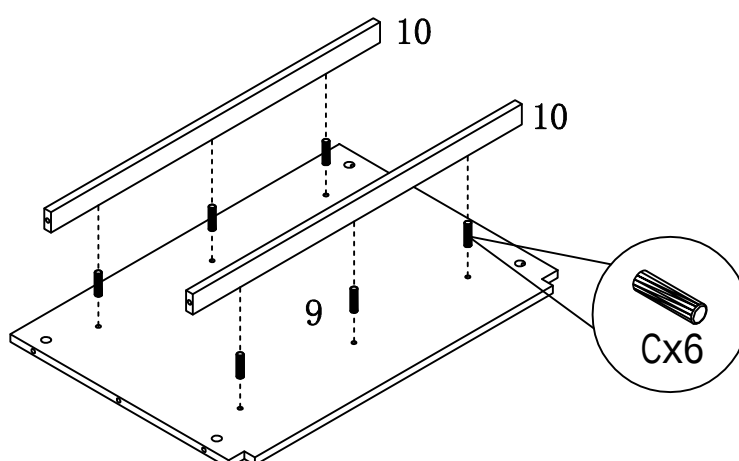


ASSEMBLY INSTRUCTIONS

ITEMS : BM279049

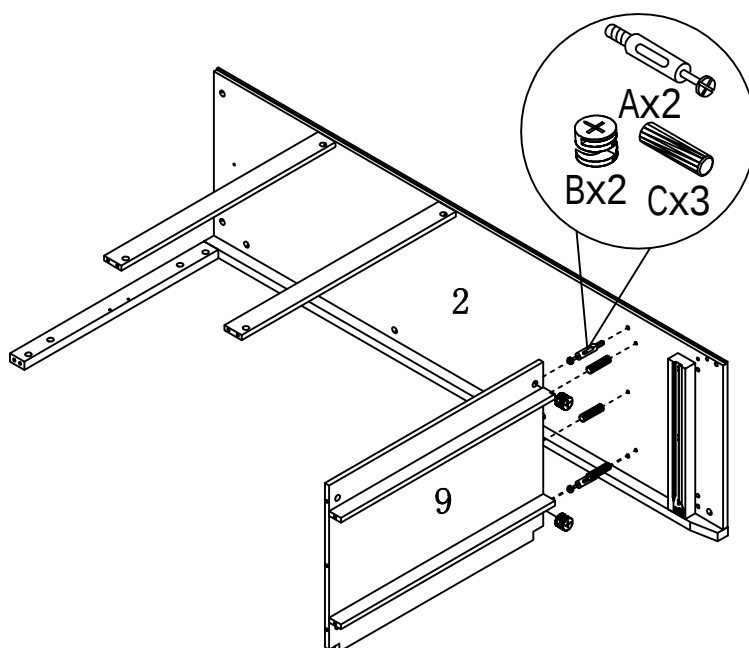


STEP5

STEP6

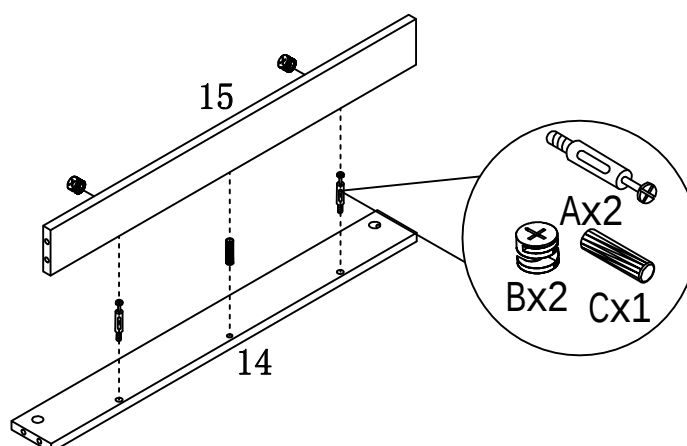


ASSEMBLY INSTRUCTIONS

ITEMS : BM279049

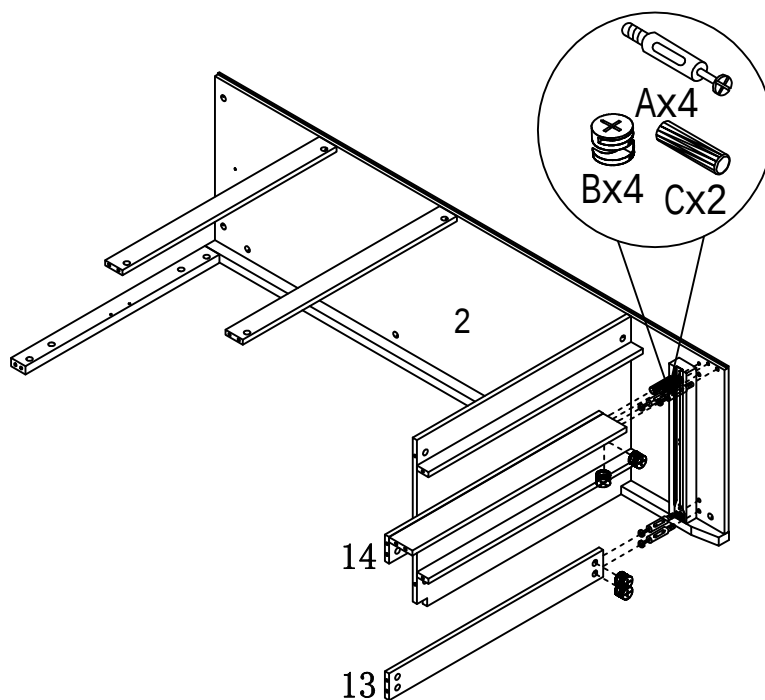


STEP7

STEP8

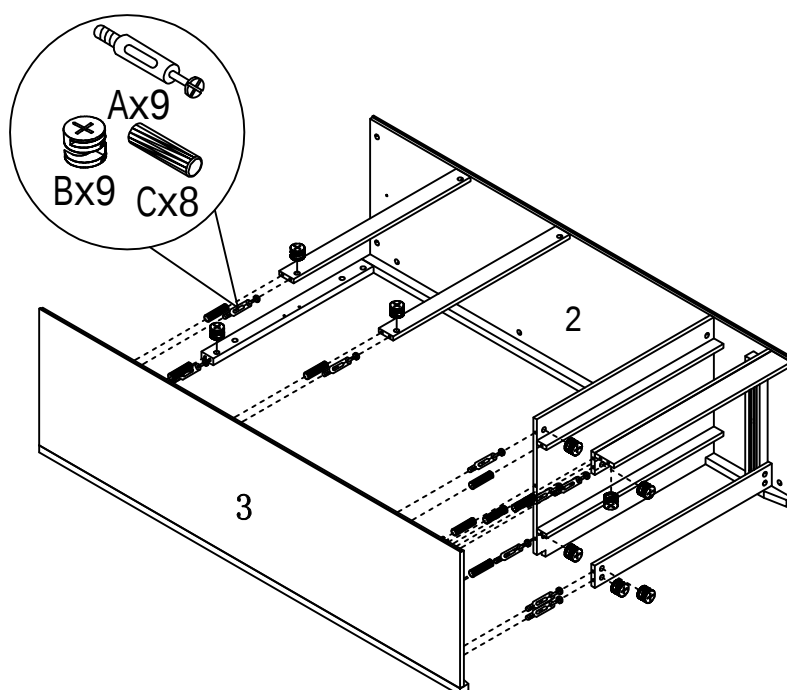


ASSEMBLY INSTRUCTIONS

ITEMS : BM279049

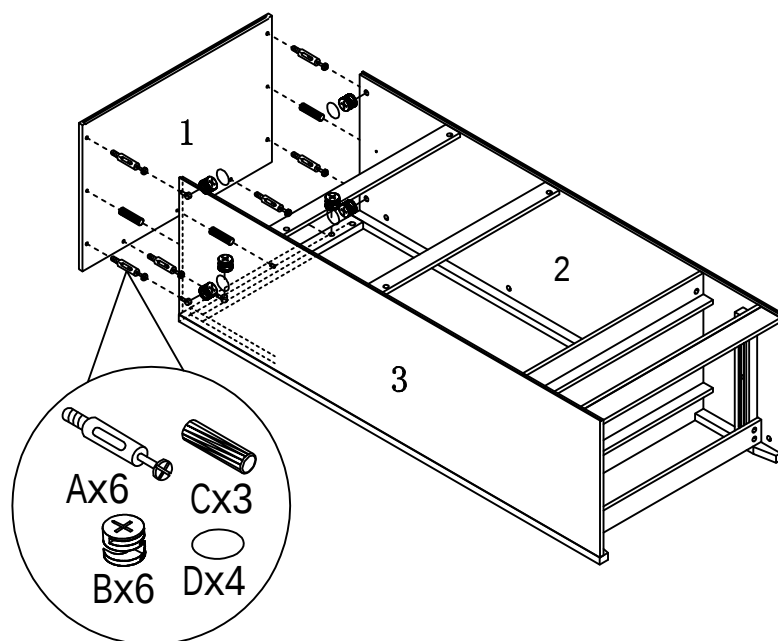


STEP9

STEP10

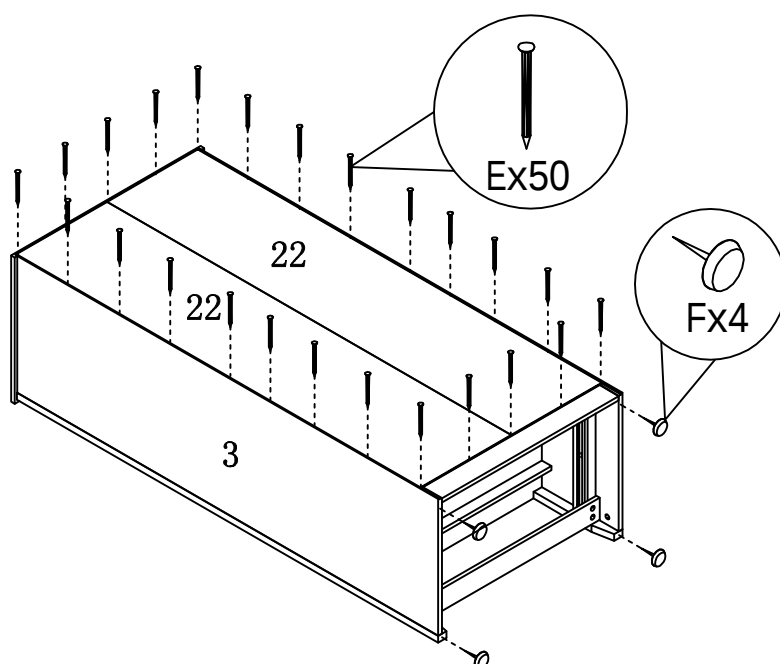


ASSEMBLY INSTRUCTIONS

ITEM : BM279049

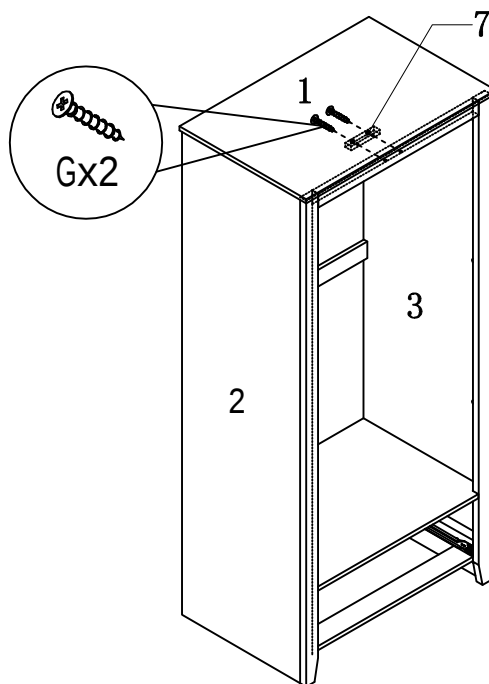


STEP11

STEP12

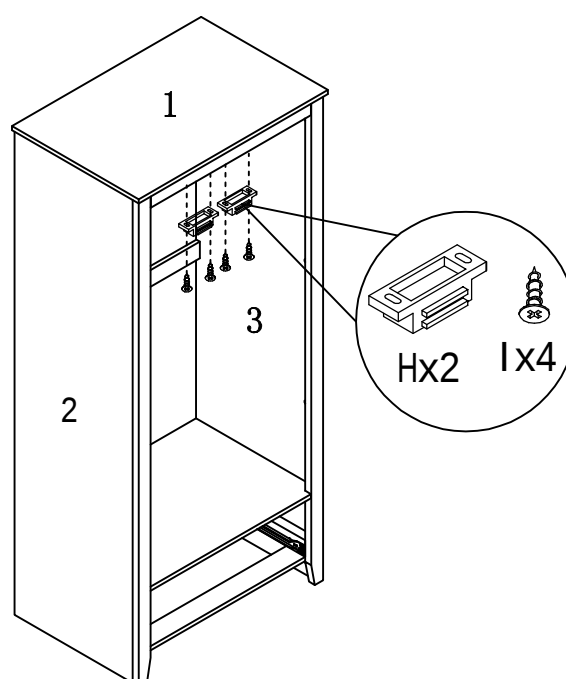


ASSEMBLY INSTRUCTIONS

ITEM : BM279049

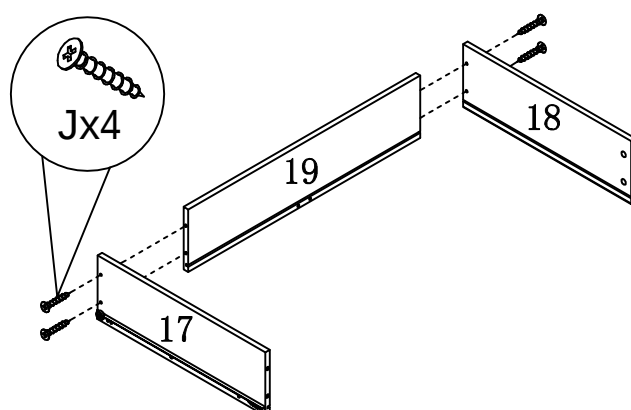


STEP13

STEP14

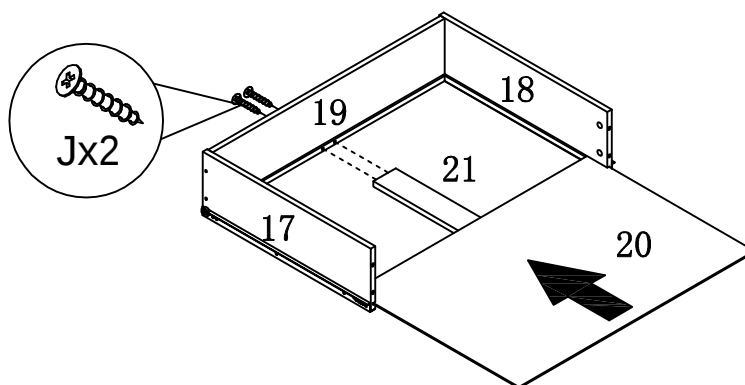


ASSEMBLY INSTRUCTIONS

ITEM ; BM279049

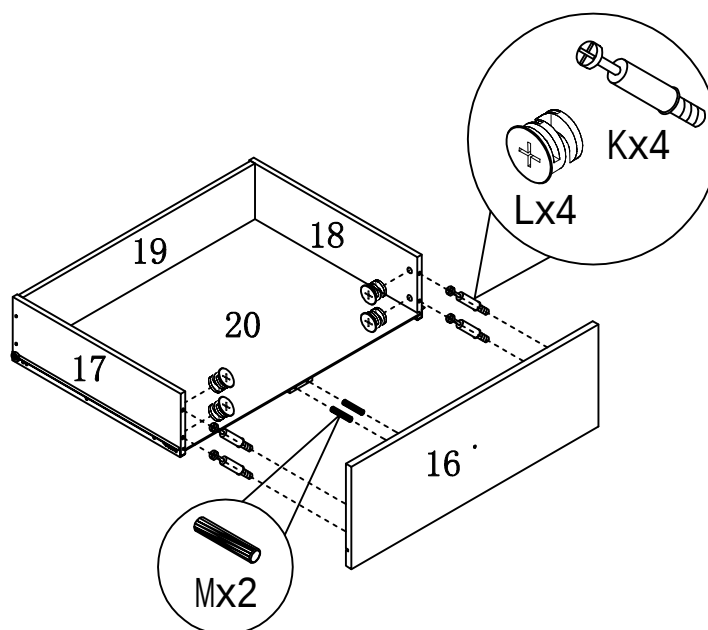



STEP15

STEP16

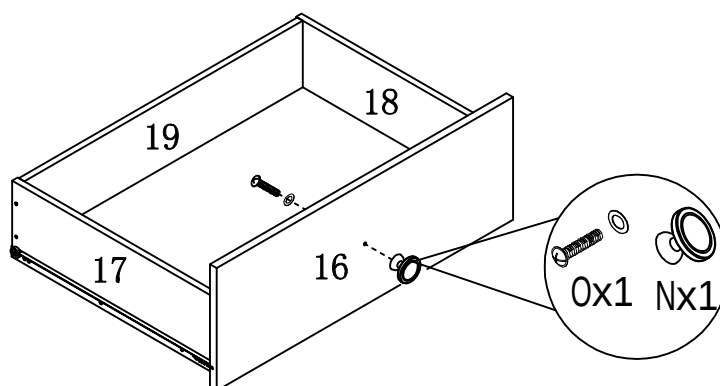


ASSEMBLY INSTRUCTIONS

ITEM : BM279049

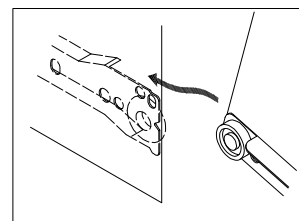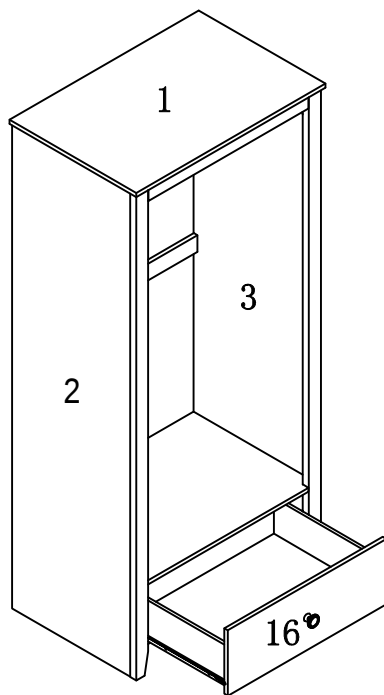


STEP17

STEP18

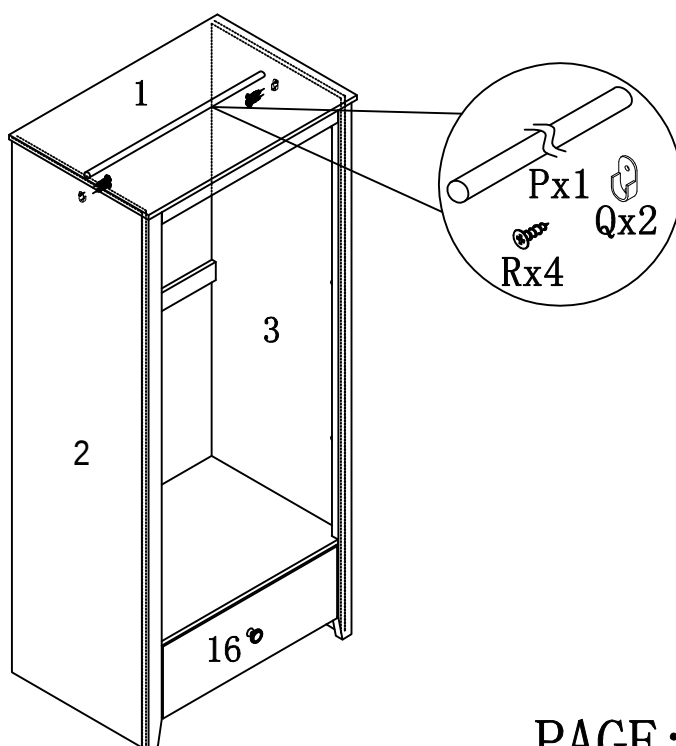


ASSEMBLY INSTRUCTIONS

ITEM : BM279049

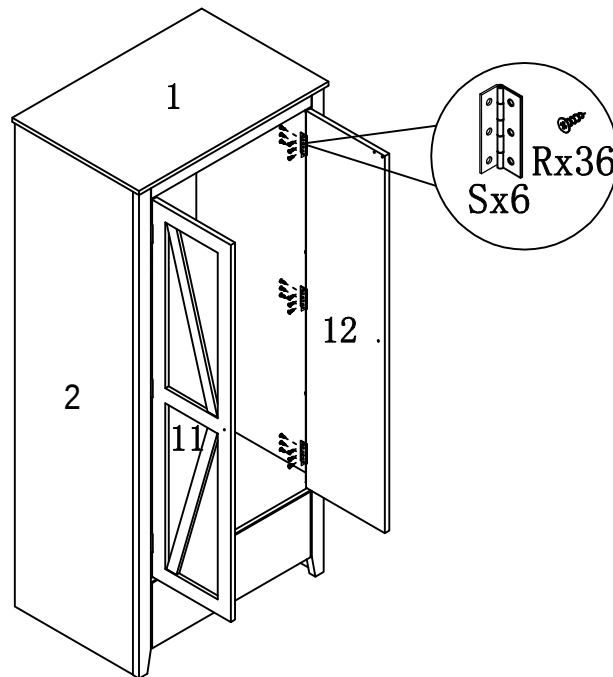


STEP19

STEP20

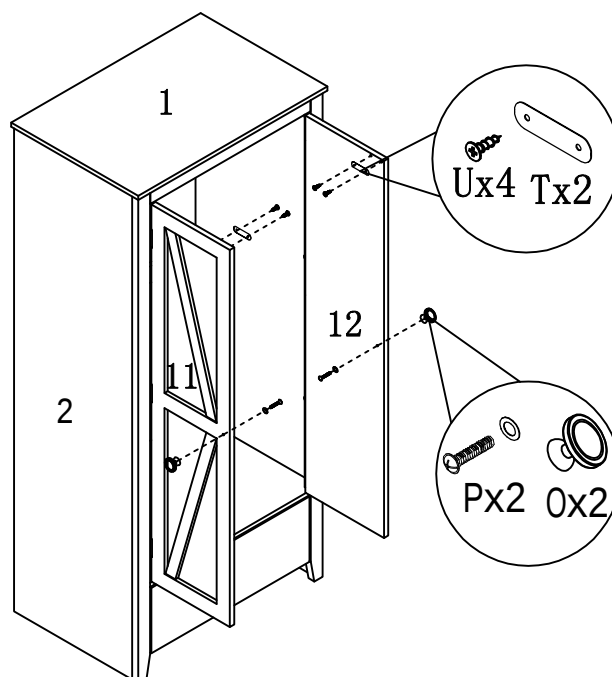


ANTI-TIPPING STRAP INSTRUCTIONS

HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\varnothing 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\varnothing 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\varnothing 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

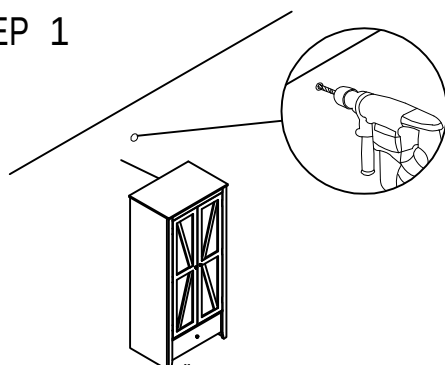


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

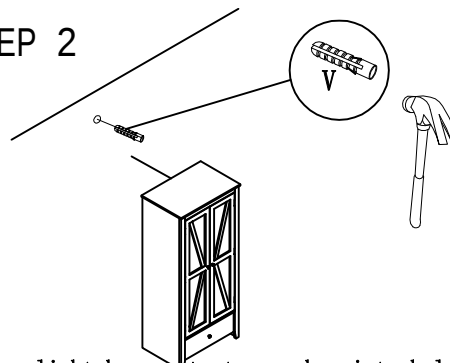


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

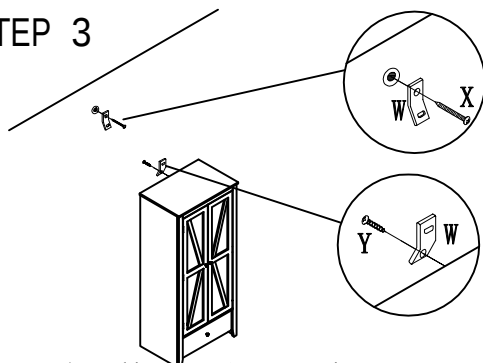

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

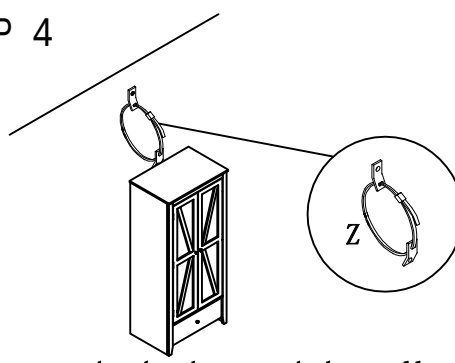

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.