


MID CENTURY CLASSIC DAYBED - TWIN SIZE

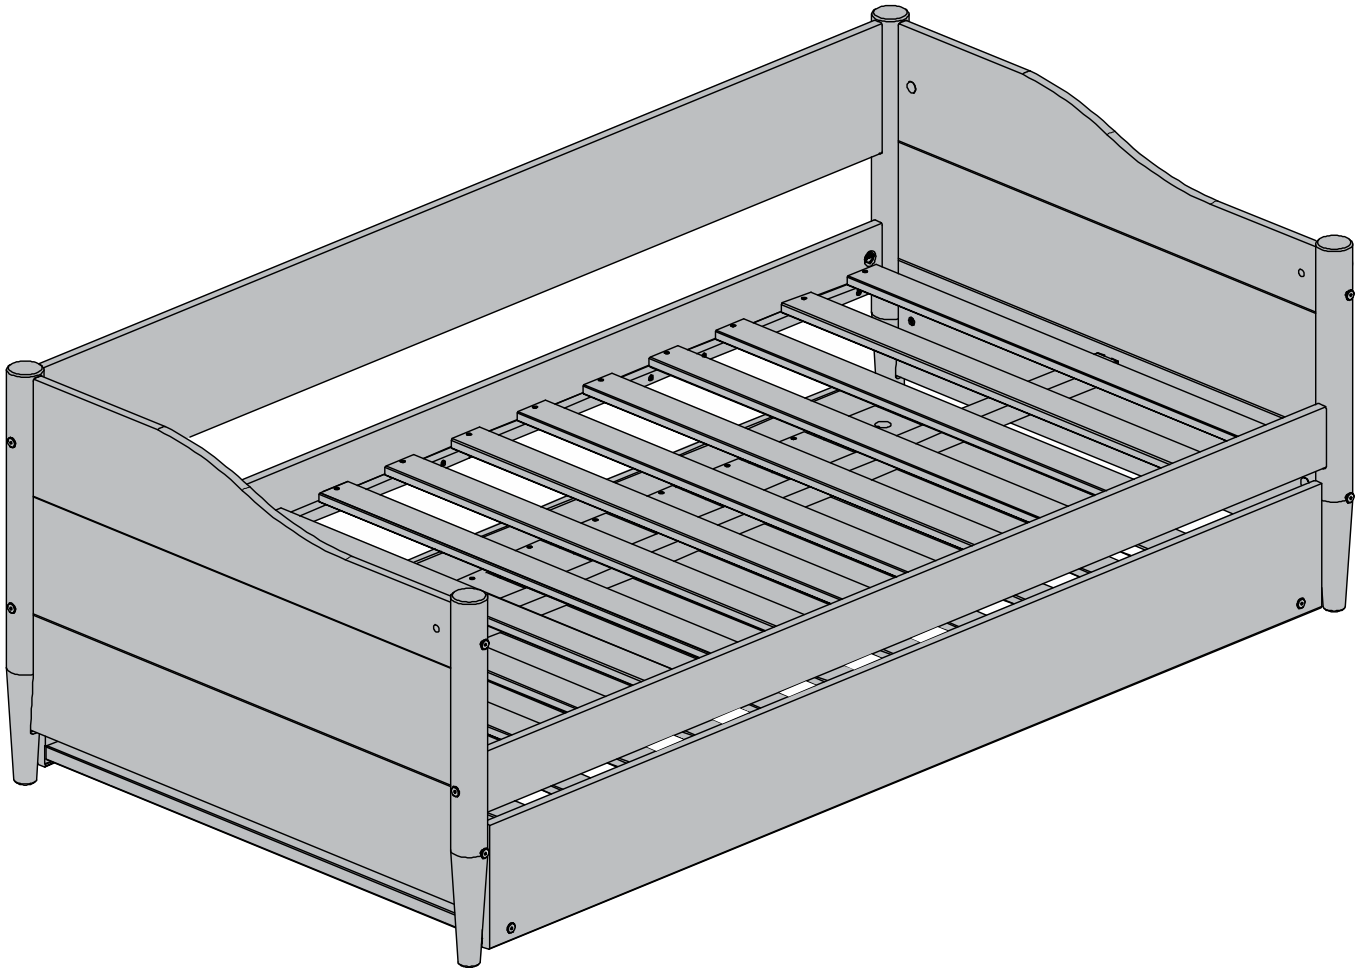

Assembly
02 people



Time
1:30 hours approximately




Tools
philips key, rubber hammer



Volume quantity
01 boxes




Parts list for assembly. Please confirm all parts available before assembly

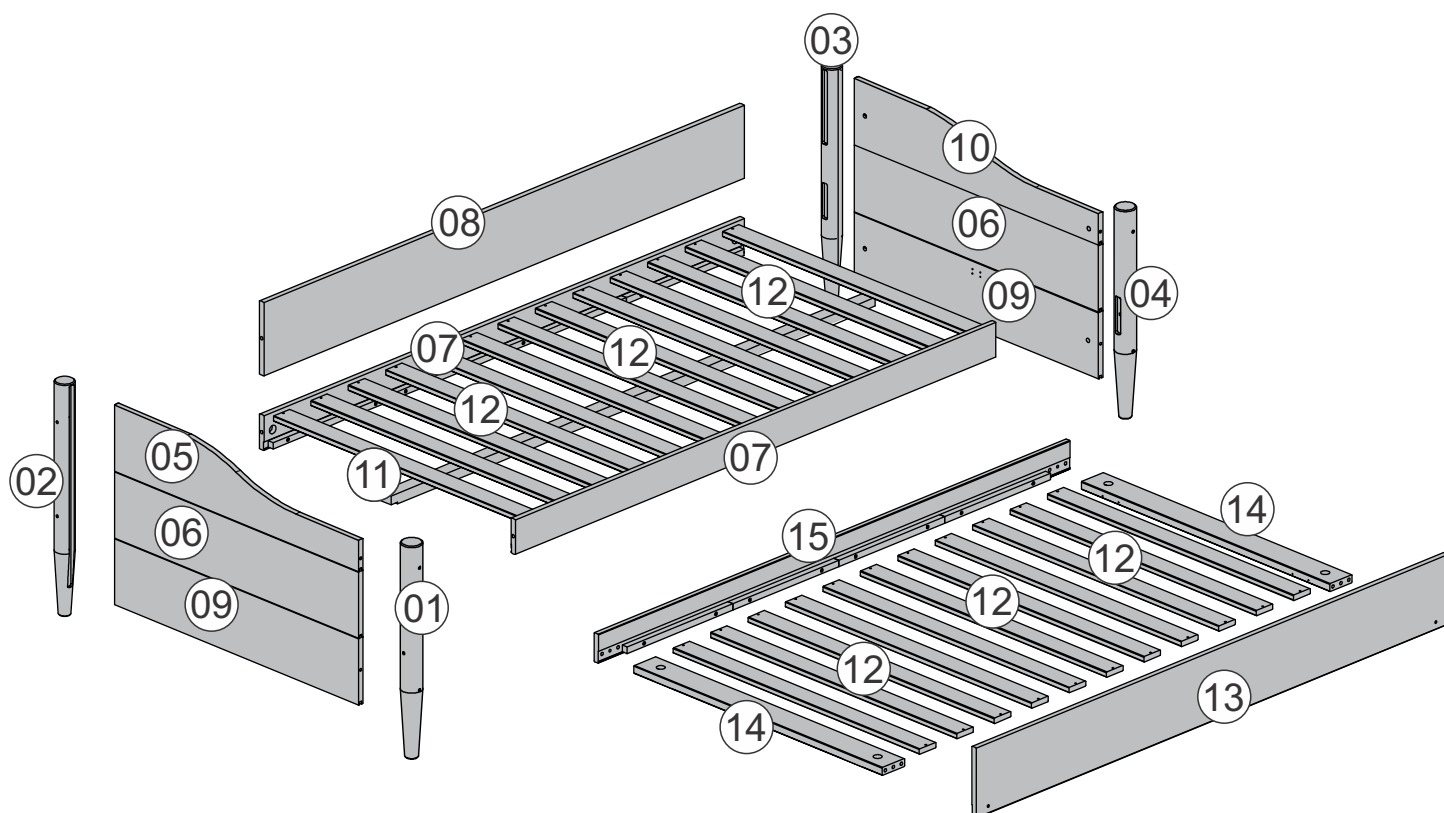

ATTENTION

- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.


Hardware list for assembly
Please confirm all hardware available before assembly.

A	 ø3/8 x 1' 9/16"	08x	+	SPARE 02x
F		01x	+	01x
I	 ø1/8 x 1' 3/8"	48x	+	02x
J		02x		
Y	 2"	04x		
Z	 ø1/8 x 5/8"	28x	+	02x
AA	 ø1/4 x 1/2"	10x	+	01x
BC	 ø1/4"	08x	+	01x
BW	 3' 1/4"	02x		
BZ	 ø1/4 x 3' 1/2"	18x	+	02x
BX	 ø3/4"	06x	+	02x




pol.


Step - 01

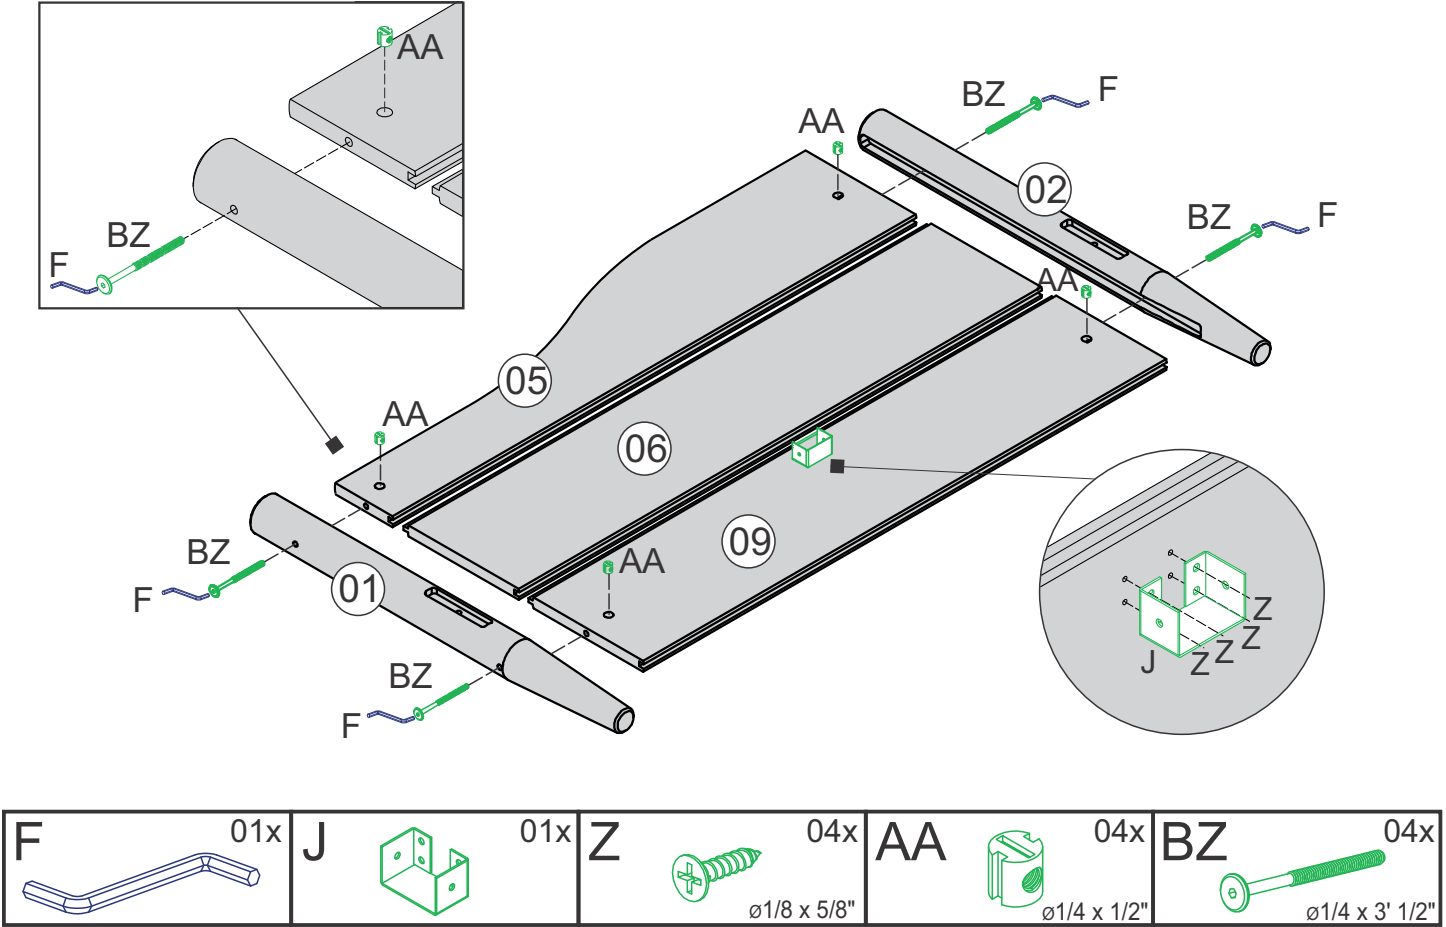

Step - 02



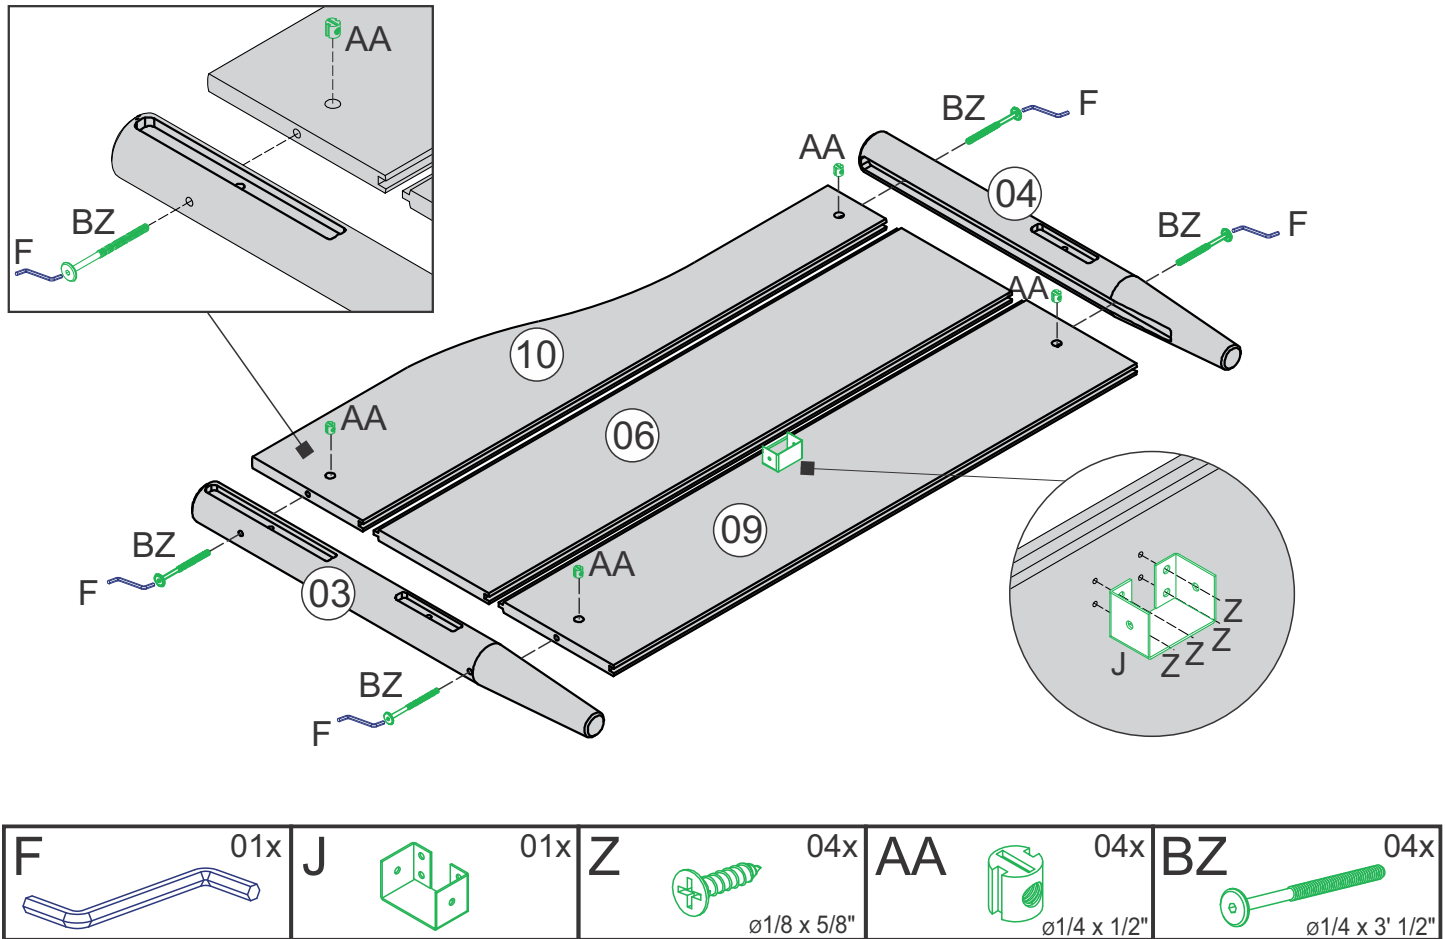


Step - 03

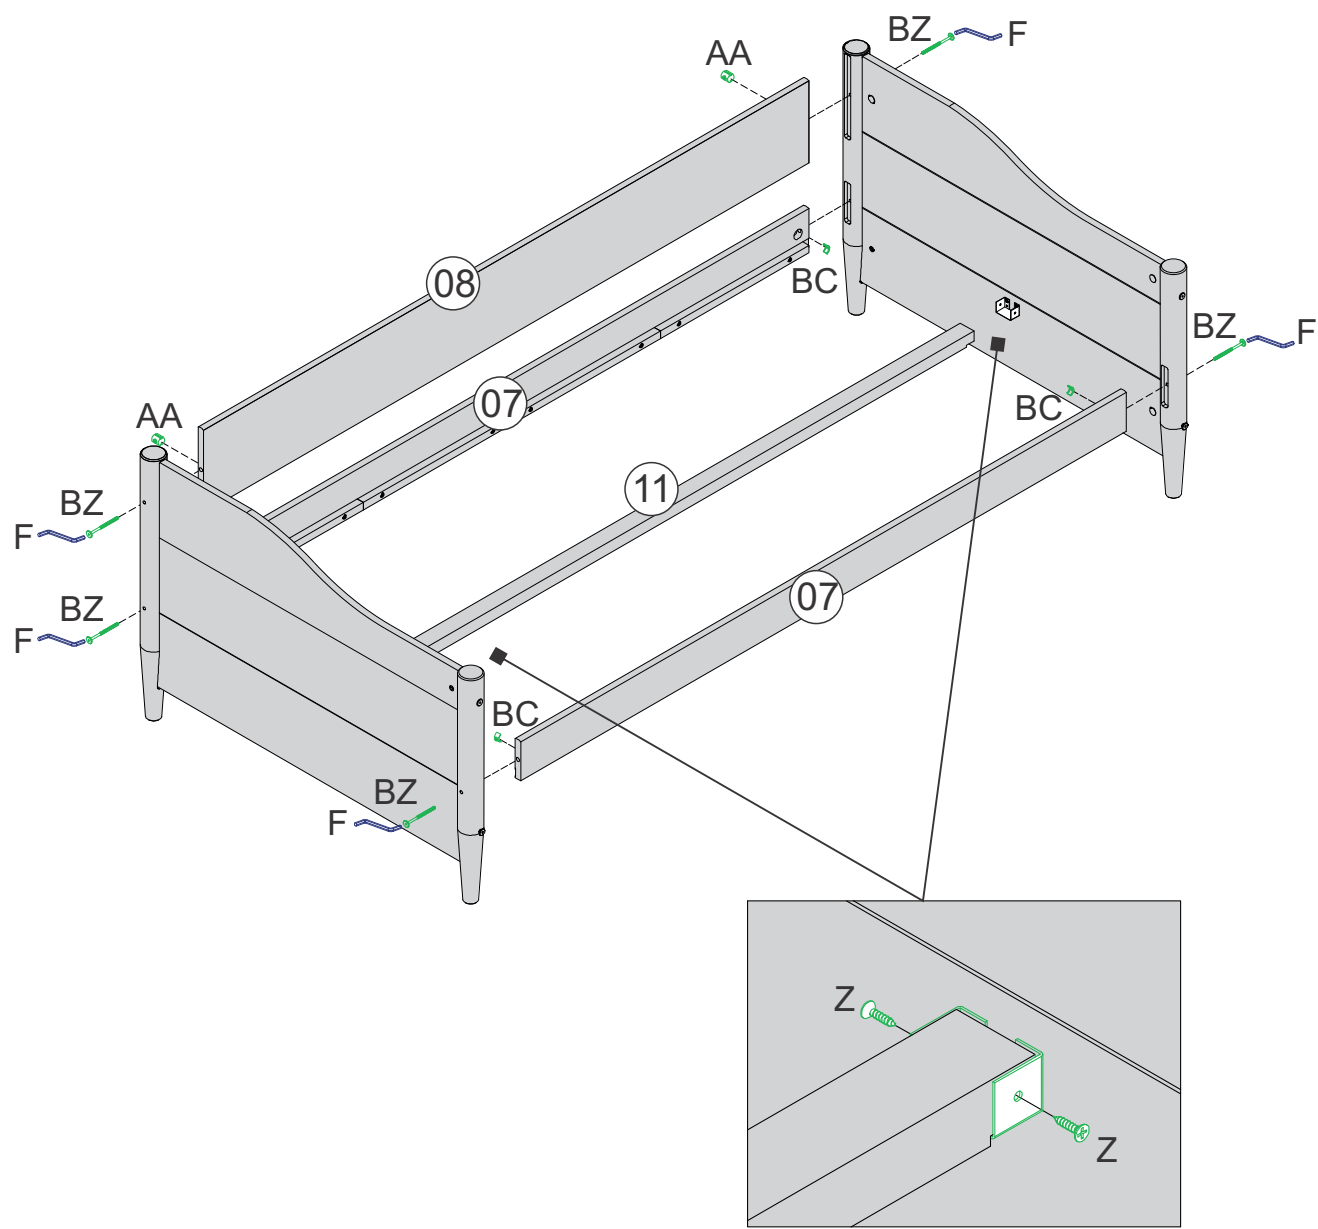


F  01x	Z  04x ø1/8 x 5/8"	AA  02x ø1/4 x 1/2"	BC  04x 1/4"	BZ  06x ø1/4 x 3' 1/2"
---	---	--	---	---


Step - 04

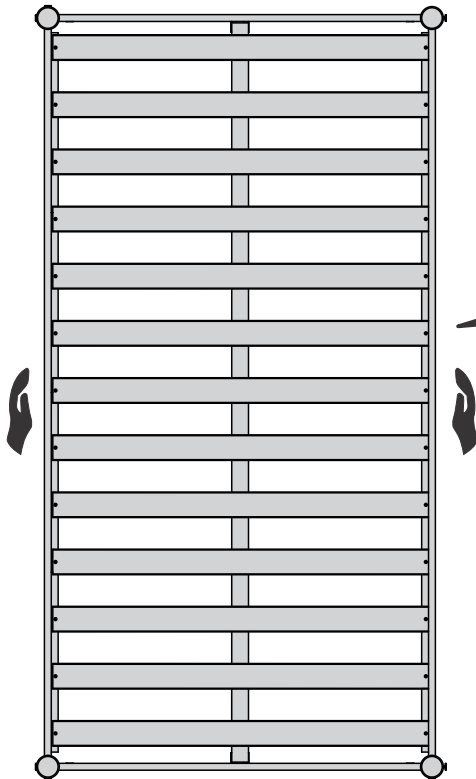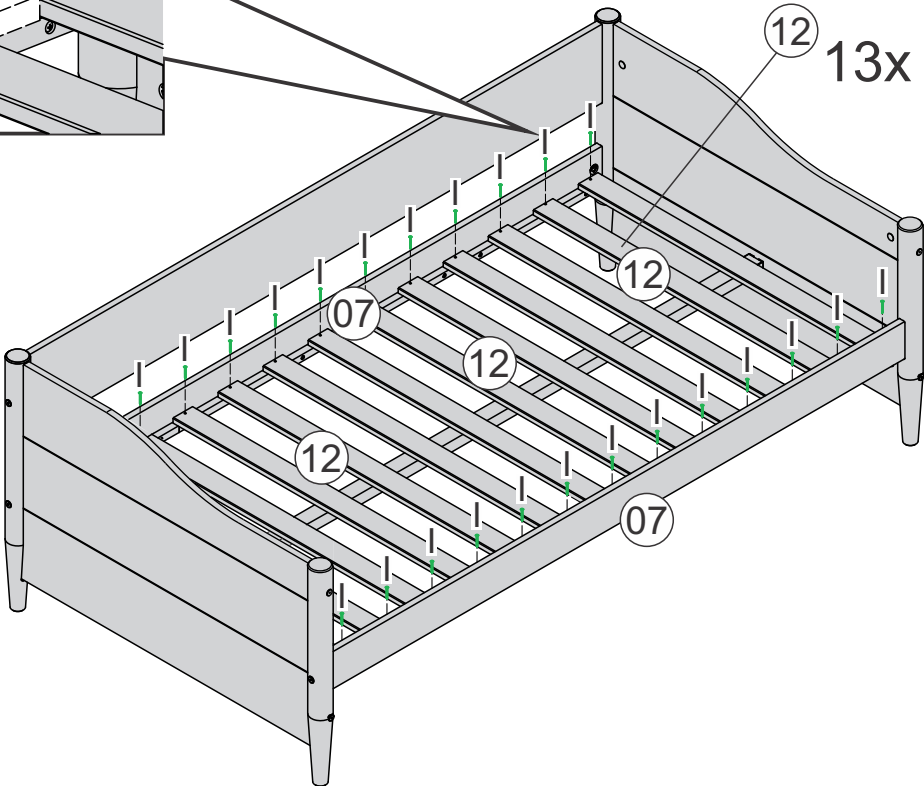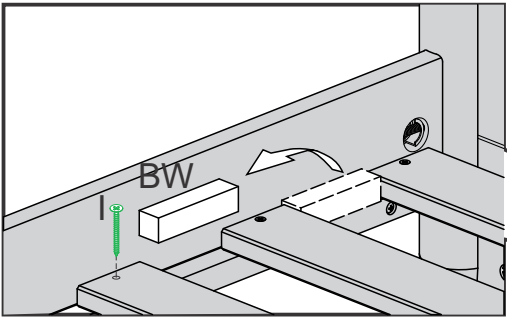


Before you screw in the slats apply pressure to cross beams (7) to ensure that mattress supports (12) fit evenly between cross beams.

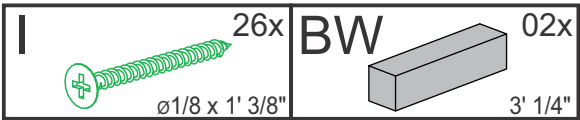


Step - 05

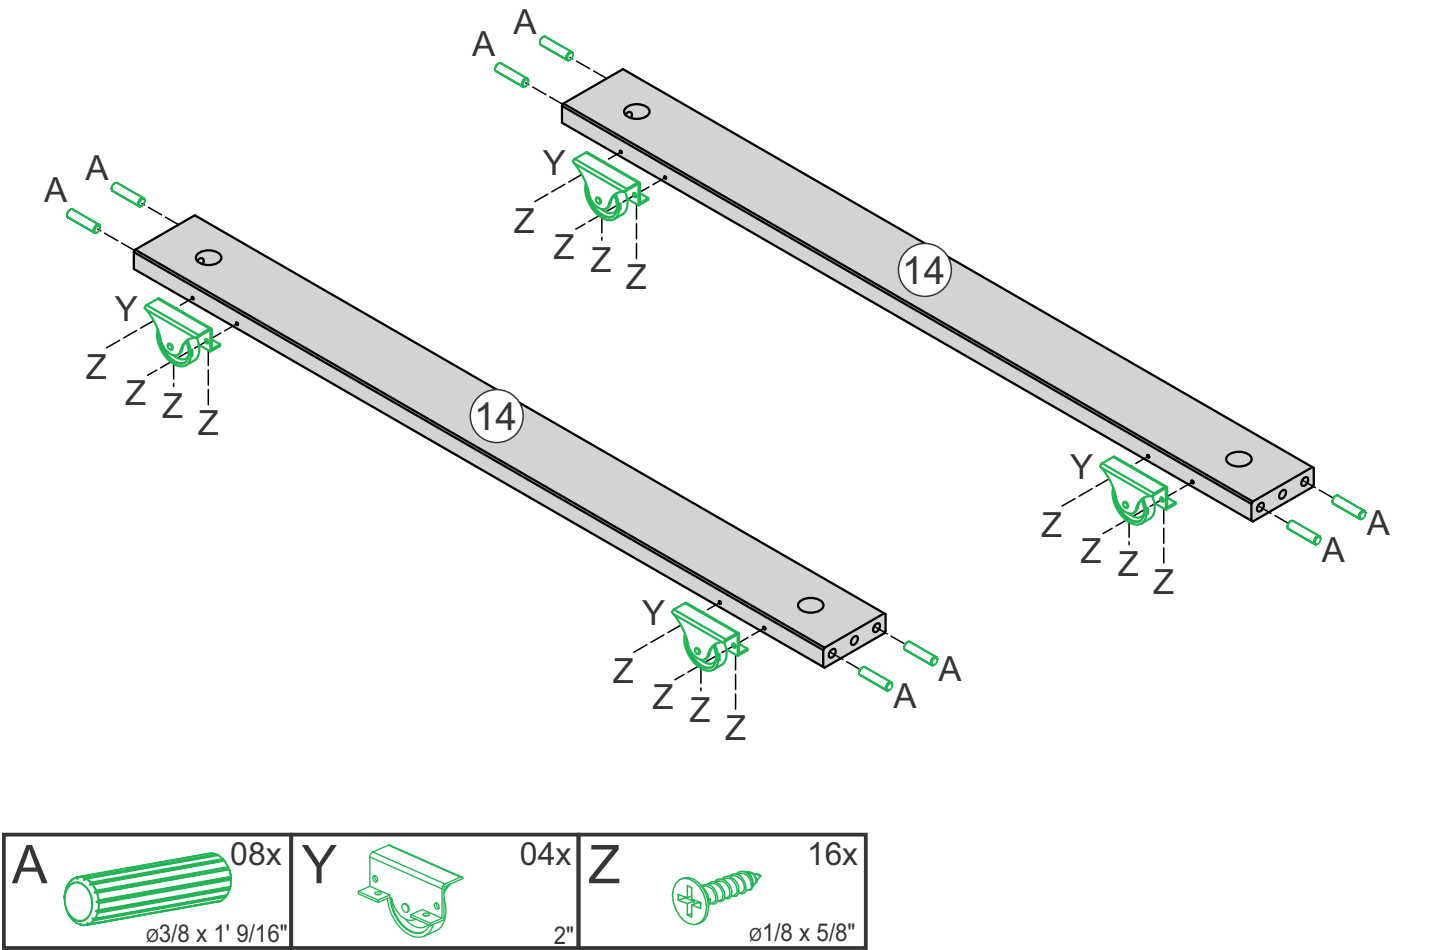


Step - 06

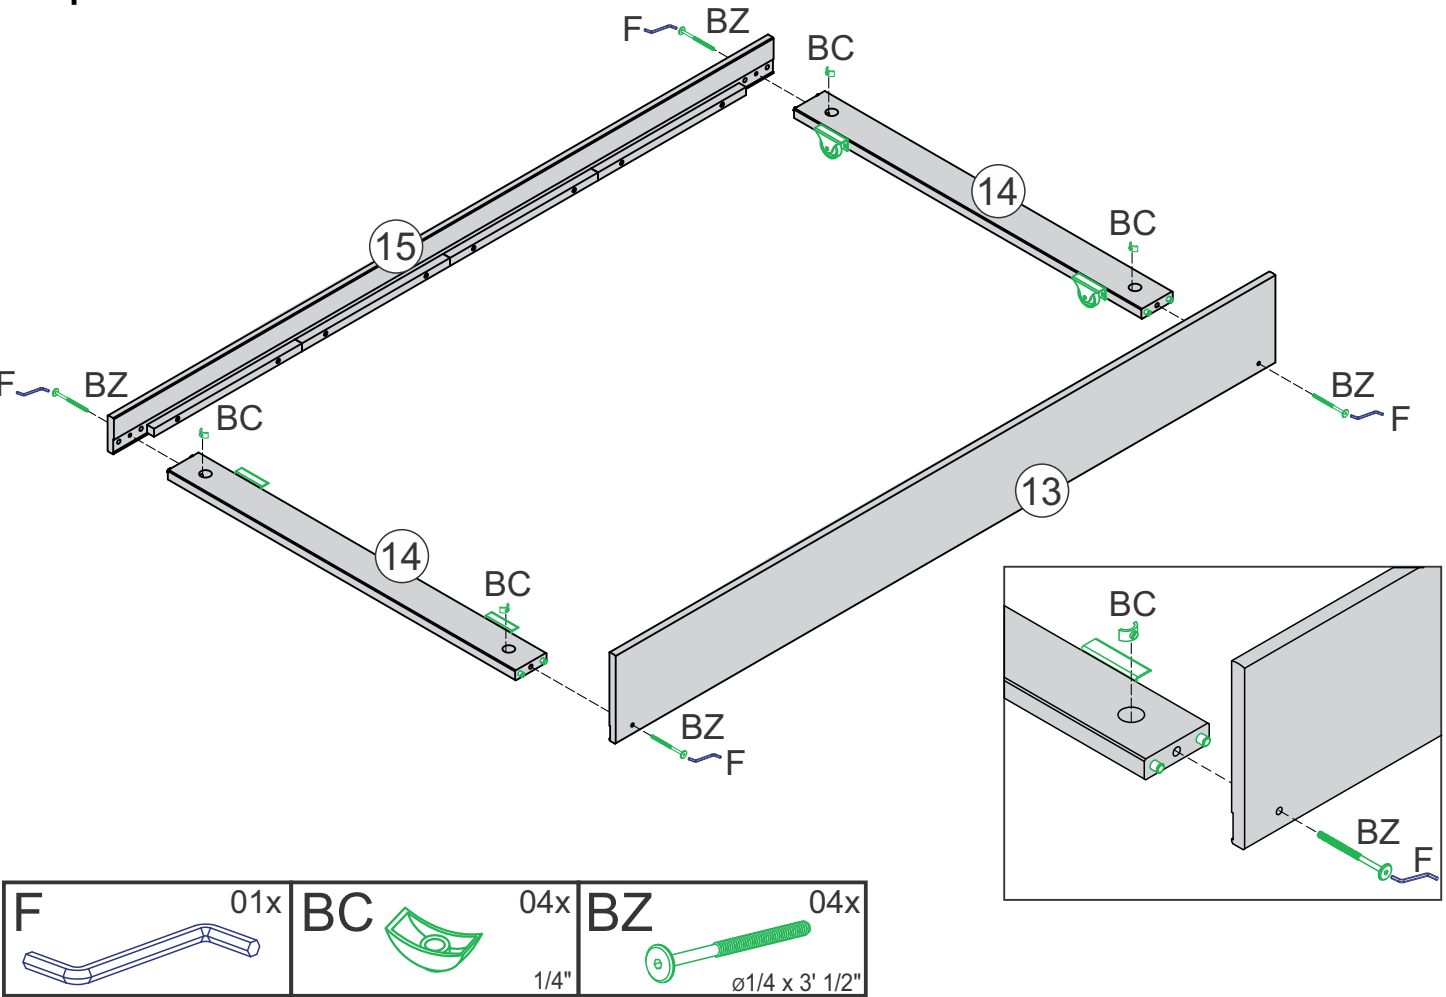


Step - 07

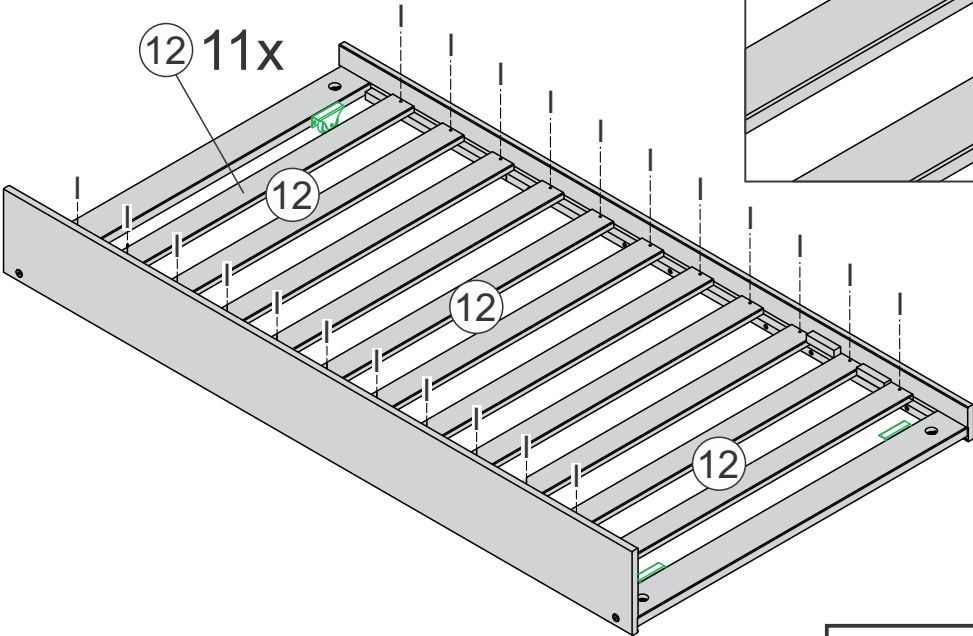

I	22x	BW	02x
	$\varnothing 1/8 \times 1' 3/8''$		$3' 1/4''$

Step - 08

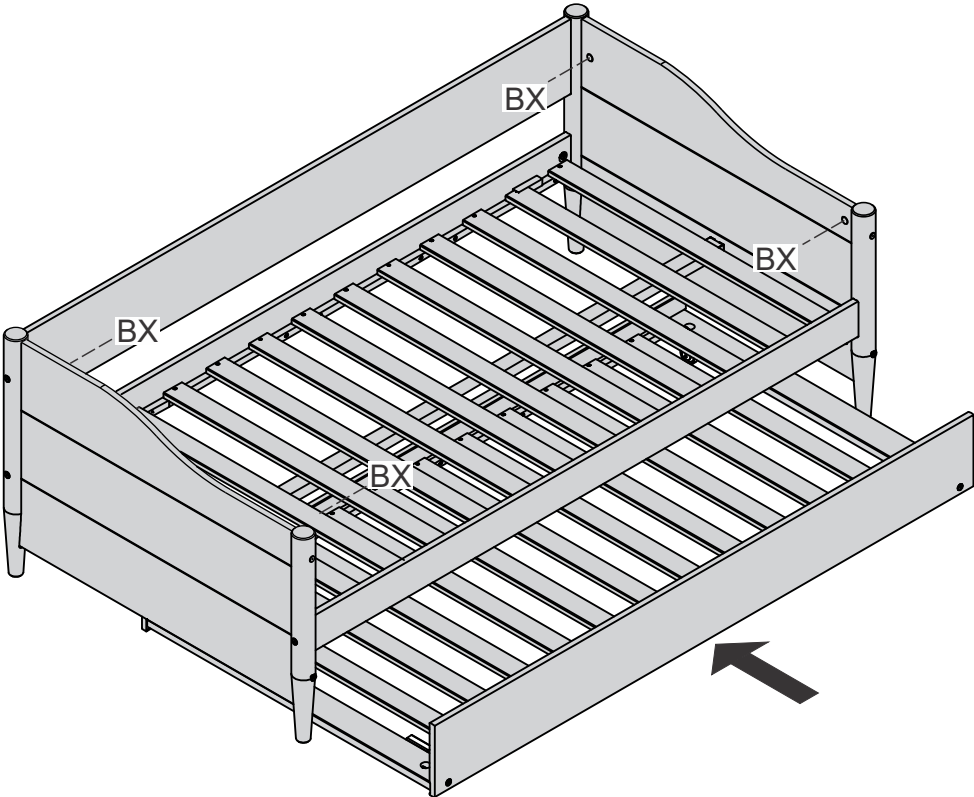

BX	04x
	$3/4''$