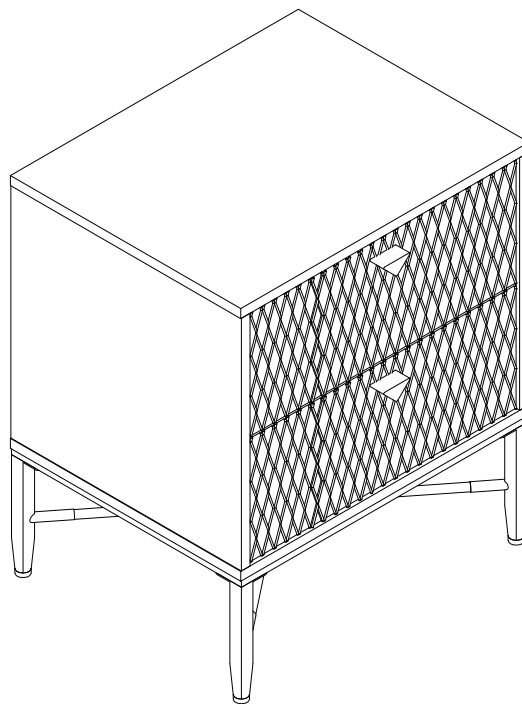


ASSEMBLY INSTRUCTIONS

1. Before installation, please read the Assembly Instruction carefully.
2. Please check whether the Parts and Hardware are consistent with the list.
3. It is normal for the sealed environment to smell, not a product quality problem.



Phone number: 303-747-4421
951-213-4743

service@clihome.net

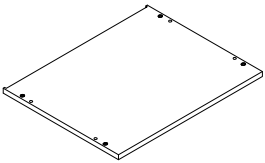
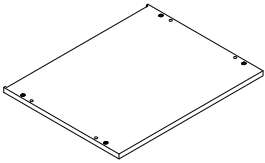
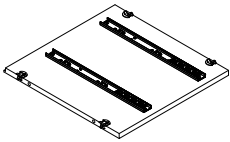
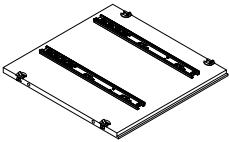


Web: www.clihome.net

MADE IN CHINA



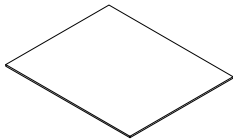
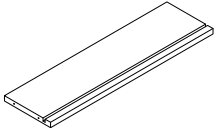
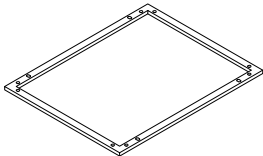
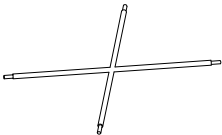
ASSEMBLY INSTRUCTIONS

Page 2 of 13

Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Back panel		1
6	Drawer front		2

Part List:


ITEM	DESCRIPTION	PART	QTY
7	Drawer left side		2
8	Drawer right side		2
9	Drawer bottom		2
10	Drawer back		2
11	Bottom frame		1
12	X" crossbar		1

MADE IN CHINA


ASSEMBLY INSTRUCTIONS

Page 3 of 13









Part List:

ITEM	DESCRIPTION	PART	QTY
13	Left frontleg / Rightback leg		2






Part List:

ITEM	DESCRIPTION	PART	QTY
14	Right frontleg / leftback leg		2

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Wooden dowel	 $\Phi 8 \times 30 \text{mm}$	4
B	Bolt	 $\Phi 1/4" \times 12 \text{mm}$	8
C	Bolt	 $\Phi 1/4" \times 19 \text{mm}$	4
D	Machine screw	 $\Phi 5/32" \times 25 \text{mm}$	4
E	Wood screw	 $\Phi 4 \times 30 \text{mm}$	16
F	Back screw	 $\Phi 3 \times 14 \text{mm}$	12
G	Allen wrench		1
H	Handle		2

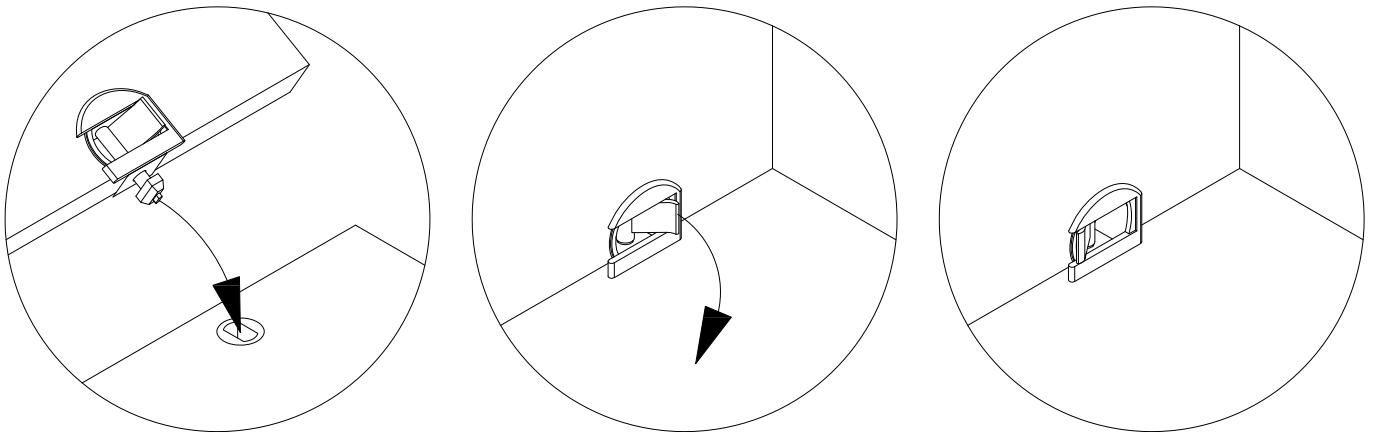
Hardware List:

ITEM	DESCRIPTION	PART	QTY
I	Spring Washer	 $\Phi 1/4"$	8
J	Flat Washer	 $\Phi 1/4" \times 16 \text{mm}$	10
K	Safety wall strap		1
L	Plastic anchor		1
M	Mounting screw	 $\Phi 4 \times 38 \text{mm}$	1

MADE IN CHINA




- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

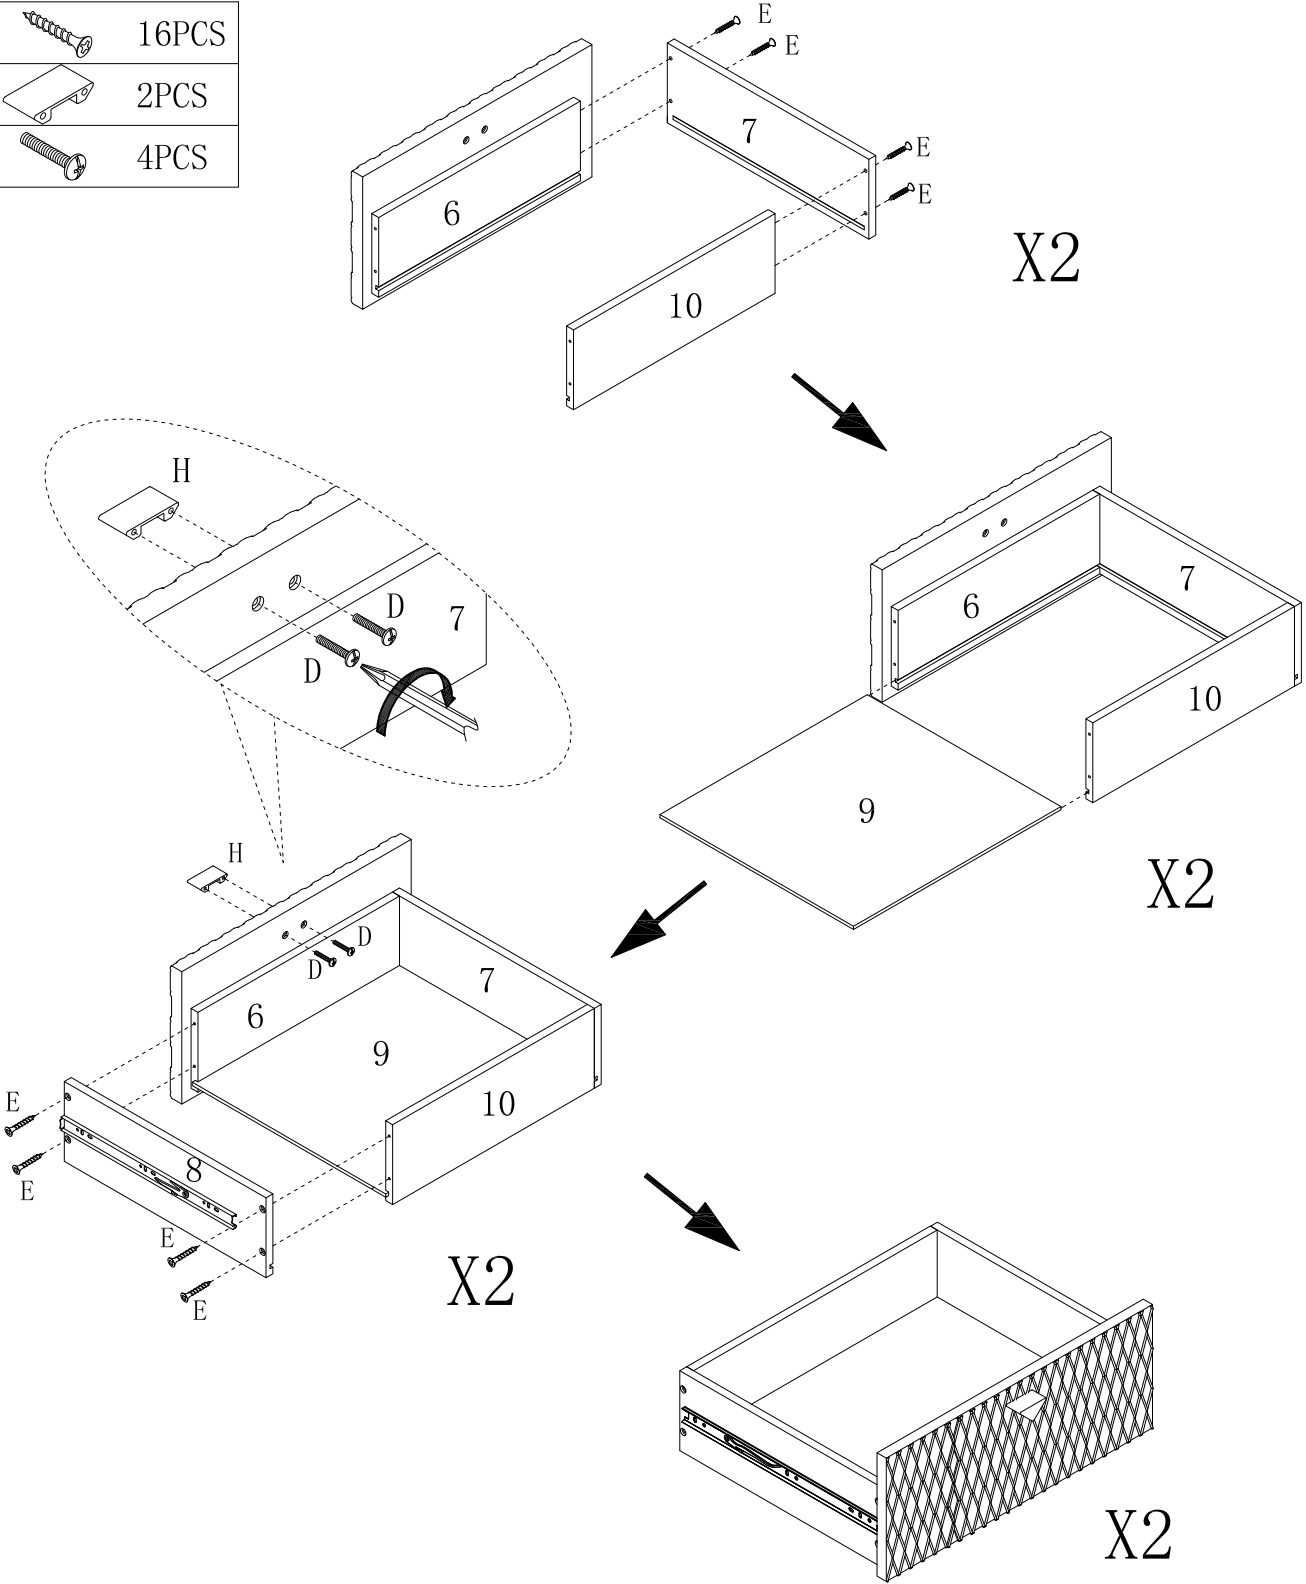
Guideline For Assembling of Plastic Lock



ASSEMBLY INSTRUCTION



STEP 1

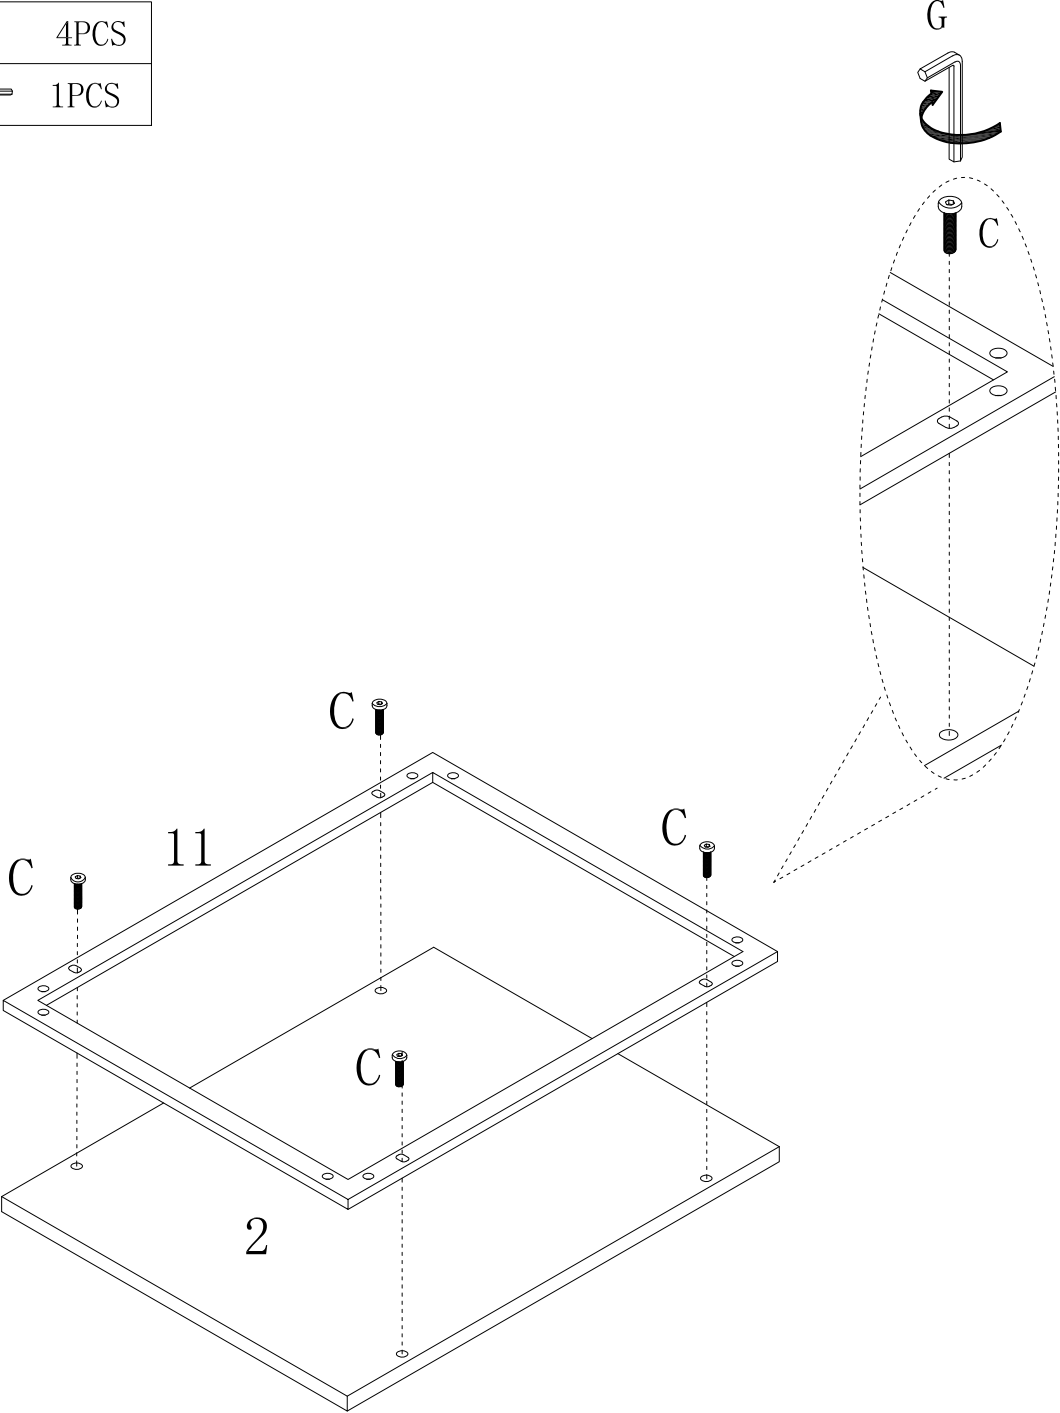
E:		16PCS
H:		2PCS
D:		4PCS



ASSEMBLY INSTRUCTION





STEP 2

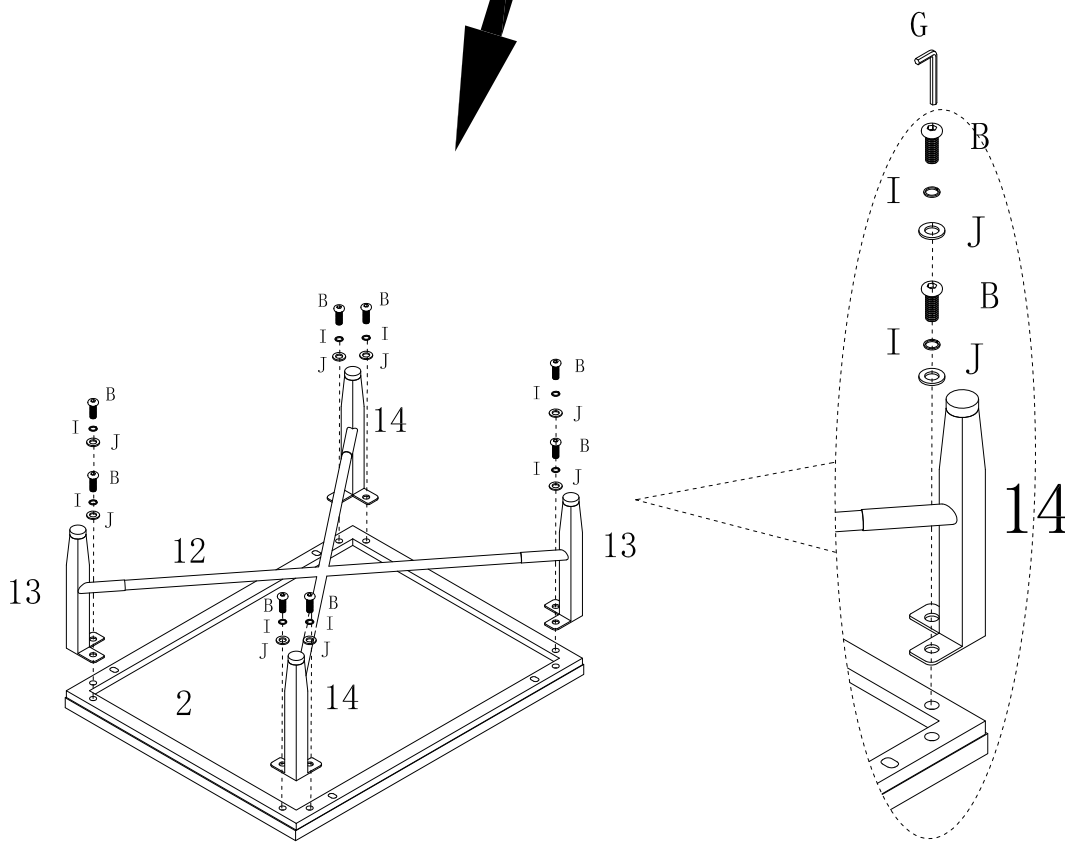
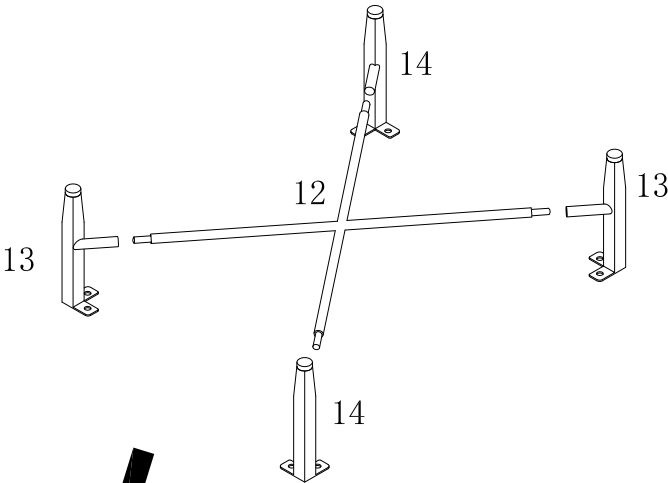
C:		4PCS
G:		1PCS



ASSEMBLY INSTRUCTION


STEP 3

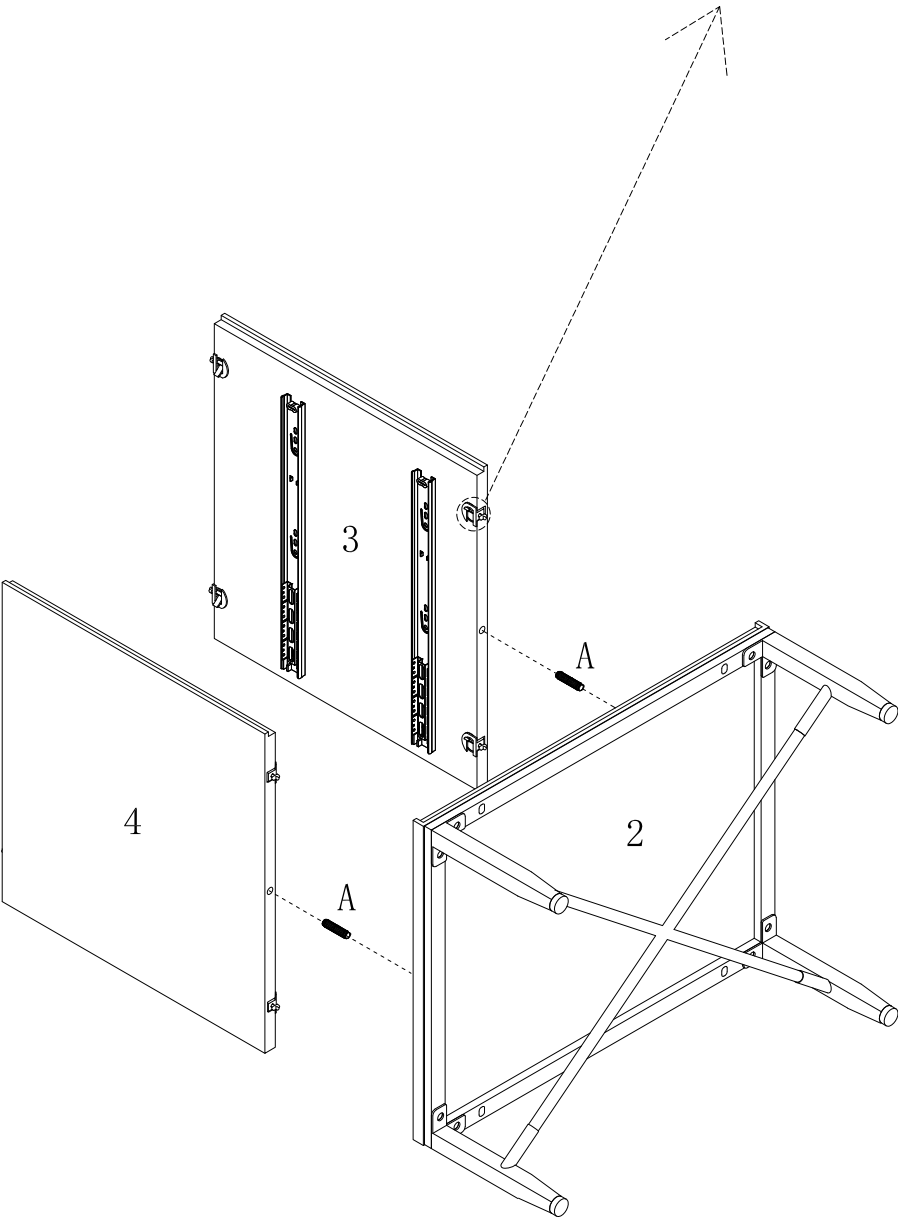
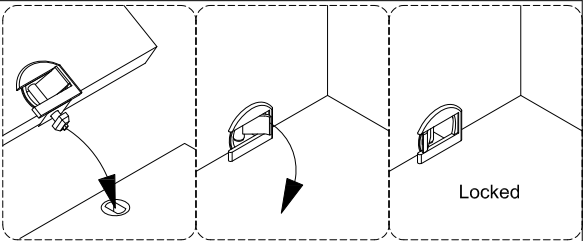
B:		8PCS
I:		8PCS
J:		8PCS
G:		1PCS



ASSEMBLY INSTRUCTION

STEP 4


A:  2PCS

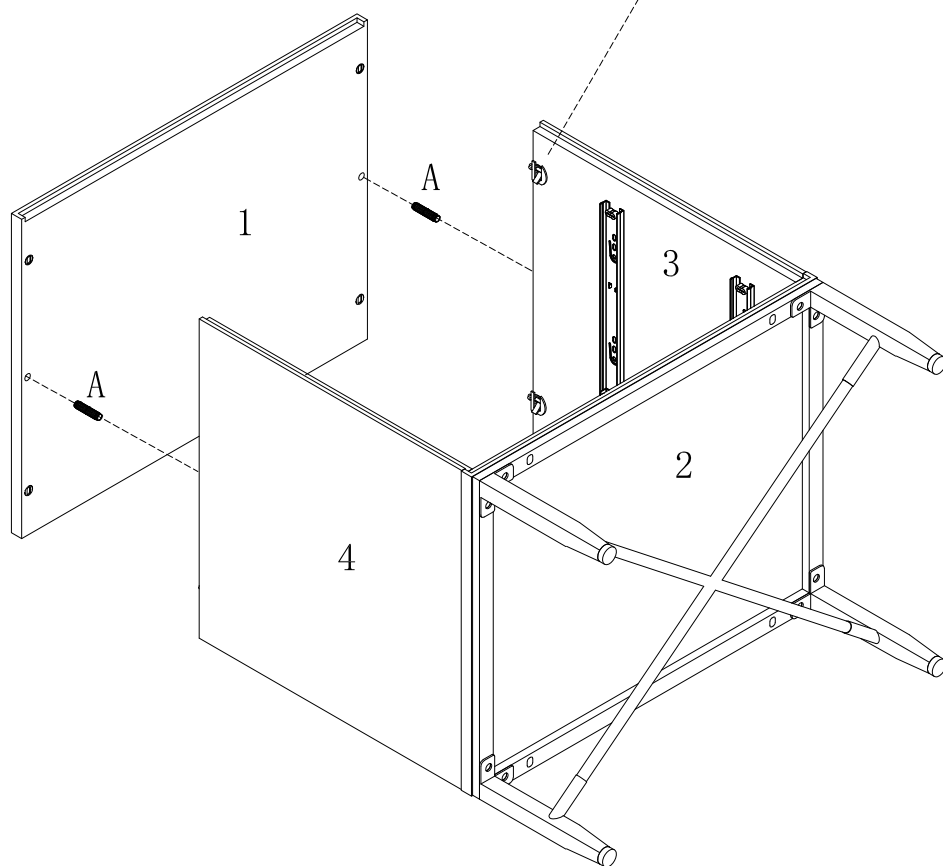
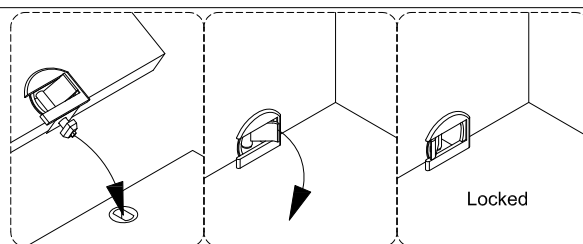


ASSEMBLY INSTRUCTION

Page 9 of 13

STEP 5




A:  2PCS

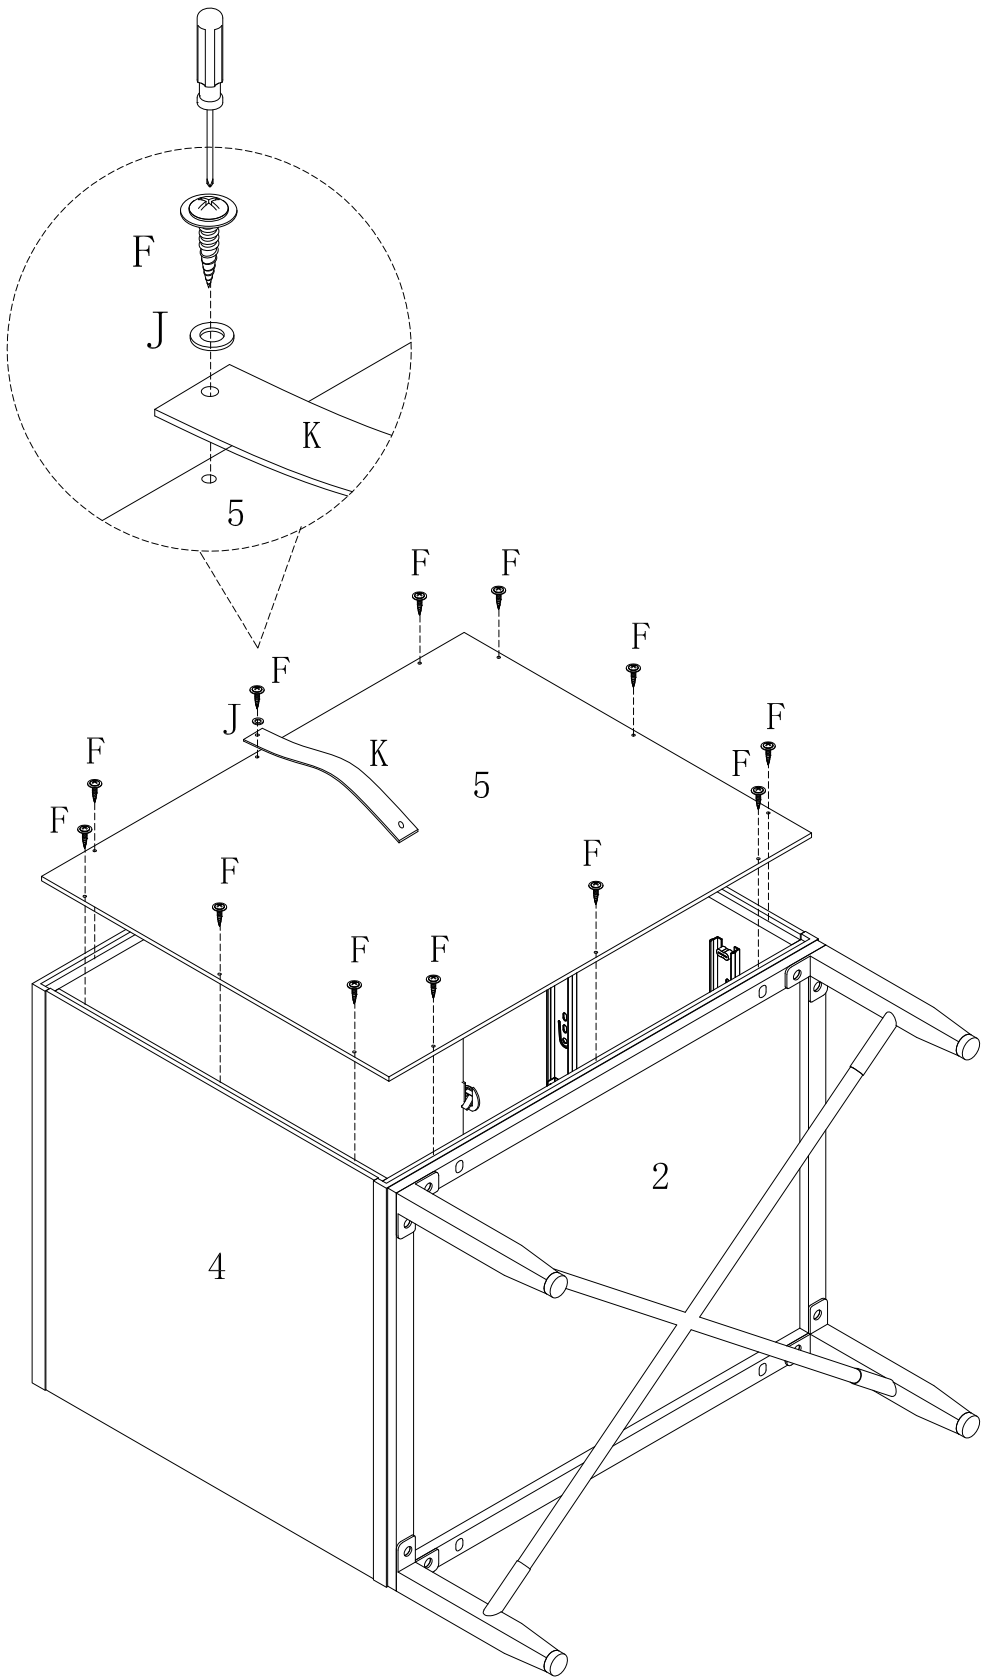


MADE IN CHINA

ASSEMBLY INSTRUCTION

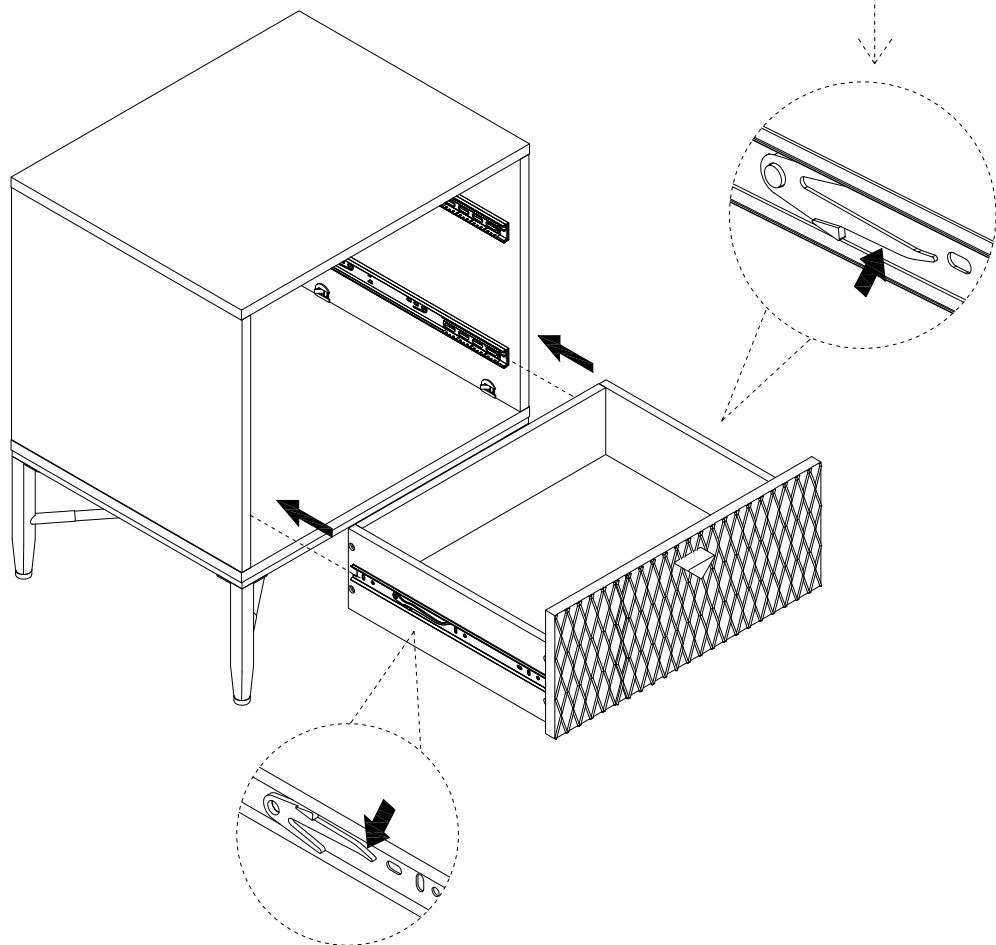
STEP 6

F:		12PCS
J:		1PCS
K:		1PCS



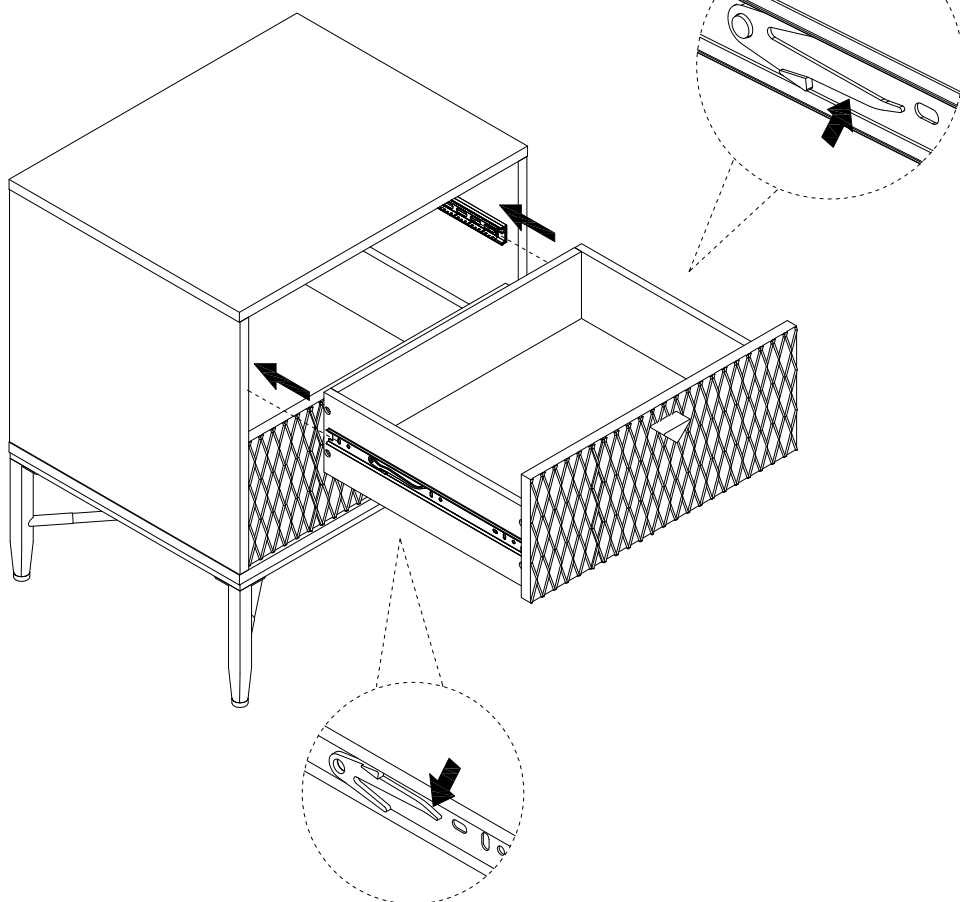
STEP 7

Tip: the front of the drawer, if there is tilt, do not force out, can be adjusted according to these two positions, please refer to the following steps.






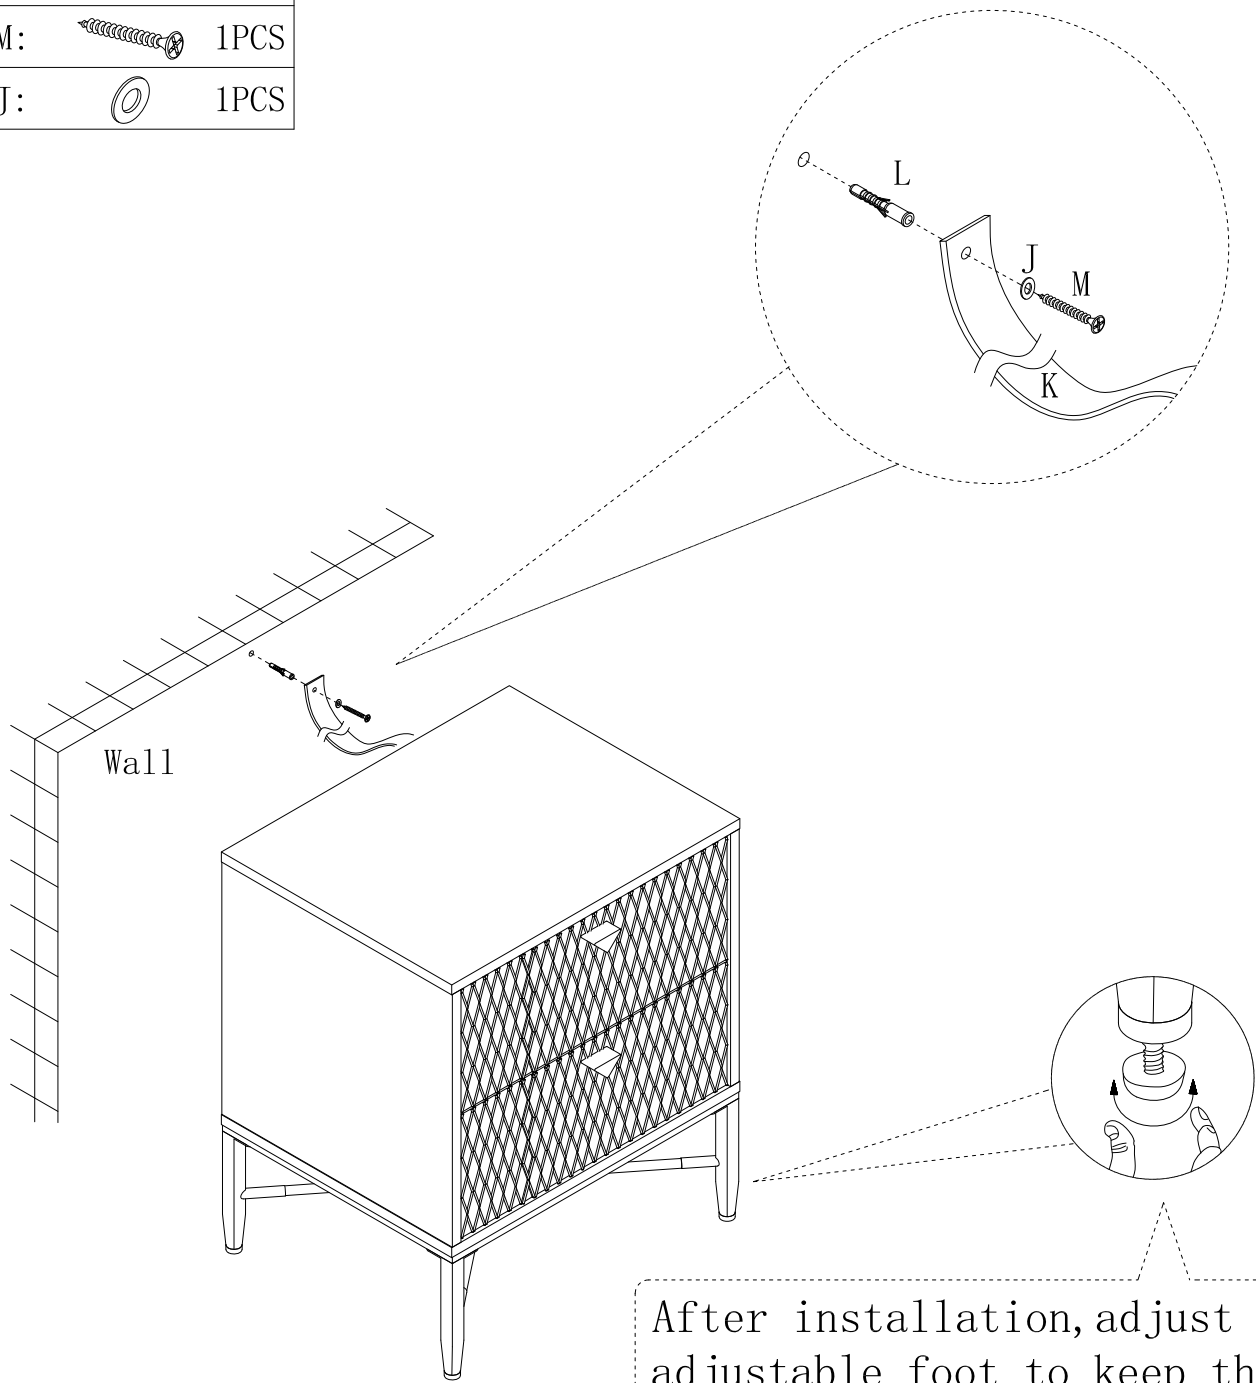
STEP 8

Tip: the front of the drawer, if there is tilt, do not force out, can be adjusted according to these two positions, please refer to the following steps.



STEP 9

L:		1PCS
M:		1PCS
J:		1PCS



After installation, adjust the adjustable foot to keep the cabinet balanced and align the door.