



## Trailer Socket P/N: RV7WST-Wire

Determine suitable mounting point on the tow vehicle.


Locate a grounding point and clean dirt and rust from the area. Ground the white wire.

Connect remaining wires. See diagram below.

*Tip:*  
*Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.*

*A heavy duty flasher may be required to eliminate rapid flashing.*

*Always unplug boat trailer connector before backing trailer into the water.*

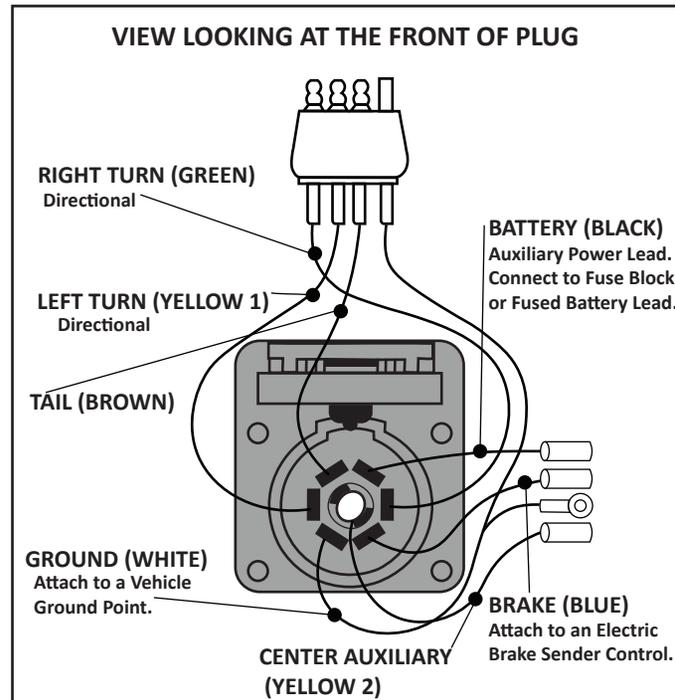

**Questions/Concerns?**  
[www.ACWORKS.com](http://www.ACWORKS.com)  
[info@acconnectors.com](mailto:info@acconnectors.com)  
 414.323.3240 Text  
 414.434.2220 Phone



## Douille de Remorque P/N: RV7WST-Wire

Déterminer le point de montage approprié sur le véhicule de remorquage.


Localisez un point de mise à la terre et nettoyez la saleté et la rouille de la zone. Entré à la terre le fil blanc.

Connectez les fils restants. Voir le diagramme ci-dessous.

*Conseil :*  
*La graisse appliquée régulièrement sur les bornes de câblage de la remorque aidera à prévenir la corrosion.*

*Un clignotant robuste peut être nécessaire pour éliminer le clignotement rapide.*

*Débranchez toujours le connecteur de la remorque de bateau avant de reculer la remorque dans l'eau.*

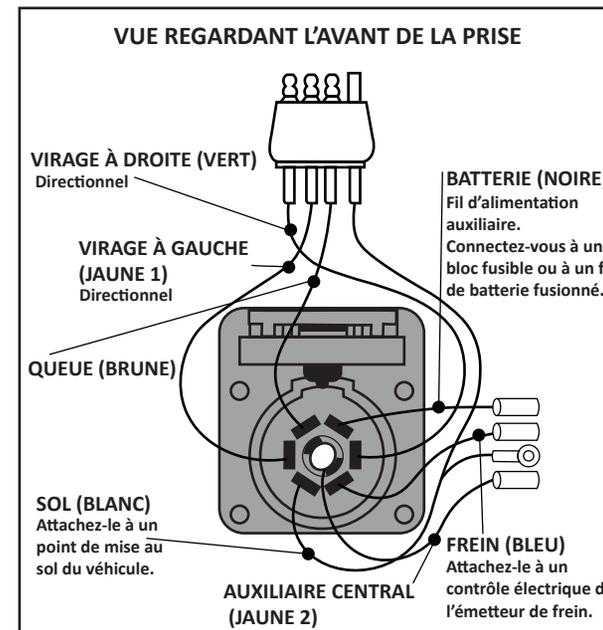

**Des questions ou des préoccupations?**  
[www.ACWORKS.ca](http://www.ACWORKS.ca)  
[info@acconnectors.com](mailto:info@acconnectors.com)  
 414.323.3240 Text  
 414.434.2220 Phone