






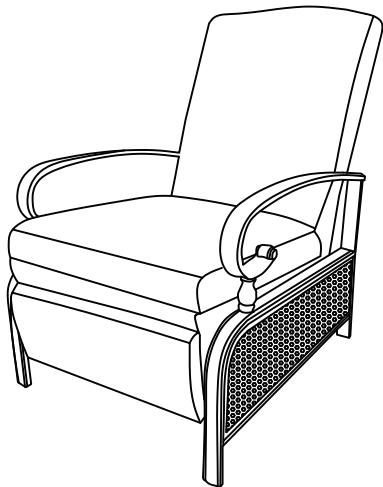





OUTDOOR PATIO STEEL RECLINER CHAIR ASSEMBLY MANUAL





ASSEMBLY INSTRUCTIONS


- Prior to assembly, make sure you lay out and identify all the parts listed below in the parts list.
- Tighten all nuts and bolts securely. All bolts should be hand tightened before use. Never use power tools or excessive force during assembly and tightening of bolts.
- Should you experience any difficulty during assembly or if any parts is missing or damaged:
Contact our customer service by email: info@kozyard.com or call toll free: 866-355-0018.

Part list


Part	Description	Qty
A	 Armrest	1
B	 Armrest	1
C	 Back	1
D	 Seat	1
F	 Connecting bar	1
G	 Wahser	4
H	 Cushion	1
I	 Allen key	1

Part	Description	Qty
J	 M6*15 Screws	8
L	 M6*28 Screws	4


- 1.** Connect Back (Part C) to Seat (Part D) using Screws(J) as shown in diagram.

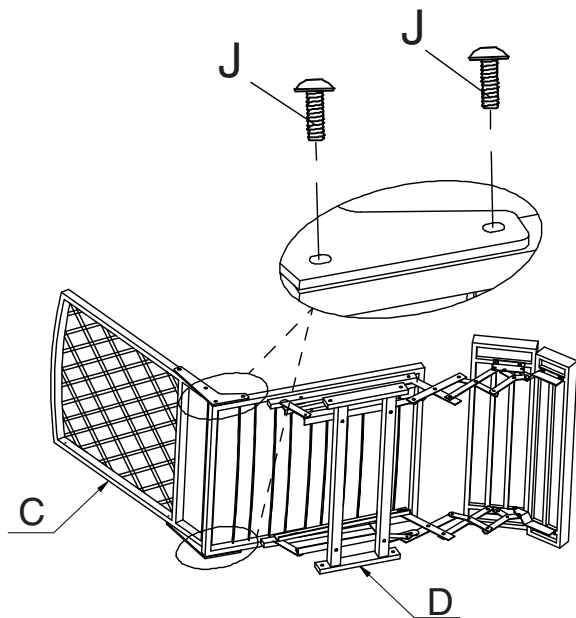


- 2.** Affix Armrest (Part A) to Seat (Part D) using Washer (Part G) and Screws (L).

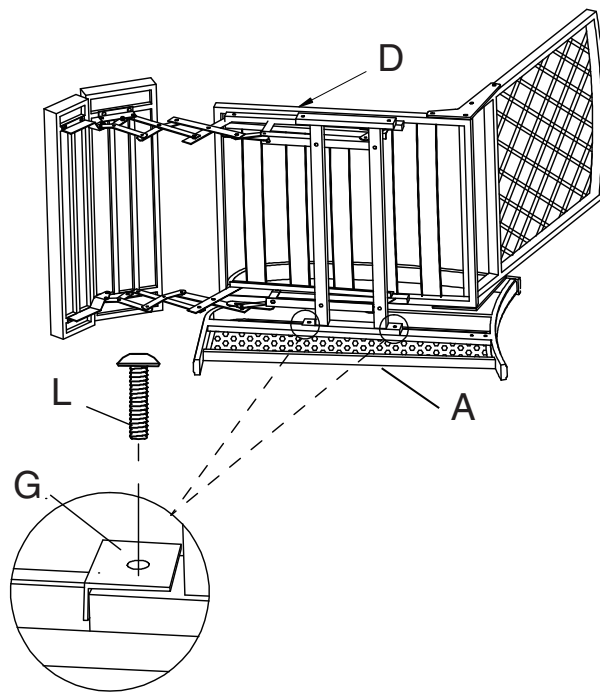


3. Connect Armrest (Part B) to Seat (Part D) using Washer (Part G) and Screws(J) as shown in diagram.

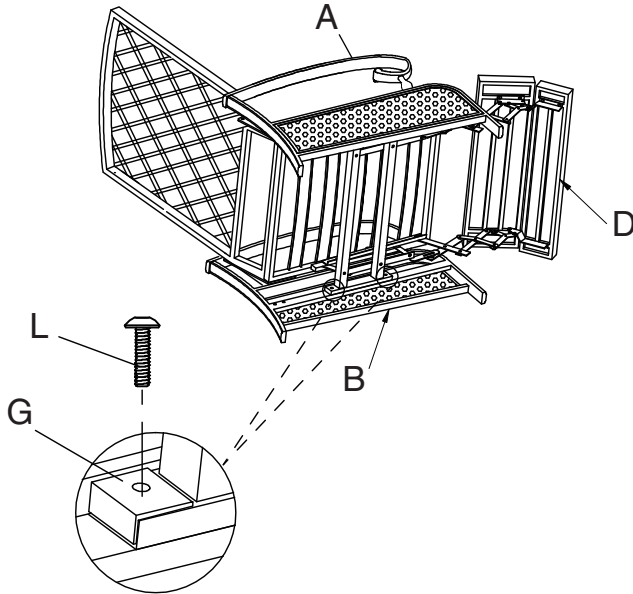

4. Affix Connecting bar (Part F) to Seat (Part D) using Screws(J) as shown in diagram.

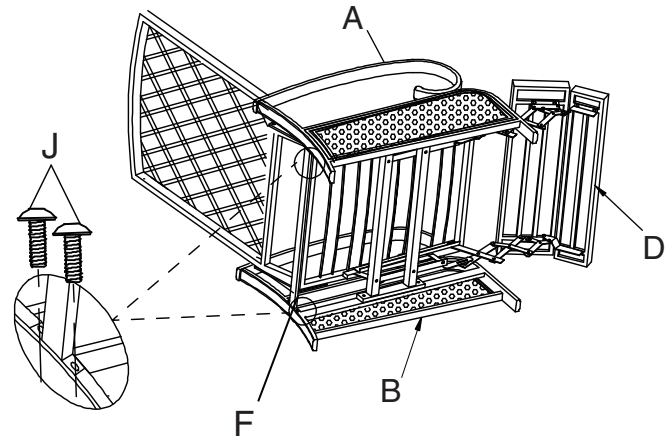

5. Put Cushion (Part H) to the complete Frame.

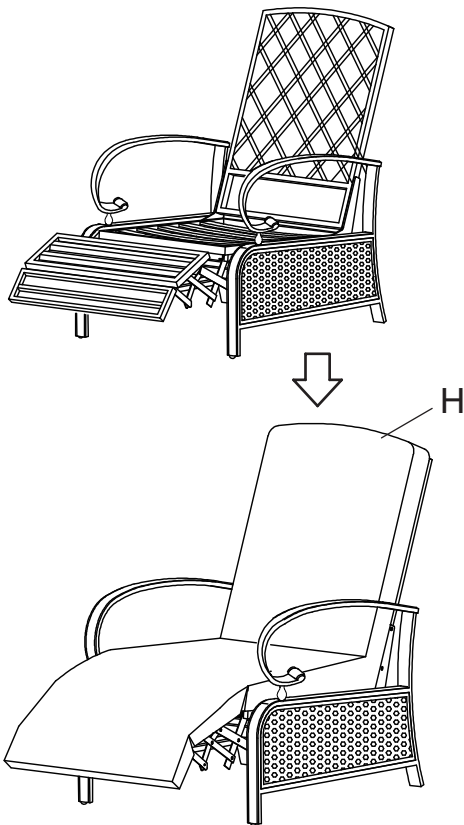

Enjoy Cozy Life!

SUPPORT:

Toll free: 866-355-0018

www.kozyard.com

email: support@kozyard.com

SOCIAL MEDIA:



Follow us on Instagram

www.instagram.com/kozyard

Upload a picture of your Kozyard product in your home, with the hashtag #kozyard

6. Finally, ensure that all screws are securely tightened before using the equipment on level ground.