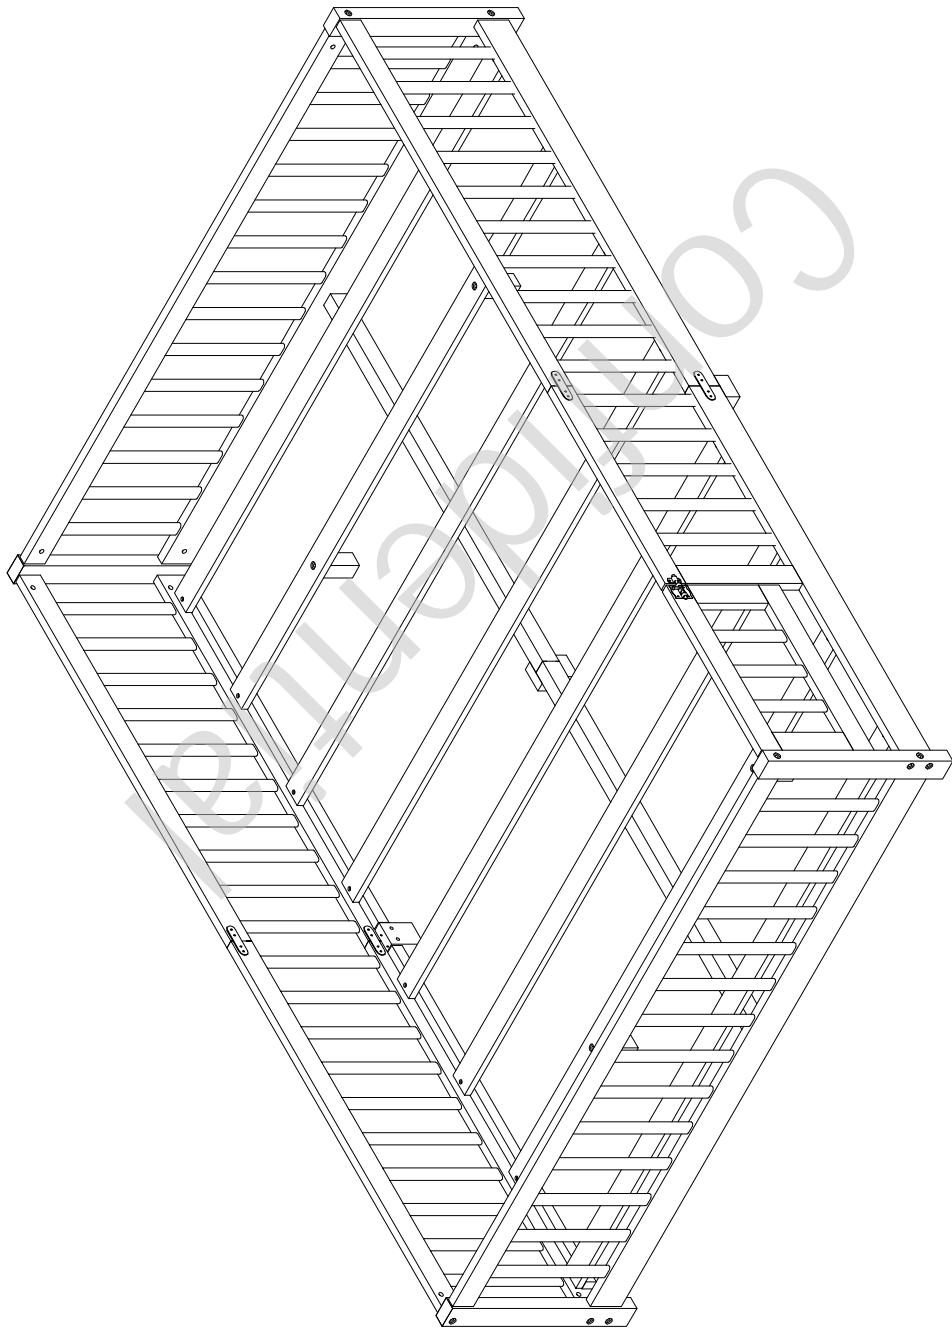


ASSEMBLY INSTRUCTION

SKU CODE: (BW00051)

PAGE 1 OF 15

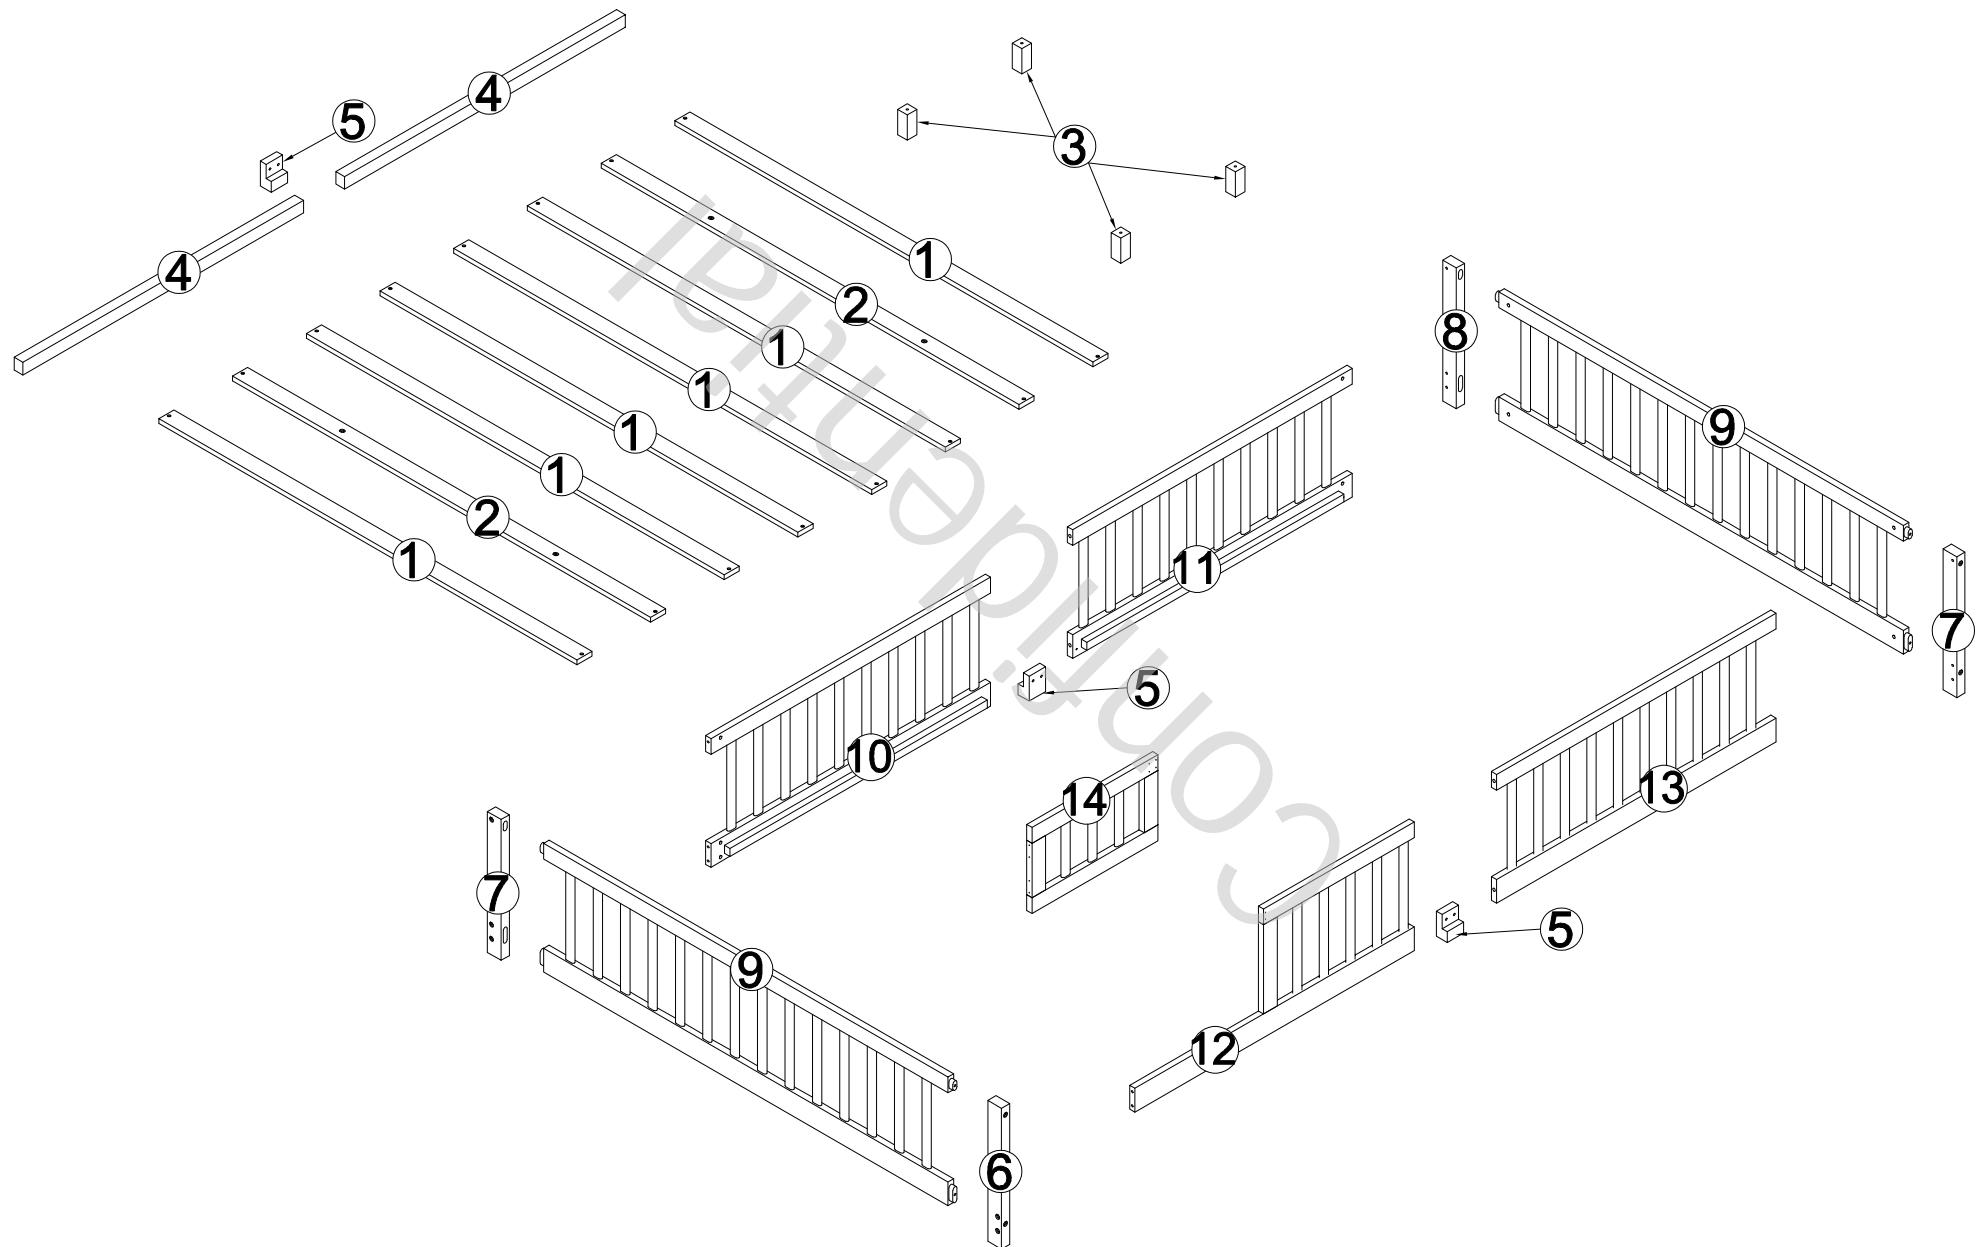


IMPORTANT NOTE

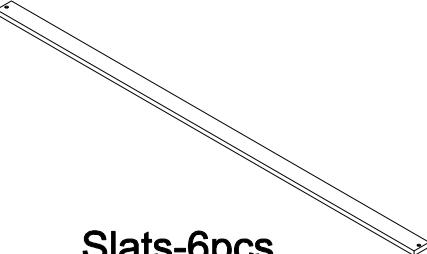
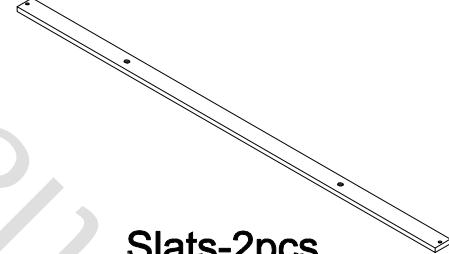

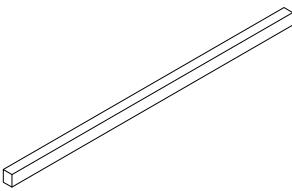


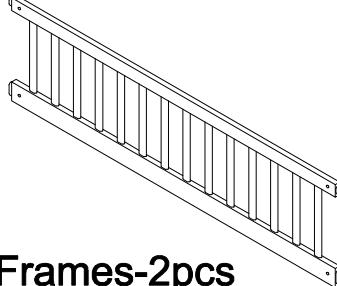
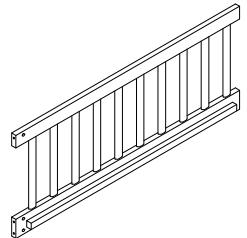
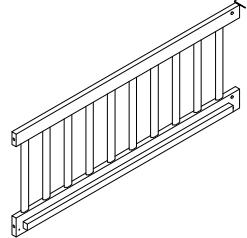
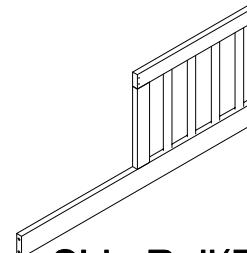
- 1.PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- 2.BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- 3.DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

ASSEMBLY INSTRUCTION

PAGE 2 OF 15



PART LIST (BW00051)

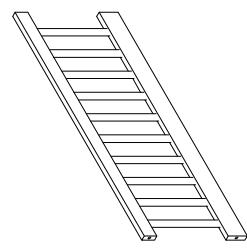
1		2		3	
4		5		6	
7		8		9	
10		11		12	

ASSEMBLY INSTRUCTION

PAGE 4 OF 15

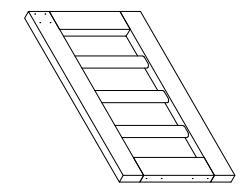
PART LIST (BW00051)

13



Side Rail(Front)-1pc

14




Door Frame-1pc

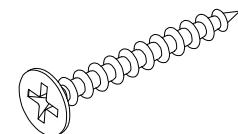
HARDWARE LIST (BW00051)

A

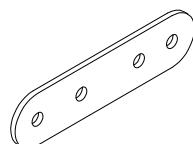
Screws 1/4"x35 mm
6pcs

B


Ø10 x 40 mm
Wood dowel 4pcs

C

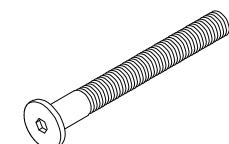
M3 x 15mm
Wood Screws 42pcs

D

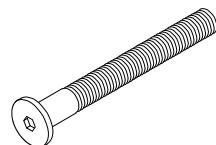
Steel Bracket
8pcs

E

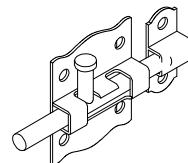
Ø1/4" x 13 mm
Horizontal-Hole bolts 19pcs

F

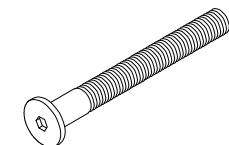
Ø1/4" x 90 mm
Hex-Head bolts 8pcs

G

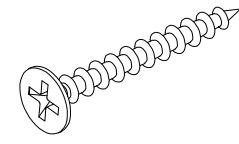
Ø1/4" x 80 mm
Hex-Head bolts 11pcs

H

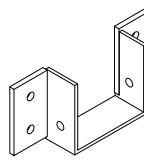
Catch(20x38x38)
1pc

K

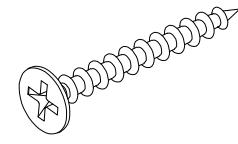
Ø1/4" x 30 mm
Hex-Head bolts 4pcs

L

M4 x 20mm
Wood Screws 8pcs

M

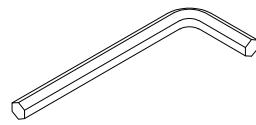
Steel Bracket
2pcs

N


M4 x 30mm
Wood Screws 16pcs

HARDWARE LIST (BW00051)

P

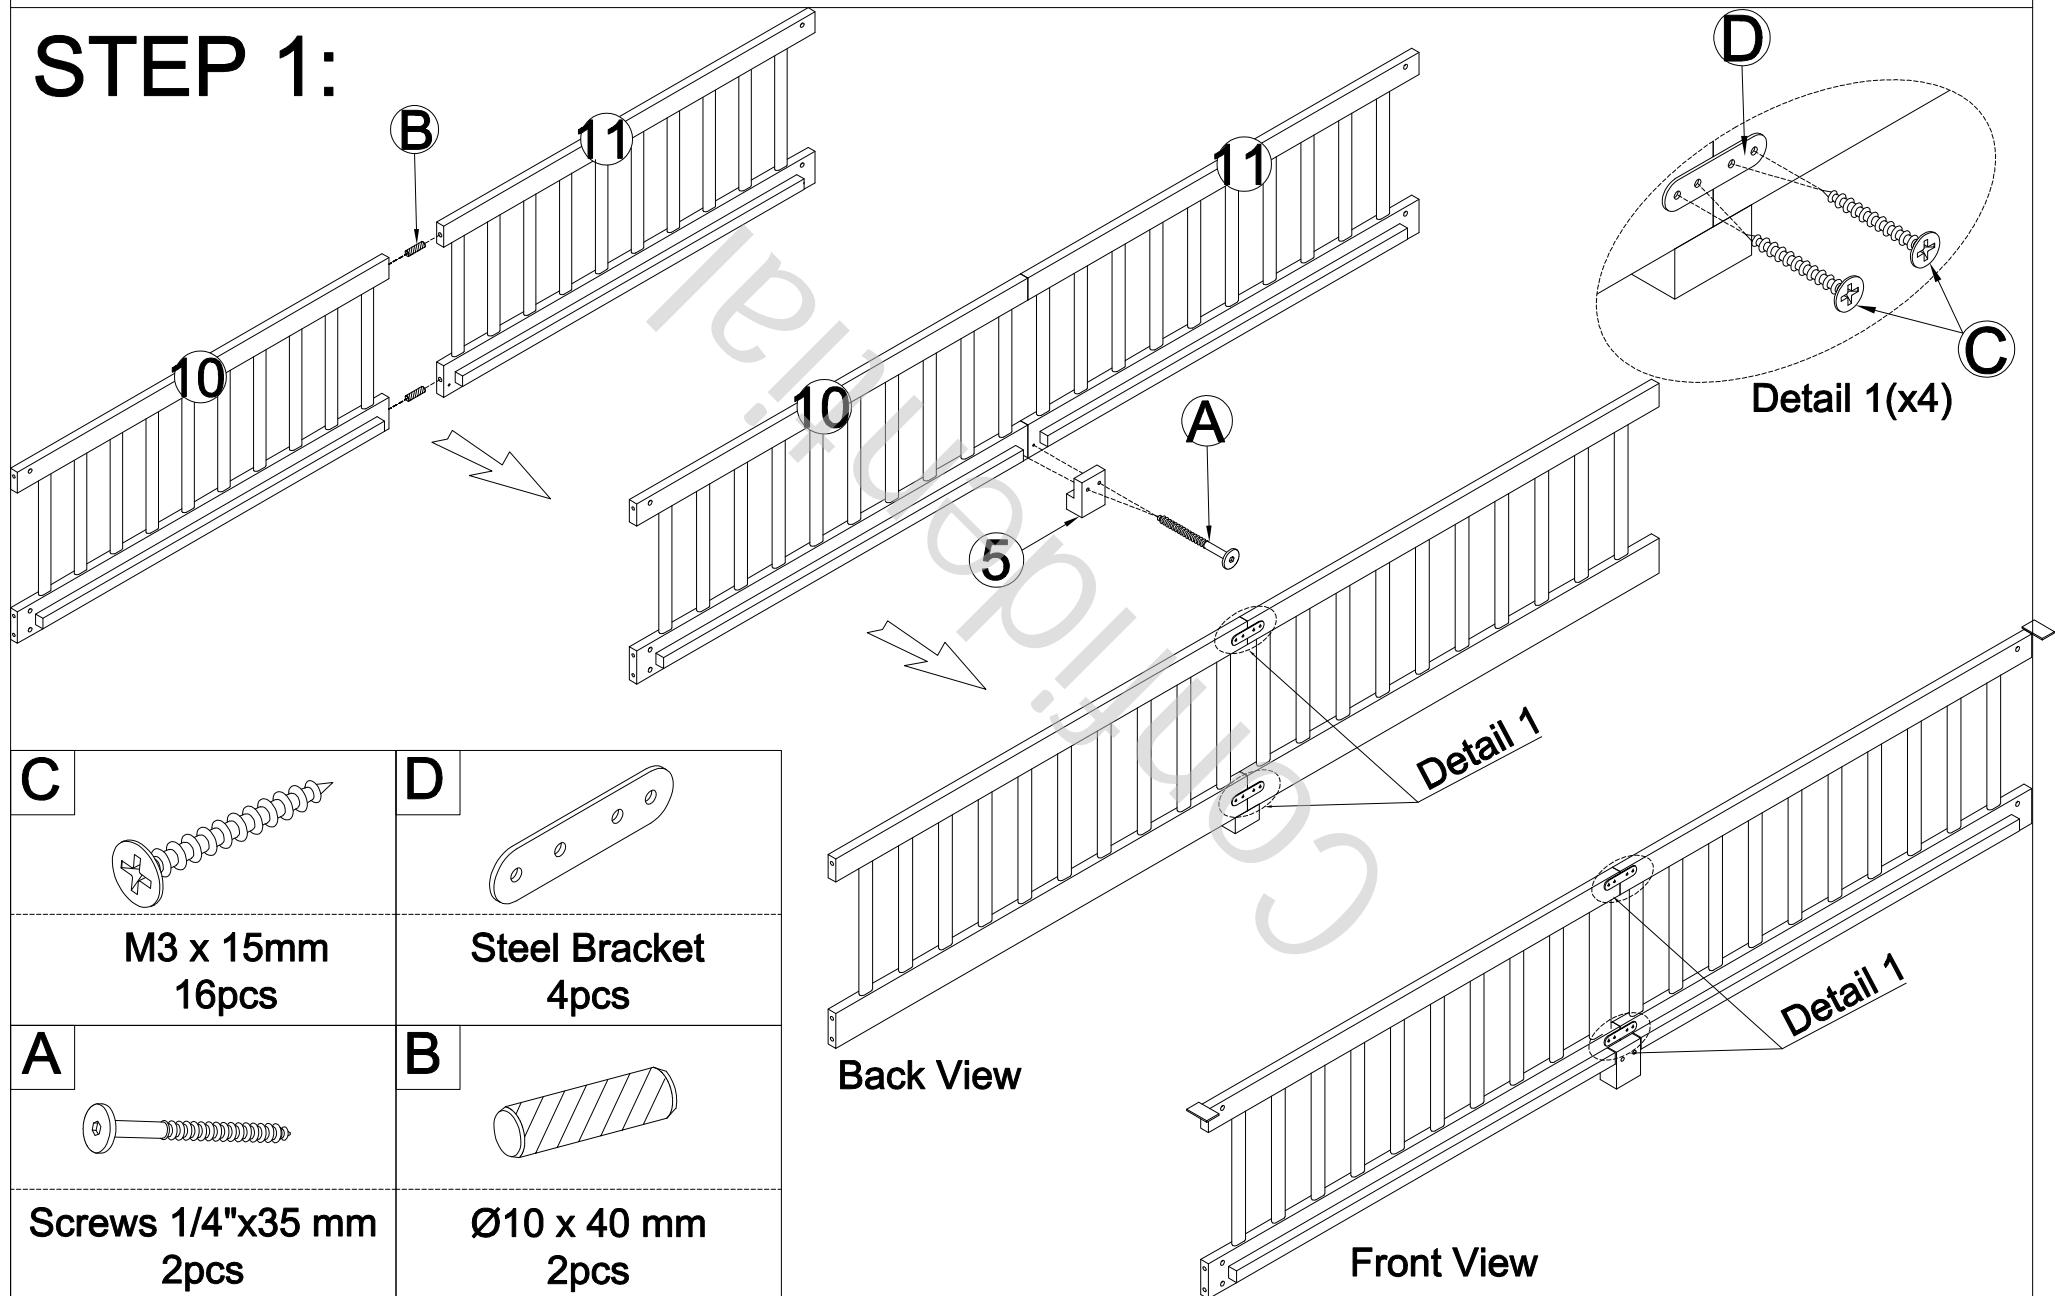


Allen Key 1pc

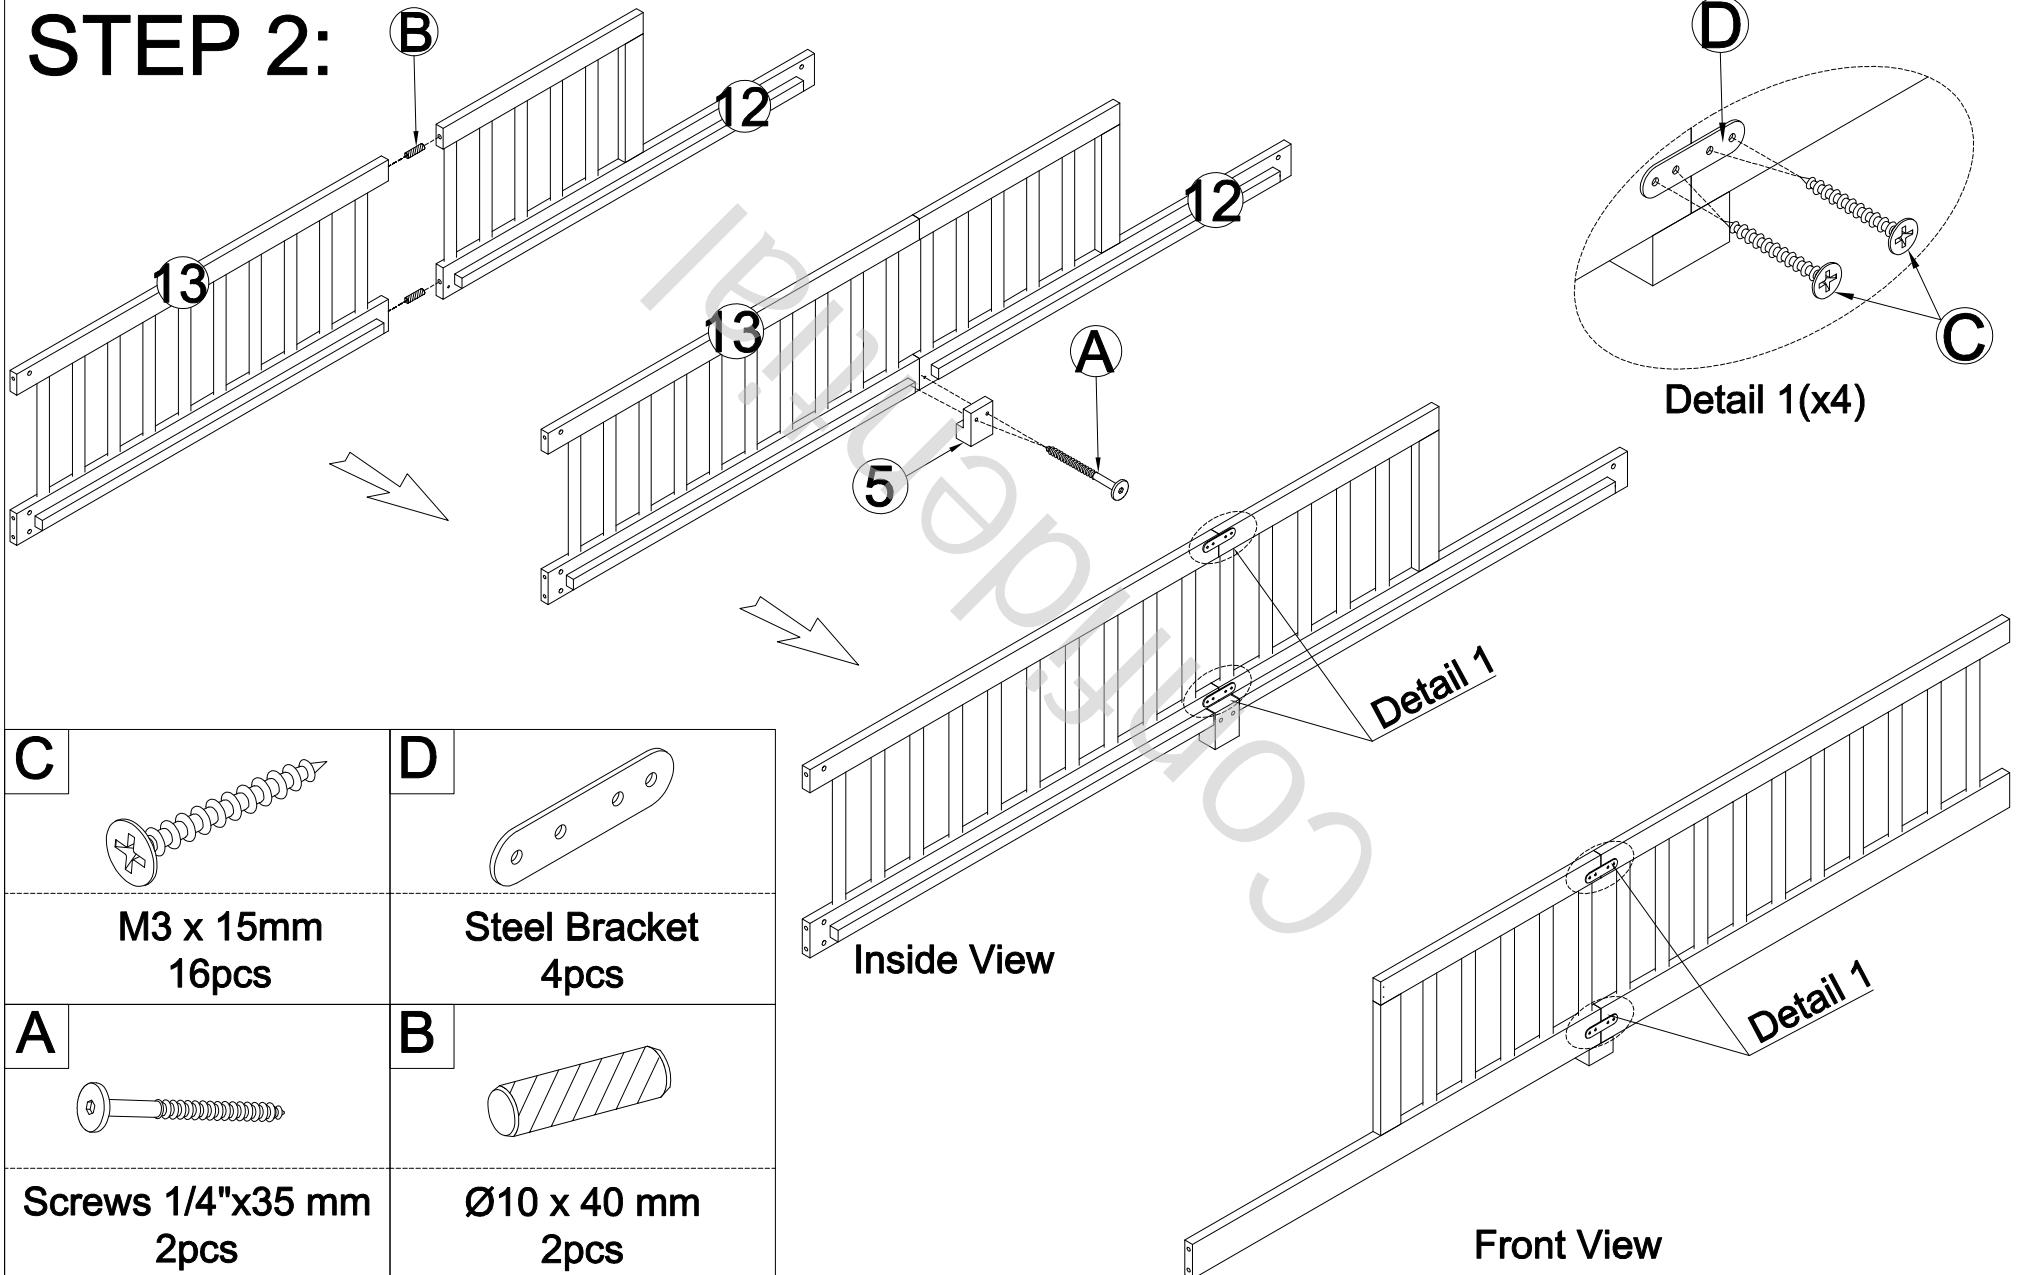


Assembly Tools Required (Not Included)

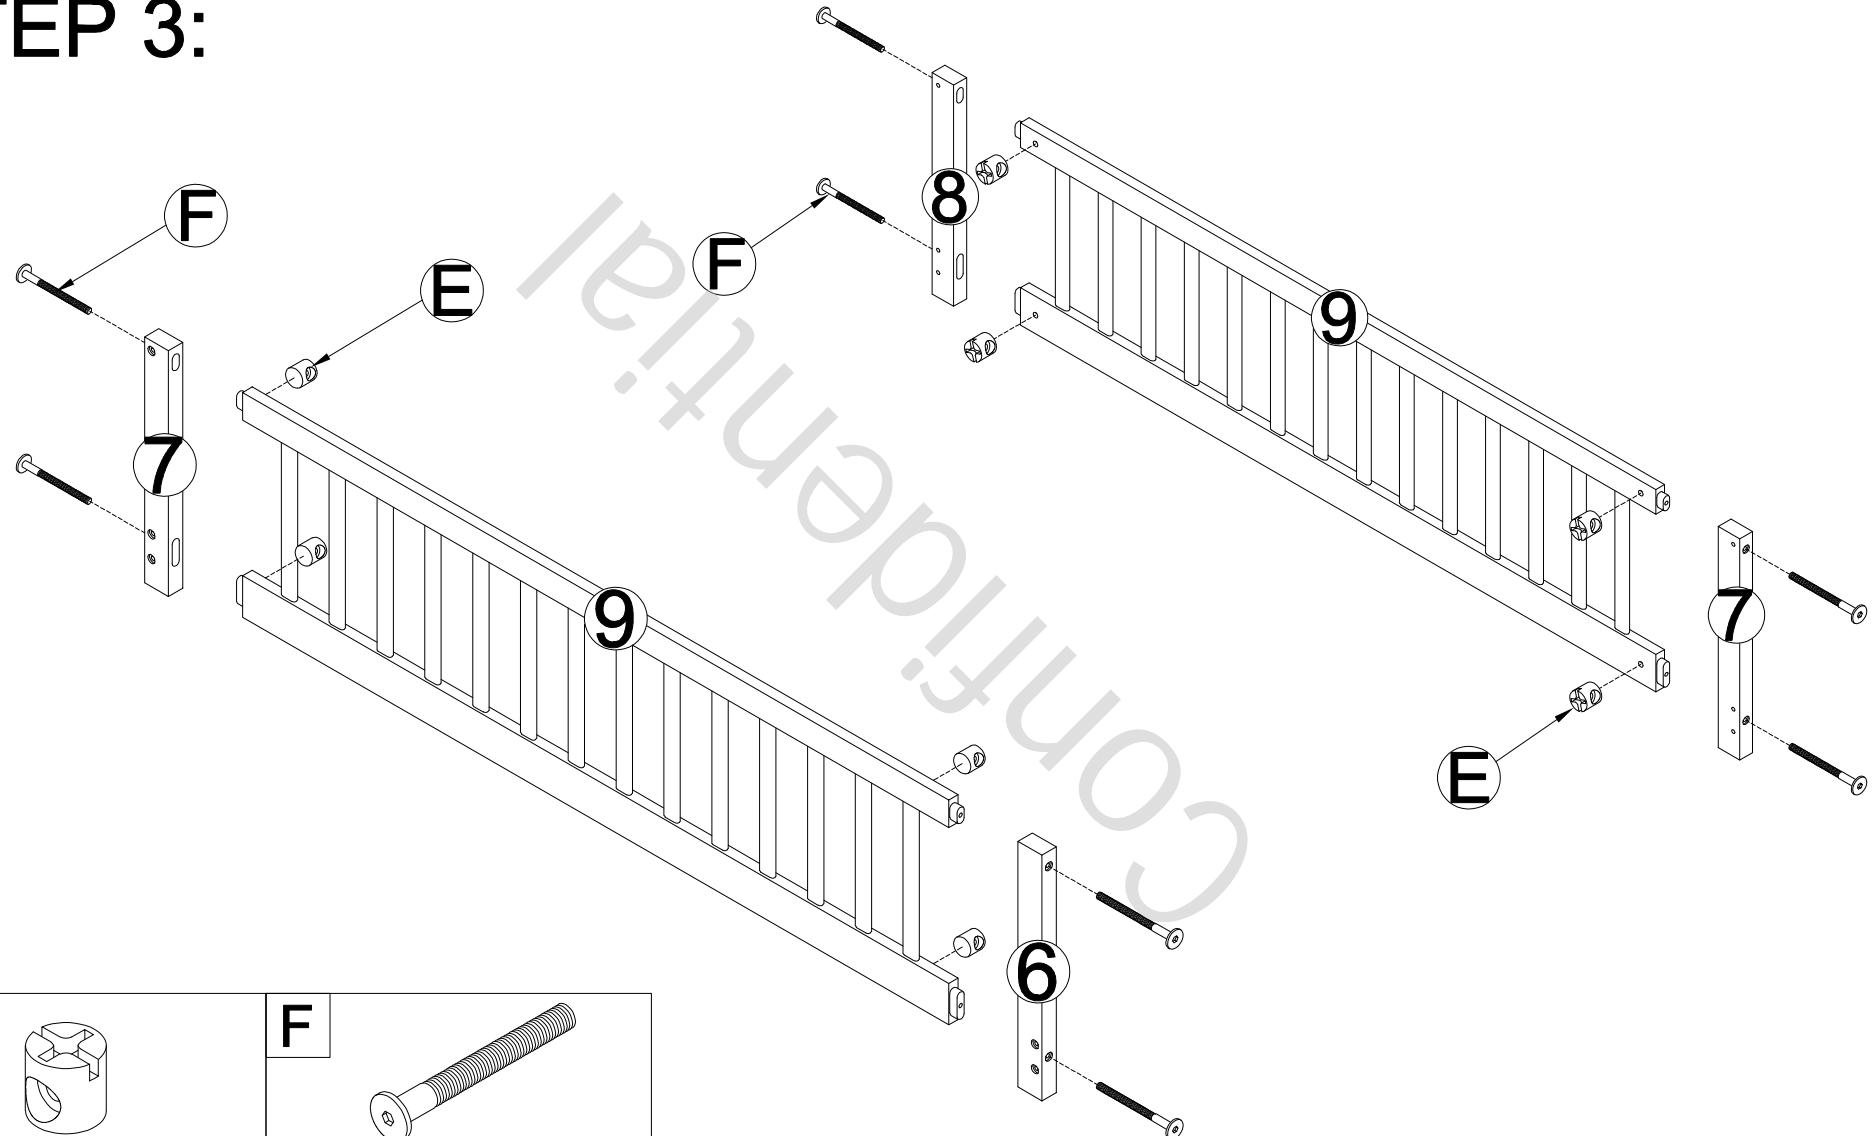
STEP 1:



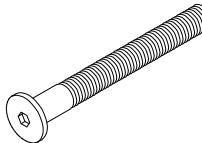
STEP 2:



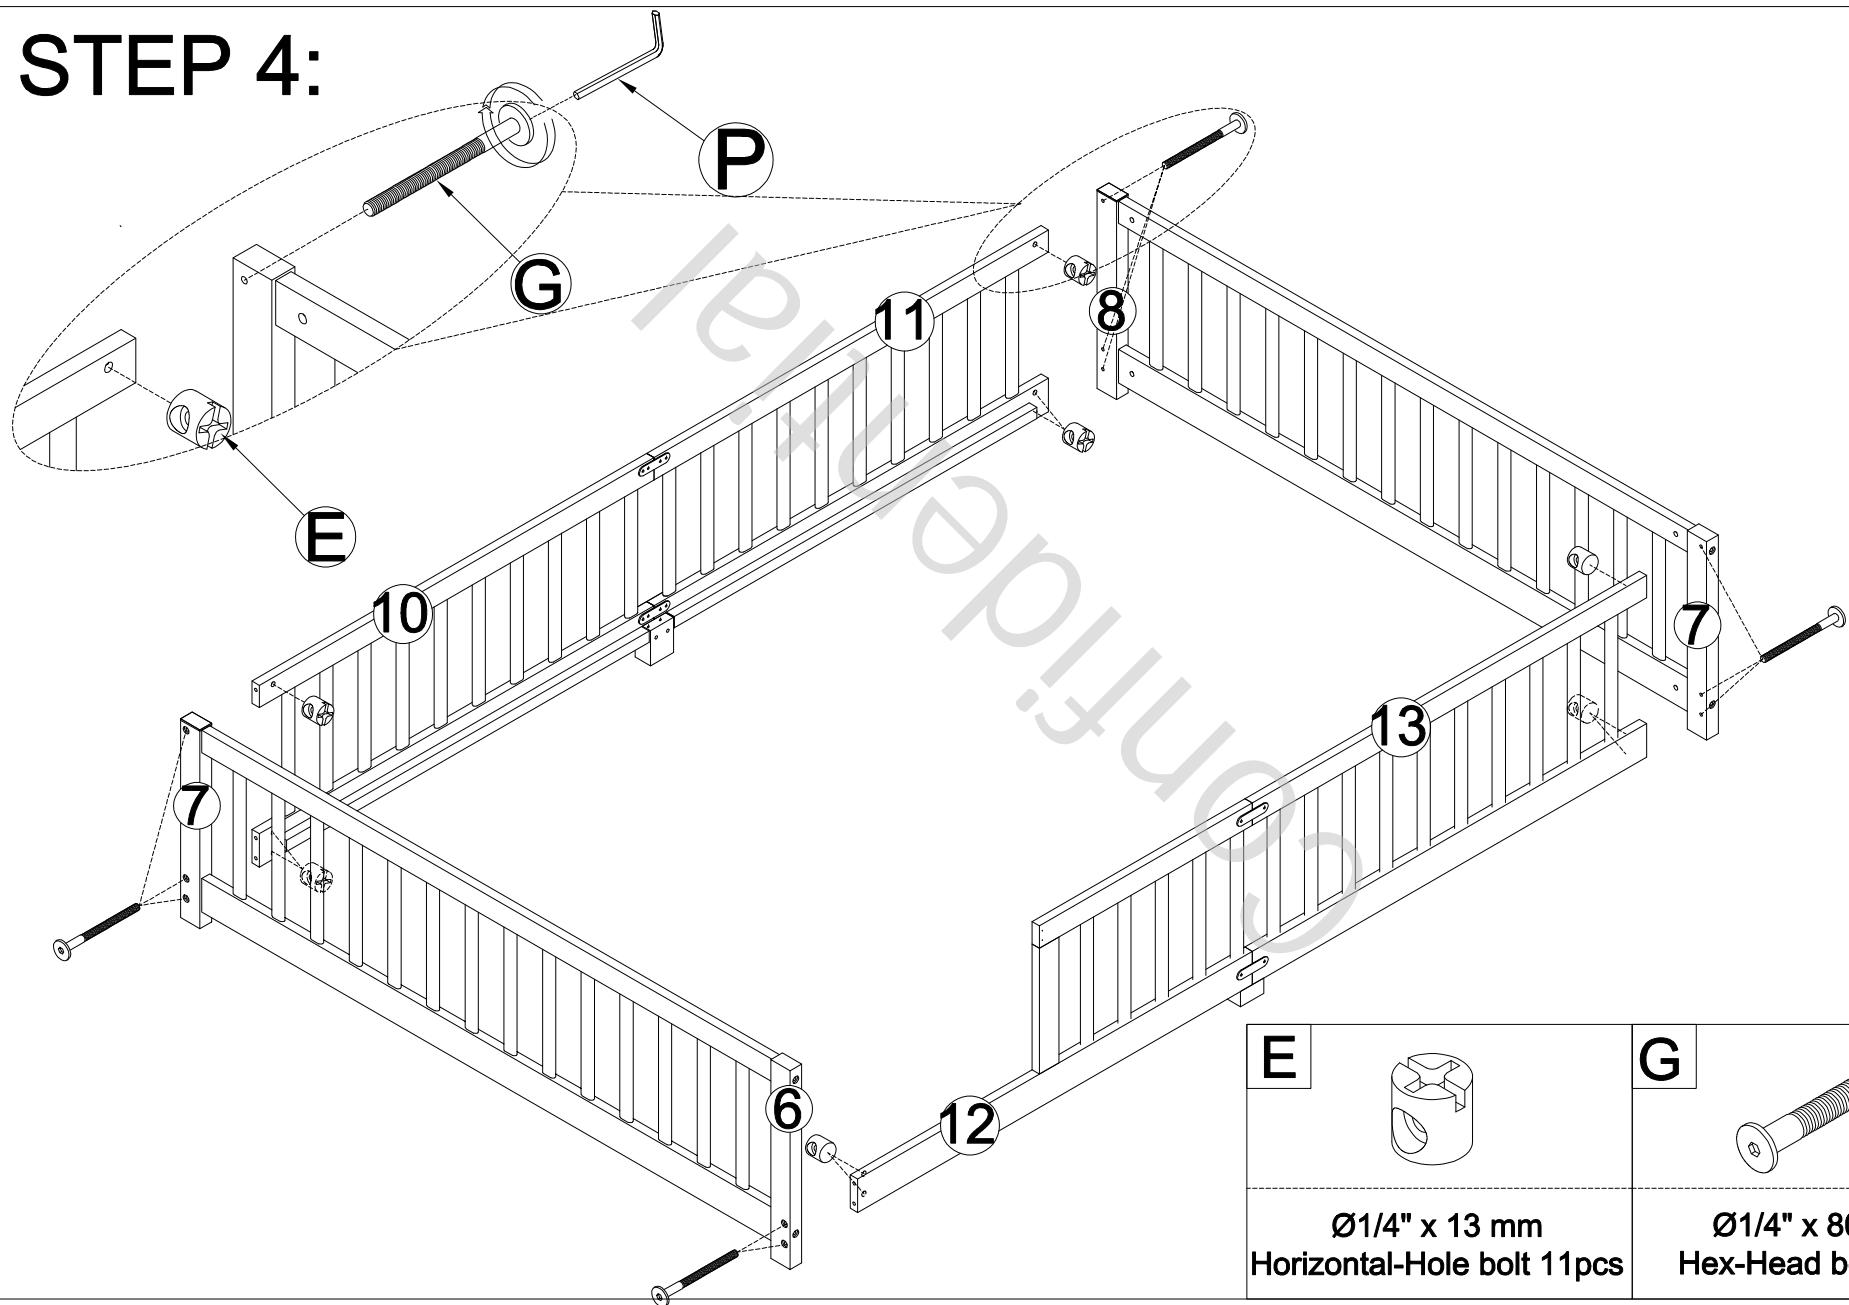
STEP 3:



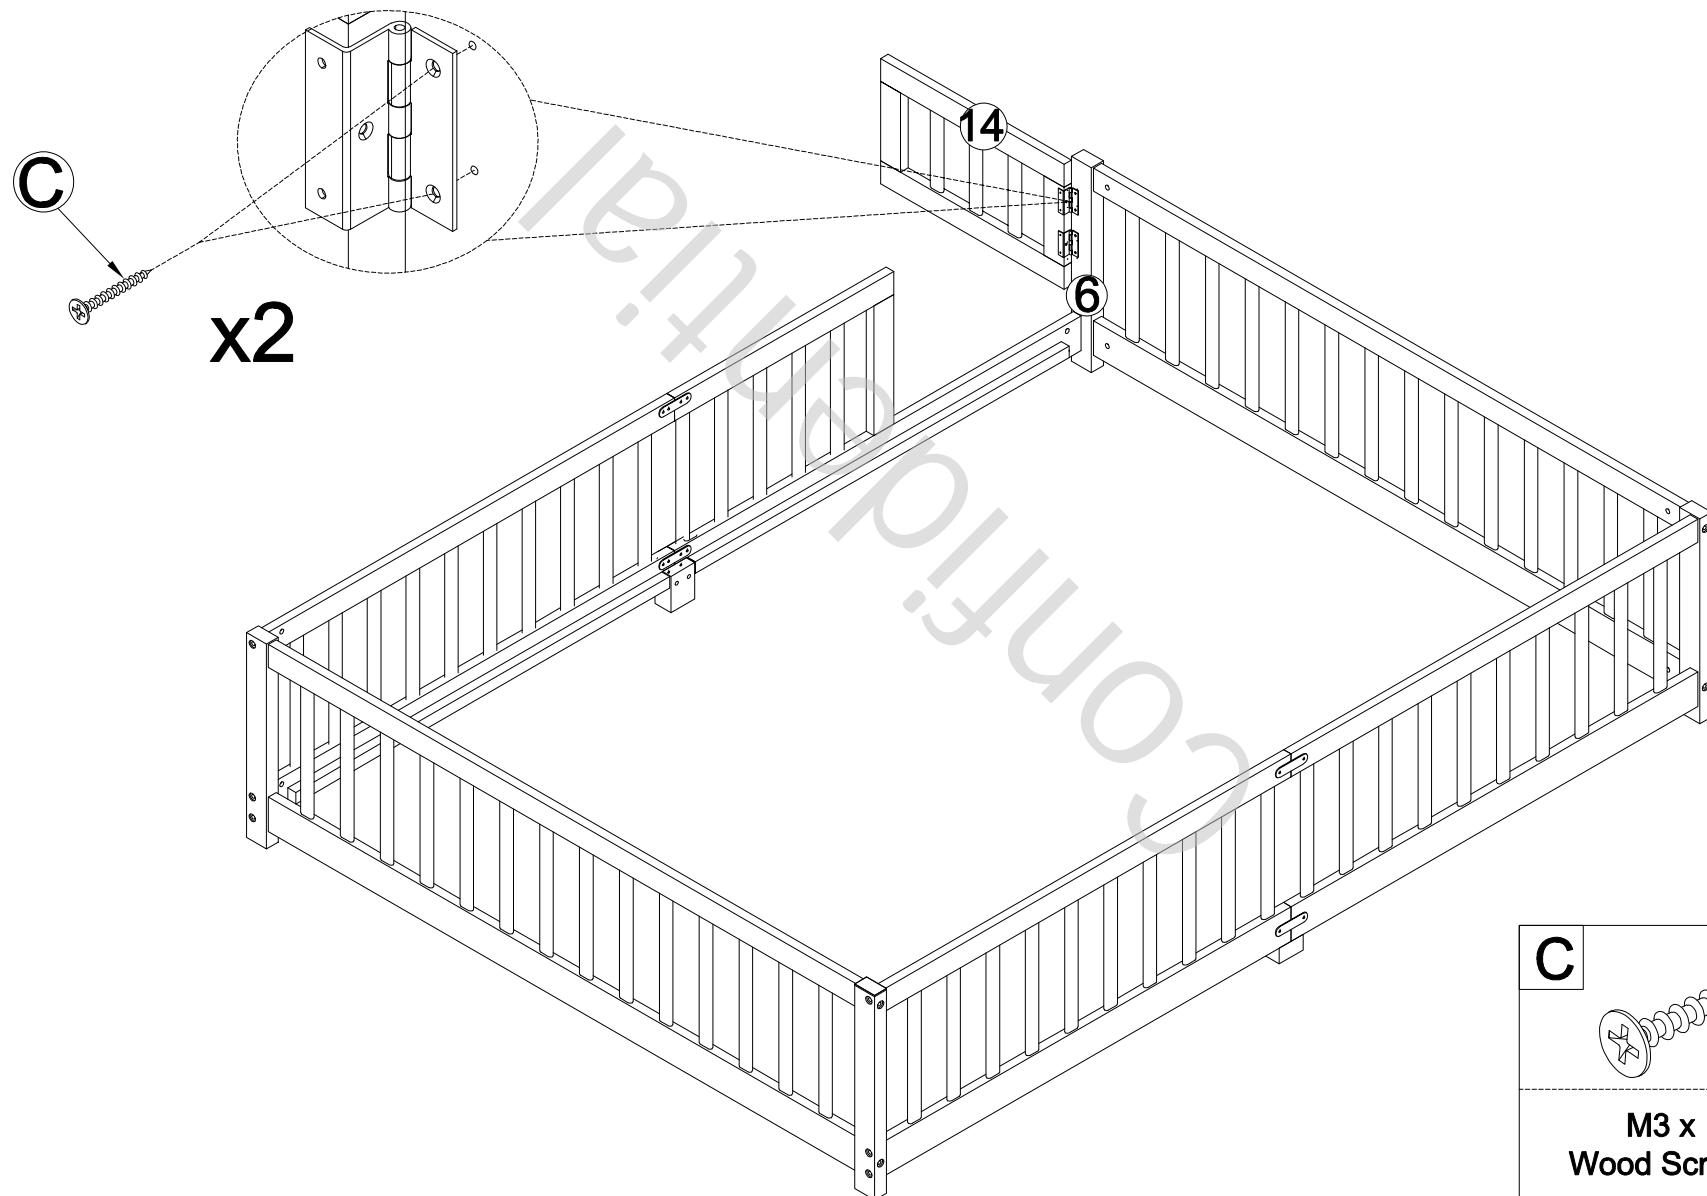
E	
$\varnothing 1/4" \times 13\text{ mm}$ Horizontal-Hole bolts 8pcs	

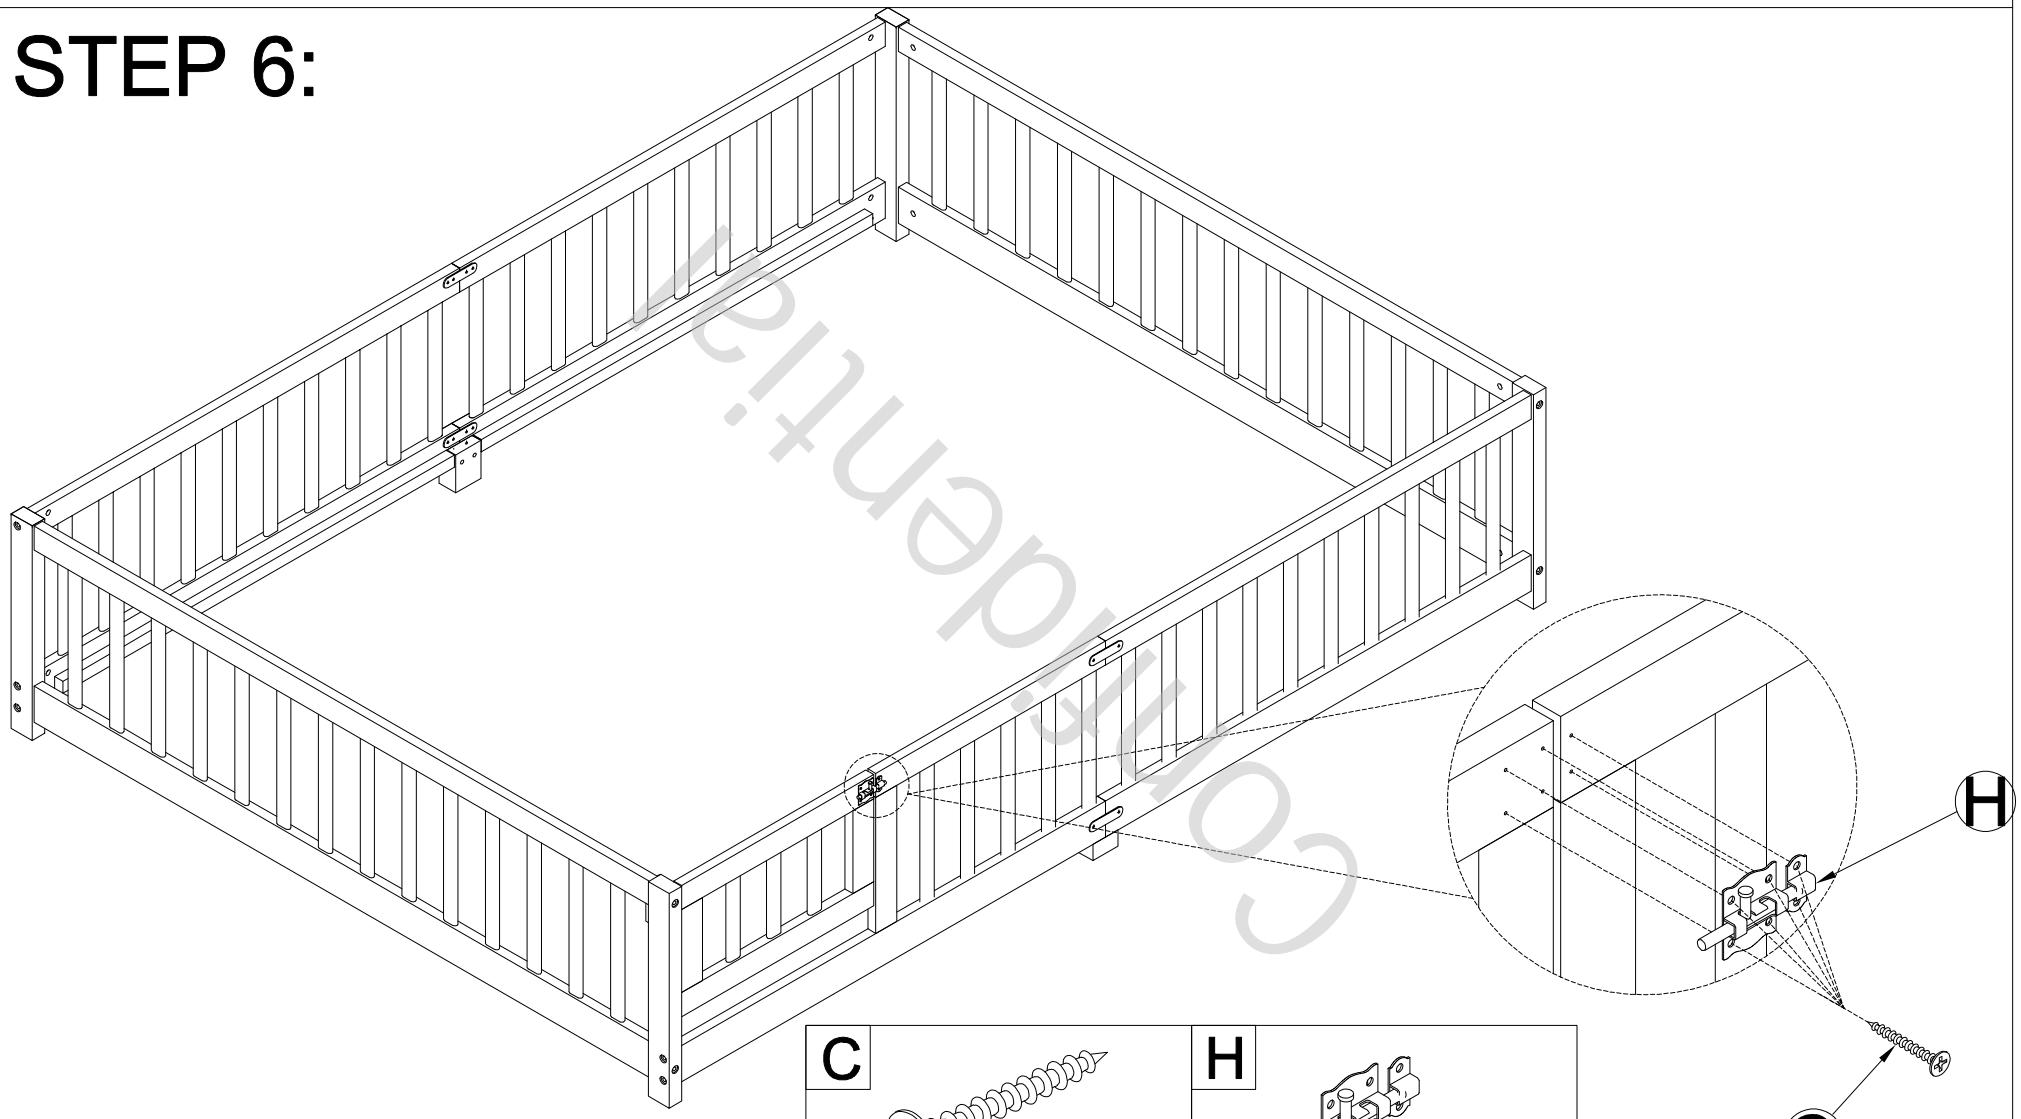
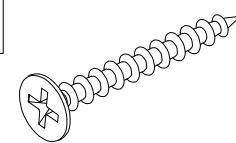
F	
$\varnothing 1/4" \times 90\text{ mm}$ Hex-Head bolts 8pcs	

STEP 4:




STEP 5:



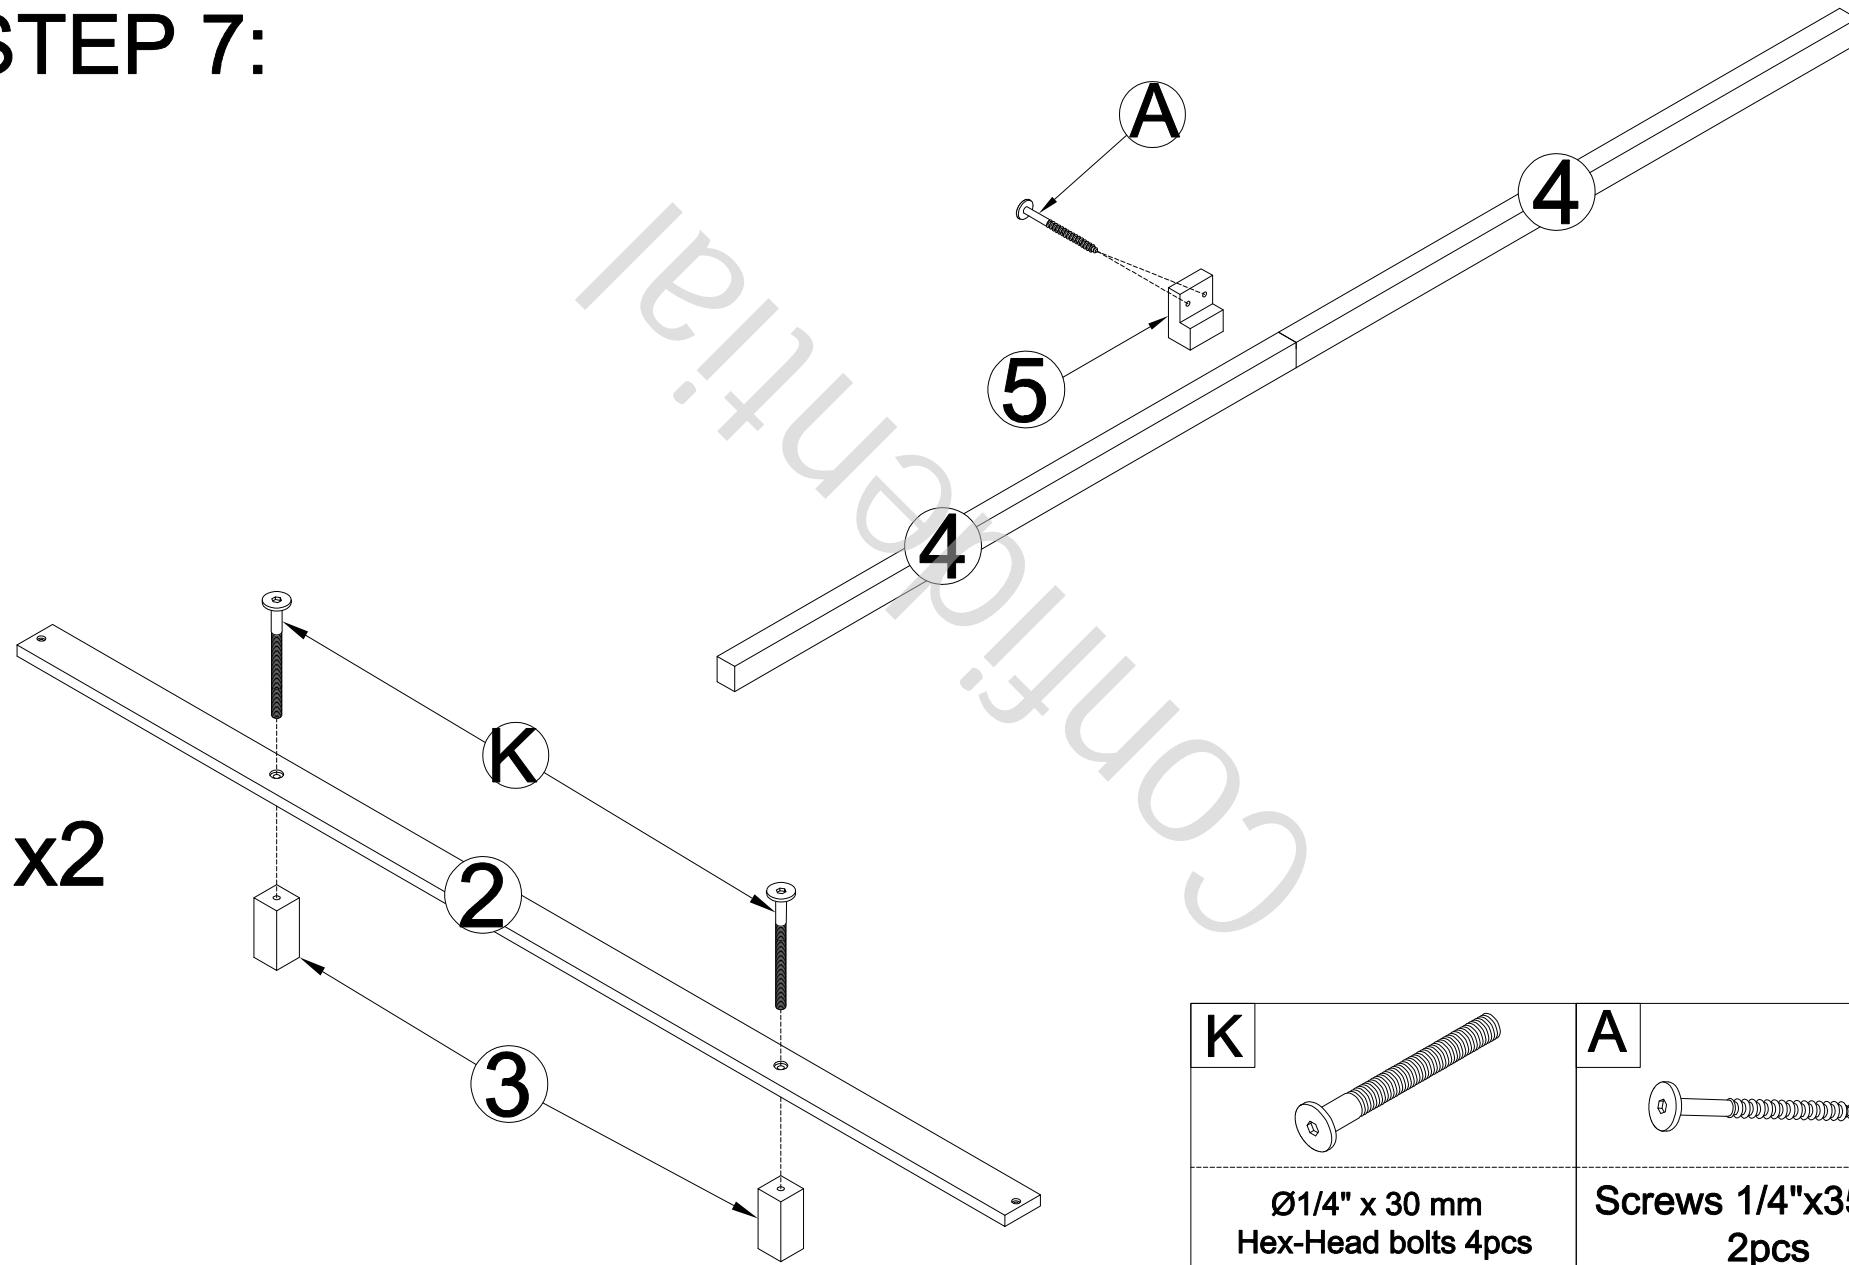
STEP 6:**C**

M3 x 15 mm
Wood Screws 6pcs

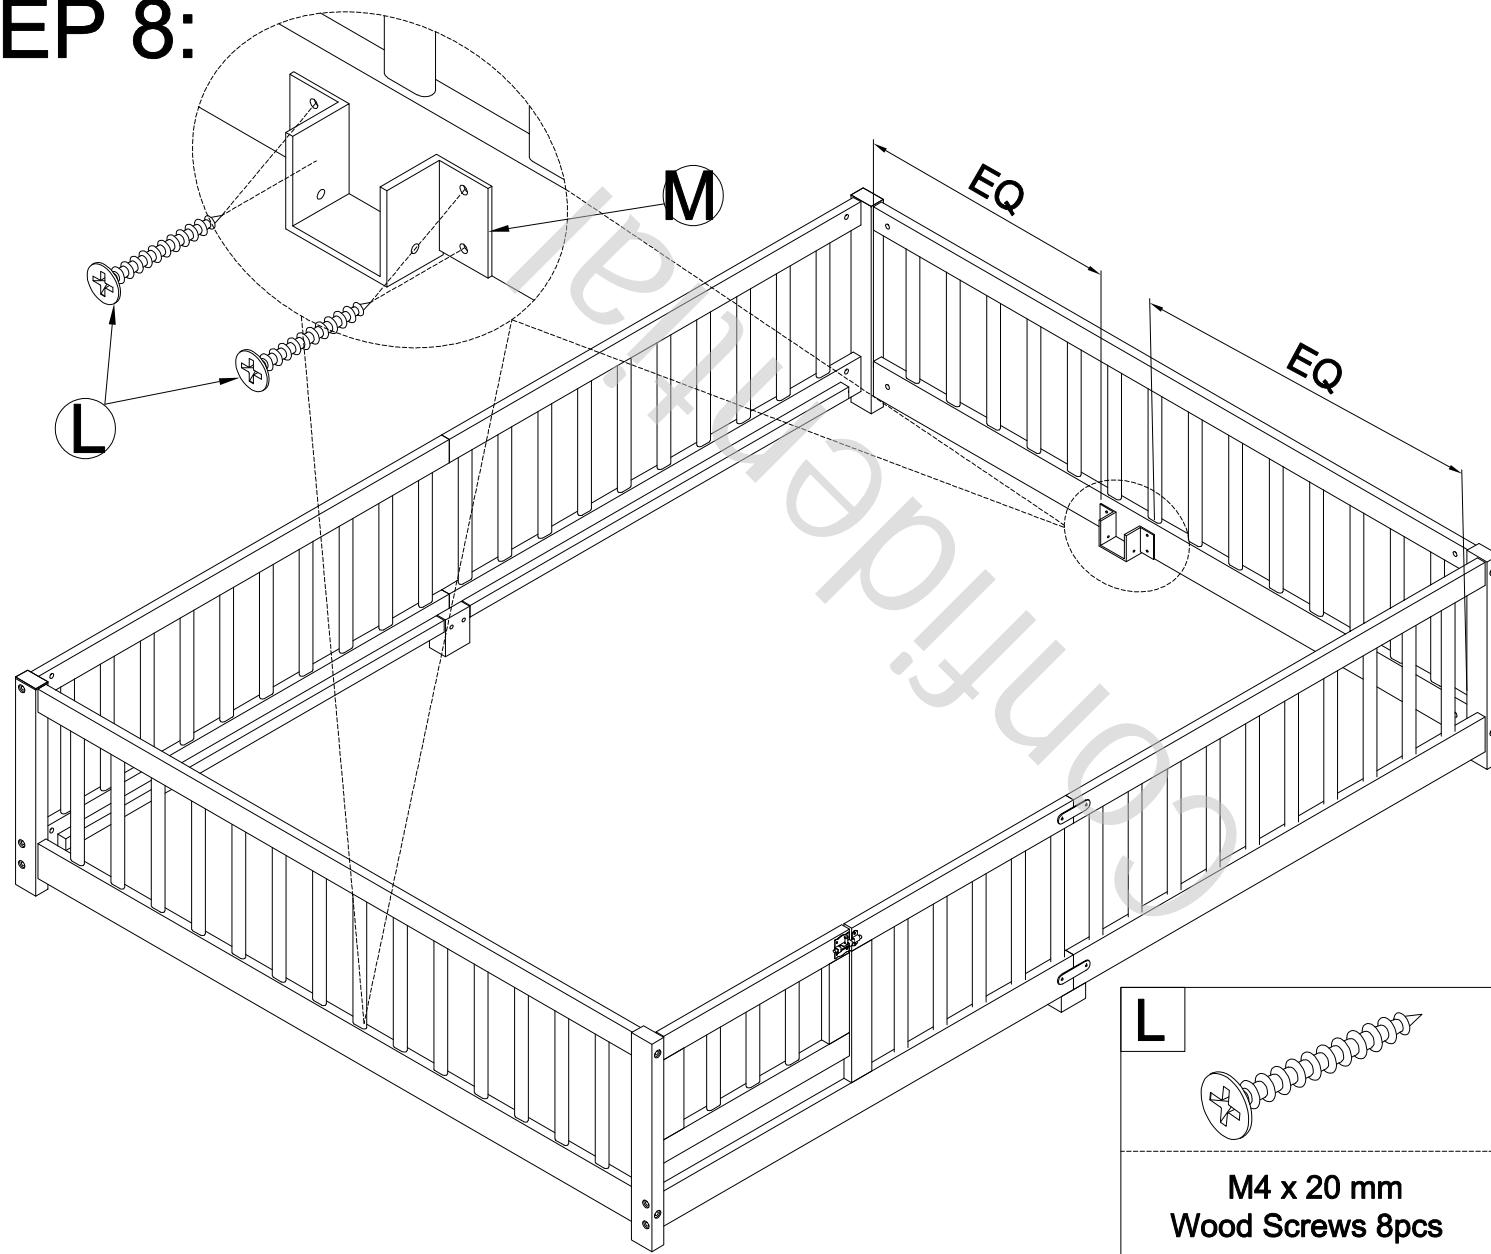
H

Catch(20x38x38)
1pc

STEP 7:



STEP 8:



STEP 9:

