

## PANEL INSTALLATION GUIDE



### INSTRUCTIONS

The following installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship.




Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of acceptable condition and properly prepared.

### GENERAL GUIDELINES

- For best results, install this product at the end of your construction project
- Ensure areas are free from dirt and debris
- Handle panels with care to avoid damage
- Use clean gloves to prevent soiling of material
- Maintain a uniform temperature and humidity prior to, during, and after installation

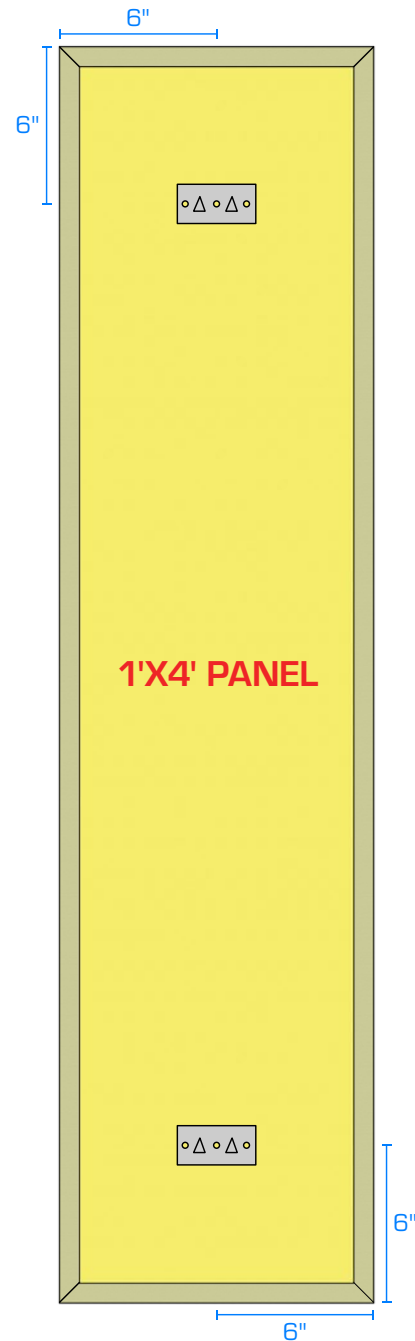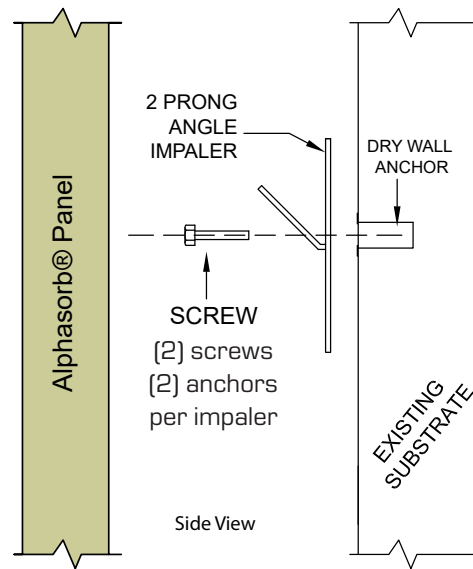

### 1' X 4' ACOUSTIC PANEL KIT INCLUDED HARDWARE

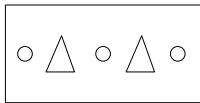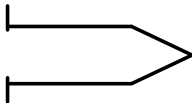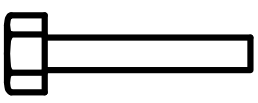
			
4-pack	2-Prong Angle Impaler (8)	Drywall Anchor (20)	Screw (20)
5-pack	2-Prong Angle Impaler (10)	Drywall Anchor (20)	Screw (20)



## PANEL INSTALLATION GUIDE



1

Determine your panel layout and the location where each panel will be mounted to the wall. Lightly mark the location of the top, bottom, left and right edges of the panel.

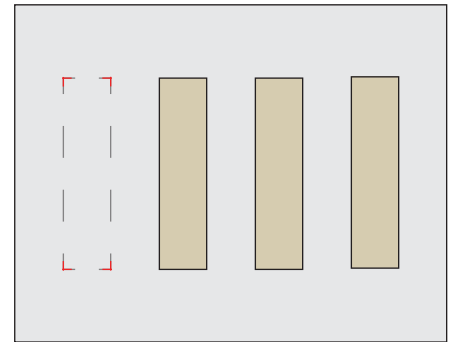

2

Mount the 2-prong angle impaler to the wall using the provided screws and drywall anchors. Impaler should be set in 6 inches from the outer edge of the panel to avoid the fabric on the back. The impaler should remain in the horizontal position shown below with the angled tips pointing upward.

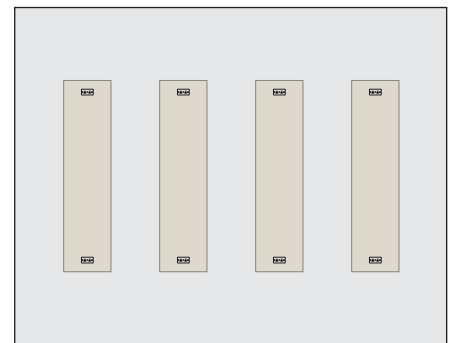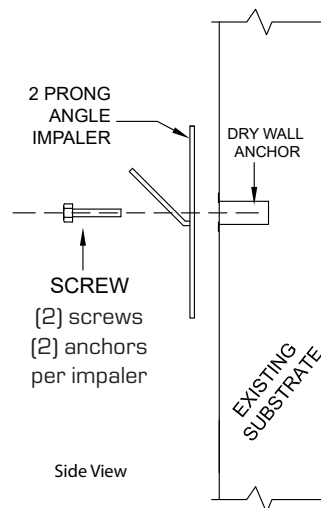

3

Line up the panel about 3/4" above the marks on the wall. Carefully push panel downward at a slight angle onto the impaler until the panel is flush with the wall. Verify panels are straight and plumb with a level.

Repeat process for multiple panels. For a secure, permanent installation, construction adhesive may be applied to the back of the panel prior to mounting. Adhesive is highly recommended for high traffic areas.

