


THERMAGLASS®

K/CD Shower Base Installation Manual

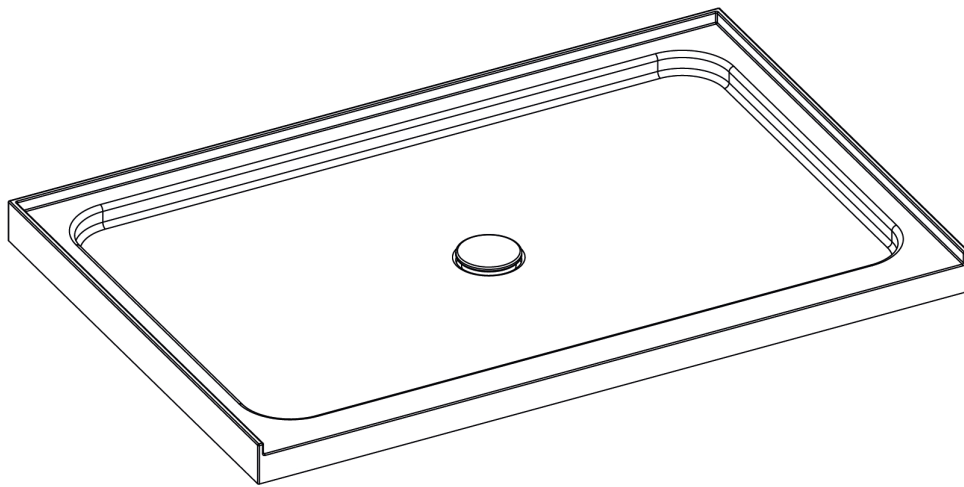

IMPORTANT

- Inspect your product before proceeding with the installation.
- The warranty will be void if the product is installed with a defect.


CAUTION

- To prevent leaks, silicone must be applied on the outside of the shower.
- Read all instructions carefully before starting the installation.
- Save this manual for future reference.


SITE PREPARATION

- Before proceeding amend your subfloor as needed. Ensure it is level, free of damage and provides adequate support.


TOOLS & MATERIALS REQUIRED

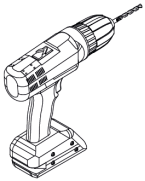


Drill

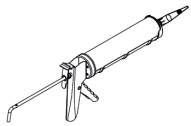


Silicone

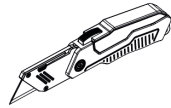


Precision Knife



Screwdriver

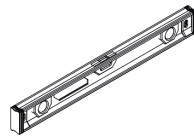


Level




Measuring Tape




Drill bits 1/8"




Plastic film




Mortar

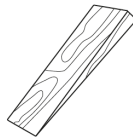


Shim

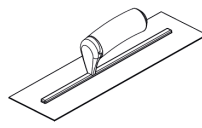

Trowel



Pencil




Set Square



SITE PREPARATION:

The floor under the bath must be capable of supporting 50lb/ft² or 240 kg/M². The alcove frame must be plumb and square. The floor must be level.


1

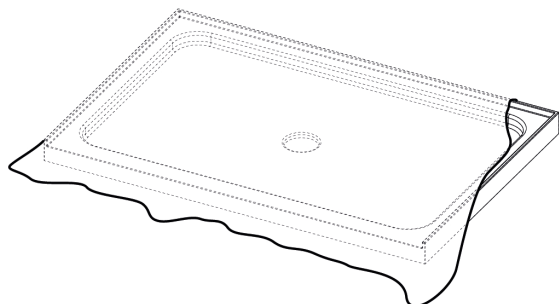


Remove protective plastic film

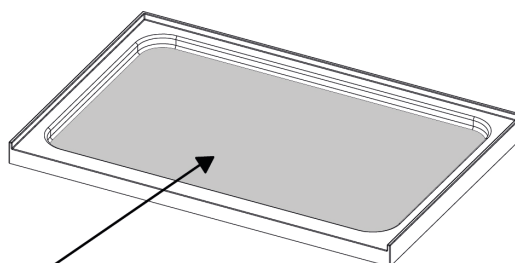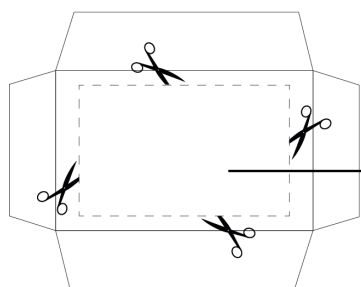


2

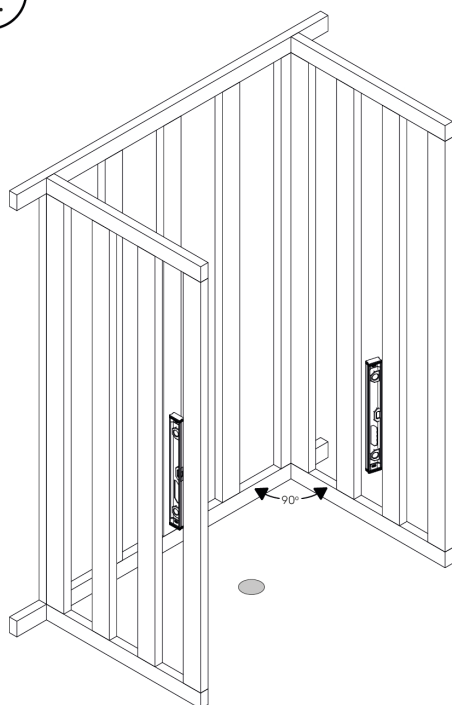


3

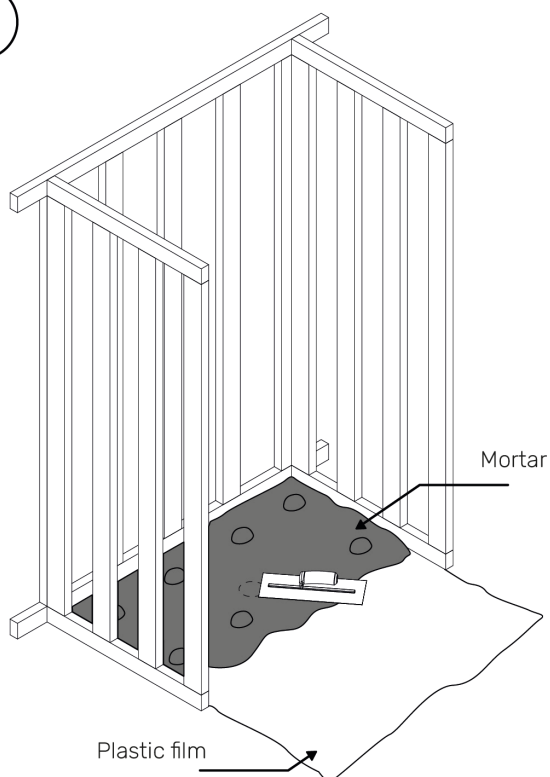


4

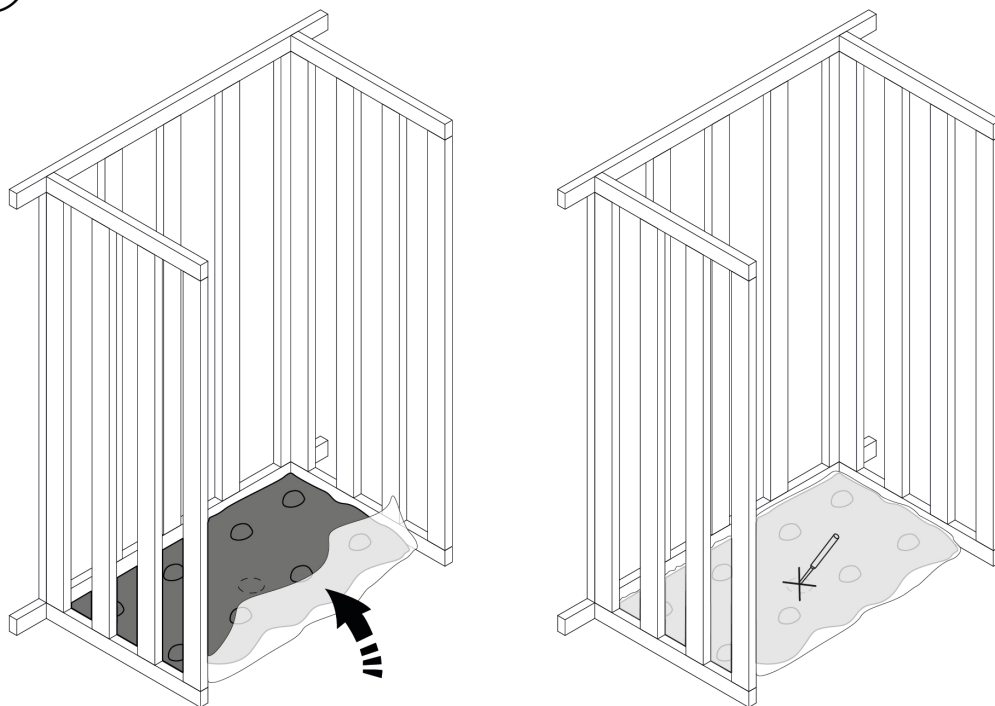

5

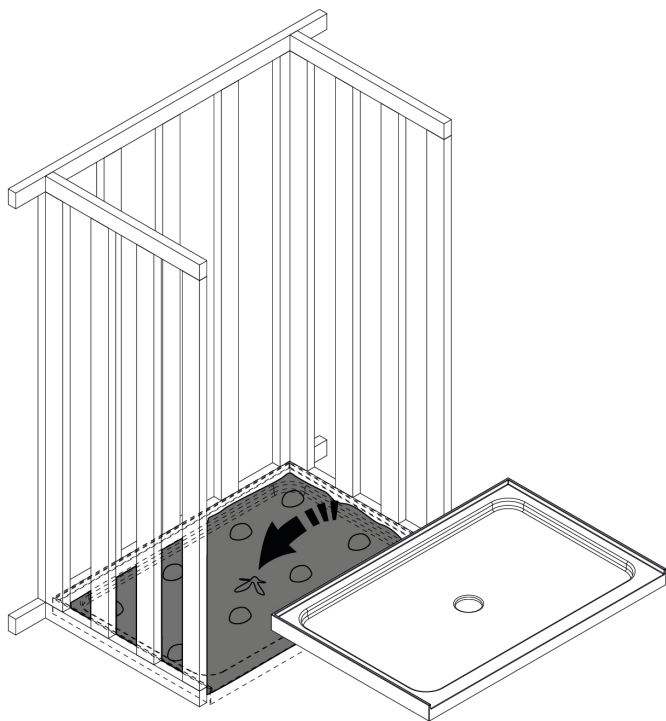


6

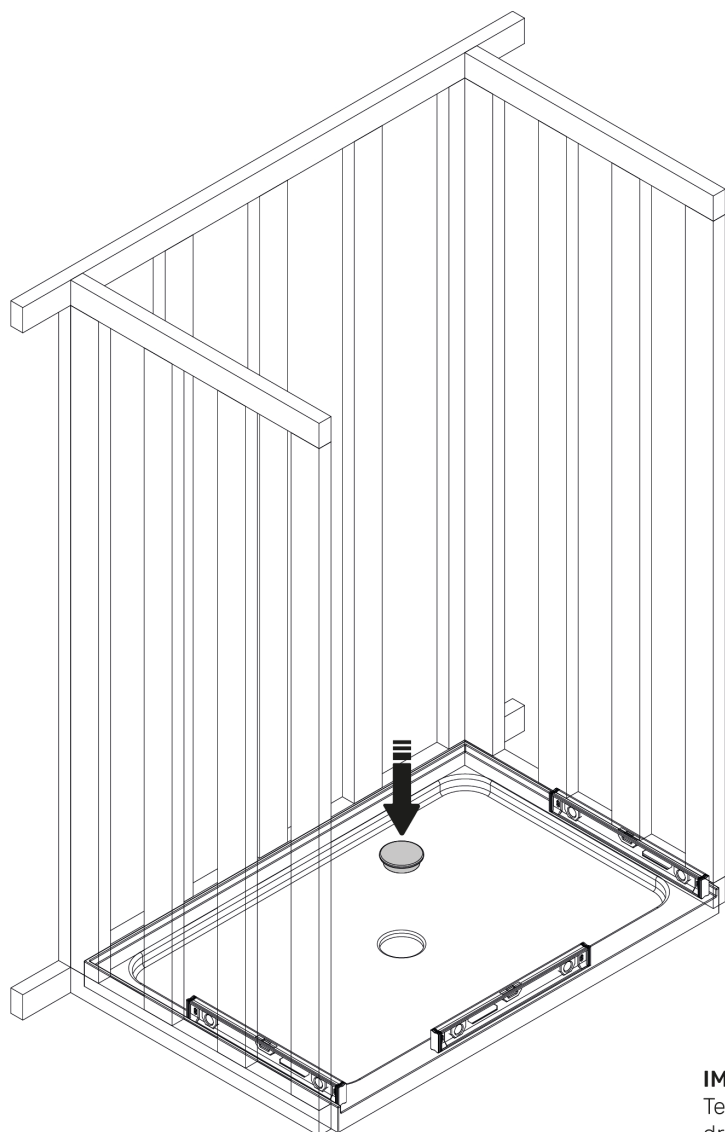


IMPORTANT:

Test the base to check for good drainage and leaks before proceeding.



7

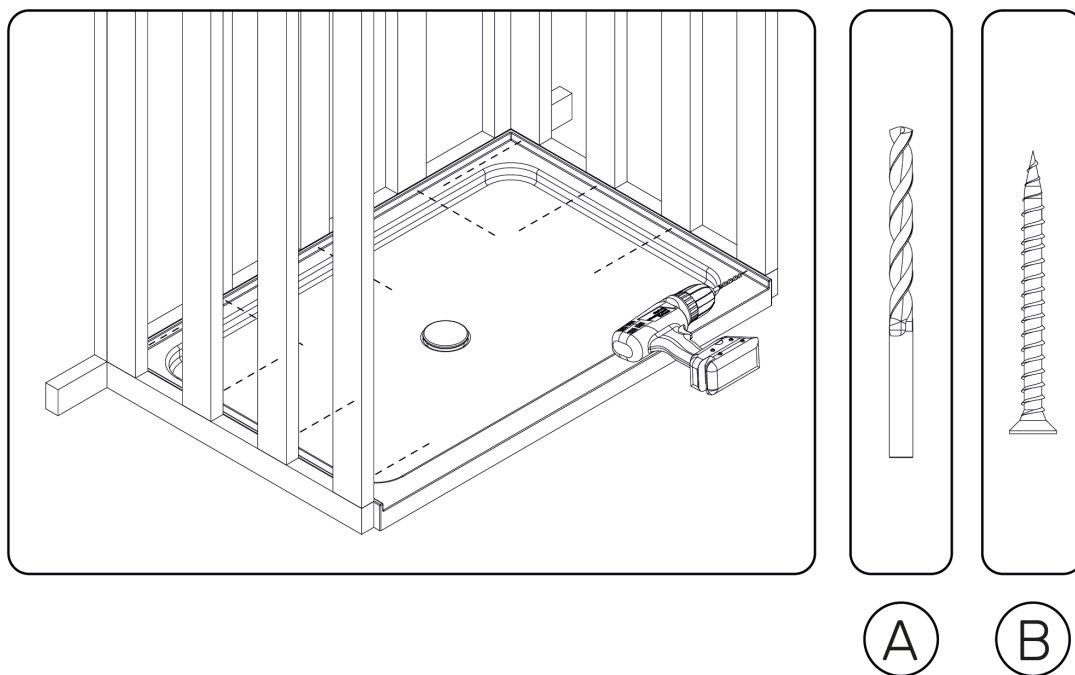


IMPORTANT

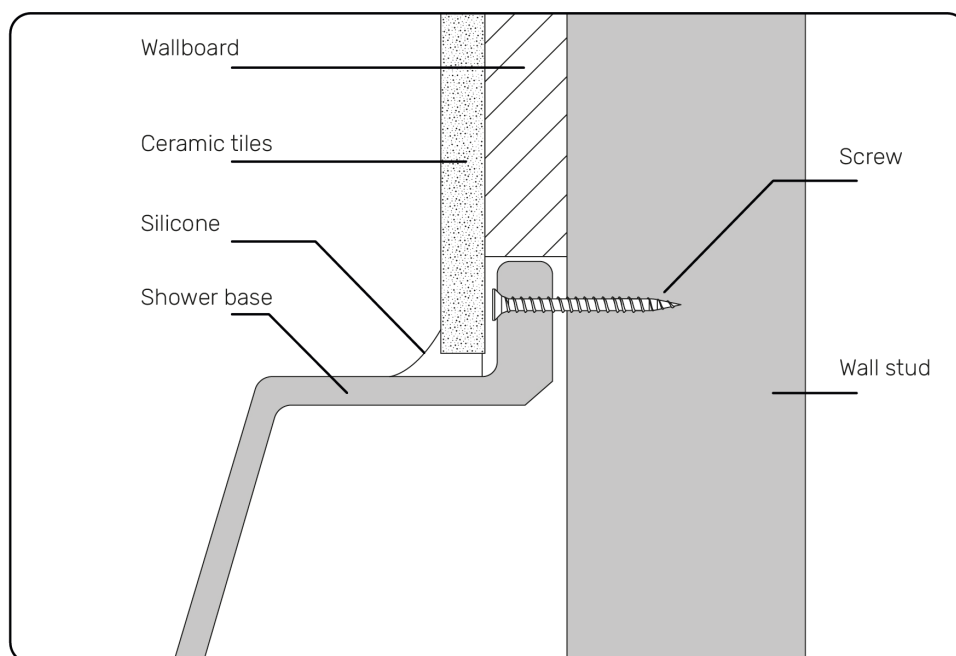

8

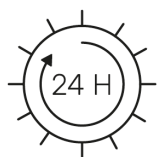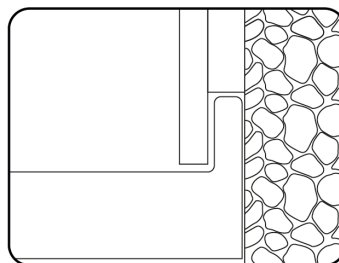

WARNING !
Wait 24h before
proceeding with the
installation of the
shower door. This will
ensure that the silicone
and mortar are dry.

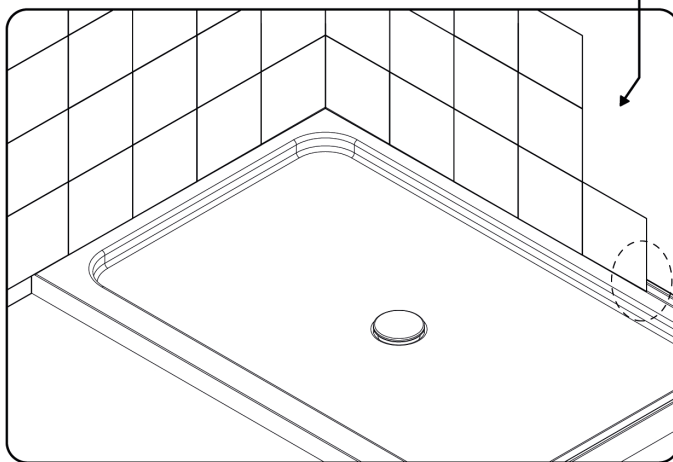

9

