


LOVESEAT

PART LIST

- A. THE SEAT OF LOVESEAT 1
B. THE BACK OF LOVESEAT 1
C1. LEFT ARM 1
C2. RIGHT ARM 1

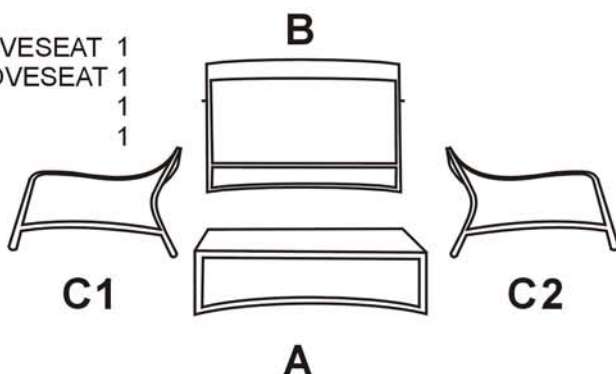


(VIEW FACING THE ITEM)

HARDWARE


- D. BOLT ($\Phi 8 \times 20\text{mm}$) 4
E. WASHER ($\Phi 8\text{mm}$) 4
F. CAP FOR BOLT ($\Phi 8\text{mm}$) 4
G. ALLEN WRENCH (5MM) 1
H. SMALL BOLT ($\Phi 1/4 \times 25\text{mm}$) 6
I. SMALL WASHER ($\Phi 6\text{mm}$) 6
J. CAP FOR BOLT ($\Phi 6\text{mm}$) 6
K. SMALL ALLEN WRENCH (4mm) 1

ASSEMBLY INSTRUCTION


1. TO PREVENT ANY DAMAGE, PLEASE PUT ALL PARTS ON A SOFT SURFACE DURING ASSEMBLY.
2. EVERY BOLT NEEDS TO BE USED WITH A WASHER.

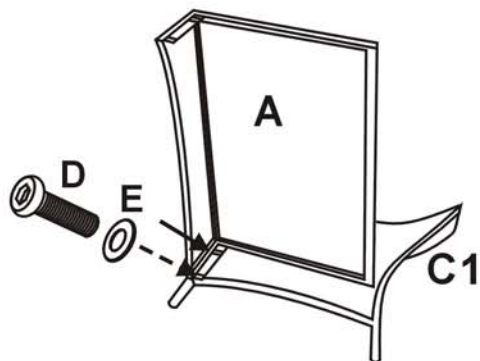


1. PLACE ARM "C1" ON THE FLOOR AS SHOWN.
2. PUT "A" ON "C1" WITH FIXED BOLT ON INNER SIDE OF "C1" GOING THROUGH THE BRACKET HOLE ON "A". TIGHTEN WITH BOLT "D". HALF THE WAY USING ALLEN WRENCH "G".

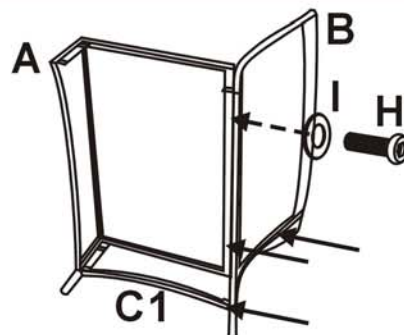

3. INSERT THE TWO PINS ON SEAT "A" INTO THE HOLE ON BACK "B", FASTEN IT WITH BOLT "H", HALF THE WAY USING ALLEN WRENCH "K".
4. INSERT THE TWO PINS ON BACK "B" INTO THE HOLE ON ARM "C1", FASTEN IT WITH BOLT "H", HALF THE WAY USING ALLEN WRENCH "K".

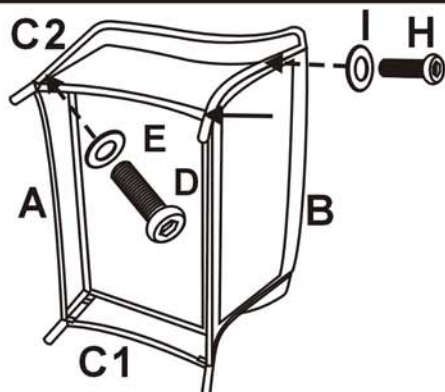

5. REPEAT STEP 2 AND 4 FOR THE OTHER ARM "C2".
6. MAKE SURE LINE UP THE EXTENSION ON THE BACK "B" TO HOLE ON ARM "C2".

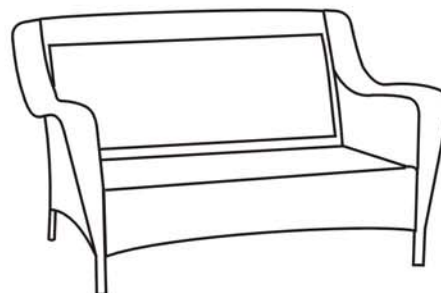

7. CHECK AND MAKE ADJUSTMENT IF NEEDED. THEN FULLY TIGHTEN ALL THE BOLTS "D" WITH ALLEN WRENCH "G" AND SMALL BOLTS "H" WITH ALLEN WRENCH "K".
8. COVER BOLTS "D" WITH CAPS "F" AND SMALL BOLT "H" WITH CAPS "J".