

CorStone®



Model 37 Primrose Installation Instructions

TOOLS YOU MAY NEED

- Drill
- Saber or keyhole saw
- Sanding block
- Sandpaper (asst. grits)
- Support frame members
- Ruler and pencil
- Sealant

The nature of this installation dictates that cabinetry with special door configurations be purchased to accommodate the 8" apron front of the sink. Standard cabinets will need to be modified to accommodate the apron front Model 37. Please inform your cabinet maker of the model sink you have purchased to allow for appropriate modifications to be made to the construction of existing cabinets. Supports must be added to the sink base to carry weight of sink and fittings.

Due to the various reveals possible during the installation of this sink, no template has been provided. The minimum opening for the unit is 27½" wide by 16¼" deep.

Measure countertop to determine the exact position and reveal of the sink. Allow for faucet placement, since faucets for this unit are to be installed using either a deck mount or wall mount installation. Make sure the sink position is accurate to allow for placement of faucets on the counter or wall.




Place sink upside down on countertop in desired position. Using a pencil, trace the outline of the sink. Remove sink from counter. Using the outline as a guide, re-draw lines to indicate desired reveal and cut on countertop.

Remember that the trimmed back of the sink apron will mount flush with the cabinet face, so allow for the sink positioning to be at the front edge of the countertop. Appropriate fasteners should be used to secure sink.

Once countertop has been cut, use sandpaper or finishing sander to smooth opening and finish edges appropriately. Mount countertop onto cabinet in correct position, allowing for plumbing installation.

IMPORTANT NOTE

In order to receive the greatest benefit from your new sink and due to its special nature, it is highly recommended that you utilize a professional for the installation of this sink.

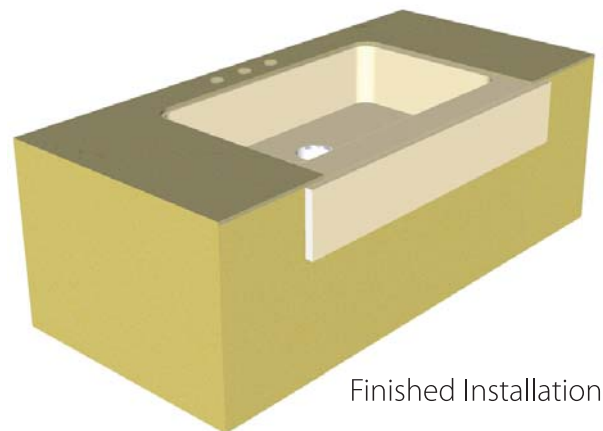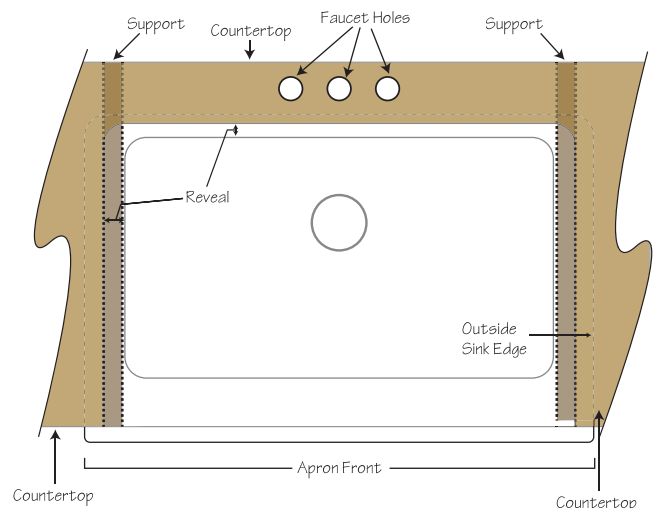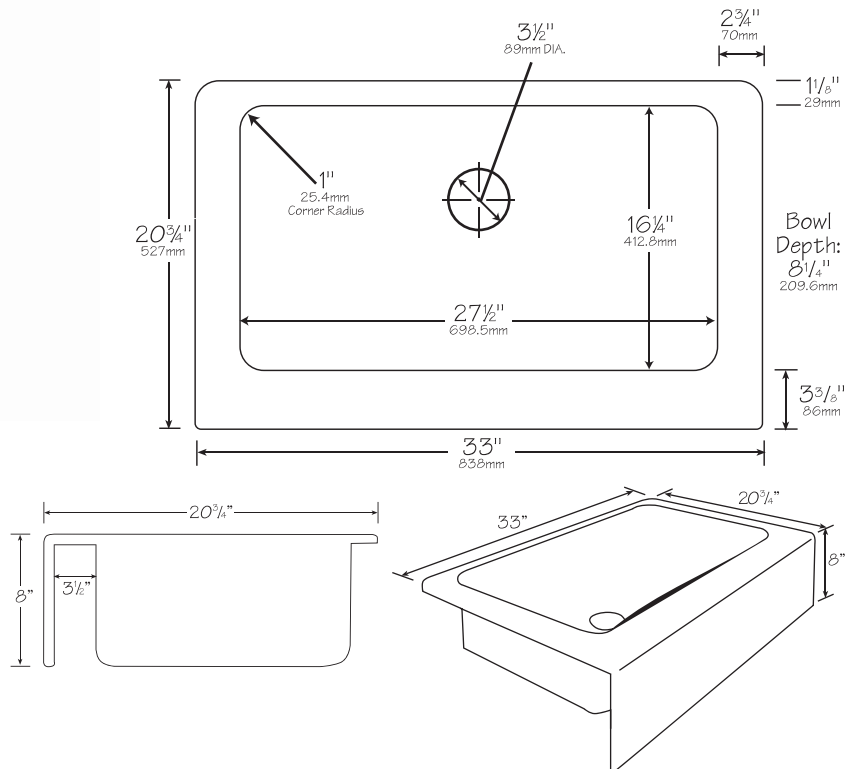

Finished Installation