

Assembly Instruction Sheet #IS-TFAS344VA

For Style TFAS344VA

Quoizel, Inc.
 6 Corporate Parkway
 Goose Creek, SC
 29445

Customer Service
 Phone 631.273.2700
 Fax 631.231.7102
 www.quoizel.com

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (3) Medium Base 100W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

| Part | Description | Quantity |
|------|---------------------|----------|
| A | Crossbar | 1 pc. |
| B | Nipple | 1 pc. |
| C | Lock Washer | 1 pc. |
| D | Hex Nut | 1 pc. |
| E | Mounting Ball | 1 pc. |
| F | Quick Link | 4 pcs. |
| G | Fixture Chain | 2 pcs. |
| H | Ceiling Canopy | 1 pc. |
| I | Socket Assembly | 1 pc. |
| J | Small Tiffany Panel | 2 pcs. |
| K | Small Wing Nut | 8 pcs. |
| L | Small Flat Washer | 8 pcs. |
| M | Lock Ball | 4 pcs. |
| N | Big Tiffany Panel | 2 pcs. |
| O | Bracket | 1 pc. |


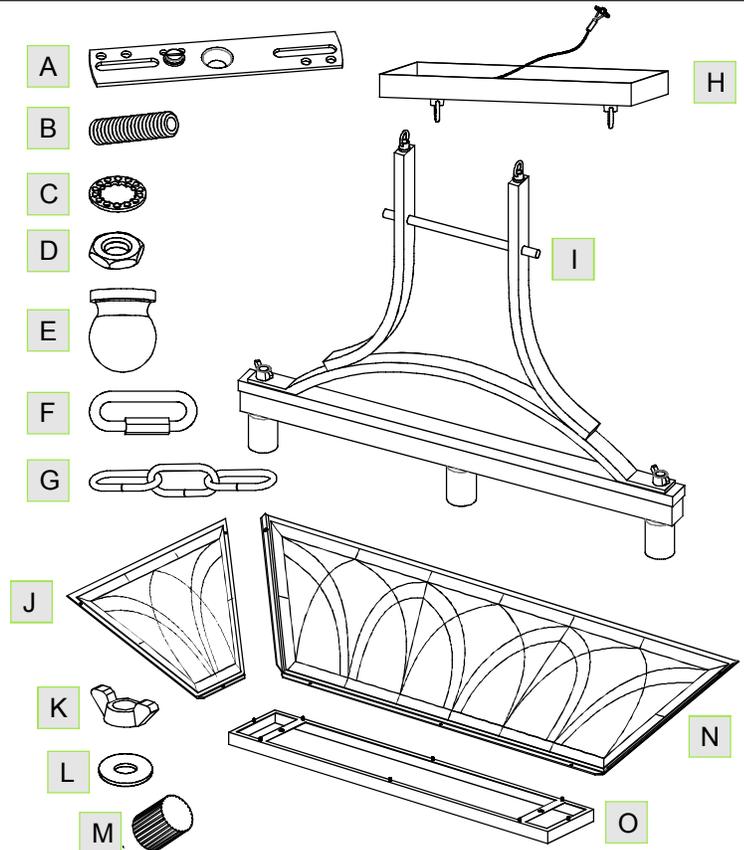


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

TFAS344VA

FINISH: VALIANT BRONZE

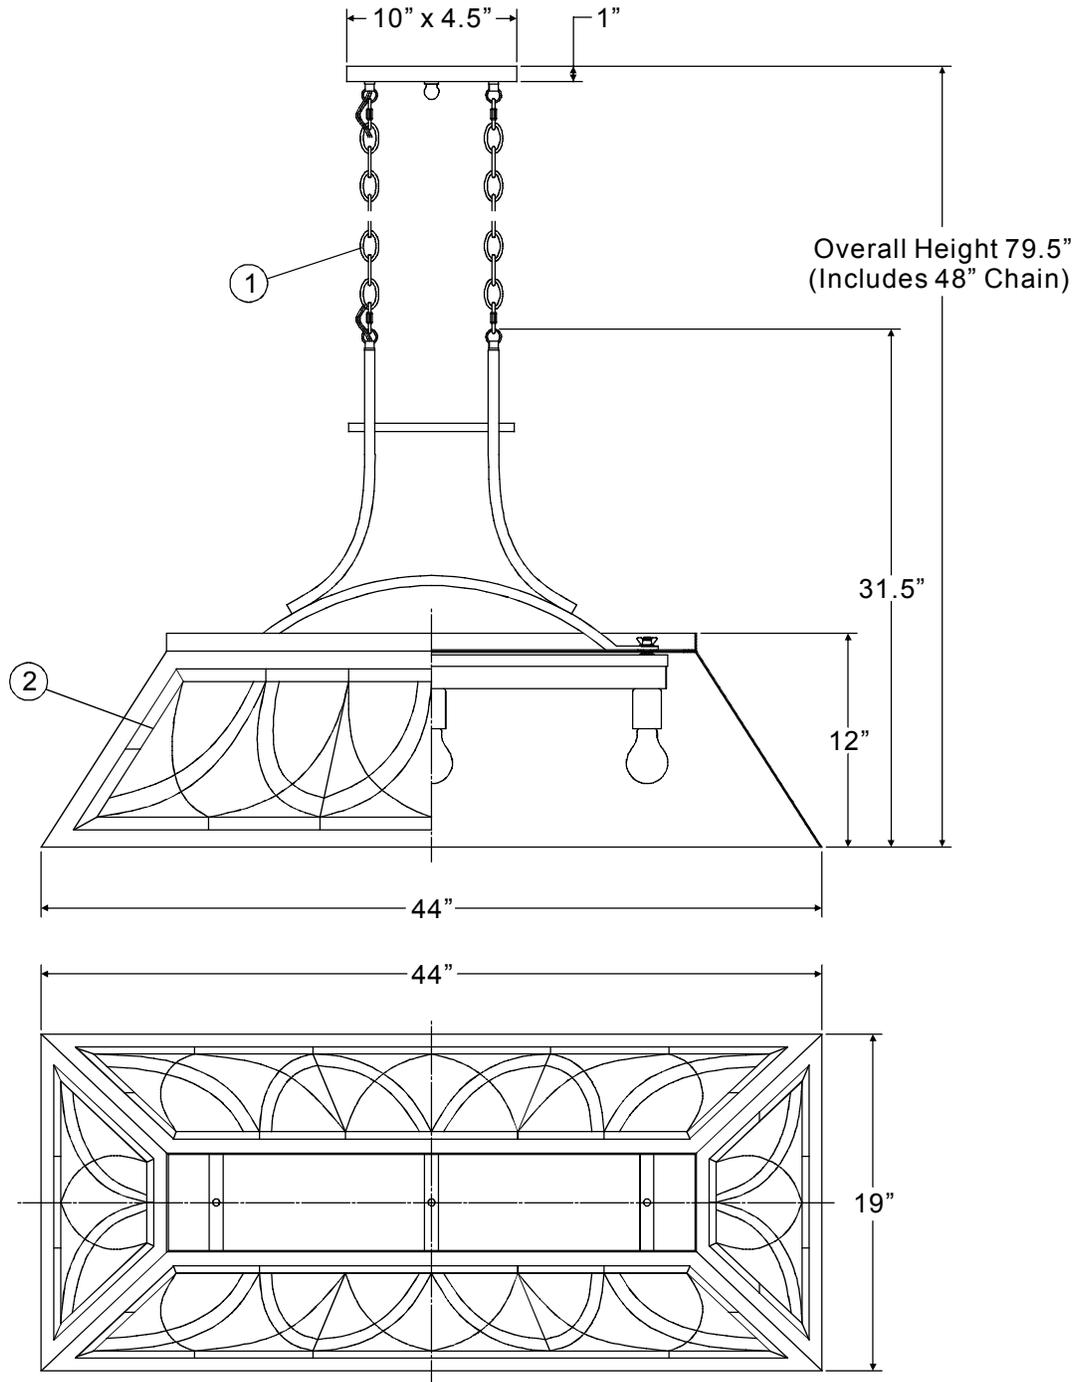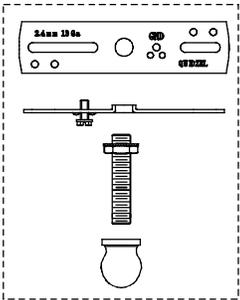

(3) 100W Medium Base Bulbs (Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

| NO. | PART NUMBER | REPLACEMENT PART DESCRIPTION | REQ. |
|-----|-------------|---------------------------------|------|
| 1 | M1195CHVA | CHAIN VALIANT BRONZE 3.8MM X 4' | 2 |
| 2 | G3699SH | TIFFANY SHADE 44"L | 1 |

Assembly Instruction Sheet #IS-TFAS344VA For Style TFAS344VA

STEP 1 – Install Tiffany Panels

TWO PEOPLE ARE RECOMMENDED FOR THIS STEP.

- Place the Bracket (O) onto a flat working surface. Attach the Tiffany Panels (J/N) over the Bolts on the Bracket (O) and match the holes on the Small Tiffany Panels (J) over the Bolts on the side of the Big Tiffany Panels (N).
- Pass the Small Flat Washers (L) over the Bolts on the Bracket (O) and thread the Small Wing Nut (K) onto the Bolts to secure the Tiffany Panels (J/N). Hand tighten until snug.
- Secure the Small Tiffany Panel (J) to the Big Tiffany Panel (N) by threading the Lock Balls (M) onto the Bolts. Hand tighten until snug.

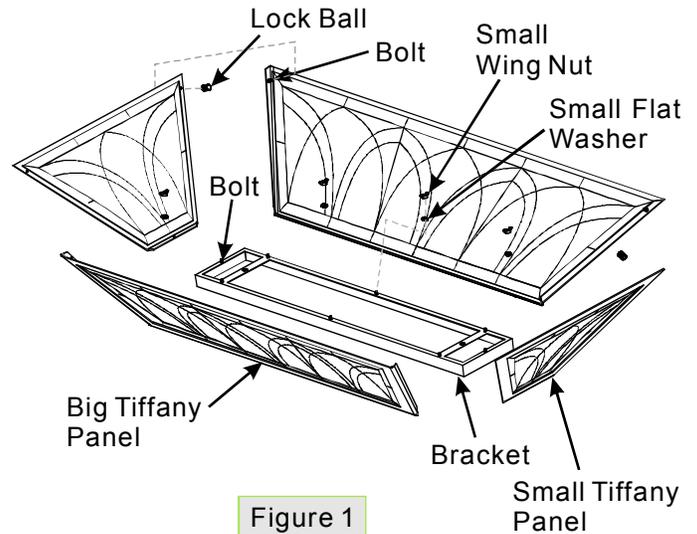


Figure 1

STEP 2 – Install Shade

- Remove the Lock Washer and the Big Wing Nut from the Socket Assembly (I).
- Pass the Holes on the Bracket (O) over the Bolts on the Socket Assembly (I). Secure by threading the Lock Washer and the Big Wing Nut onto the Bolts. Hand tighten until snug.

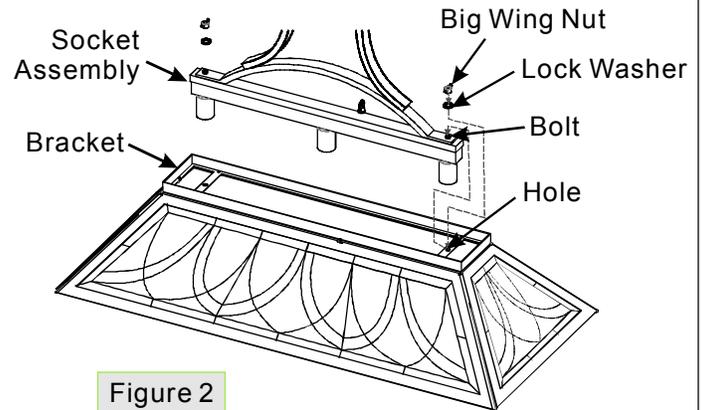


Figure 2

STEP 3 – Attach Crossbar to Outlet Box

- Secure the Crossbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

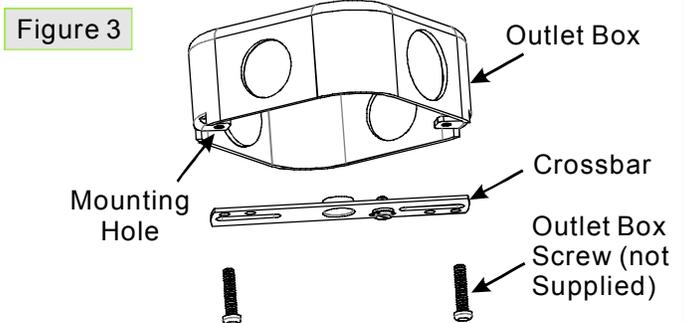


Figure 3

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com

STEP 4 – Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).
- B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).
- C. Using pliers, thread the hex Nut (D) against the Crossbar (A) and hand tighten until snug.

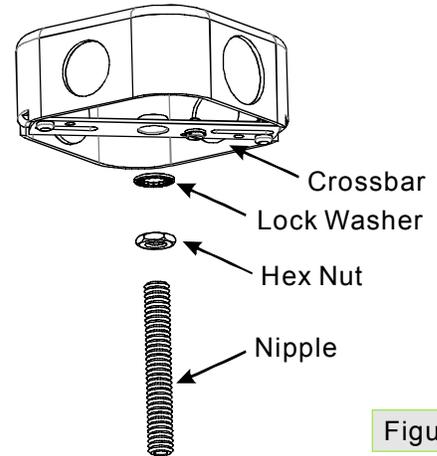


Figure 4

STEP 5 – Attach Lanyard

- A. The purpose of the lanyard is to provide the installer a means to support the fixture from the junction box while connecting the electrical wires. This enables the fixture to hang from the junction box and your hands are free to make the wire connections.
- B. Turn the Button Stop so it may be inserted into the crossbar slot. Make sure the Button Stop is completely inside the crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps. Once you are complete with the wiring there is nothing to do with Lanyard. The Lanyard will push into the junction box when the fixture is placed for final mounting.

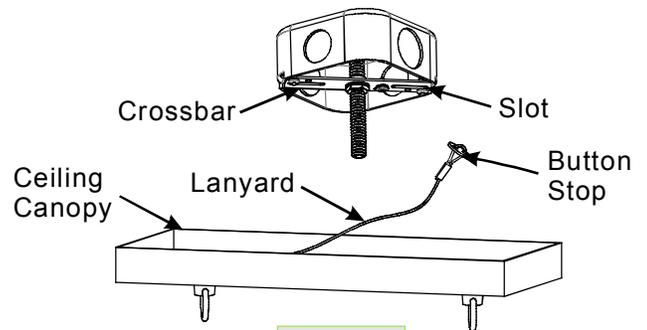


Figure 5

STEP 6 – Install Ceiling Canopy

- A. Place the Ceiling Canopy (H) over the Nipple (B) and secure with the Mounting Ball (E). Hand tighten until snug.

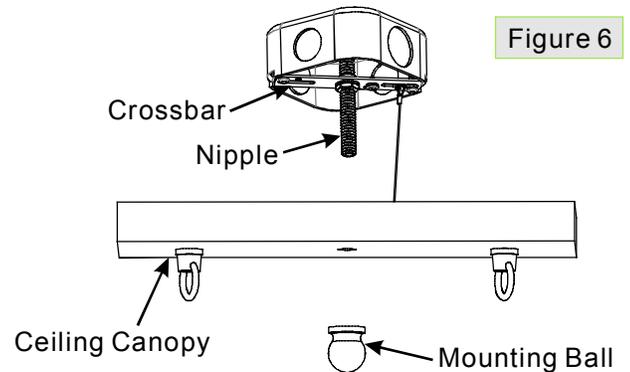


Figure 6

Thank you for purchasing a Quozel product.

**Need assistance with parts or assembly? Call Quozel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com**

STEP 7 – Attach Fixture Chain to Ceiling Loop and Fixture Loop

- A. Adjust the Fixture Chain (G) to your desired length by removing the links if needed. You may need to use plier to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers.
- B. Connect one end of the Fixture Chain (G) onto the Ceiling Loop on the bottom of the Ceiling Canopy (H) with one Quick Link (F) and then attach the other end of the Fixture Chain (G) onto the Fixture Loop on the top of the Socket Assembly (I) with another Quick Link (F).

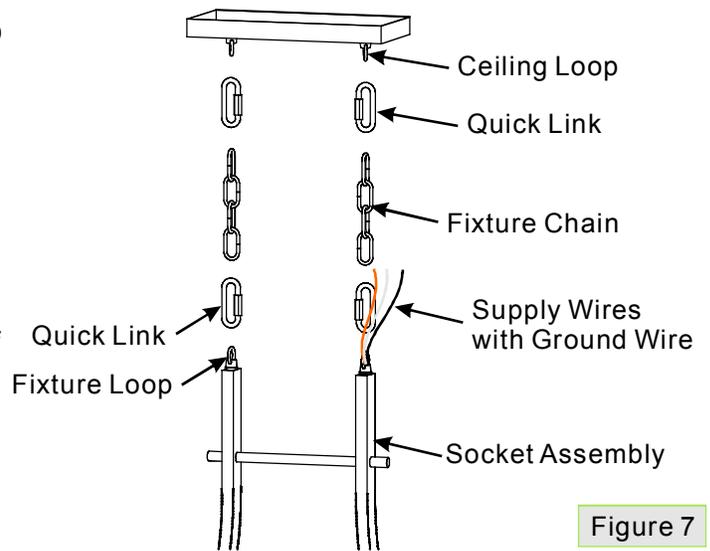


Figure 7

STEP 8 – Pass Supply Wires through Fixture Chain

- A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (G) alternating links. Push the wires up through the Ceiling Loop (E) into the outlet box.

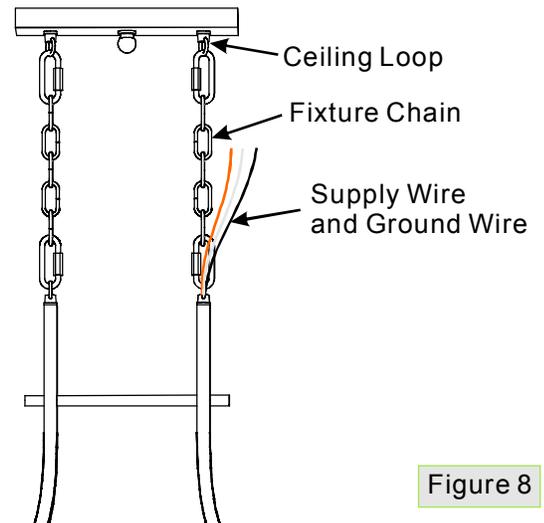


Figure 8

Thank you for purchasing a Quozel product.

Need assistance with parts or assembly? Call Quozel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com

STEP 9 – Make Wire Connections

- A. Un-thread the Mounting Ball (E) and slide Ceiling Canopy (H) down.
- B. Push all slack fixture wire through Ceiling Loop into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- D. Connect White Supply Wire from the Outlet Box to Ribbed side Wire from fixture.
- E. Connect Black (or Red) Supply Wire from the Outlet Box to Smooth side Wire from fixture.
- F. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- G. Twist connectors until wires are tightly joined together.
- H. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- I. Re-attach the Ceiling Canopy (H) as shown in Step 6.

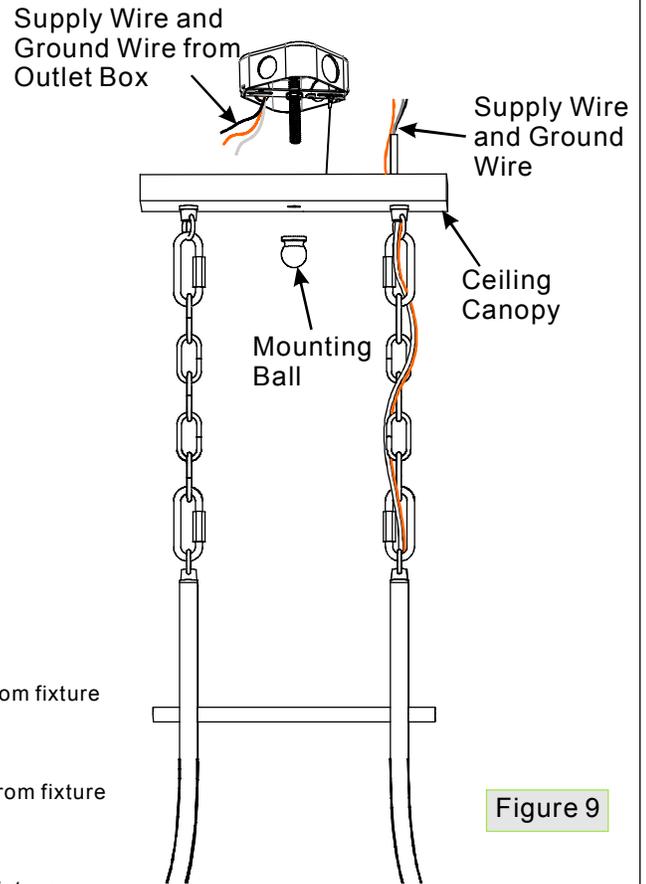


Figure 9

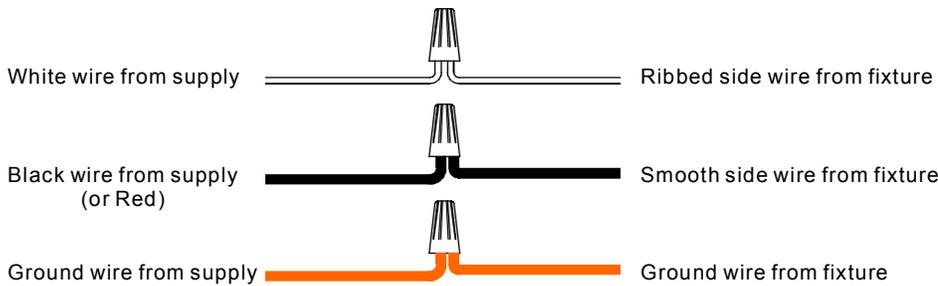


Figure 10

STEP 10 – Install Bulb

- A. This fixture uses standard bulb with standard screw base. Maximum 100 watts.
- B. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use.
 Enjoy!

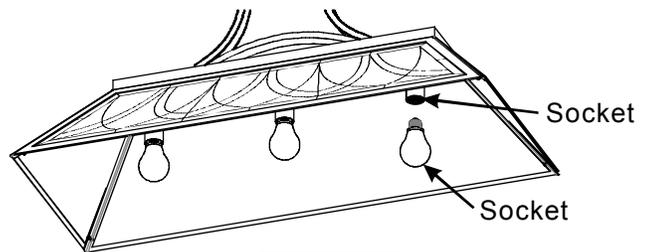


Figure 11

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com