Assembly Instruction Sheet #IS-BHN5006VG For Style BHN5006VG

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (6) Candelabra Base 60W Maximum

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

▲ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

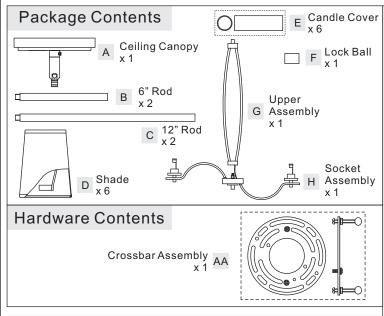



A. Determine the Rods (B/C) to be assembled to the Upper Assembly (G) according to your hanging height.

Supply Wires


B. Pass the supply wires and ground wire through the chosen rods (B/C) and the

Ceiling Canopy (A). Thread the Upper Assembly (G), the chosen Rods (B/C) and the Ceiling Canopy (A) together. Hand tighten until snug.

Suggested rods for Ceiling height: 8' ceiling: use (1) 6" rod

9' ceiling: use (1) 6" rod and (1) 12" rod 10' ceiling: use (1) 6" rod and (2) 12" rods

Figure 2



G

C

С

STEP 3 - Install Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

Figure 3

Outlet Box Screws (not included)


and Ground

Wire

Supply Wires with Ground Wire

STEP 4 – Fit Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (AA). Fit the Ceiling Canopy (A) to the Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and the mounting balls. If Not, adjust the length of the nipple on the Crossbar Assembly (AA) by

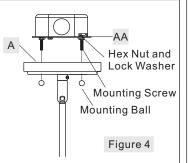


STEP 1 – Assemble Upper Assembly to Socket Assembly

A. Unfold Support Arms of the Socket Assembly (H) until Support Arms and Side Arms are staggered as shown. (Refer to <u>Socket</u> Orientation).

B. Twist Supply Wires and Ground Wire between the Upper Assembly (G) and the Socket Assembly (H) around the Nipple on the top center of the Socket Assembly (H).

C. Place the Upper Assembly (G) over the Nipple on the top center of the Socket Assembly (H). Secure by threading the Lock Ball (F) onto the Nipple. Hand tighten until snug.

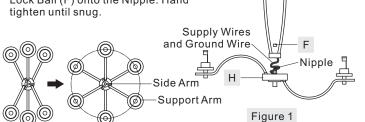

Socket Orientation

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

G


August 2015



unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove the mounting ball and Ceiling Canopy (A) and proceed to Step 5.


STEP 5 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



STEP 6 - Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy (A) over the outlet box. Align the holes in the Ceiling Canopy (A) with the mounting screws, then attach the Ceiling Canopy (A) using the previously removed mounting balls. Hand tighten until snug.

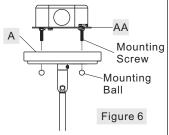


STEP 7 - Install Candle Covers, Shades and Bulbs


A. Place Candle Covers (E) over Sockets.
B. Place Shades (D) onto top ends of Candle Covers (E).
C. This fixture uses candelabra bulb with

standard screw base.

Maximum 60 watts. Insert
bulb and screw snugly into
place.

Your fixture is now assembled and ready to use. Enjoy!

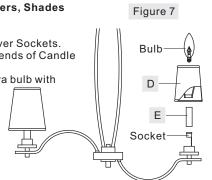

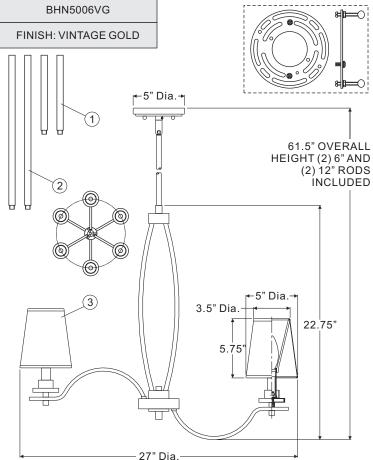



NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

NO.	PART NUMBER	REPLACEMENT PART	QTY.
1	9006EXVG	6"L ROD	2
2	9012EXVG	12"L ROD	2
3	S12306MC	SHADE	6