

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (8) G9 Base Clear Xenon bulbs 40W Maximum.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

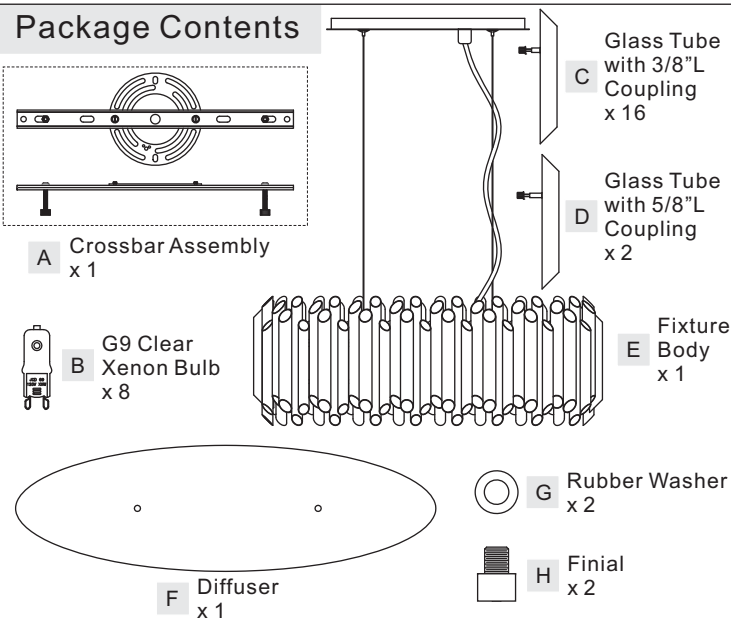

(Step 1 Continued)

- the Wire Clasp close to hex nut in the Ceiling Canopy. Tighten Set Screws on the Wire Clasp until snug to secure the Cable.
- C.** Loosen the Set Screw on the Coupling underside of the Ceiling Canopy. Adjust the Cord to proper length and then tighten the Set Screw to secure the Cord.
- D.** Move the Slider on the Cord until it close to the hex nut inside of the Ceiling Canopy.
- E.** Fit excess Cord and Cables inside of the Ceiling Canopy properly.

STEP 2 – Attach Glass Tubes and Diffuser

- A.** Remove lock nuts and washers from Glass Tubes (C/D).
- B.** Attach the Glass Tubes with 5/8"L (D) to (2) holes at the long axis of the top ring and secure with washers and lock nuts previously removed. Hand tighten until snug.
- C.** Attach the Glass Tubes with 3/8"L (C) to rest holes at the top ring and secure with washers and lock nuts previously removed. Hand tighten until snug.
- D.** Attach the Diffuser (F) onto the bottom of the cage. Secure by threading Rubber Washers (G) and Finials (H) onto stems. Hand tighten until snug.

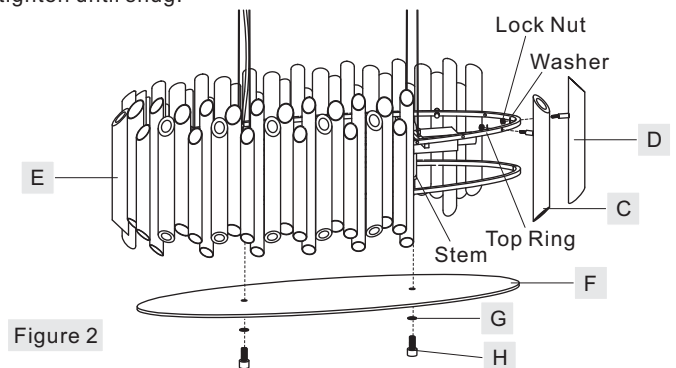


Figure 2

STEP 1 – Adjust Fixture Height

- A.** Push the Pin and adjust the Cable length to achieve your desired fixture height.
- B.** Loosen Set Screws on the Wire Clasp by using screwdrivers. Move

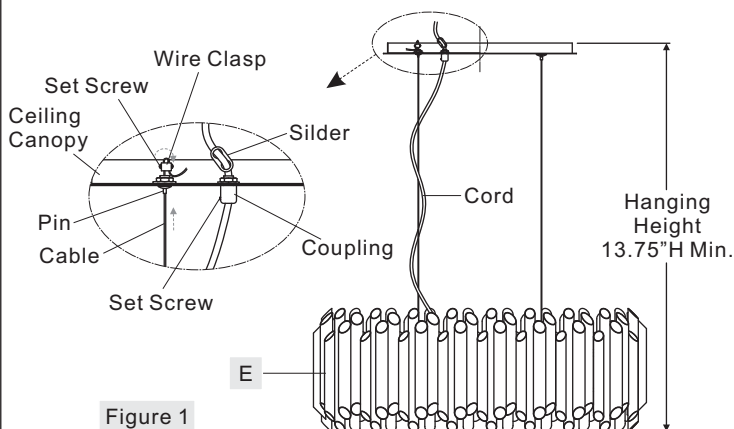


Figure 1

STEP 3 – Installing the Crossbar to the Outlet Box

- A.** Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

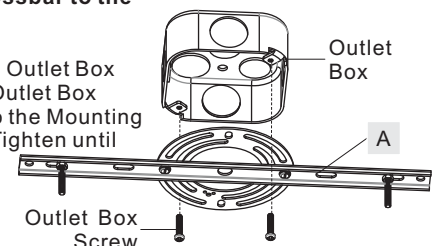


Figure 3

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com

STEP 4 - Attach the Lanyard

- The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while connecting the electrical wires.
- Turn the Button Stop so it may be inserted into a Crossbar slot. Make sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring, the Lanyard will push into the junction box when the fixture is placed for final mounting.

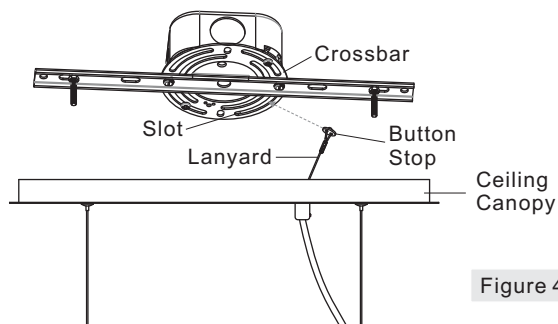


Figure 4

STEP 5 - Wire Connections

- Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

Note: If the electrical wire is going to be cut shorter than provided. Please leave approximately 10" of wire extruding from the Ceiling Canopy. Strip back the wire covering the 3 fixture wires as far as you need to. This will expose each fixture wire individually.

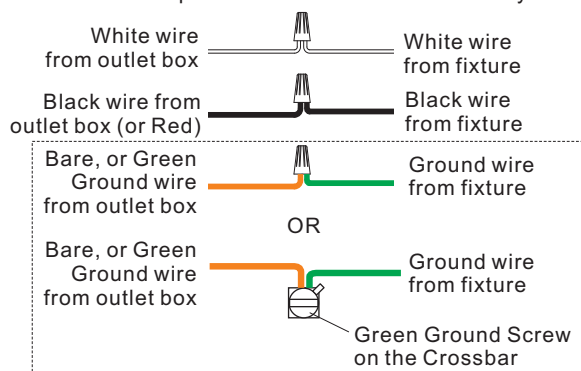


Figure 5

STEP 6 - Install the Fixture Body

- Position the ceiling canopy and Fixture Body (E) onto the Crossbar Assembly (A). Place the holes in the ceiling canopy over the mounting screws. Secure the ceiling canopy by using the mounting balls and hand tighten the mounting balls until snug.

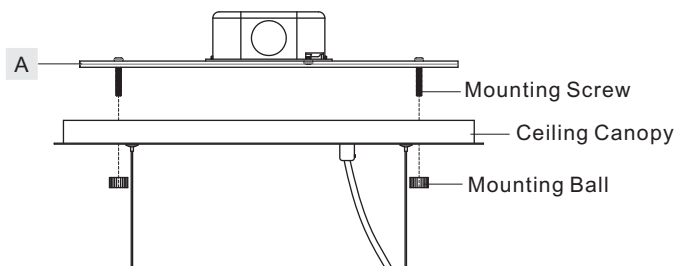


Figure 6

STEP 7 - Install Bulbs

- Insert bulbs (B) into sockets and push snugly into place.
IMPORTANT: Do not touch the bulb with bare hands use a cloth or glove.

Your fixture is now assembled and ready to use. Enjoy!

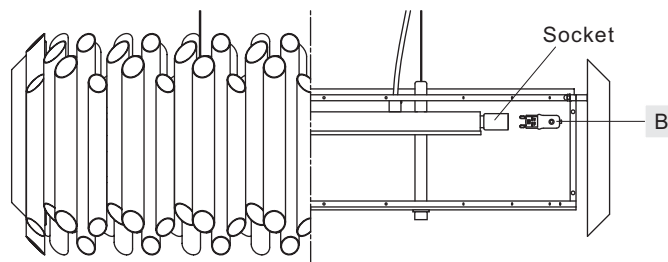




Figure 7

CAUTION FOR BULB REPLACING

- When replacing the bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- Prevent the bulb from contacting liquid or combustible materials.

PCPN832PK

FINISH: POLISHED NICKEL

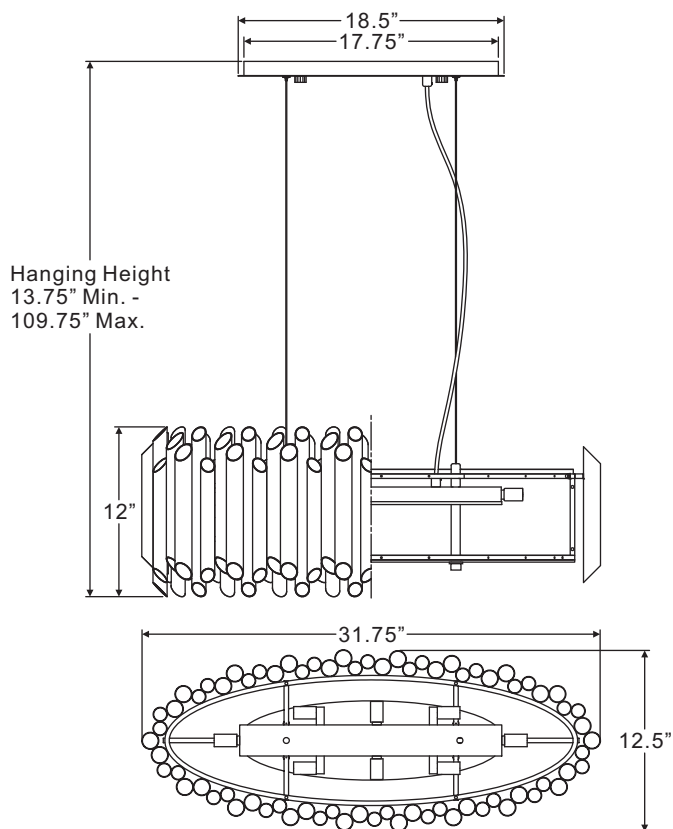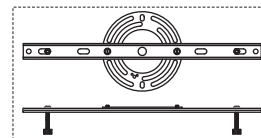

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoise.com