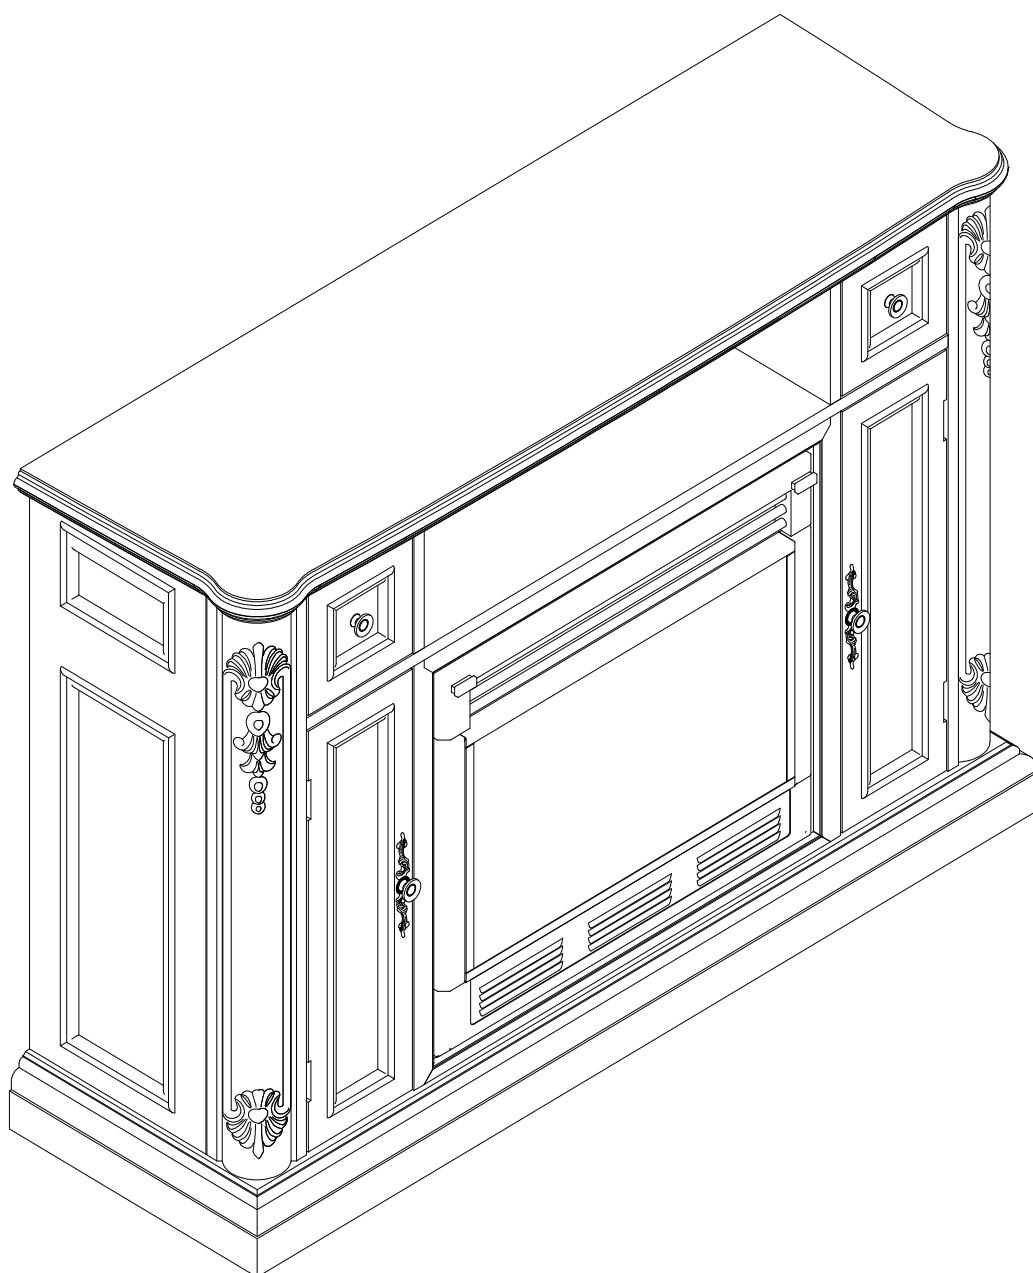


**FA937500TX
MARIANNA MEDIA
FIREPLACE MANTEL
ASSEMBLY INSTRUCTION**



Southern
ENTERPRISES

For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com



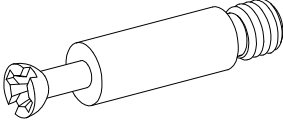
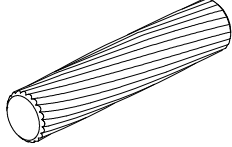
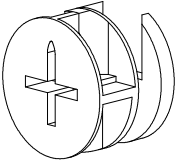

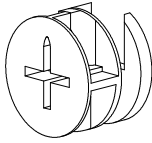
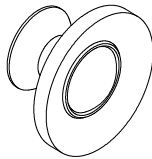
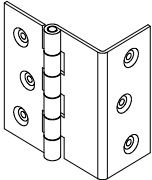
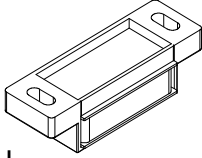
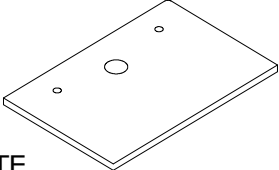
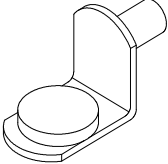
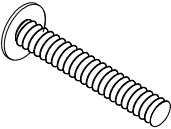
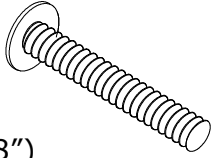
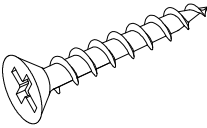


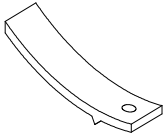
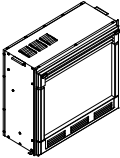
PLEASE KIINDLY NOTE THAT THE DRAWER FRONT PANEL & DOOR PANEL ALL HAVE TWO COLORS WHICH YOU CAN CHOOSE THE COLOR YOU LIKE ON OUTLOOK WHEN YOU ASSEMBLE.

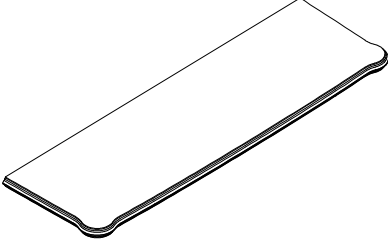
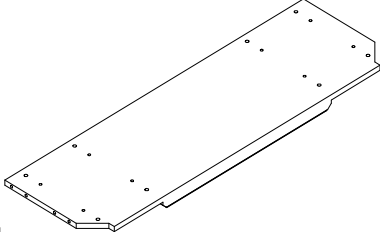
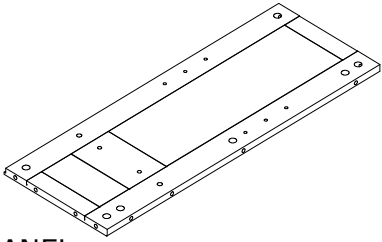
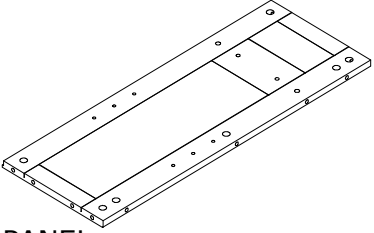
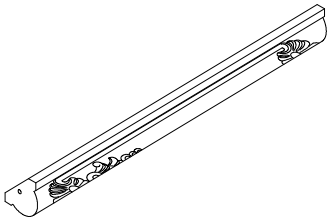
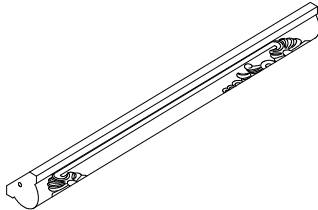
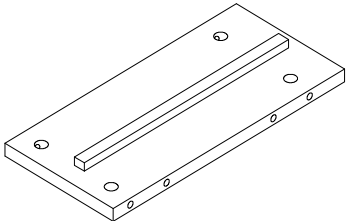
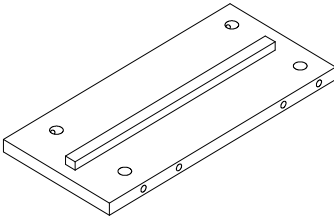
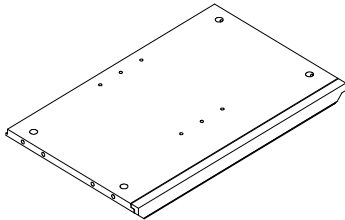
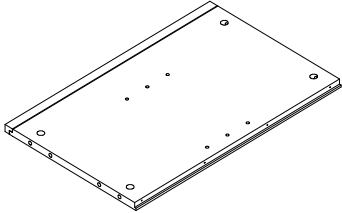
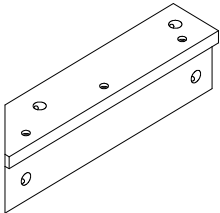
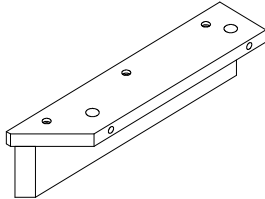
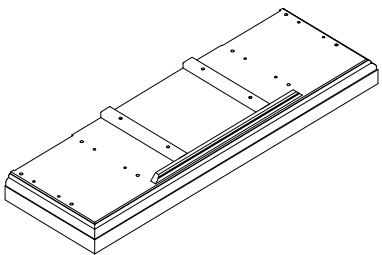
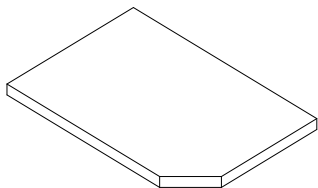
MARIANNA MEDIA FIREPLACE

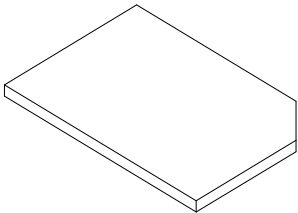
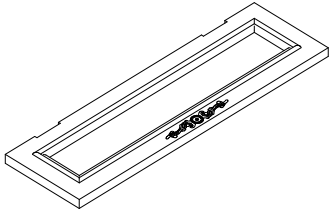
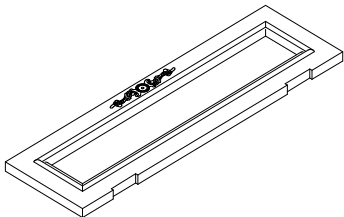
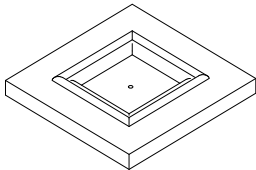
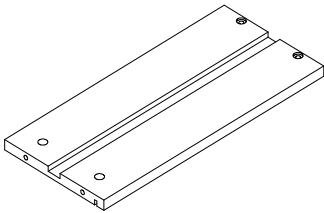
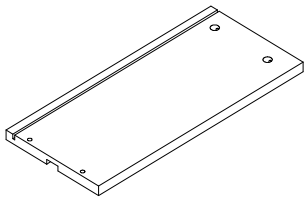
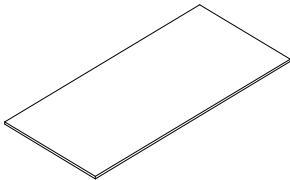
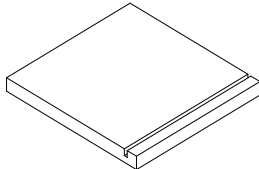
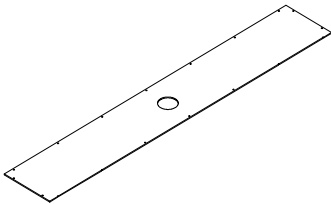
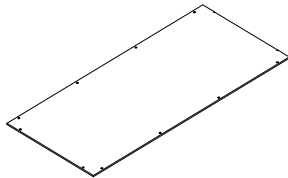
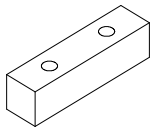

Parts List

Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using a screw that is too long will cause damage.

Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

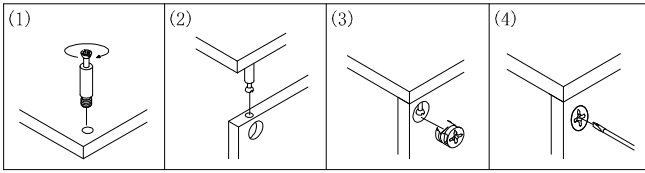
A  CAM BOLT Quantity of 46	B  WOOD DOWEL Quantity of 36
C  CAM LOCK Quantity of 46	D  SMALL CAM BOLT Quantity of 8
E  SMALL CAM LOCK Quantity of 8	F  HANDLE Quantity of 4
G  HINGE Quantity of 4	H  MAGNET CATCH Quantity of 2
I  MAGNET PLATE Quantity of 2	J  SHELF PIN Quantity of 8
K  BOLT(5/32"*3/4") Quantity of 2	L  BOLT(5/32"*1-1/8") Quantity of 2
M  SCREW(8*25MM) Quantity of 10	N  SCREW(3*14MM) Quantity of 28
O  SCREW(3*14MM) Quantity of 42	P  DRAWER STOPPER Quantity of 2
Q  FIREBOX(IN SEPARATE CARTON) Quantity of 1	

<p>(1)</p>  <p>Quantity of 1</p> <p>TOP PANEL</p>	<p>(2)</p>  <p>Quantity of 1</p> <p>SHELF PANEL</p>
<p>(3)</p>  <p>Quantity of 1</p> <p>LEFT SIDE PANEL</p>	<p>(4)</p>  <p>Quantity of 1</p> <p>RIGHT SIDE PANEL</p>
<p>(5)</p>  <p>Quantity of 1</p> <p>LEFT FRONT PILASTER</p>	<p>(6)</p>  <p>Quantity of 1</p> <p>RIGHT FRONT PILASTER</p>
<p>(7)</p>  <p>Quantity of 1</p> <p>LEFT UPPER MIDDLE PANEL</p>	<p>(8)</p>  <p>Quantity of 1</p> <p>RIGHT UPPER MIDDLE PANEL</p>
<p>(9)</p>  <p>Quantity of 1</p> <p>LEFT LOWER MIDDLE PANEL</p>	<p>(10)</p>  <p>Quantity of 1</p> <p>RIGHT LOWER MIDDLE PANEL</p>
<p>(11)</p>  <p>Quantity of 1</p> <p>LEFT CONNECT PANEL</p>	<p>(12)</p>  <p>Quantity of 1</p> <p>RIGHT CONNECT PANEL</p>
<p>(13)</p>  <p>Quantity of 1</p> <p>BASE</p>	<p>(14)</p>  <p>Quantity of 1</p> <p>LEFT ADJUSTABLE SHELF PANEL</p>

<p>(15)</p>  <p>RIGHT ADJUSTABLE SHELF PANEL</p>	<p>Quantity of 1</p>	<p>(16)</p>  <p>LEFT DOOR</p>	<p>Quantity of 1</p>
<p>(17)</p>  <p>RIGHT DOOR</p>	<p>Quantity of 1</p>	<p>(18)</p>  <p>DRAWER FRONT</p>	<p>Quantity of 2</p>
<p>(19)</p>  <p>DRAWER LEFT SIDE PANEL</p>	<p>Quantity of 2</p>	<p>(20)</p>  <p>DRAWER RIGHT SIDE PANEL</p>	<p>Quantity of 2</p>
<p>(21)</p>  <p>DRAWER BOTTOM PANEL</p>	<p>Quantity of 2</p>	<p>(22)</p>  <p>DRAWER BACK PANEL</p>	<p>Quantity of 2</p>
<p>(23)</p>  <p>UPPER BACK PANEL</p>	<p>Quantity of 1</p>	<p>(24)</p>  <p>LOWER BACK PANEL</p>	<p>Quantity of 2</p>
<p>(25)</p>  <p>WOOD HOLDER</p>	<p>Quantity of 1</p>		
<p>Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p>		<p>Call Customer Service at 1-800-633-5096 Do not return product to store, please call Manufacturer for assistance, questions or Parts.</p>	
<p>Assembly Tool Required No.2 Phillips Screwdriver (Not Included)</p>			

MARIANNA MEDIA FIREPLACE

Assembly Instructions



"Please do not over tighten cambolts. Please stop when you feel tight"

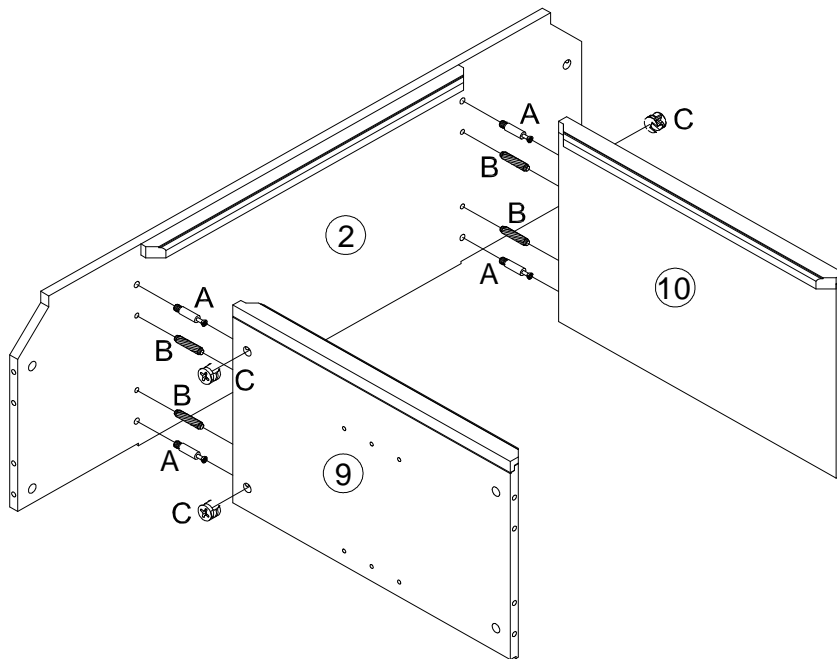


Figure 1

Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page

Insert cam locks (C) into predrilled holes on left lower middle panel (9) & right lower middle panel (10).
Screw cam bolt (A) into predrilled holes on shelf panel (2).
Attach left lower middle panel (9) & right lower middle panel (10) to shelf panel (2) by inserting wood dowel (B) & cam bolt (A) into corresponding predrilled holes until left lower middle panel (9) & right lower middle panel (10) & shelf panel (2) meet.
Secure by rotating cam lock (C) clockwise with Phillips screwdriver.

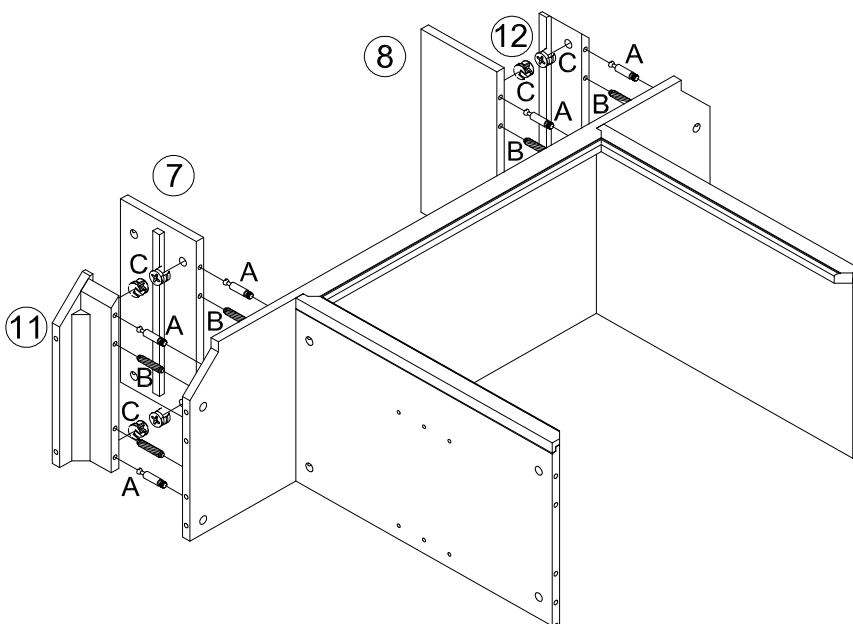


Figure 2

Insert cam locks (C) into predrilled holes on left upper middle panel (7) & left connect panel (11).
Screw cam bolt (A) into predrilled holes on shelf panel (2) .
Attach left upper middle panel (7) & left connect panel (11) to shelf panel (2) by inserting wood dowel (B) & cam bolt (A) into corresponding predrilled holes until left upper middle panel (7) & left connect panel (11) & shelf panel (2) meet.
Secure by rotating cam lock (C) clockwise with Phillips screwdriver.
Repeat with right upper middle panel (8) & right connect panel (12) as shown.

MARIANNA MEDIA FIREPLACE

Assembly Instructions

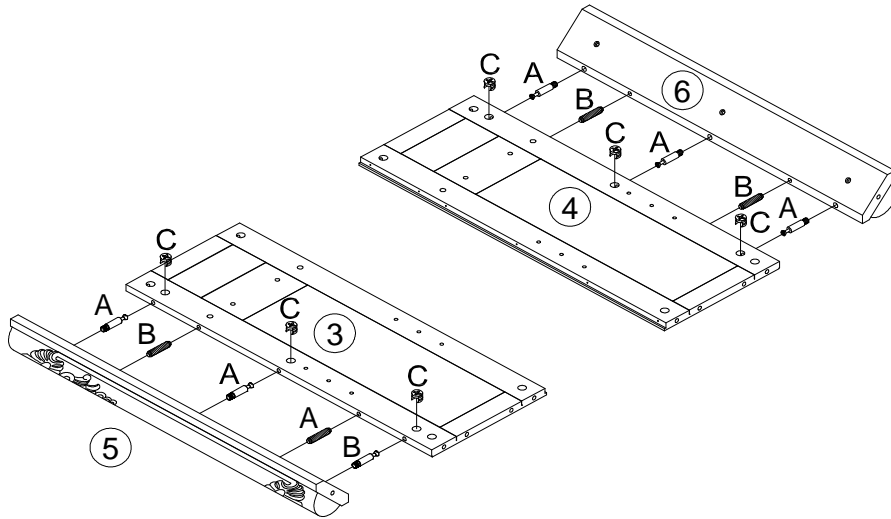


Figure 3

Insert cam locks (C) into predrilled holes on left side panel (3).
Screw cam bolt (A) into predrilled holes on left front pilaster (5).
Attach left front pilaster (5) to left side panel (3) by inserting wood dowel (B) & cam bolt (A) into corresponding predrilled holes until left side panel (3) & left front pilaster (5) meet.
Secure by rotating cam lock (C) clockwise with Phillips screwdriver.
Repeat with right side panel (4) & right front pilaster (6) as shown.

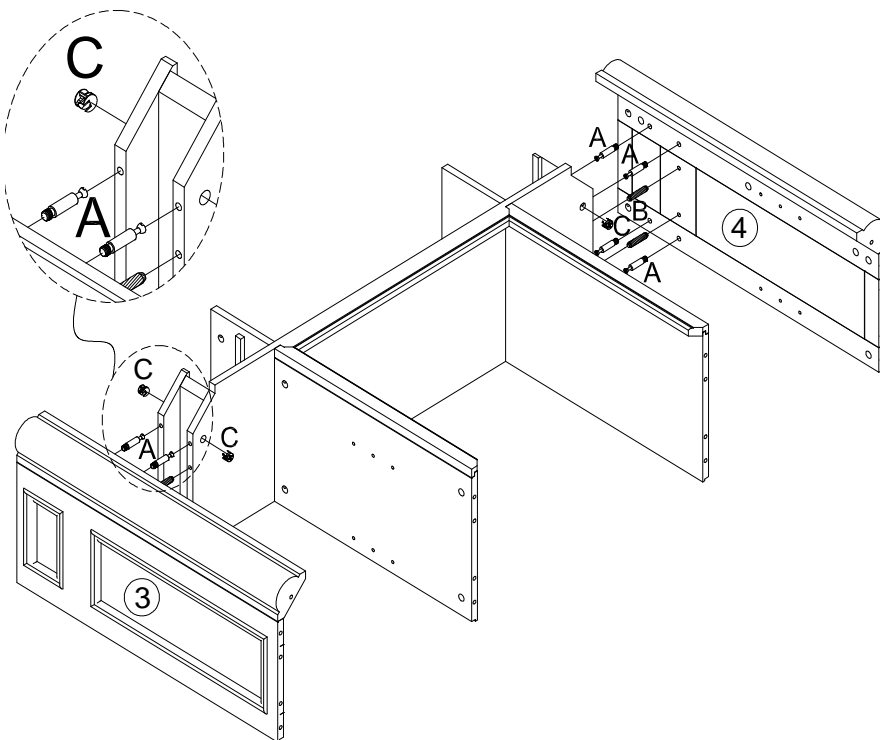


Figure 4

Insert cam locks (C) into predrilled holes on the pre-assemble parts in figure 2 .
Screw cam bolt (A) into predrilled holes on left side panel (3) & right side panel (4) .
Attach left side panel (3) & right side panel (4) to pre-assemble parts in figure 2 by inserting wood dowel (B) & cam bolt (A) into corresponding predrilled holes until assemble parts in figure 2 & left side panel (3) & right side panel (4) meet.
Secure by rotating cam lock (C) clockwise with Phillips screwdriver.

MARIANNA MEDIA FIREPLACE

Assembly Instructions

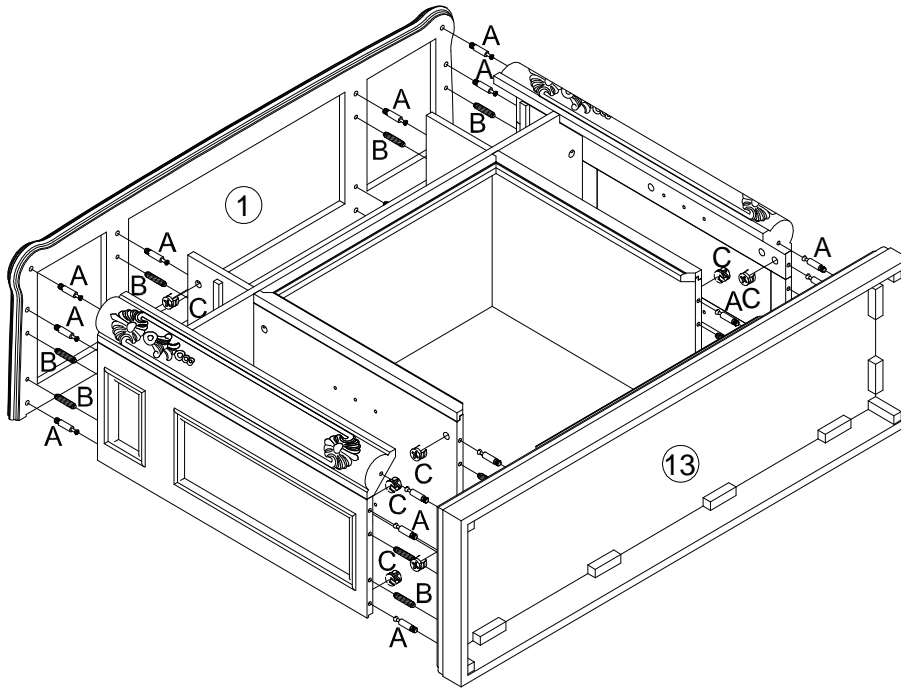


Figure 5

Insert cam locks (C) into predrilled holes on pre-assembled unit in figure 4.

Screw cam bolt (A) into predrilled holes on top panel (1).

Attach top panel (1) to pre-assemble parts in figure 4 by inserting wood dowel (B) & cam bolt (A) into corresponding predrilled holes until assemble parts in figure 4 & top panel (1) meet.

Secure by rotating cam lock (C) clockwise with Phillips screwdriver.

Repeat the same way to attach base (13) on the unit as shown.

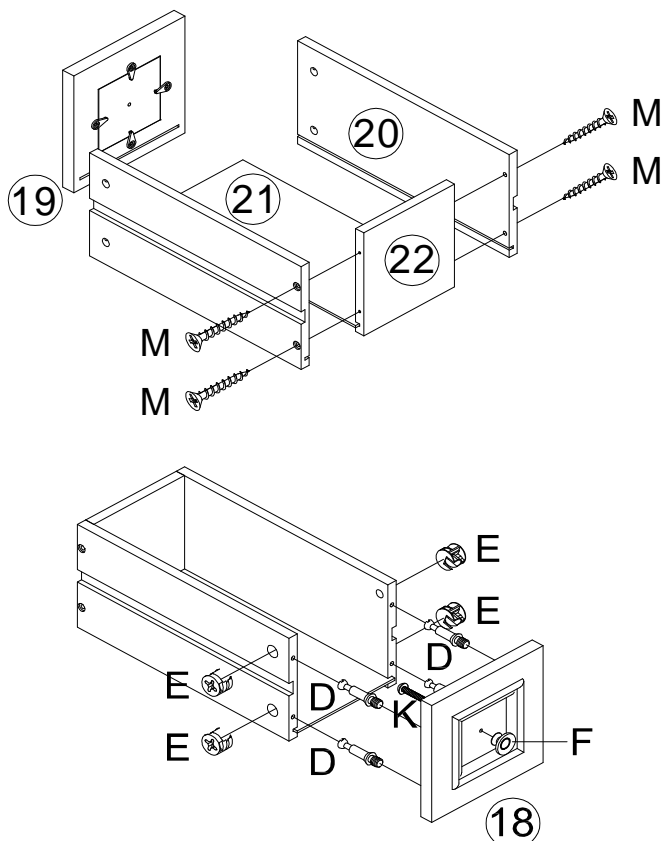


Figure 6

insert the drawer bottom pane (21) into the corresponding groove of drawer back panel (22),

Attach the drawer left side panel (19) & drawer right side panel (20) with the back panel and bottom panel together by groove well match, as well tight them by screw (M).

at last, use small cam bolts (D) & small cam lock (E) to attach the drawer front panel (18) to the drawer side panels,

And attach the drawer handle (F) on the drawer front by bolt (K) as shown.

MARIANNA MEDIA FIREPLACE

Assembly Instructions

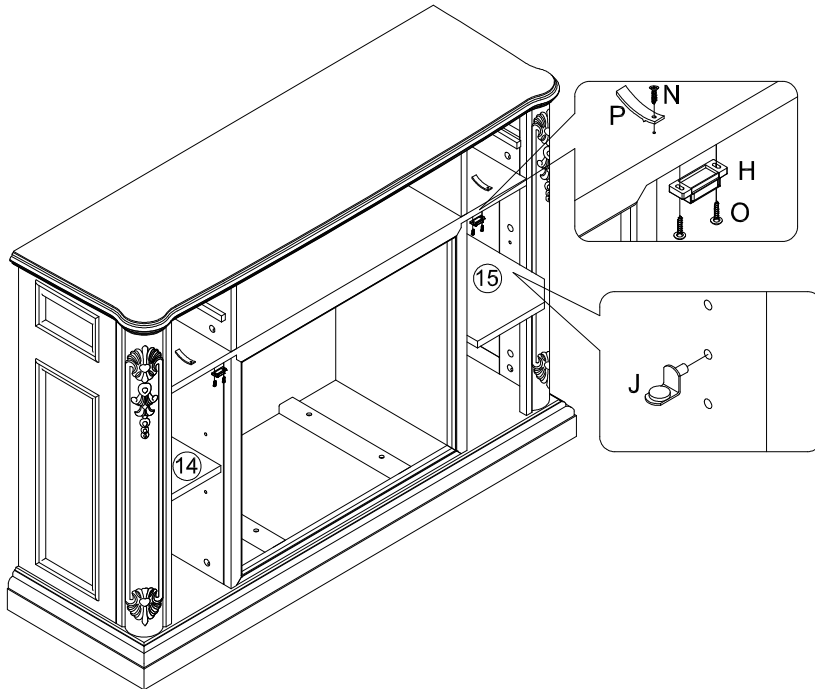


Figure 7

Assemble the drawer stopper (P) on the pre-drilled hole on the shelf panel and well insert the two drawers into the pre-assembled unit as shown. then assemble the magnet catch (H) under the shelf panel by screw (O),
Insert the shelf pins (J) into the pre-drilled holes on the side panels and middle panels, as well put the shelf panels (14) & (15) on it.

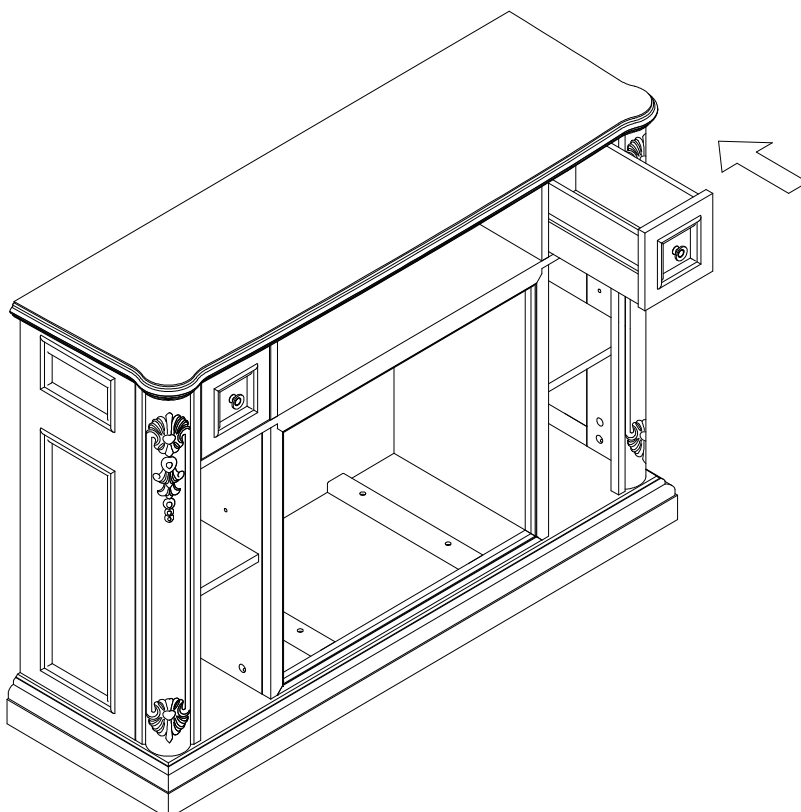


Figure 8

Well put the two drawers into the cabinet as shown.

MARIANNA MEDIA FIREPLACE

Assembly Instructions

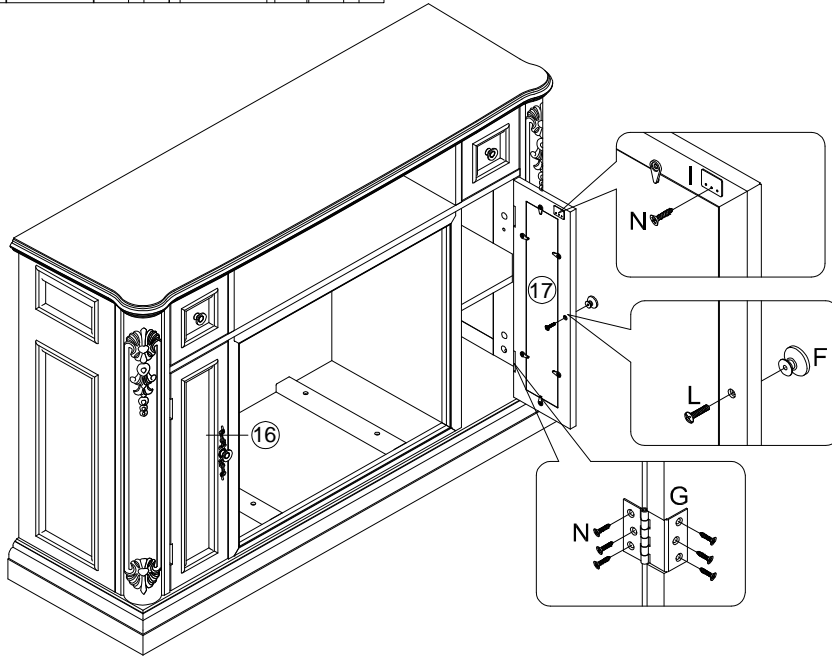
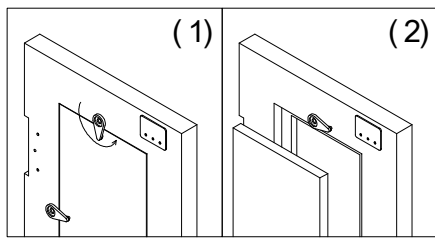


Figure 9

Assemble the right door panel (17) on the pre-assembled unit by hinge (G) and screw (N).

Attach the metal plate (I) on the up inside of door panel by screw (N) to let it can match the position of the magnet catch.

At last, attach the door decoration plate (F) and handle (F) on the door panel by bolt (L) as shown.

Repeat the same way to assemble the left door panel (16) on the unit.

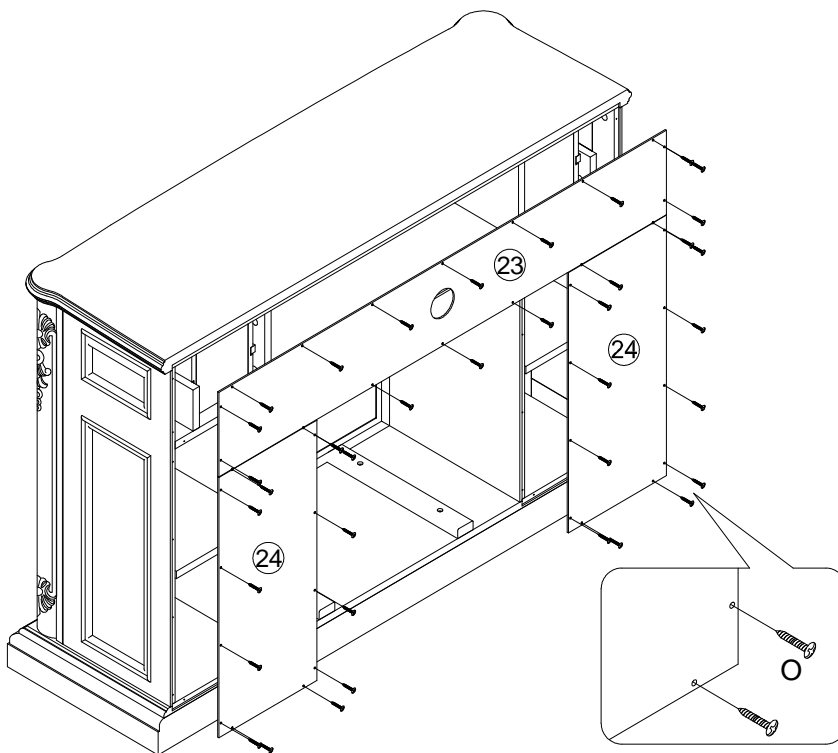


Figure 10

Attach the upper back panel (23) and lower back panels (24) on the pre-assembled unit by screw (O) and tightening with Phillips screwdriver (not included) as shown.

MARIANNA MEDIA FIREPLACE

Assembly Instructions

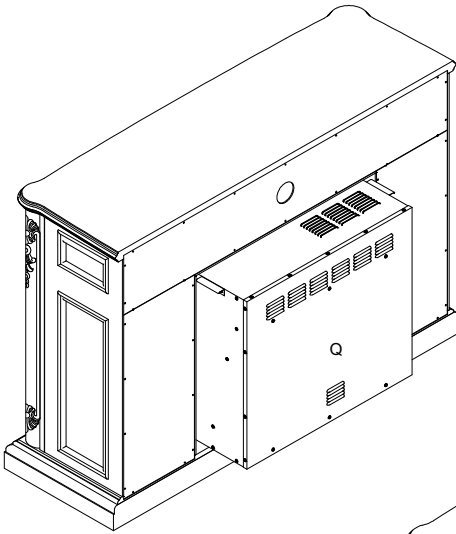


Figure 11

Well put the fireplace (Q) into the cabinet and avoid any scratch.

Assemble the wood holder (25) on the base by screw (M) and tightening with Phillips screwdriver (not included) as shown.

.

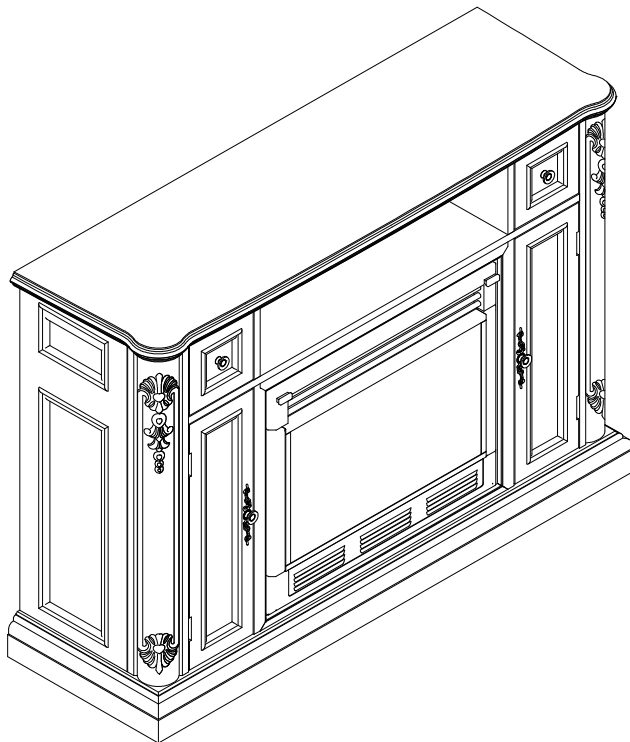
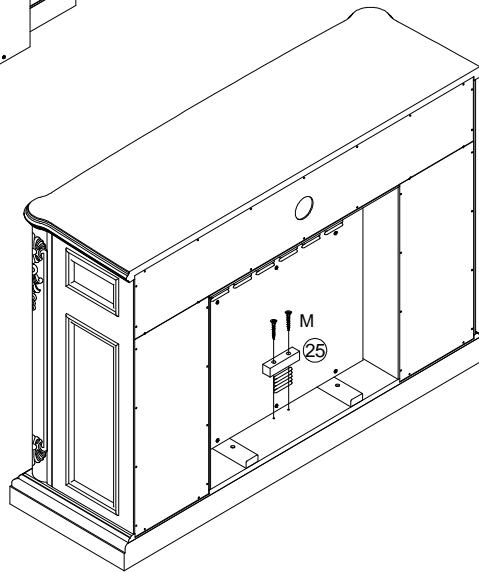


Figure 12

Now you can enjoy your new fireplace.

Parts Replacement Form

Name _____

Address _____

City/State/Zip Code _____

Phone Number _____

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
----------	--------------	-------------------	-----------------

_____	_____	_____	_____
-------	-------	-------	-------

_____	_____	_____	_____
-------	-------	-------	-------

_____	_____	_____	_____
-------	-------	-------	-------

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise. Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.

Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas 75019



Southern
ENTERPRISES



CAUTION

The top shelf is intended for a flat screen television with a maximum overall width of 38" and supports up to 85 lb.

VCR shelf should not be loaded with more than 20 lb.

Each side shelf should not be loaded with more than 10 lb.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on back panel.

Do not allow children under 16 years old to move the cart.

Model: FA937500TX

MARIANNA MEDIA

FIREPLACE MANTEL

Southern Enterprises, Inc

600 Freeport Parkway, Suite 200

Coppell, Texas, 75019

Manufacture Date: