

Pool House Control Roofing

It is designed for frame pools with a diameter of 3.05 m, 3.66 m and 4.57 m.

Safety instructions - extremely important!

- Read and follow these instructions. Keep this manual for future reference.
- Installation is only permitted on a sufficiently stable subsoil to prevent the shoes from being pulled out from under the pool leg and possibly crossing the roof structure.
- Never leave the installed roof structure on a pool without being filled with water to the prescribed limit.
- Two adults are required to install the roof.
- Packaging materials are not intended for games. Keep them out of the reach of children.
- The opening and closing of the pool roof must always be performed by two adults. Each person stands on the other side of the pool at the joints of the roof and manipulate the roof simultaneously in the same direction.
- Using the frame pool roofing according to the instructions in this manual eliminates virtually all hazards. Remember, however, that children have a natural tendency to play, and this can lead to unpredictable dangerous situations for which the manufacturer and dealer cannot be held accountable.
- Use the pool cover exclusively and always in combination with a suitable pool. Being applied to an unsuitable pool can not only lead to irreparable damage to property, but to serious injuries, too.
- Never close the roof if anyone is inside.
- Prohibition of handling and use of the roofed pool by persons in need of supervision.
- Maintain always a safety zone around the pool and roof at least 2 meters around the roofed pool and 2.5 meters above the highest point of the enclosed roof.
- Keep your hands and fingers away from moving parts of the roof.
- To prevent damage or injury from possible wind gusts, always open the roof completely and anchor the straps supplied with the product.
- Never hang anything on the roof and do not use it as storage space.
- When maintaining water with chemicals, always take care not to damage the roof by careless handling or due to improper use of chemicals. Never use excessive amounts of chemicals or concentrated chlorine.



- Never leave the roof unattended if it is partially open. In adverse weather conditions, open the roof and anchor it, see above.

Maintenance:

- Avoid keeping the water in the roof when it is folded - risk of damaging the mica section.
- Check regularly the pool roof for loose parts and tighten the screw connections if necessary.
- Never use cleaning agents, brushes, scouring pads on the roof, but only cold water and a soft cloth.
- The roofing material cannot withstand frost, so it is necessary to uninstall and store the roofing out of season. Make sure any time that the roof is dry before storing. The roof is intended for summer seasonal use only.
- If any part of the roof is visibly damaged, it is forbidden to use the roof and it is required to dismantle it.

Storage:

- Before storing the roof, make sure that all components are clean and dry.
- Fold the mica part loosely several times. When folding, make sure that there are no sharp folds that could damage the product.
- Store the roof in a dry, temperate environment at temperatures between 10 °C and 40 °C. We recommend using a desiccant.

Warranty:

- The warranty covers all components included in this kit, defects in material and workmanship under normal use according to the manual.
- Should any of the components be repaired, modified, damaged or misused by yourselves, the corresponding warranty for these components is void.
- This warranty does not apply if the product is used for commercial purposes or if the damage is caused by misuse, neglect, abuse of the user, vandalism, incorrect or excessive use of chemicals, exposure to extreme weather conditions, or negligence during installation and failure to carry out a necessary inspection.

Print errors reserved.

CONTACT:

www.bebonsports.com


Customer Centre tel.: +
8613575692035

e-mail: info@bebonsports.com





Package contents

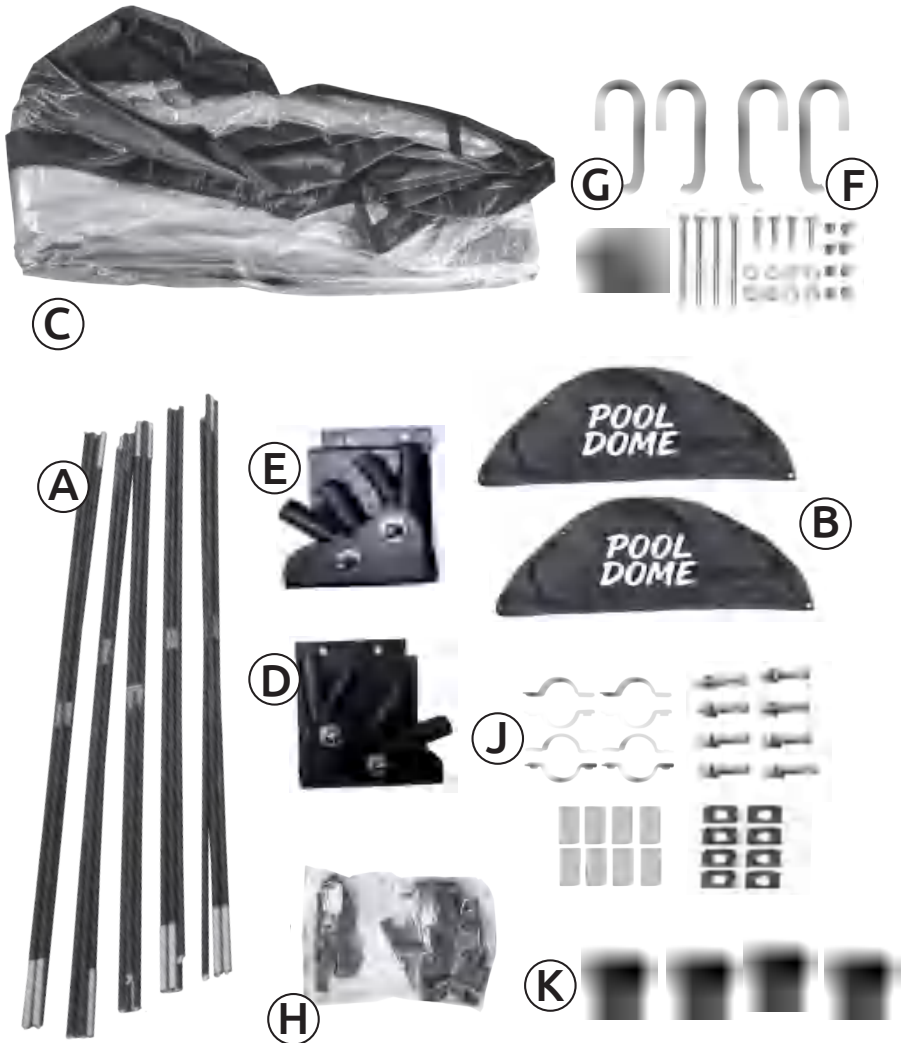

A – Rods(5pcs)

B – joint cover(2pcs)

C – Roof cover(1pc)

D – Roof joint left(1pc)

E – Roof joint right(1pc)

F – Suspension arm left(2pcs)

G – Suspension arm right(2pcs)

H – Tie-down straps with clasp(4pcs)

J – Metal ring clamp with rubber(4pcs)

K – Shoe under pool leg(4pcs)

Installation manual

1 • Check that the package contains all parts and fasteners according to the“Package contents“ list.

2 • There are two basic types of upper frame pipe connection frame pipes inserted into the connecting T-piece (see picture type A) or connected with a T-piece that is part of the assembly (see picture type B), prepare 2 metal ring clamps for type A and 4 metal ring clamps for type B.



3. Each time prepare two parts of circular clamps, making sure that one is threaded and the other is unthreaded. Thread the rubber covers onto the clamps. Use e.g. silicone oil for easier threading. Secure the joint edges with plastic caps.



4. Mount the metal ring clamps to the two opposite legs of the pool so that the threads of the screws point outwards from the pool. For type A, 1 metal ring clamp per leg, for type B, 2 clamps per leg. Do not tighten the bolts yet.






- 5. Put protective rubber sleeves on the suspended arms.**
Place a screw in the bottom of the suspended arms to connect the arms to the roof joints.



- 6. Hang the suspended arms, with the roof joints already screwed in, on the pool structure above the legs where you previously placed the clamps.**

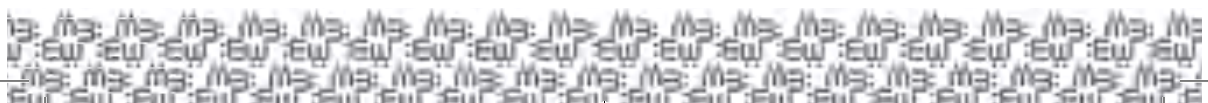



7. With the metal clamps you prepared in step 4, then attach the roof joints to the pool legs. For type A joints, simply connect at the bottom (stability is guaranteed by the arms hooked onto the T-joints), for type B joints, attach the joints at the bottom and top of the joint.



8. Then secure the arm to the pool frame with a long bolt. Always use both nuts and washers.





9. The assembled roof joints is like this.



10 Join the parts together to make 5 fibreglass rods.



11. In the next step unfold the roof cover itself and pull the fiberglass rods through the fabric tunnels. Before inserting the fiber rod into the sleeve, make sure to place the plastic cap on one end of the fiber rod for easier insertion.



12. Then connect the roof cover to the joints by inserting the fiberglass rods into the Nylon sleeve. The fabric tunnels must face the pool surface. For this step you will need the help of another person. Please make sure to insert them in order 1-5 like the photo below.






13. The pool roof is tensioned by closing.





14. The canopy must be fitted with tightening straps at the front and rear, two on each side . Just thread the straps through the eyelet and knotthen connect with the buckle. The tightening strap is then secured with a foot that slides under the pool leg.

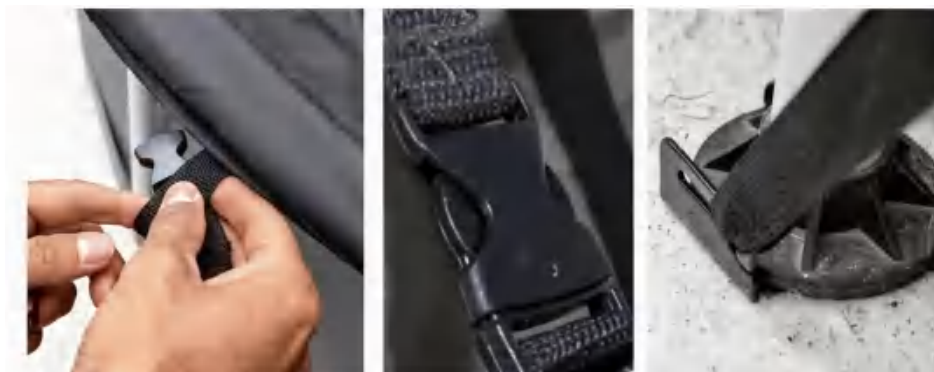

15. Thread a rope through the front of the roof cover to help open and close the roof cover more easily.





16. Finally, clip the cover to the roof joint.



The assembled pool cover is as below:

