


CHILDREN'S ELECTRONIC TOY CAR

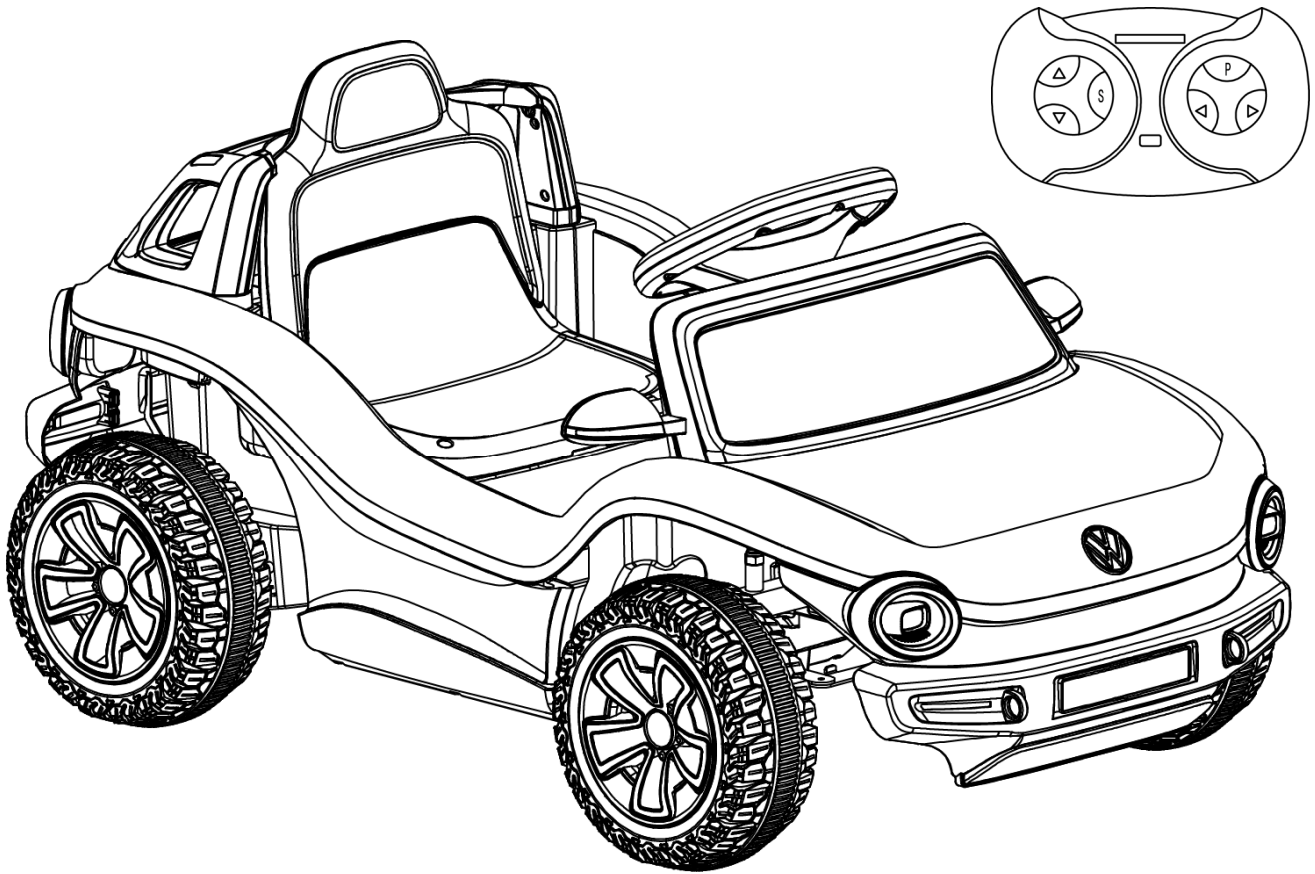

⚠ WARNING!

- Suitable for 3+ years.
- Maximum user weight: 30KGS.
- Your new vehicle requires adult assembly.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider(s).

OWNER'S MANUAL

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information.

Before first time use, charge the battery for at least 8-12 hours, no more than 20 hours.

If you have any question, please contact at L843485741@outlook.com

12V4.5Ah-390-RC

Table of Contents

- 1. About Your New Vehicle*
- 2. Parts List*
- 3. Parts Diagram*
- 4. Assembly Steps*
- 5. How To Operation Your Vehicle*
- 6. Charging The Vehicle*
- 7. Troubleshooting Guide*
- 8. Maintaining Your Vehicle*
- 9. Disposal Of Battery*

About Your New Vehicle

Thank you for purchasing our products, we want your child to enjoy this product for years to come. Keep these points in mind as you read this guide:













Suitable age:	3 ⁺ years	Battery:	DC 12 V 4.5 AH *1
Load Capacity:	Under 30KGS	Size of car:	980*565*470mm
Speed:	2.5-4Km/h	Carton size:	1000*515*260mm
Material:	PP	Optimum Temperature:	Below 40°C Avoid to use under burning sun
Charger:	Input: Shown on the charger	Charging time:	8-12 hours, at most 20 hours
	Output: DC12V	Fuse:	F7A, Self-resetting
	Current: DC 0.5A		

WARNING!



FOR THE SAFETY OF YOUR CHILD, PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS. KEEP THIS GUIDE FOR FUTURE REFERENCE.

- **ADULT ASSEMBLY REQUIRED.** The product contains small parts, which are for adult assembly only. Keep small children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.
- Not suitable for children under 36 months. Small Parts. Choking hazard.









Parts List

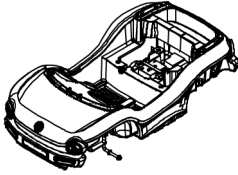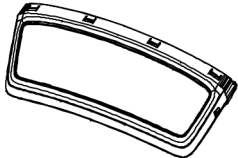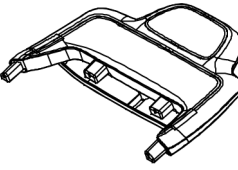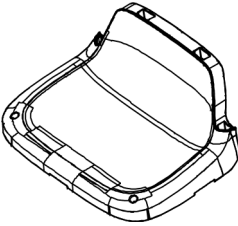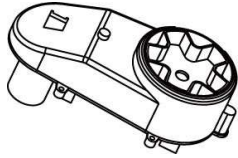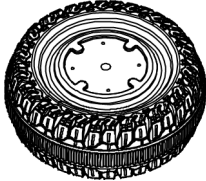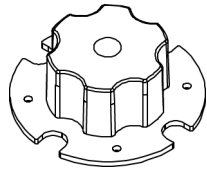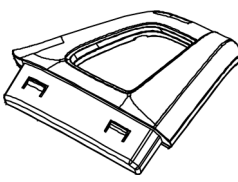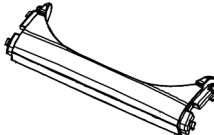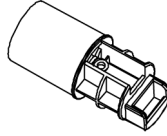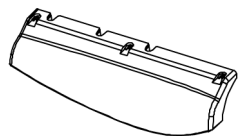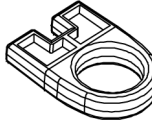PART NO	PART NAME	PICTURE	Q'ty (pcs)	REMARKS	PART NO	PART NAME	PICTURE	Q'ty (pcs)	REMARKS
1	Vehicle body		1		2	Windshield		1	
3	Seat A		1		4	Seat B		1	
5	Gear box		2		6	Wheel		4	
7	Drive parts		2		8	Wheel hub		4	
9	Rear baffle A		1 pair	Left & right	10	Rear baffle B		1	
11	Steering wheel		1		12	Fixed parts		1	
13	Decorative components		1 pair	Left & right	14	Trim		4	

Parts List

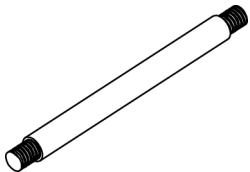PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS	PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS
15	Rear axle		1		16	Steering shaft		1	
17	Washer		6	Placed in the rear and front axle	18	Nut		4	Placed in the rear and front axle


Assembly package

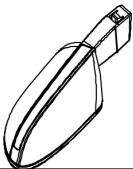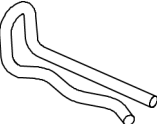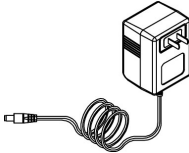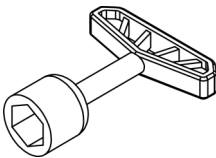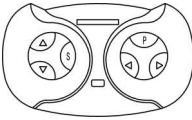PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS	PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS
19	Rear view mirror		1 pair	Left & right	20	M4X10 Screw		10	
21	M4X16 Screw		12		22	M3.5X14 Screw		2	
23	Bolt		1		24	M5 Nut		1	
25	Washer		1		26	Split pin		1	
27	Instruction manual		1		28	Charger		1	
29	Spanner		2		30	Remote control		1	Not included AAA1.5V battery

Parts Diagram

1	Vehicle body *1	2	Windshield*1
3	Seat A *1	4	Seat B *1
5	Gear box*2	6	Wheel *4
7	Drive parts*2	8	Wheel hub*4
9	Rear baffle A*2	10	Rear baffle B*1
11	Steering wheel*1	12	Fixed parts *1
13	Decorative components *2	14	Trim *4
15	Rear axle *1	16	Steering shaft *1
17	Rear view mirror *2	18	Washer *6
19	Nut *4	20	M4X10 Screw *10
21	M4X16 Screw *12	22	M3.5X14 Screw *2
23	Bolt *1	24	M5 Nut *1
25	Washer *1	26	Split pin*1


NOTE: Some Parts Shown are assembled on both sides of vehicle

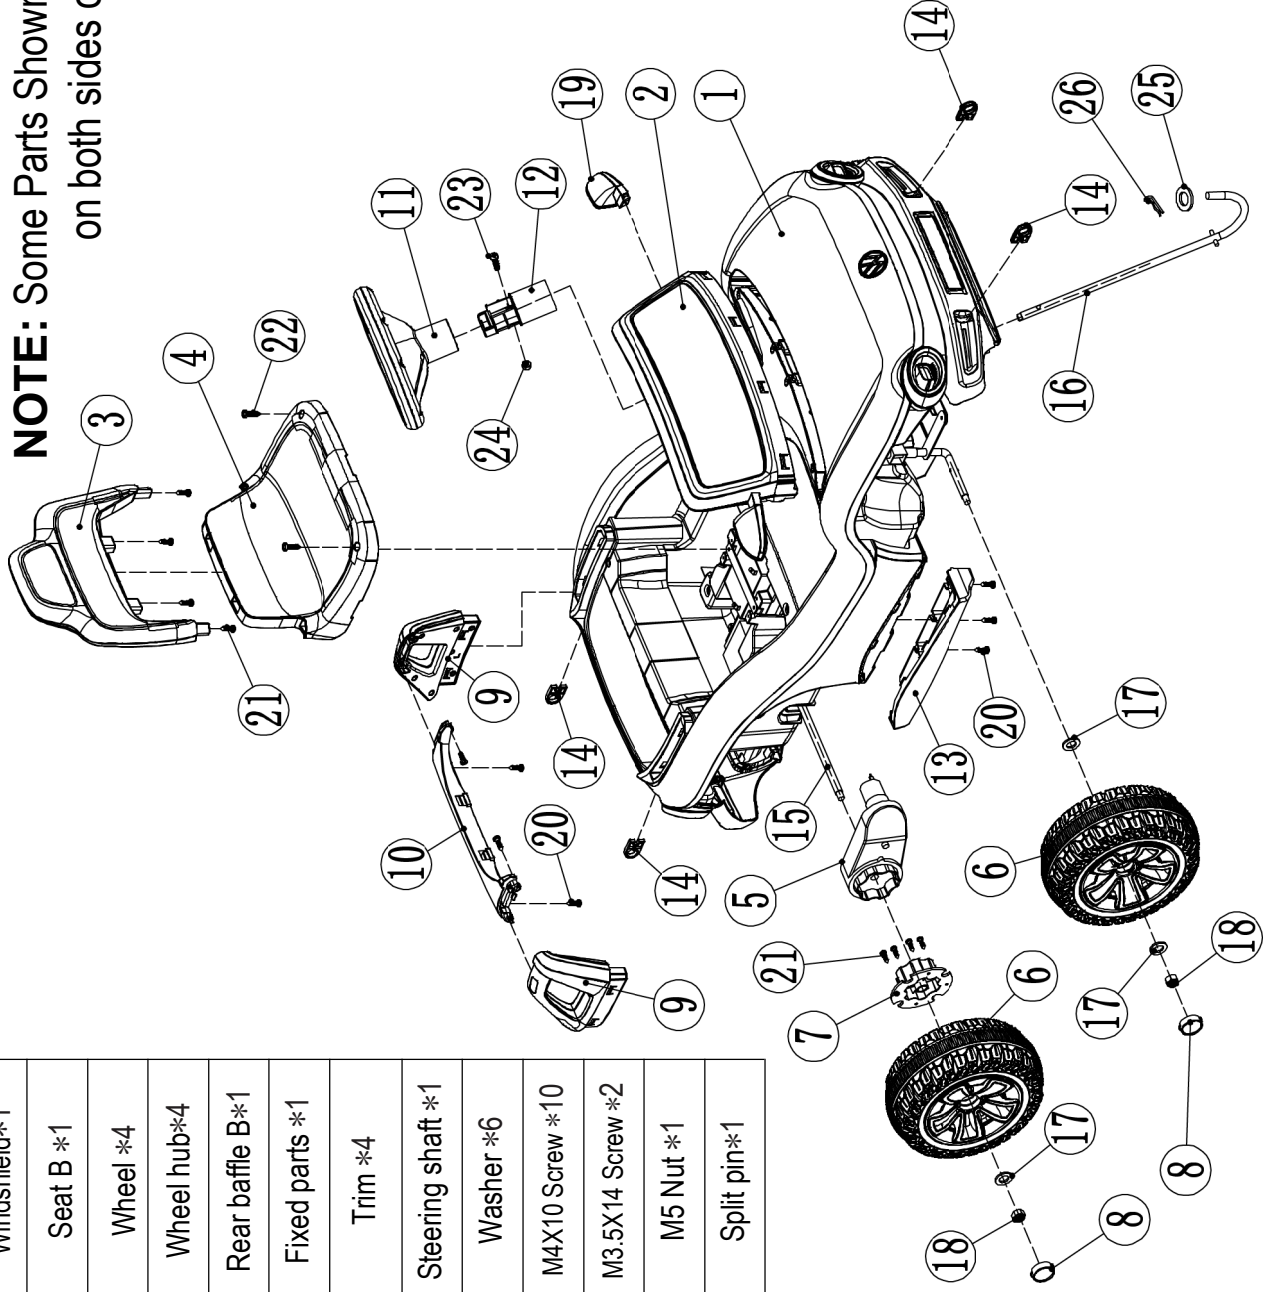

Tools Required




Screwdriver(not included)

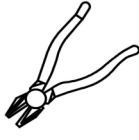

Pliers(not included)



Hammer(not included)

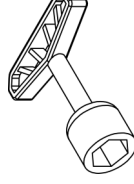


Spanner

Assembly Steps


Turn over the body before installing the vehicle. Remove the tie.

1. Install the bogie.

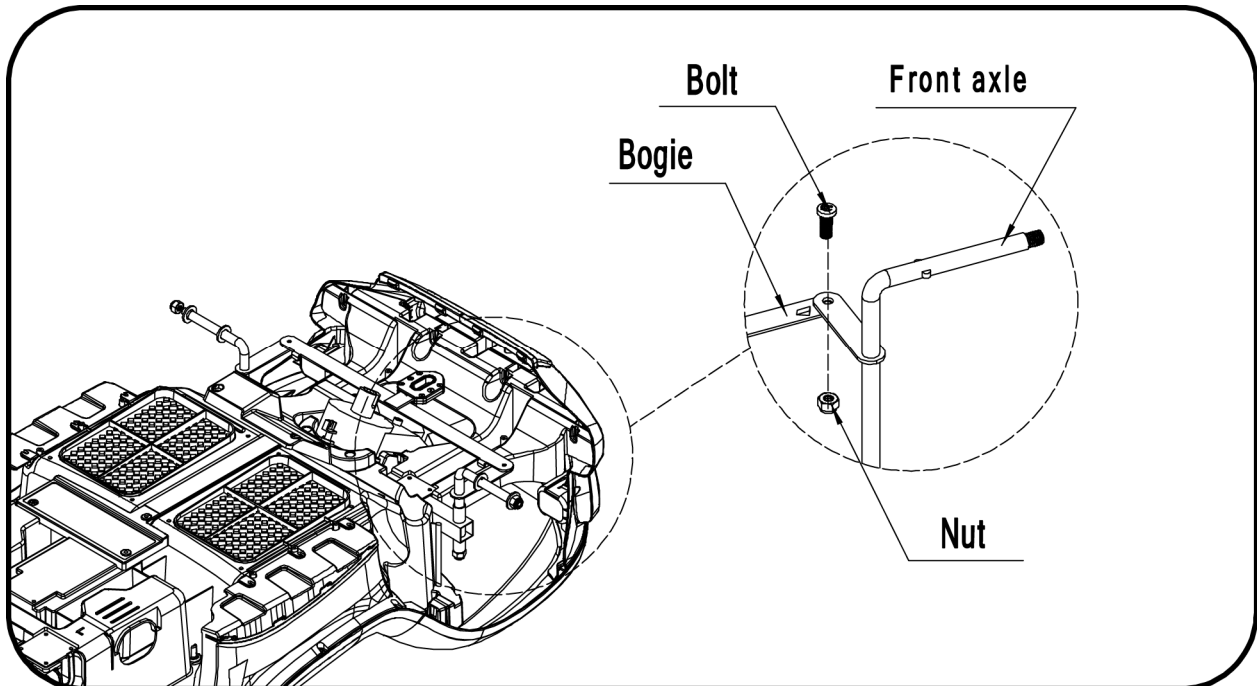

- As shown in the picture, loosen the bolt and nut on the bogie, rotate the front axle on the bogie to a fixed position, then fasten with the bolt and nut.


2. Install the decorative components.

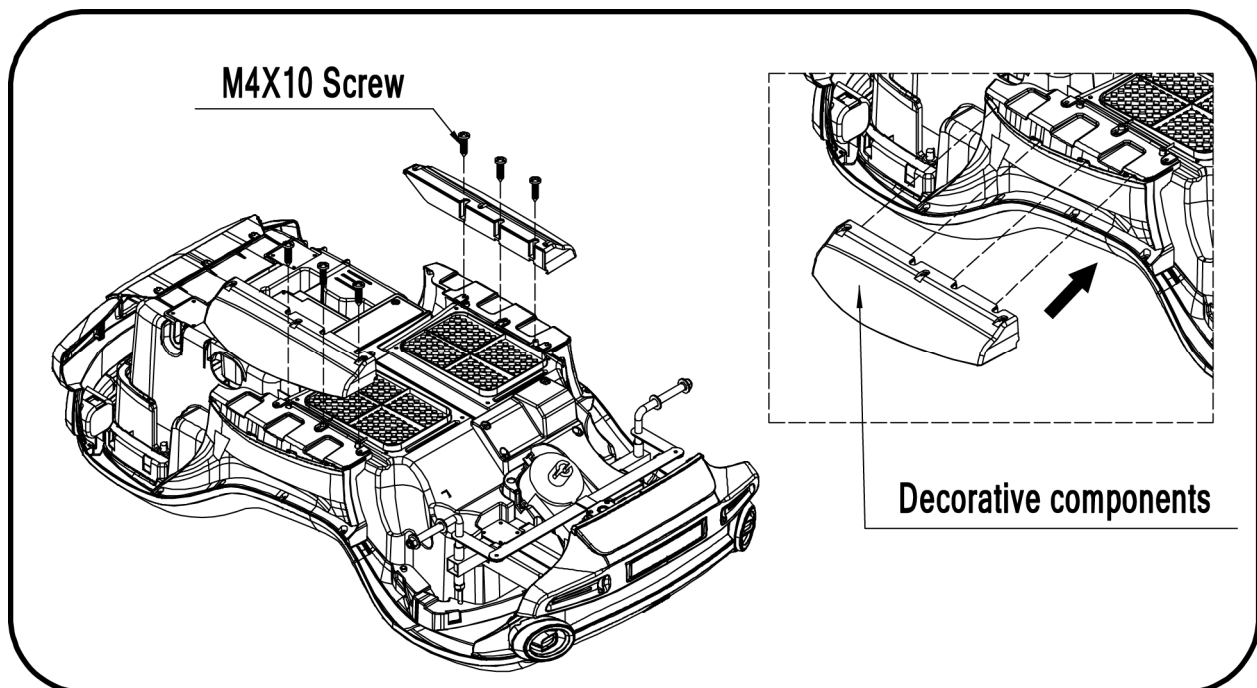

- As shown in the picture, push the decorative components according to the direction of the arrow and make sure to fit in position, then fasten with the screws.
- The other side is same as above.


Assembly Steps

3. Install the rear axle.

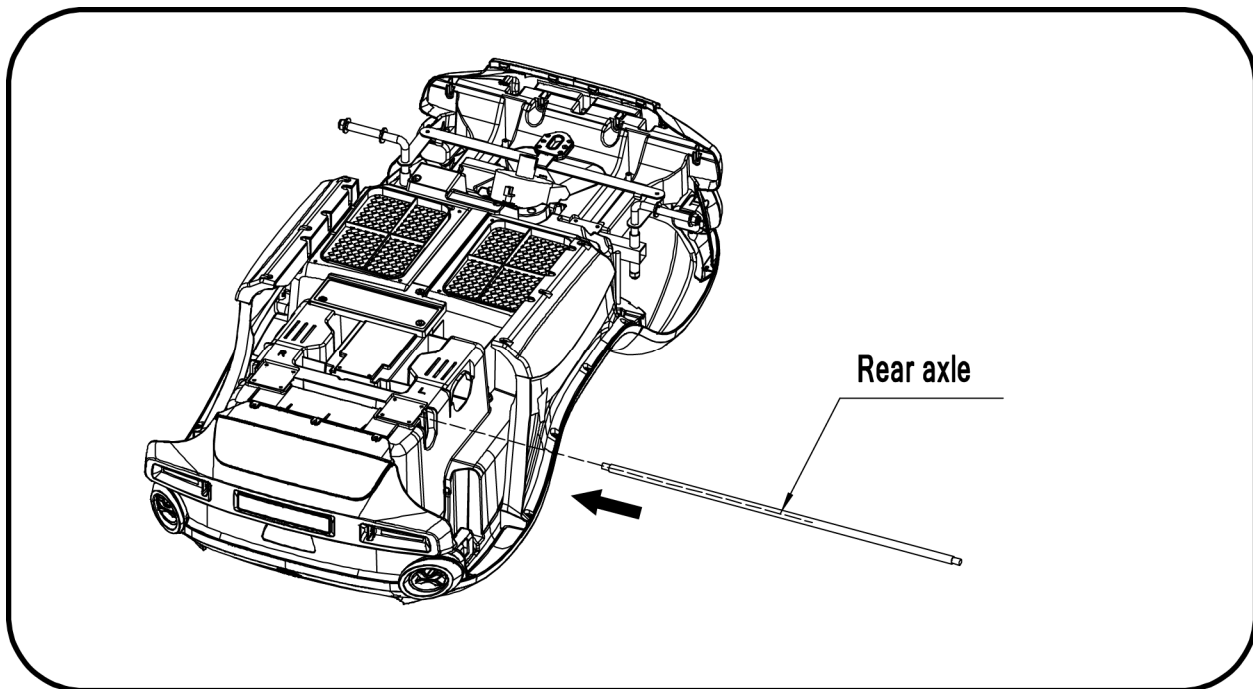

- As shown in the picture, disconnect the rear axle parts, then put the rear axle through the car body.


4. Install the drive parts.

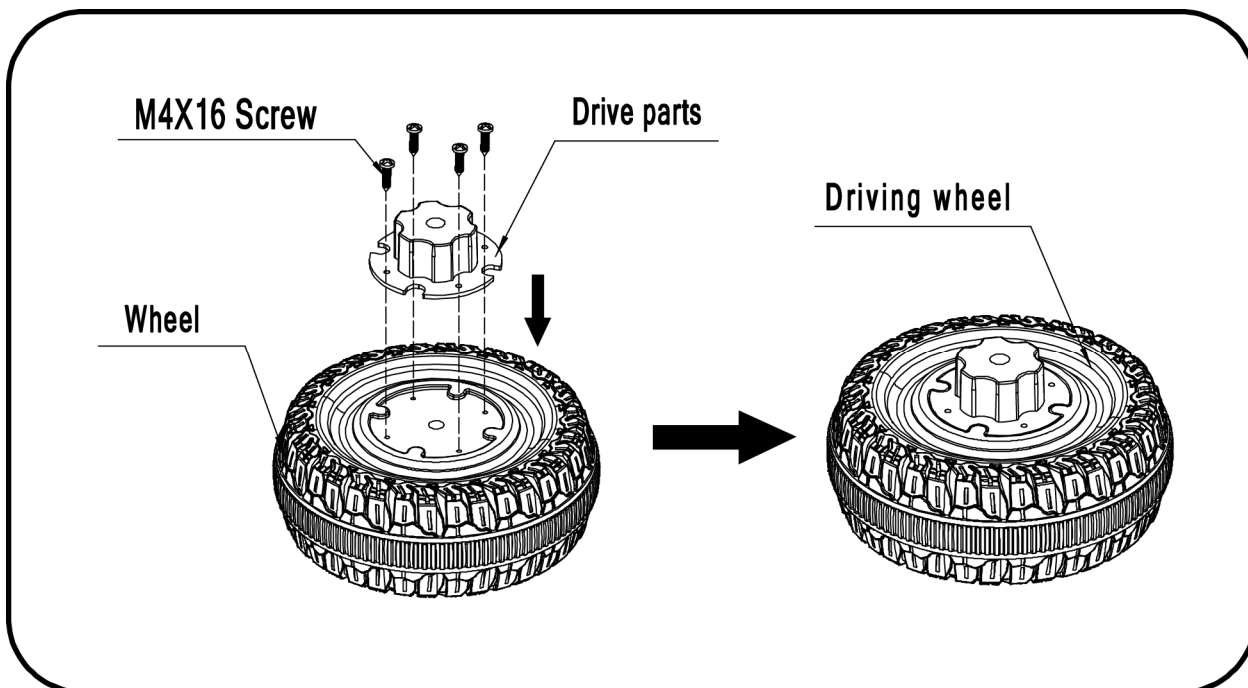

- As shown in the picture, install the drive parts to the wheel, and fasten with the screws.


Assembly Steps

5. Install the back wheels.

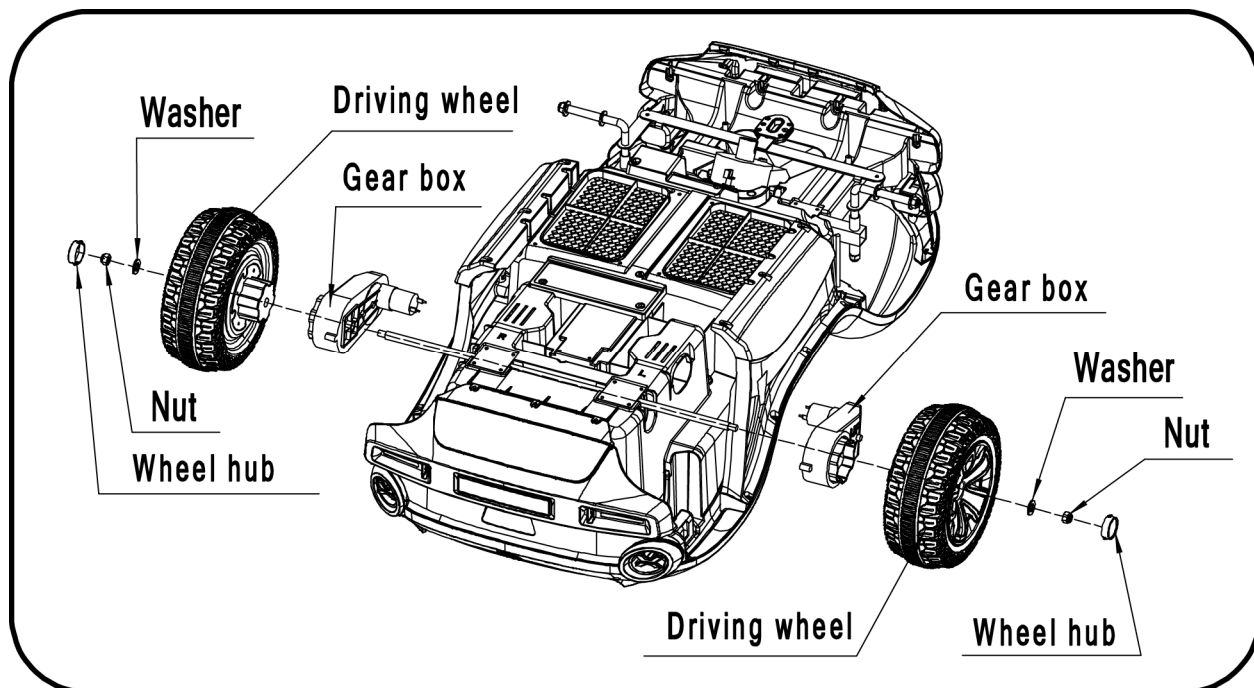

- As shown in the picture, install gear box to the side.
- Put the driving wheel through the rear axle, then install washers to both sides and fasten with nuts.
- Fix the wheel hub to both sides .


6. Install the front wheel.

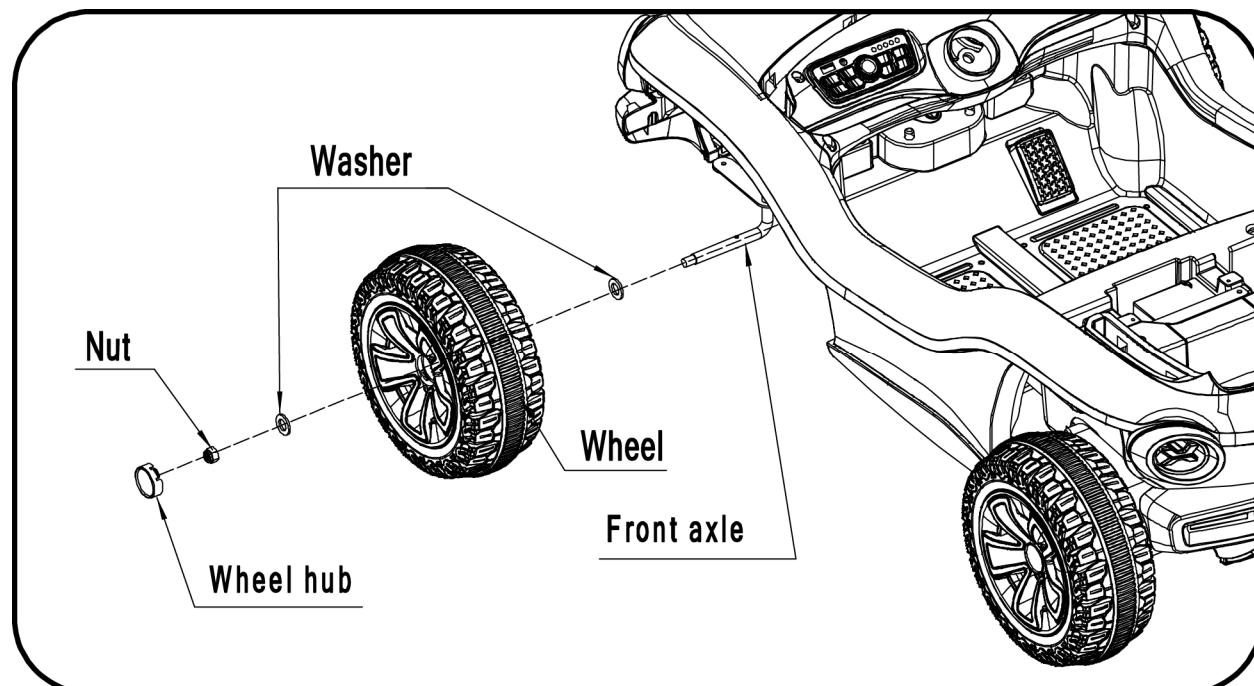

- Remove the nut and washer on the front axle.
- As shown in the picture, fix the washer, wheel, washer and nut onto the axle in proper order.
- Fix the wheel hub.
- Fix another wheel on the other side.


Assembly Steps

7. Install the steering shaft.

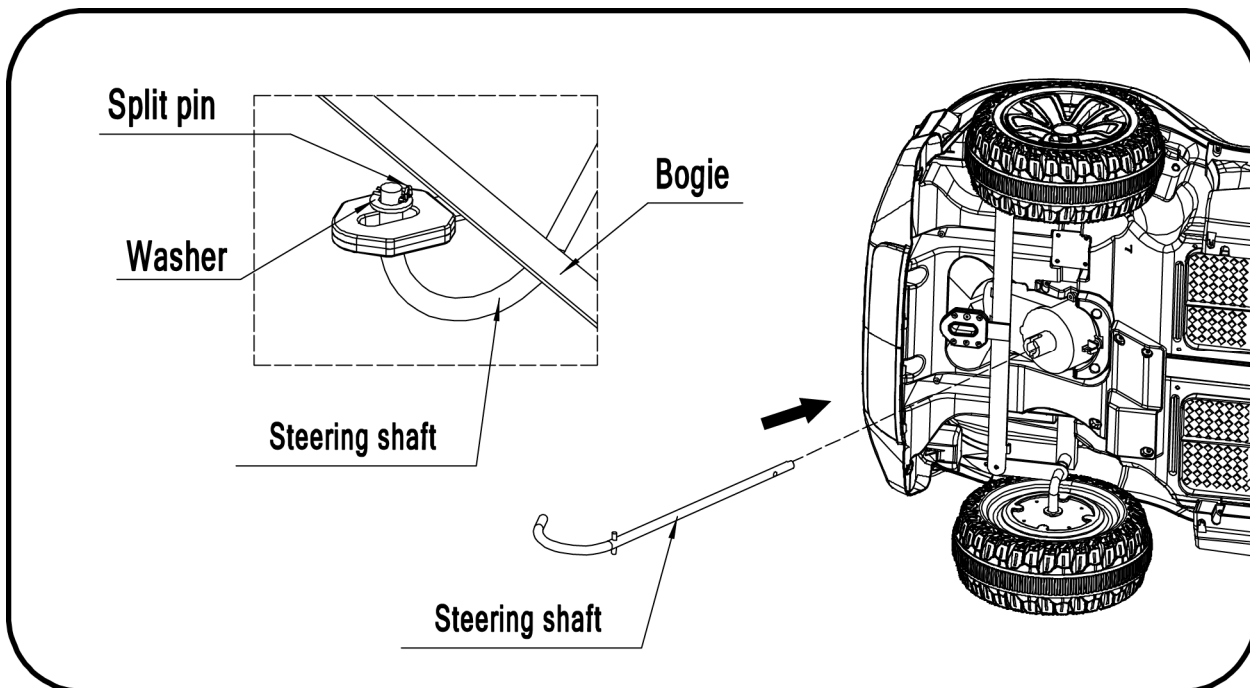

- Turn the vehicle on its side.
- Insert the straight end of steering shaft through the hole in the vehicle body and out through the hole in the dashboard.
- Insert the bent end into the hole in the front axle, secure it with split pins and washer.


8. Install the fixed parts.

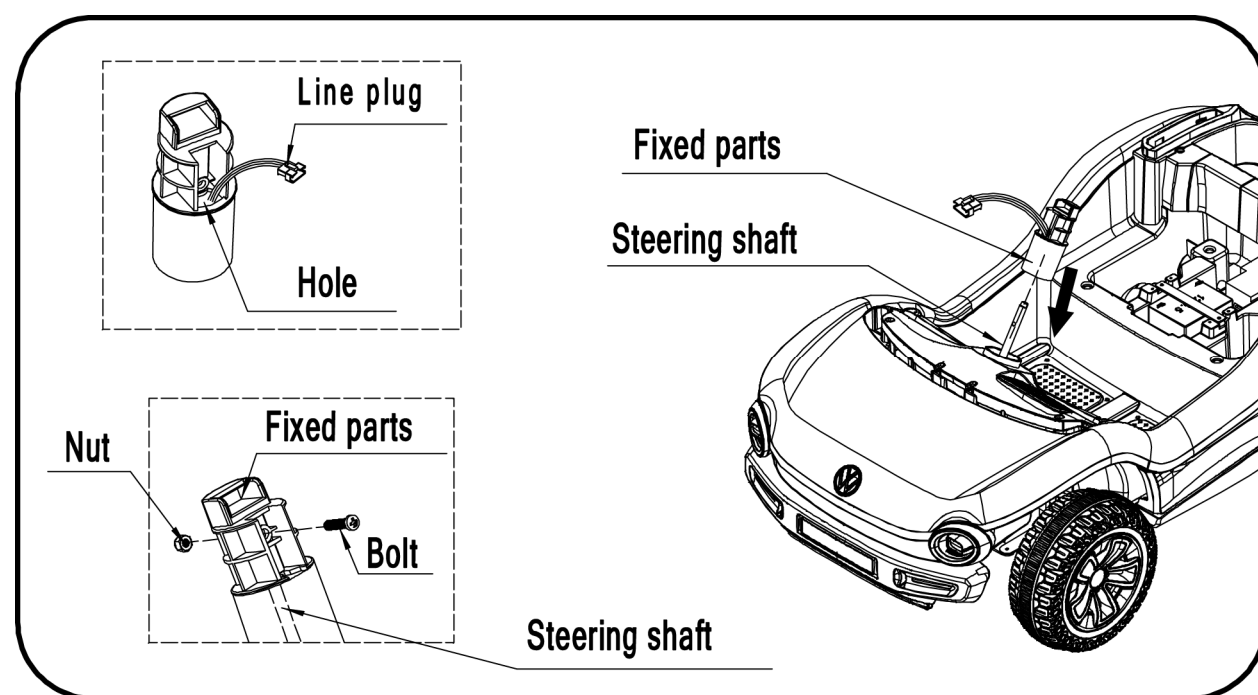

- As shown in the picture, pulling out the line plug.
- Then install the fixed parts to the corresponding place, and fasten with the bolt and nut.


Assembly Steps

9. Install the windshield and rear view mirror.

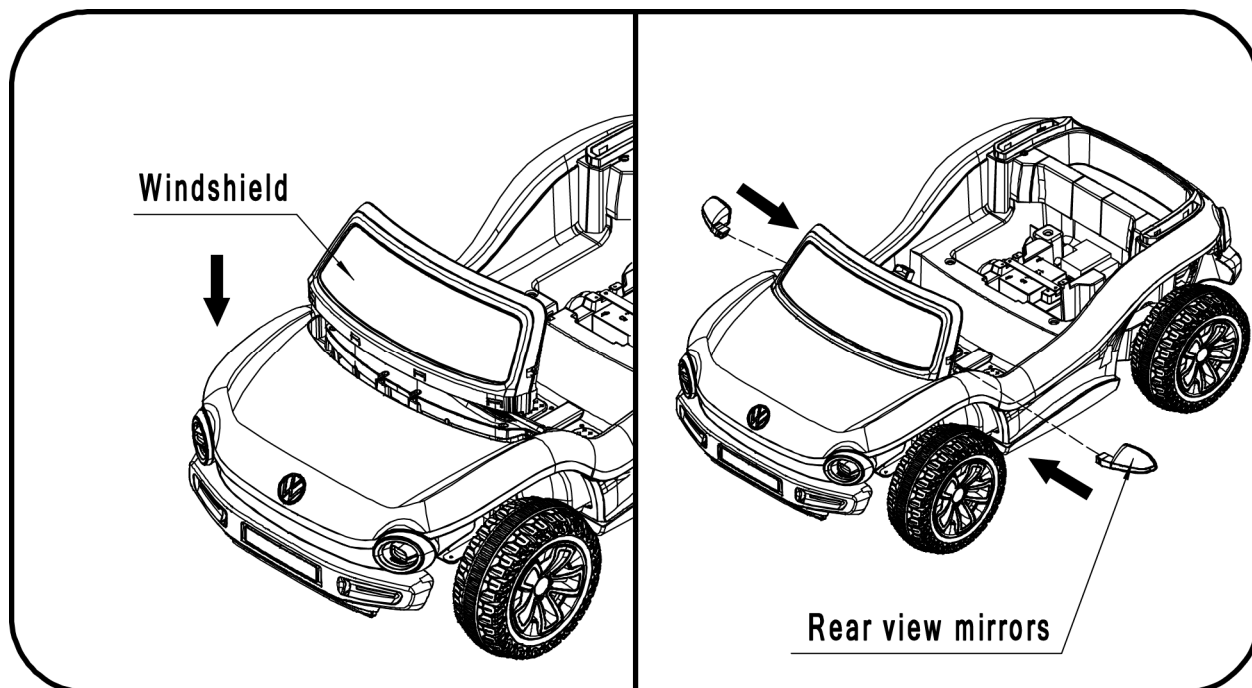

- As shown in the picture, press the windshield downward to fix it.
- As shown in the picture, push the rear view mirror according to the direction of the arrow and make sure to fit in position.

10. Install the steering wheel.

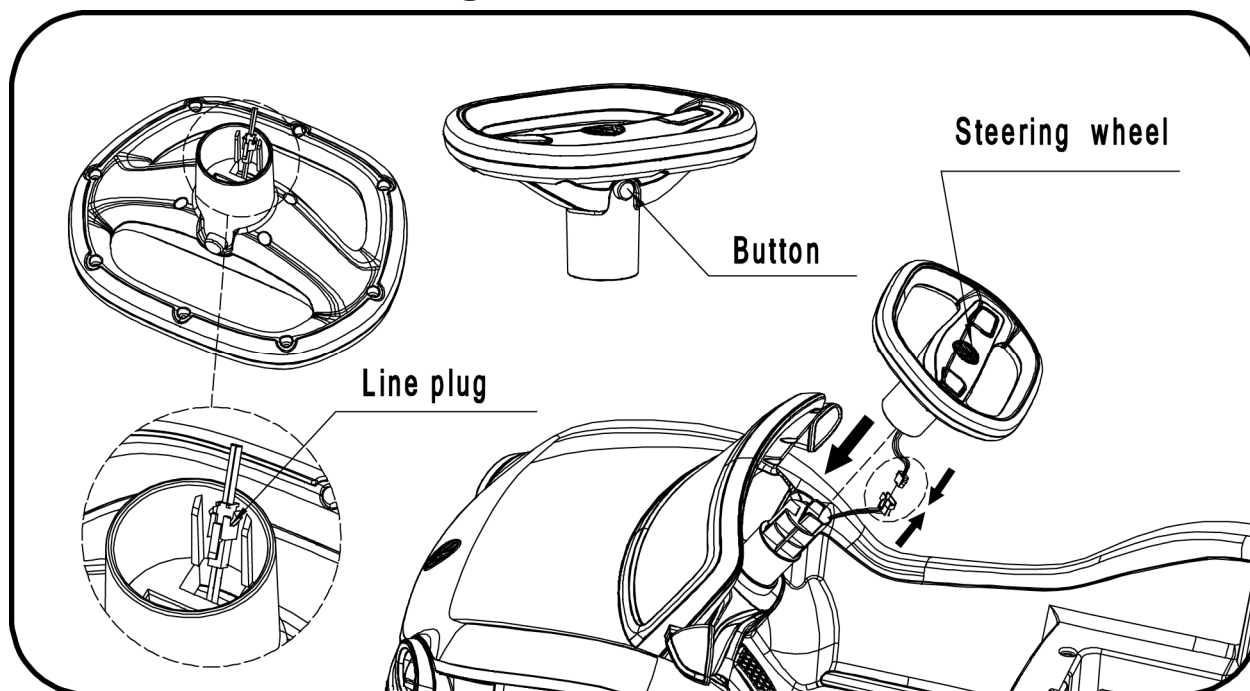


- As shown in the picture, connect the steering wheel and gauge board middle connector.
- As shown in the picture, press and hold the button, then install the steering wheel to the corresponding places.


NOTE: When installing the steering wheel, it's better to put the line plug into the slot of steering wheel, to avoid the steering wheel nip the wire.

Assembly Steps

11. Install the rear baffle.

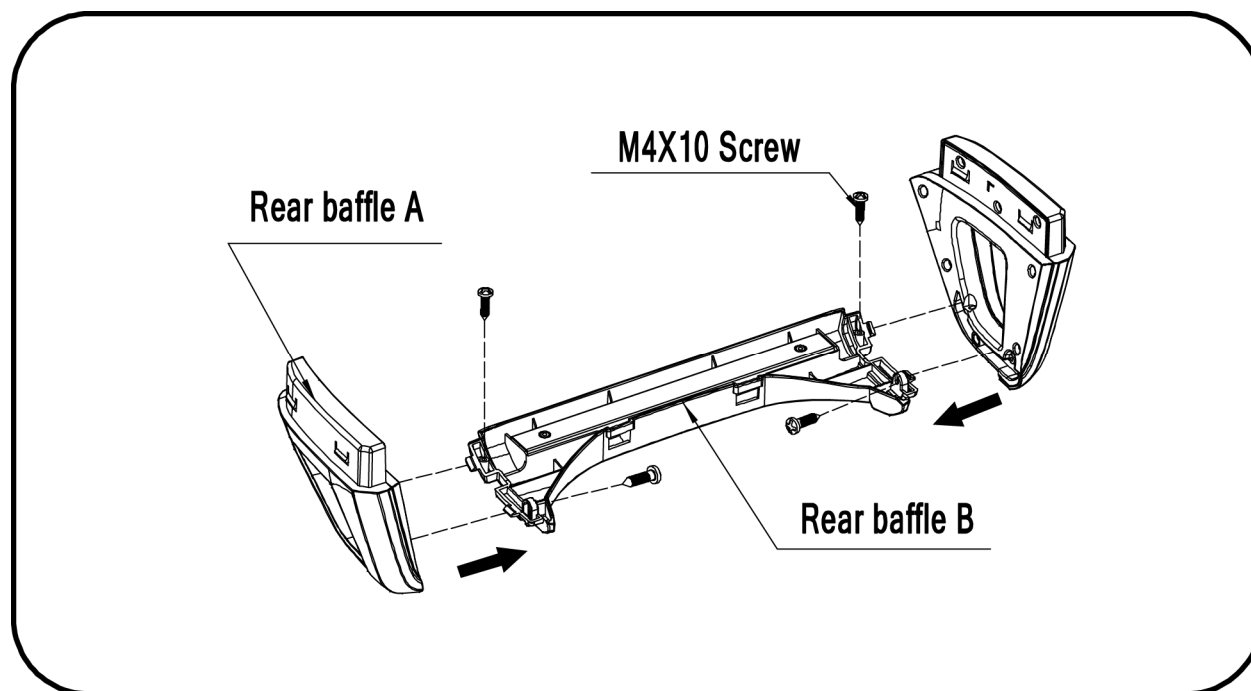


- As shown in the picture, install the rear baffle A onto rear baffle B, and fasten with the screws.

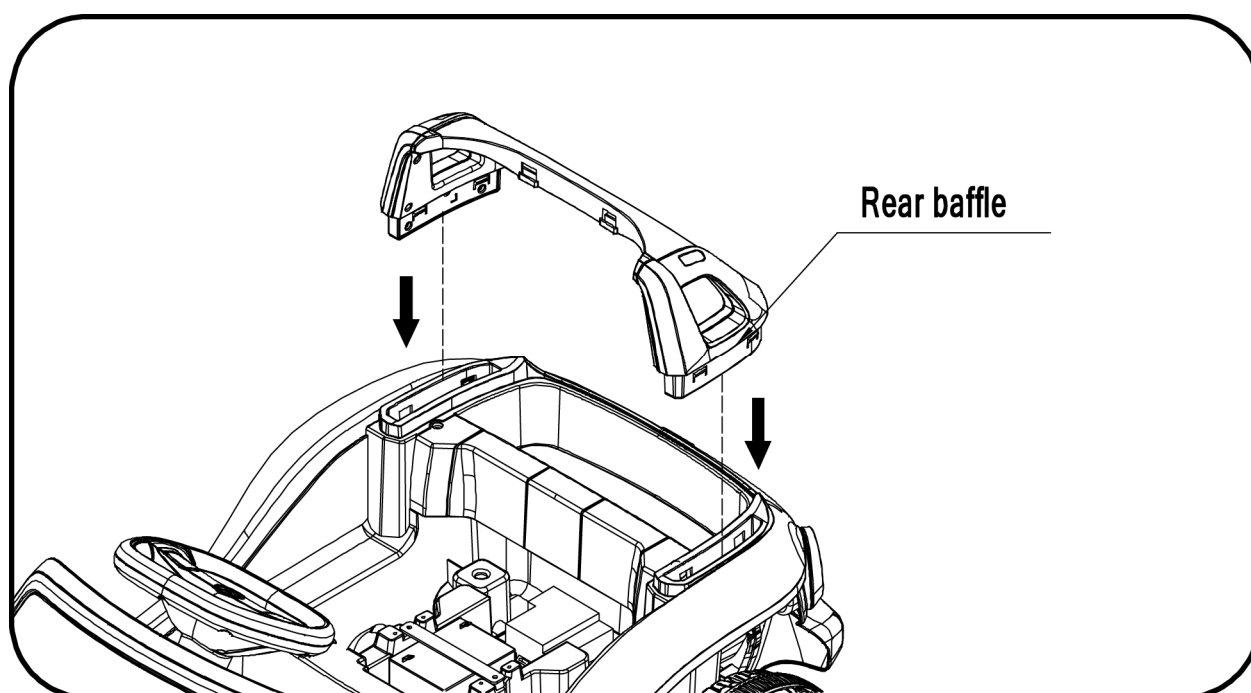

- As shown in the picture, press the rear baffle downward to fix it.


Assembly Steps

12. Connect the power supply.

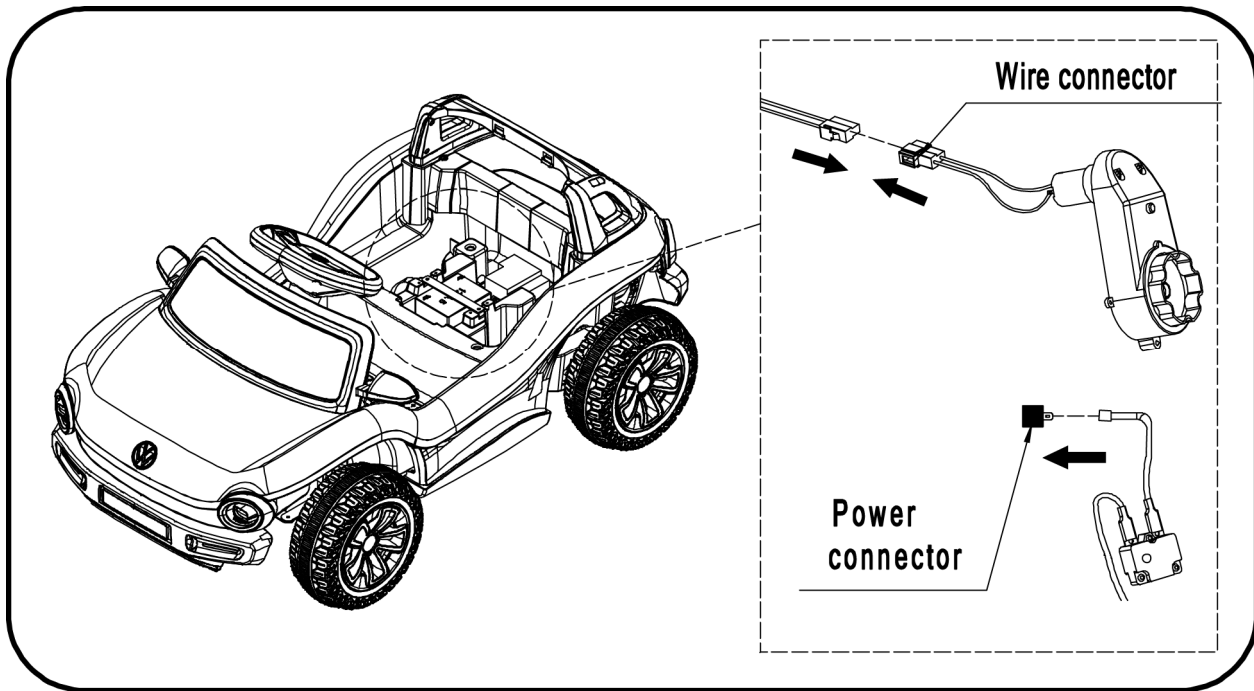

- As shown in the picture, the wire connector plug butt.
- Plug the power connector into the terminal on battery as shown.


13. Install the seat B.

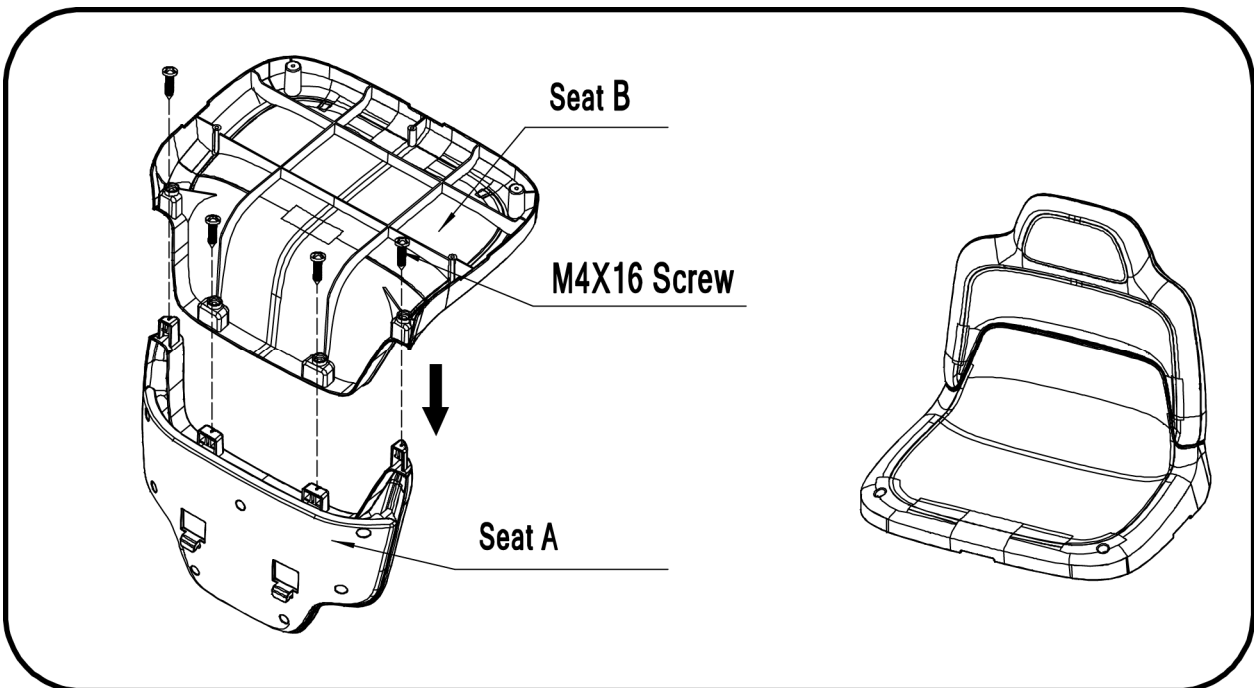

- As shown in the picture, install the rear seat B onto seat A, and fasten with the screws.


Assembly Steps

14. Install the seat.

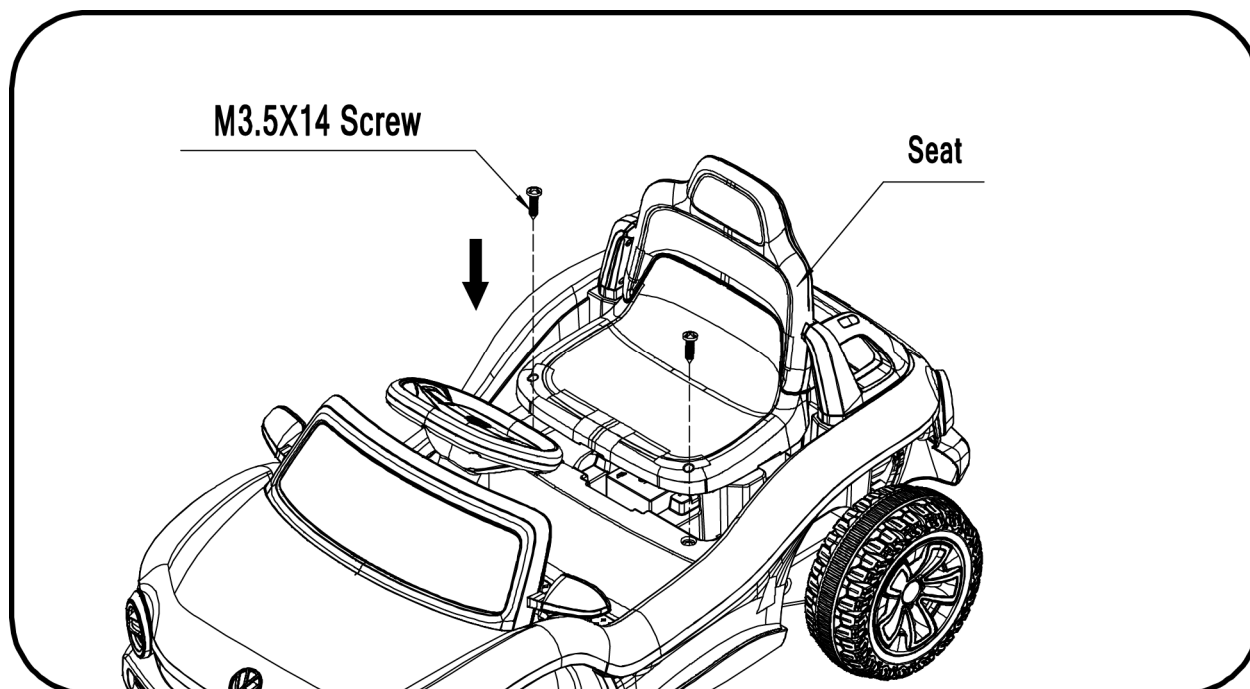


- As shown in the picture, install the seat to the corresponding place, and fasten with the screws.

15. Install the trim.

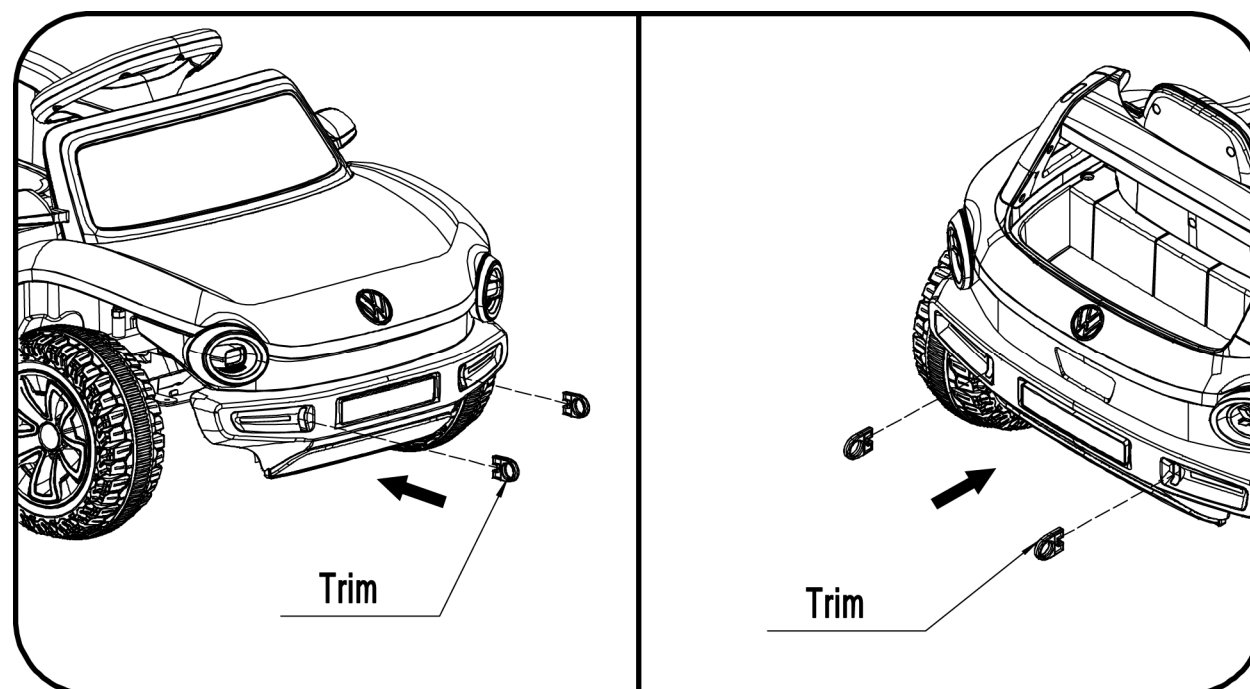

- As shown in the picture, push the trim according to the direction of the arrow and make sure to fit in position.

Assembly Steps

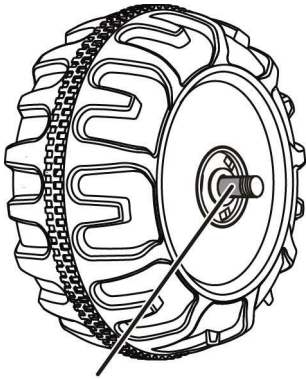

GAP

IMPORTANT SUPPLEMENT TO INSTRUCTION MANUAL

After assembling any wheel to the axles, please check the gap between the screw thread and the collapsible (refer to below picture), if the gap is too big, please add two or three washers inside the wheel, But after tightening the nut outside the wheel, please turn the wheel by your finger to check if the wheel can run smoothly, this is very important, because if the wheel can run smoothly, it is ok, but if the nut press the wheel and the wheel can't run smoothly, the motor will be broken easily! Then you need to decrease one or two washers to make sure the wheel can run smoothly!

How To Operate Your Vehicle



WARNING!

PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes and never allow more than one rider.
- Always sit on the seat.
- Suitable for age 3⁺ years; Maximum user weight is 30KGS.
- Not to be used in traffic. This toy has no brake.
- This toy is unsuitable for children under 3 years due to its maximum speed.
- The battery on the vehicle is not replaceable.

Must confirm before using that following work which is already finished:


- **Important!** Before using the vehicle for first time, the battery needs to be charged for 8 to 12 hours, no more than 20 hours. Only an adult can charge or recharge the battery.
- Finishing the complete car to assemble according to the steps that the manual described. The plug-in package of storage battery has already been inserted well, the power has already been put through.
- All places to need the screw guarantee the screw has already been locked.

Rules for Safe Riding

READ THESE RULES ALOUD TO YOUR CHILD AND THEIR PLAYMATES AND MAKE SURE THEY UNDERSTAND THEM!

- This toy is no break. Always wear a helmet and protective clothing when riding.
- Direct Adult Supervision Required.
- Keep Children within Safe Riding Areas.
- Never driving in roadway, near motor vehicles, on lawn space, on near steep inclines or steps, swimming pools or other bodies of water.
- Use the toy only on flat surfaces. such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is not recommended to drive the vehicle on wet surfaces or on lopes of greater than 15 degrees.
- Do not use this vehicle outdoors when it is raining or snowing.
- Make sure you come to a complete stop before changing directions from forward to back.
- Please follow the correct weight and age limits allowed to drive this vehicle.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- In order to avoid accidents, please ensure the vehicle is safe before riding.
- Do not let any child touch the wheels or be near them when the car is moving .
- This vehicle has adjustable play seat belts. please instruct children how to tie the safety belt before using, guarantee the security.


How To Operate Your Vehicle

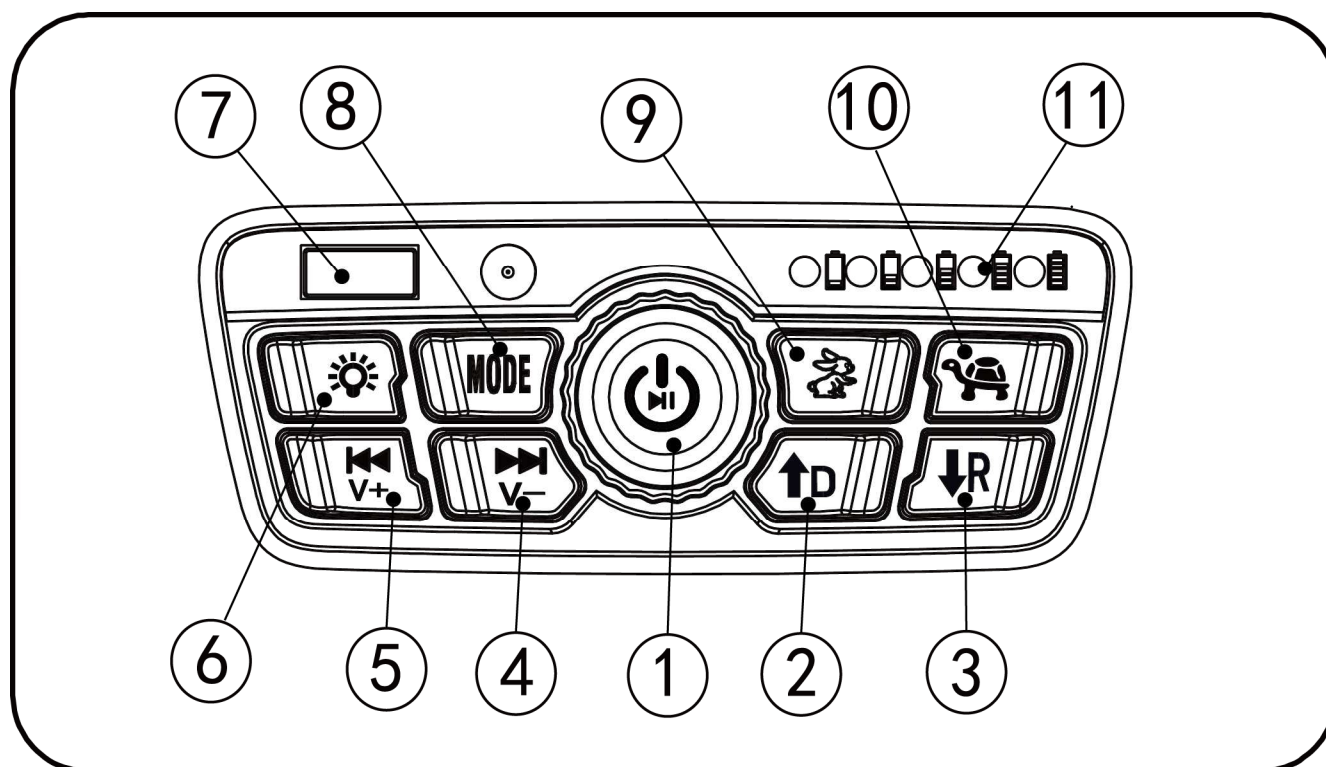

1. General power Button : press the "General power Button "for 2 to 4 seconds, power connected.
/ SCAN Button: you can control the music play and pause.
2. Forward Button.
3. Reverse Button.
4. Next Song: Switch songs / Increase volume.
5. Last Song: Switch songs / Decrease volume.
6. Light Button.
7. Storage device slot.
8. Mode Button.
9. Fast Button.
10. Slow Button.
11. Battery indicator : Shows battery power and charge level.

How To Operate Your Vehicle

Use Operation(Ensure the power switch has been turned on)

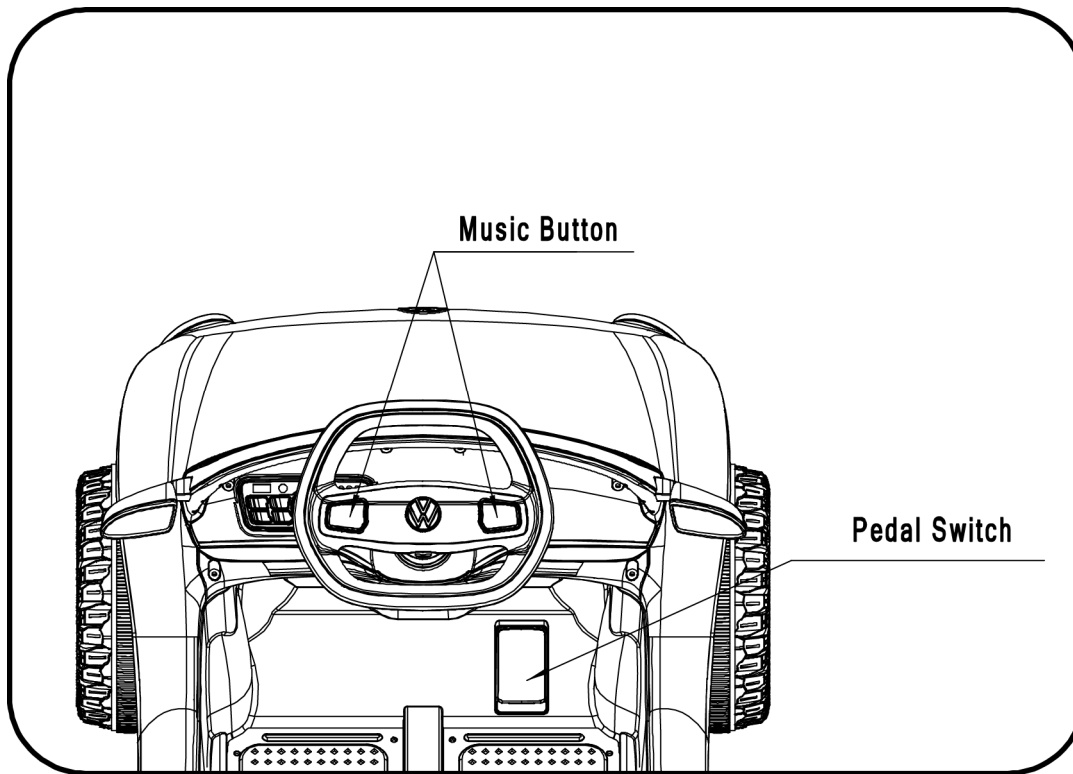


IMPORTANT!

Always stop vehicle when changing the speed or direction to avoid damage the gear box and motor.

- (1) Turn on the general power switch first.
- (2) Forward
 - Press the "Forward Button"
 - Press the pedal.
 - The vehicle drives forward.
- (3) Stop
 - Remove foot from the accelerator pedal to stop the car.
- (4) Reverse
 - Press the "Reverse Button"
 - Press the pedal.
 - The vehicle drives backward.
- (5) Turn on the general power switch ,Then you can enjoy music by push any music button.
- (6) Turn on the "FAST and SLOW Button" ,control the speed of the car.

How To Operate Your Vehicle

(8) How to use the remote controller:

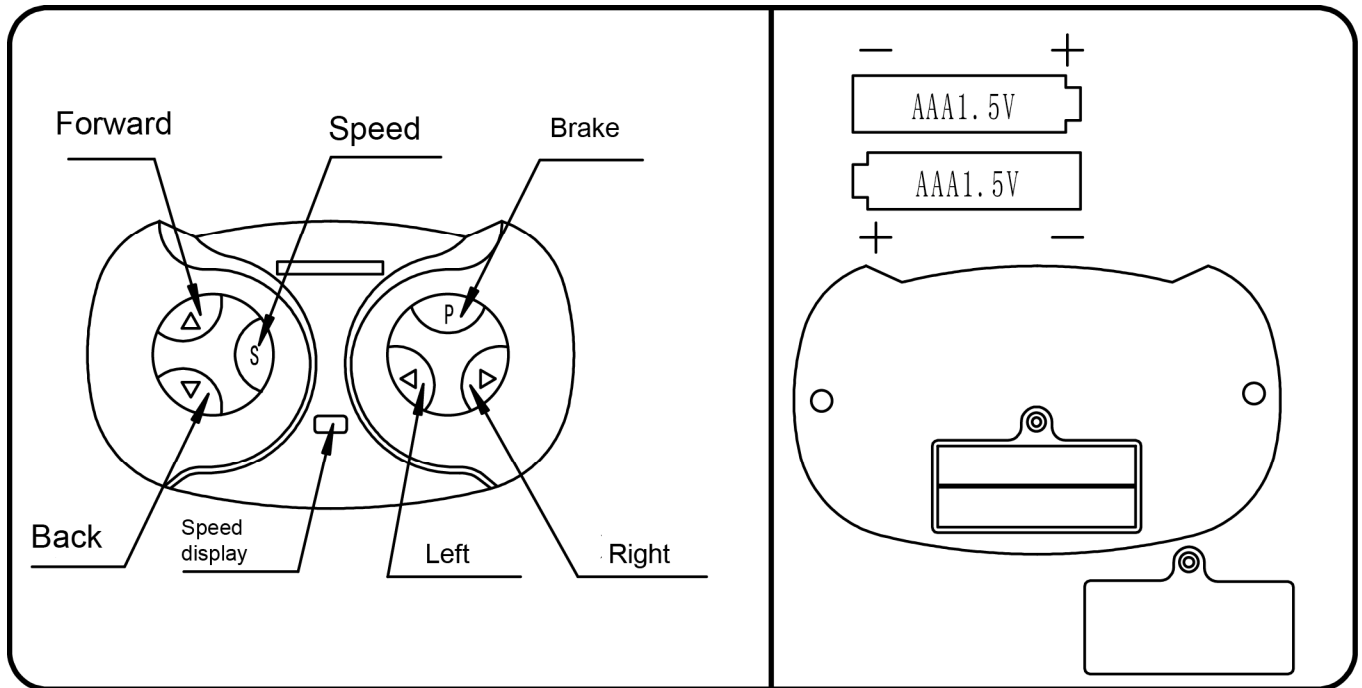

WARNING! Not for children under 3 years. Small parts. choking hazard

- Load two AAA (1.5V) batteries according to the diagram .
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The packaging must be retained since it contains important information.

2.4G Remote Control Instructions

Step 1: The Remote Controller is loaded with two AAA batteries.


Step 2 : Turn off the power switch on the vehicle .

Step 3 :Hold down "▲" & "▼" keys for 3 seconds start match code, The first LED flicker ,Now turn on the vehicle power switch. The red indicator lights stop flashing,and the code is successful.

Keys caption: "S" set up speed , 1 led lit up is low speed . 2 led lit up is medium speed . 3 led lit up is high speed
"▲" Forward , "▼" Back, "◀" Left, "▶" Right, Press "P" key hold the brake, ALL LED flicker.

How To Operate Your Vehicle

Circuit diagram

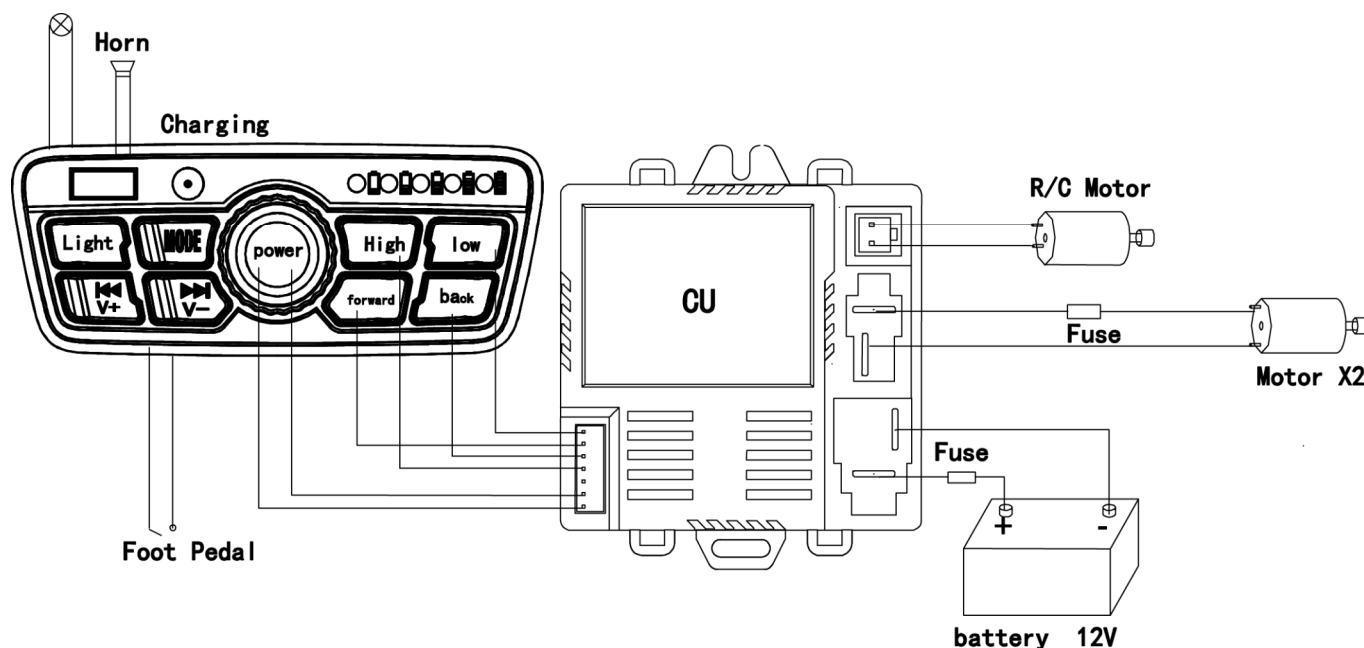

Charging Your Vehicle

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries.
- Do not mix alkaline standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- The transformers or battery charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.

WARNING!

• PREVENT FIRE AND ELECTRIC SHOCK:

- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product. Overheating, fire or explosion could occur.
- NEVER modify the electric circuit system. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
- Do not allow direct contact between battery terminals. Fire or explosion can occur.
- Do not allow any type of liquid on the battery or its components.


Charging Your Vehicle

WARNING!

• **PREVENT FIRE AND ELECTRIC SHOCK:**

- Explosive gasses are created during charging. Do not charge near heat or flammable materials. Charge the battery in a well-ventilated area **ONLY**.
- **NEVER** pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case **ONLY**.
- Charge the battery in a dry area **ONLY**.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**
- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock. Only adults may handle or charge the battery. **NEVER** allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. **DO NOT** charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
- A recommendation for adult supervision of young children.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

- The charging input socket is **ON THE GAUGE BOARD**.
- The **POWER SWITCH** must be turned in **OFF** position when charging.
- Before the first use, you should charge the battery for 8-12 hours. Do not recharge the battery for more than 20 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, no more than 20 hours.

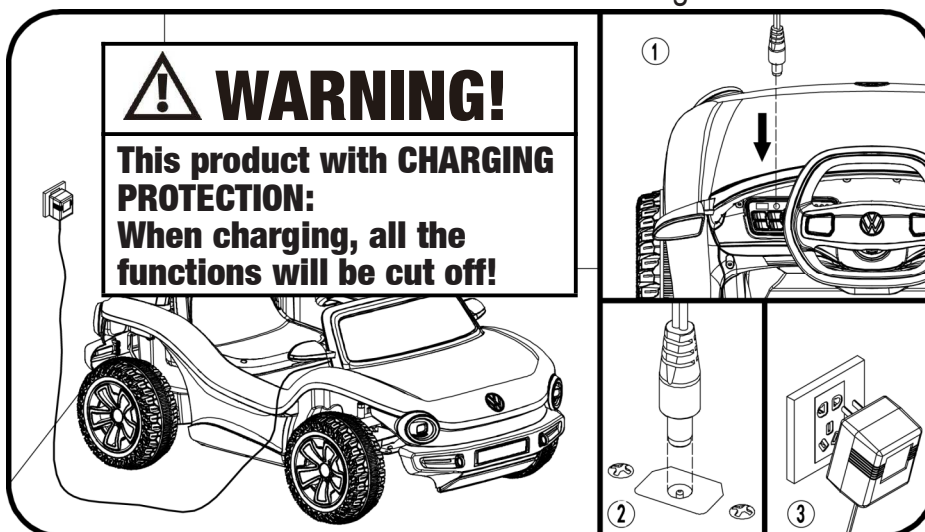

1. Find The charging input socket on the gauge board;
2. Plug the charger port into the input socket;
3. Plug the charger plug into a wall outlet. The battery will begin charging.

Troubleshooting Guide


■ PROBLEM: The vehicle does not run

PROBLEM CAUSE: The battery may low on power.

After each use, or once a month minimum, charge the battery for 8-12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Thermal fuse has tripped.

The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 5-20seconds before becoming operational again. The self-resetting fuse is under the seat (Refer to the picture.)

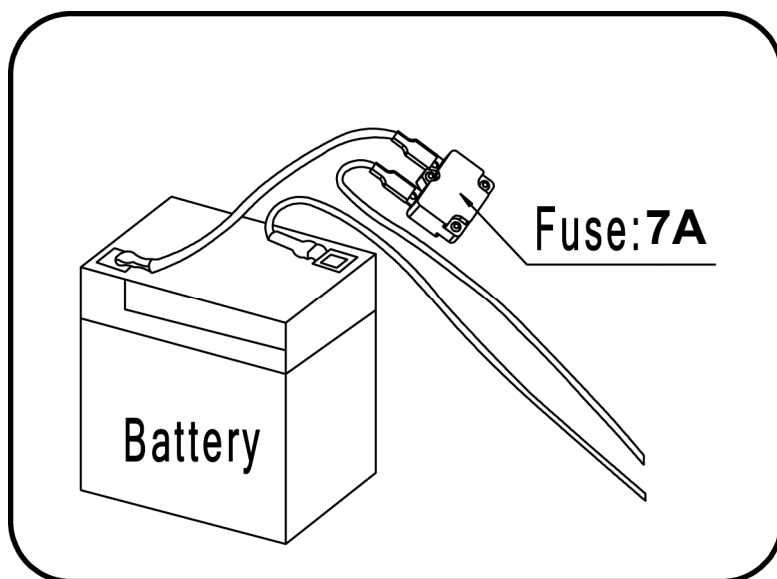

To avoid the fuse cut off the power, follow these guidelines:

DO NOT overload the vehicle, Maximum weight allowed : 30KGS.

DO NOT tow anything behind the vehicle.

DO NOT drive up steep slopes.

DO NOT drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.

DO NOT drive in very hot weather, components may overheat.

DO NOT tamper with the electric system, Doing so may create a short circuit, causing the fuse to trip.

POSSIBLE CAUSE: Wheel nuts are loose.

If the nuts are not tight, the wheels will not engage the forward gears. Tighten the nut with the nut wrench.

POSSIBLE CAUSE: Battery connector or wires are loose.

Make Sure the battery connectors are firmly plugged in to each other.

POSSIBLE CAUSE: Battery is dead.

Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced.

POSSIBLE CAUSE: Electric system is damaged.

Water may have corroded the system, or loose dirt, gravel or sand might have jammed the switch.

POSSIBLE CAUSE: Motor is damaged.

The motor needs professional repair.

■ PROBLEM: The battery will not recharge.

POSSIBLE CAUSE: Battery connector or adapter connector is loose.

Make sure the battery connector and adapter connector are firmly plugged together.

POSSIBLE CAUSE: Charger is not plugged in.

Make sure the charger is plugged into the wall outlet and the power flow to the outlet is on.

POSSIBLE CAUSE: Charger is not working.

Is the charger warm while charging? If not, the charger may be broken and may need to be replaced.

Troubleshooting Guide

■ PROBLEM: The vehicle does not run very long.

POSSIBLE CAUSE: Battery may be undercharged.

You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 8 to 12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Battery is old.

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new One.

■ PROBLEM: Battery buzzes or gurgles when charging.

This is normal and not a cause for concern. It may also be silent when charging, which is also normal.

■ PROBLEM: Charger feels warm when recharging battery.

This is normal and not a cause for concern.

Maintaining Your Vehicle

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Disposal Of Battery

Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.
- The battery must be charged only by adult .Please charge the product before using!
- The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process.
- Any rechargeable battery must only be charged under adult's supervision.
- Battery charger shall regularly check the wires, plugs. casing and other parts for damage and found damage should stop using and restored.
- Open the battery cover on the remote control, and put two pieces of batteries,paying attention to batteries polarity. Replace the battery cover and lock with screws (please replace the battery according to the above steps and should be done by adult) .
- All batteries should be inserted with the correct polarity.
- Non-rechargeable battery should not be charged, please remove any running-off battery from the toy.
- Do not use old and new batteries together, or mix different types of batteries.
- The battery charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.

Our products are suitable for

ASTM F963; GB6675,GB19865; EN71 and EN62115 standard.