

2300 Corporate Center Dr. Thousand Oaks, CA 91320

www.erishomeproducts.com info@erishomeproducts.com

Office: 805.375.6333

ERIS ALUMINUM FRENCH & SINGLE DOOR INSTALLATION GUIDE

INSTALLATION KIT CONTENTS:



FRAME (4) PIECES: upper frame, right frame, left frame, bottom frame



BRACKETS



HANDLE



LOCK KNOB




SCREW CAPS



SCREWS: 3 inch screws for handle, 3 inch wood screws, four 1.5 inch screws to screw side track to bottom track

Frame Assembly


1. Identify the correct frame pieces to attach.

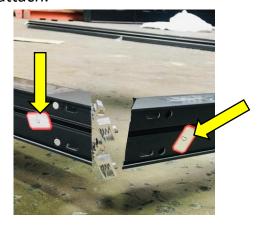

2. Insert the brackets into the frame and screw from the outside.




- 3. Tighten the brackets screws equally until there is no gap between the frames.
- 4. For threshold, use 1.5 inch long screws that came with the frame and screw the side pieces into the bottom track from behind.

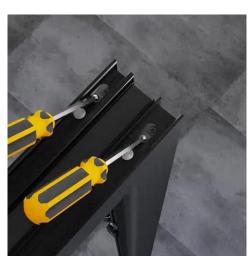

- 5. Once frame is assembled, place it by the installation location and check the opening size and Floor level
- Recommended opening size is overall frame size +1/2".
- Check the door's spec sheet to make sure frame is facing the correct way.
- The hinge will be on the side closest to the outside.

Frame Installation

- 1. Apply the Liquid Nail under the track and place the frame in the opening.
- Only Liquid Nail is recommended for bottom track for better waterproofing unless floor is not level and you will need to anchor the track to the floor.

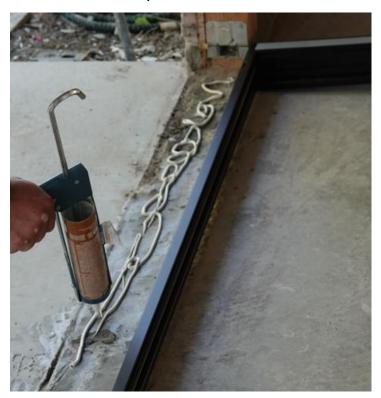

3. Make sure frame is level. Screw the frame to the opening.



- 2. Drill 7/16 hole into first layer of Side frames for cap and ¼" hole on the other layers.
- Side needs 4-5 Screws (6" from bottom,
 6" from top and other screws spaced equally along the frame).
- Top track needs 2-3 screws spaced equally along the top piece.



4. Cover hole with plastic cap.



Door Panels & Handle Installation

1. Install the first panel by hanging the panel to the frame hinges.

Repeat with the second panel.





2. Install the handle to the main panel using the 3-inch screws.

- Main lock is 3-point lock, in order to lock the door, pull up the handle, latches will engage and with turning the knob you can disable the handle. Turning the

knob by itself will not engage the latches.



For additional information or questions please contact us



2300 Corporate Center Dr. Thousand Oaks, CA 91320

www.erishomeproducts.com info@erishomeproducts.com

Office: 805.375.6333