

# INSTALLATION MANUAL

## CEILING FAN WITH LIGHT

Model No.: LL-8838D-52-04




Scan for Installation Video



APP Control Applicable


**Thank you for choosing and using our product.**

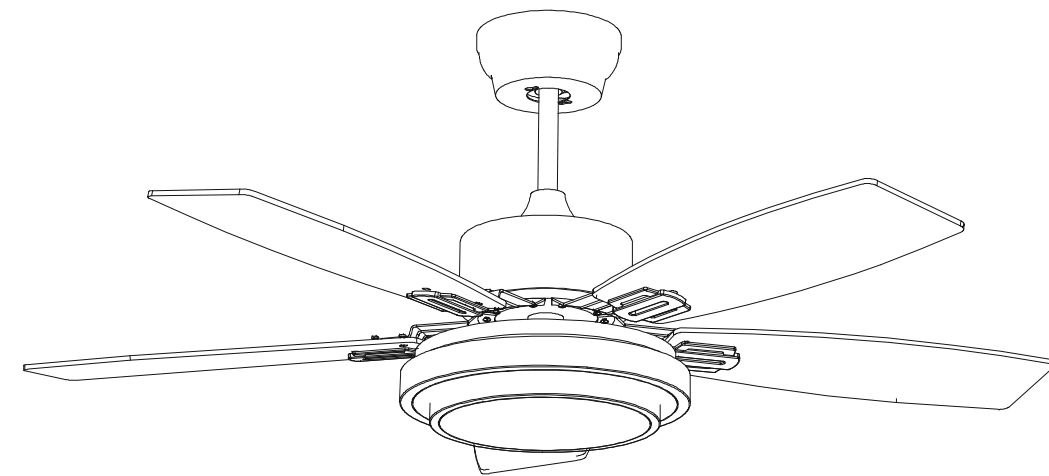


### TOOLS REQUIRED




Ladder



Pliers




Wire  
Strippers






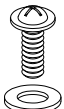




Screwdrivers

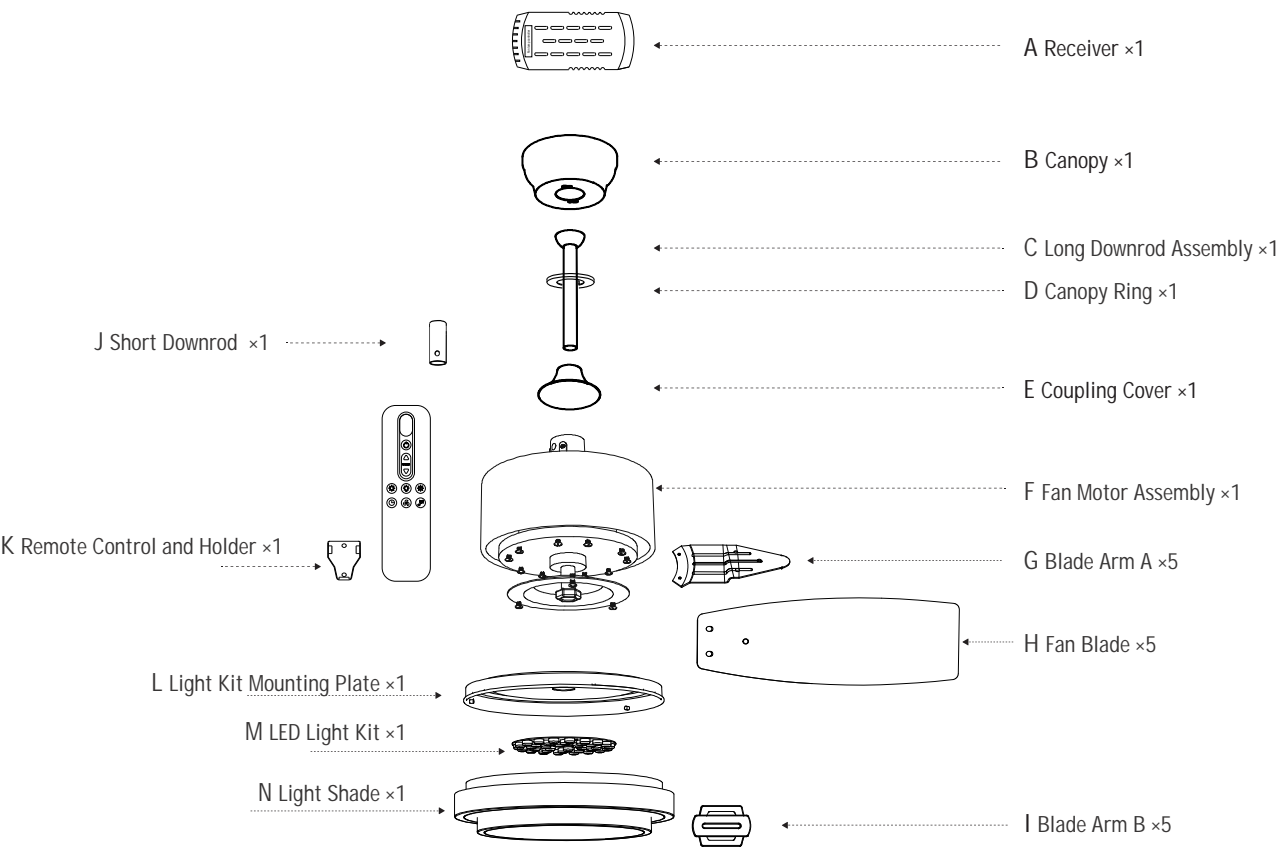PACKING LIST



INSTALLATION KIT

<b>AA</b>  Wire Nut	3×	<b>BB</b>  Fan Blade Screw	15×	<b>CC</b>  Gloves	1×	<b>DD</b>  Fan Blade Arm Screw	10×
<b>EE</b>  Mounting Bracket	1×	<b>FF</b>  Outlet Box Screw With Washer	2×	<b>GG</b>  Clevis Pin&"R" Pin	1×	<b>HH</b>  Magnet	3×


**NOTE:**

1. Some extra hardware may be included. The quantity listed above is the number required for installation.

2. Parts "GG" have already been installed with Long Downrod Assembly, parts "DD" have been installed with Fan Motor Assembly. They need to be disassembled before installation.

REMOTE CONTROL INSTRUCTIONS


- ① : Turn off power.
- ② : Turn on the fan on 1/2/3/4/5/6 speed.
- ③ : Adjust the brightness of the light.
- ④ : Timing the fan.
- ⑤ : Turn on / off the light.
- ⑥ : Quick switch of the light color: warm white→cool white→daylight white.
- ⑦ : Natural wind, fan speed will change automatically with this function(Short Press).  
Turn on/off the mute mode (Long Press).
- ⑧ : Turn off the fan (Short Press).  
Fan moves forwards or reversely (Long Press).

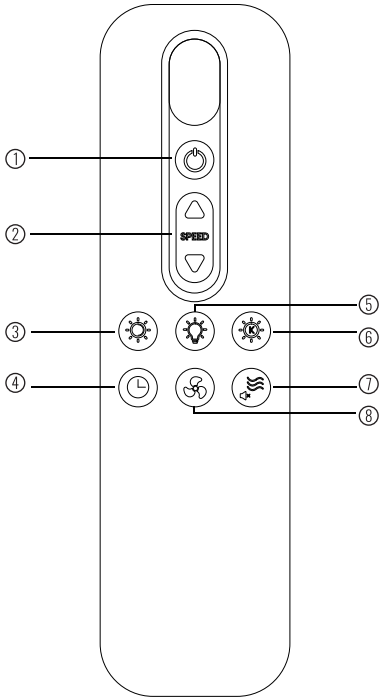










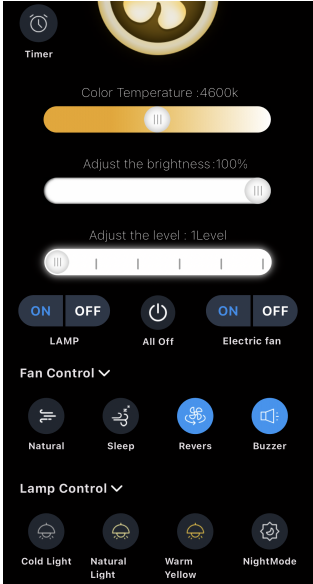



REMOTE SIGNAL PAIRING:

If the remote control loses signal of the fan, press and hold the button ⑤ at the very beginning after it's turned on from wall switch. After the fan light flashes or beeps, it's done.

APP CONTROL INSTRUCTIONS




Note: Install the "Tiny Smart" app from Google Play, Apple App Store, or other app stores by scanning the QR code or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.

Pairing: Add device → Follow the APP operation to turn off the wall switch, and turn it on after 5 seconds. The device will automatically connect to the Ceiling Fan.			
	Slide to adjust the Fan Speed.		Slide to adjust the Light Color.
	Turn on/off the light.		Slide to adjust the Brightness of the Light.
	Turn on/off the fan.		Quickly change Light Color " White, Yellow, Natural ".
	Turn off the fan and light.		Switch to night light mode .
	1H-8H for timing the fan.		Sleeping wind (Not applicable on this fan).
	Fan forward & Fan reverse.		Turn on/off the mute mode .
	Natural Wind: Simulate natural wind and automatically adjust the wind speed.		


7. Install the Light Kit Mounting Plate

- Step 1. Take off the set screws from Fan Motor Assembly.
- Step 2. Secure the Light Kit Mounting Plate onto the Fan Motor Assembly with screws taken off.

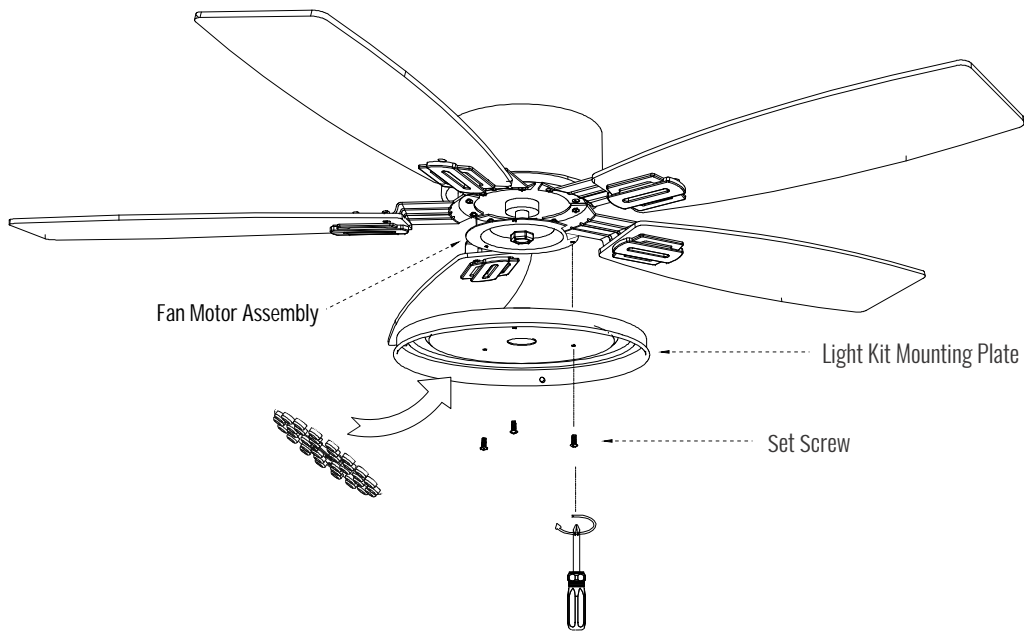

8. Install the Light and Light Shade


- Step 1. Connect the wire terminal to the interface on the LED Light Kit.
- Step 2. Rotate the Light Shade clockwise to secure it to the Light Kit Mounting Plate.

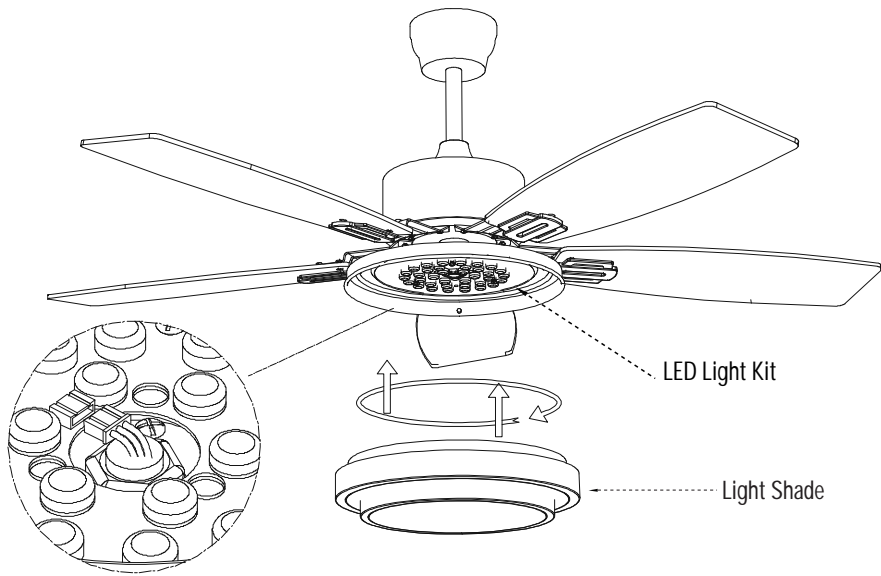

INSTALLATION

1. Installing the Fan Blade and Blade Arm

- Step 1. Attach fan blade onto the blade arms with Fan Blade Screws (BB) provided.
- Step 2. Attach the Fan Blade Arm onto the motor with the Fan Blade Arm Screws (DD).

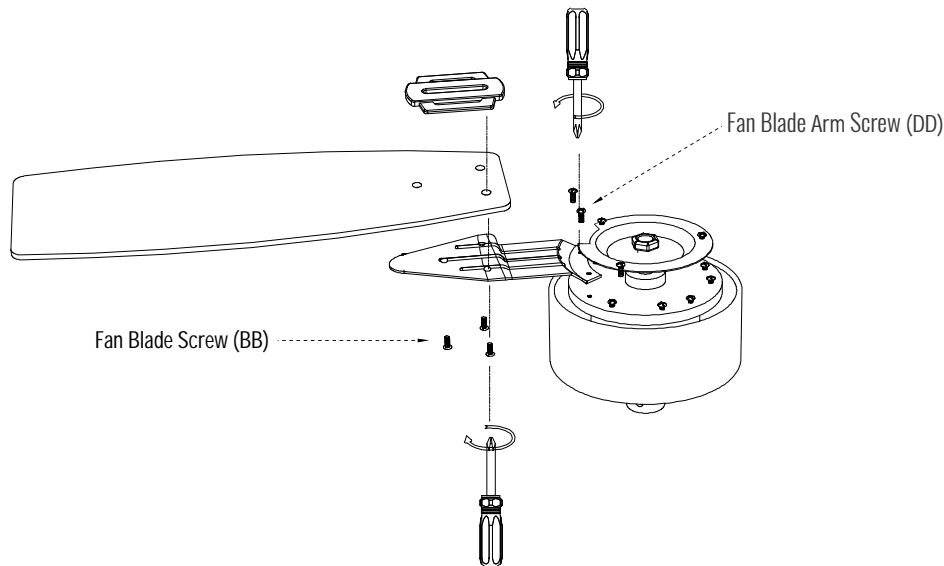


Note:

- ① Make sure to assemble the blades in sequence and fasten the screws with equal force.


2. Assembling the Fan

- Step 1. Assemble the Canopy and coupling cover, route wires from the fan through the downrod.
- Step 2. Loosen the set screw from the yoke but do not take off, align the holes at the bottom of the downrod with those in the yoke.
- Step 3. Carefully insert the clevis pin (GG) through the holes in the yoke and downrod (Be careful not to jam the clevis pin against the wires inside the downrod).
- Step 4. Insert the "R" pin (GG) into the end of the clevis pin.
- Step 5. Tighten the set screw on the yoke to secure the downrod.

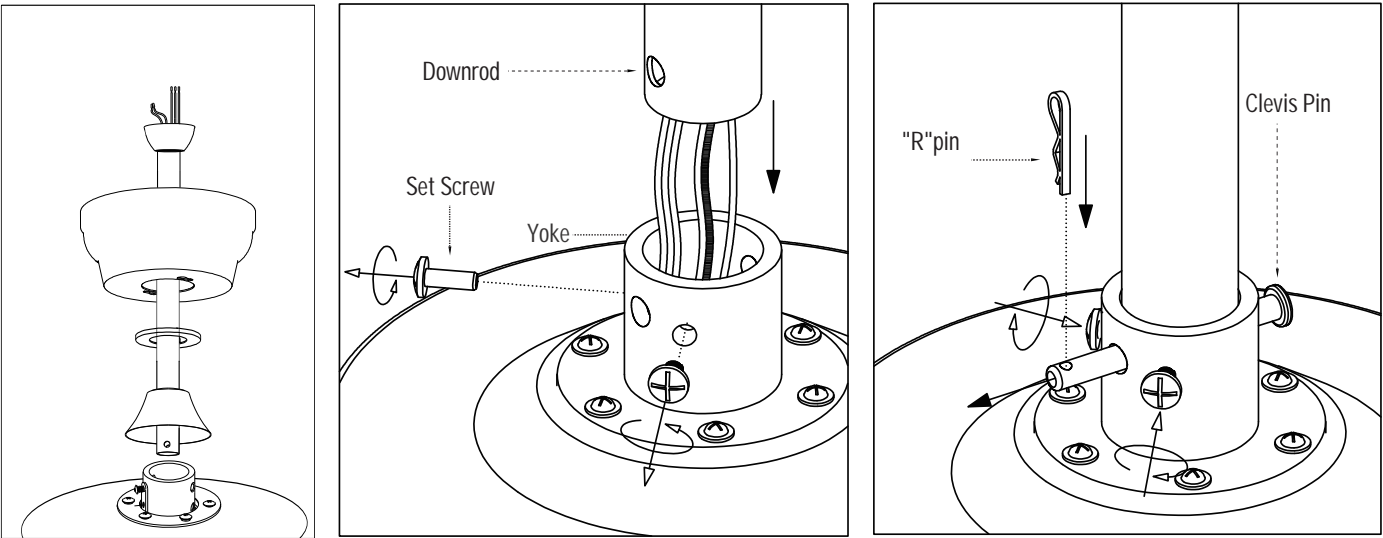


3. Installing the Mounting Bracket

- Step 1. Take off the screws from outlet box.
- Step 2. Secure the mounting bracket (EE) onto the outlet box with screws taken off or Outlet Box Screw With Washer (FF) provided.

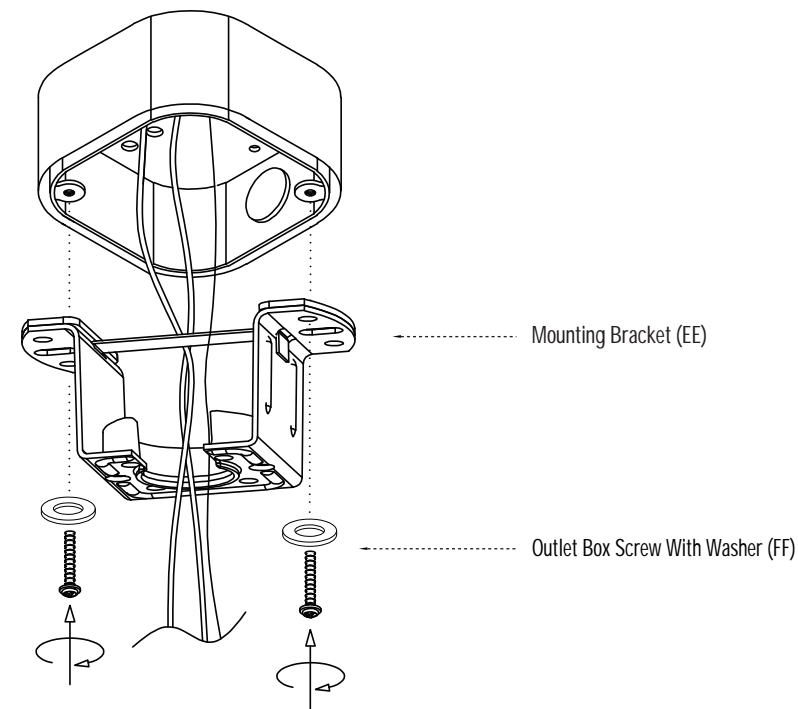


4. Hanging the Fan

- Step 1. Lift the downrod into the mounting bracket. Rotate the downrod until the seat tab in the mounting bracket is seated in the groove in the downrod ball.

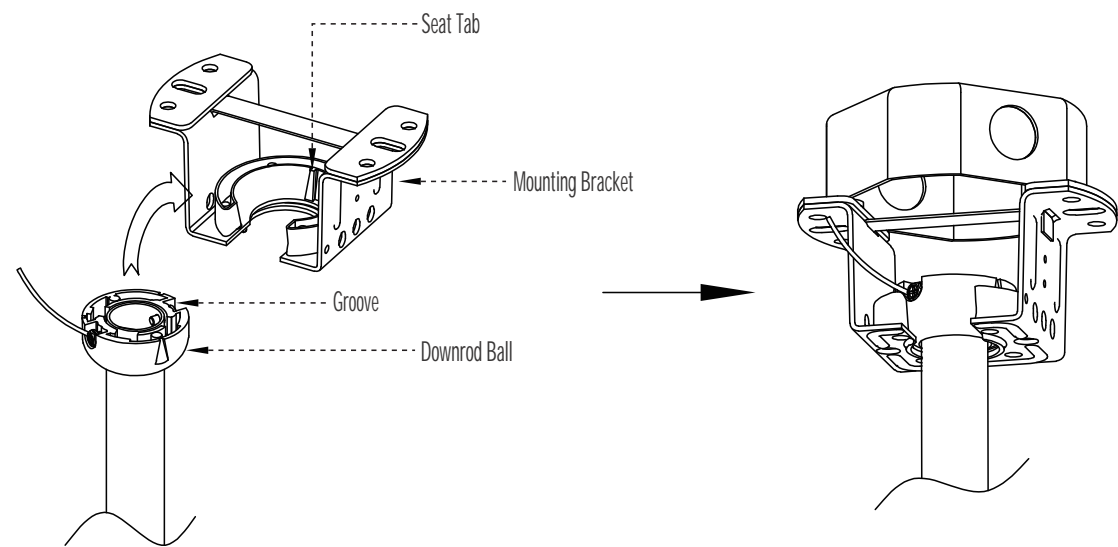

5. Wiring

- Step 1. Insert the receiver to the mounting bracket
- Step 2. Connect the wires from the fixture to the house supply wires with wire nuts (AA) , ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white or blue) to neutral wire, and hot wire (black or brown) to the hot wire.
- Step 3. Wrap the connection with electrical tape.

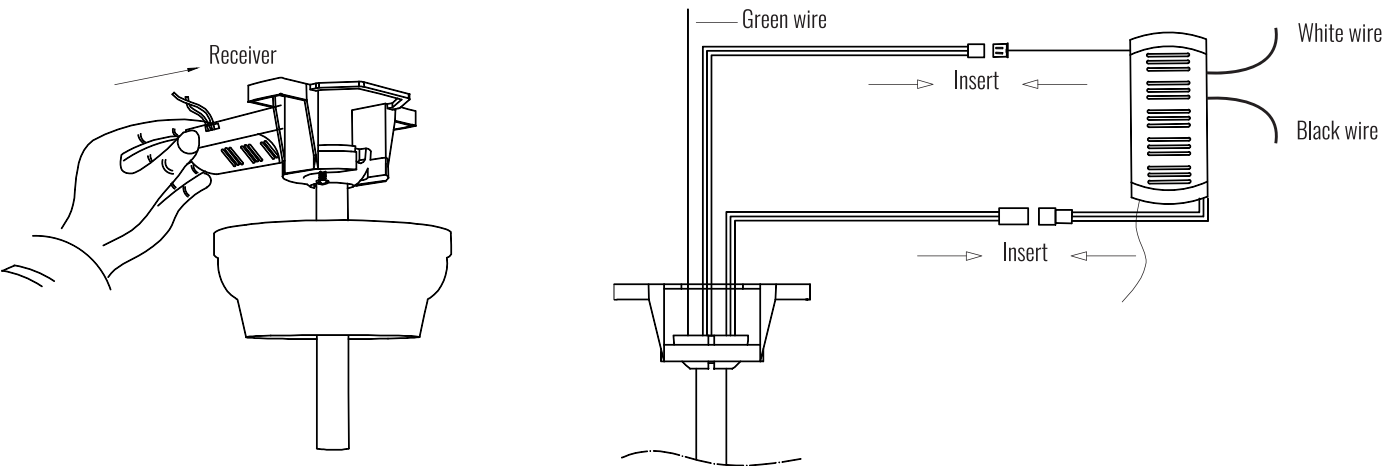

- Note:
- ① This fan only needs one set of input wires (black, white, and ground wire). Both of the fan and lights will be controlled by the remote control.
  - ② This fan can only be connected to the ON/OFF switch, not a dimmer switch.

6. Attaching the Canopy

- Step 1. Slide the canopy up to the ceiling and attach it to the mounting bracket with the set screws provided.
- Step 2. Slide the coupling cover downward to cover the yoke and fix the canopy ring to the canopy with Magnet (HH).

