



R300

DCT


E - GEARBOX GROUP

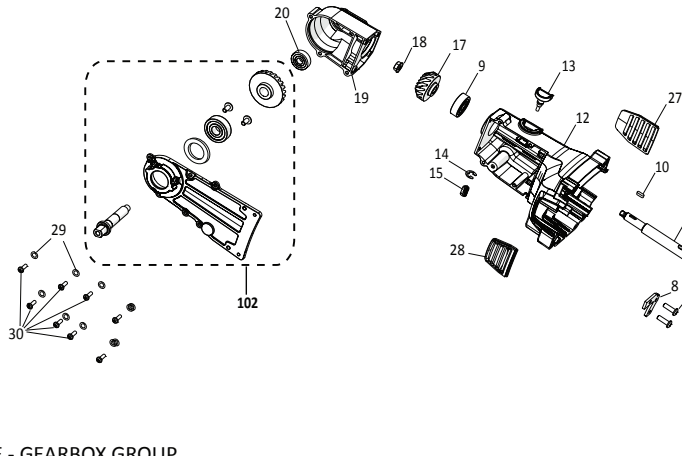


D - MOTOR GROUP

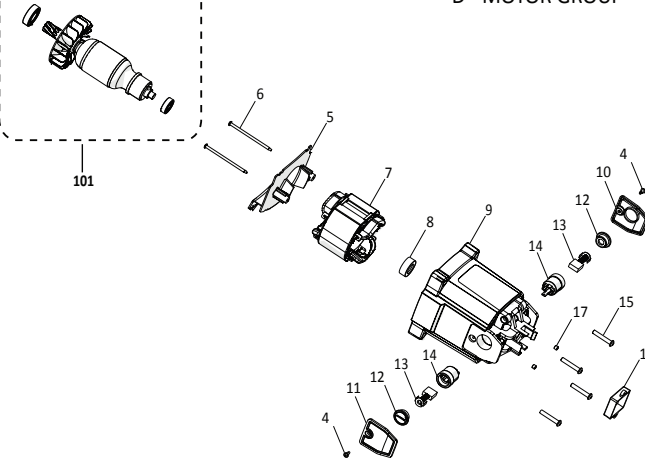


F - DRY CUT GROUP

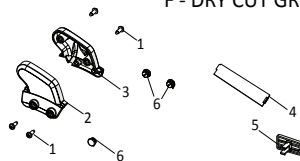


A - BLADE GUARD GROUP

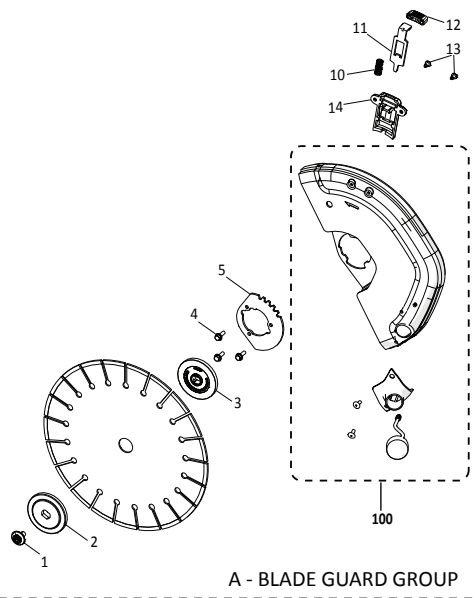



C - REAR HANDLE GROUP

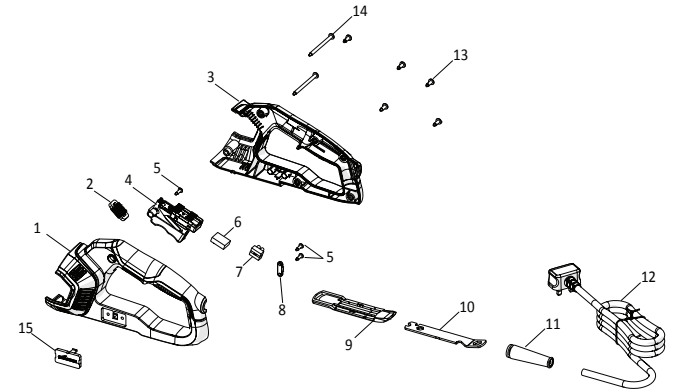

B - FRONT HANDLE GROUP

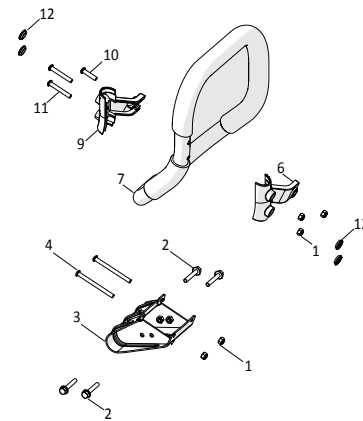

H - GUIDE ROLLER GROUP

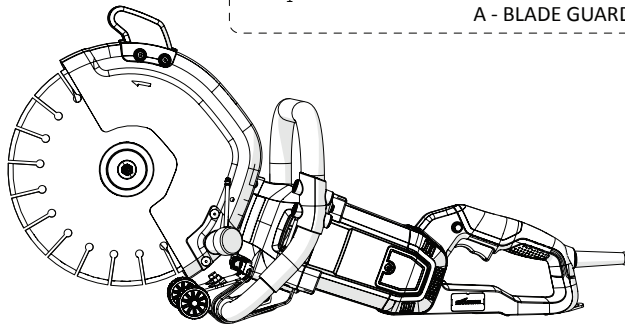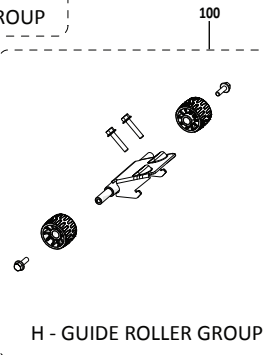

evolution
evolutionpowertools.com

Service Parts List

V: 012-0004

300mm Disc Cutter

120V
US

No.	Description	Part Code	Qty
A01	Blade Bolt	012-0211	1
A02	Flange Outer 70mm Pressed	012-0203	1
A03	Flange Inner 70mm Pm Usa (1 In/25.4mm)	012-0205	1
A04	Screw Hex Flanged Steel Bo M5 16mm	F-HFS-M5-16-ST-BO	3
A05	12" Blade Guard Retaining Plate	012-0119-A2	1
A10	12" Blade Guard Rotation Lock Spring	012-0122-A1	1
A11	12" Blade Guard Rotation Lock Tab	012-0121-A2	1
A12	12" Blade Guard Rotation Lock Knob	012-0124-A1	1
A13	Screw Button Self-Tapping Torx Steel Bo M5 10mm	F-TFPH-5-10-ST-BO	2
A14	12" Blade Guard Rotation Lock Cover	012-0123-A3	1
A100	12" Guard Assembly	012-0055	1
B01	Nut Full Nyloc Steel Bo M6	F-NNIF-M6-ST-BO	5
B02	Screw Hex Flanged Steel Bo M6 16mm	F-HFS-M6-16-ST-BO	4
B03	Skid Plate	012-0120-A2	1
B04	Screw Button Torx Steel Bo M6 70mm	F-SPHT-M6-70-ST-BO	2
B06	Front Bale Handle Support Bracket Back	012-0166-A1	1
B07	Front Bale Handle W / Overmould	012-0181	1
B09	Front Bale Handle Support Bracket Front	012-0165-A1	1
B10	Screw Cap Torx Steel Bo M6 25mm	F-SPHT-M6-25-ST-BO	1
B11	Screw Cap Torx Steel Bo M6 40mm	F-SPHT-M6-40-ST-BO	2
B12	Front Handle Bracket Screw Cap	012-0209	4
C01	Rear Handle Rh	012-0153-1-A1	1
C02	Rf Choke	012-0131	1
C03	Rear Handle Lh	012-0152-1-A1	1
C04	Trigger Switch	012-0135	1
C05	Screw Button Self-Tapping Torx Steel Bo M4 15mm	F-TFPH-M4-15-ST-BO	3
C07	Wire Block Connector	012-0136	1
C08	Wire Restraint Saddle	012-0174-A1	1
C09	Tool Storage Housing	012-0175-A1	1
C10	Spanner	012-0176-A1	1
C11*	Cable Strain Relief	012-0180-A1	1
C12*	Cable Usa 120v 3m/10ft	012-0140	1
C13	Screw Button Self-Tapping Torx Steel Bo M5 15mm	F-TFPH-M5-15-ST-BO	5
C14	Screw Button Self-Tapping Torx Steel Bo M5 70mm	F-TFPH-M5-70-ST-BO	2
C15	Rear Handle Lh Water Blanking Plate	012-0158-A1	1
D04	Screw Button Self-Tapping Torx Steel Bo M4 10mm	F-TFPH-4-10-ST-BO	2
D05	Motor Fan Baffle	012-0130-A1	1
D06	Screw Button Self-Tapping Torx Steel Bo M4 70mm	F-TFPH-M4-70-ST-BO	2
D07*	Field Coil 2000w/15a 110-120v	012-0196	1
D08	Rear Motor Bearing Bush	012-0173-A1	1
D09	Motor Housing	012-0151-A1	1
D10	Brush Cover Cap Lh	012-0154-A1	1
D11	Brush Cover Cap Rh	012-0155-A1	1
D12	Brush Holder Screw Cap	010-0160	2
D13*	Carbon Brush 110-120v	012-0189	2
D14	Brush Holder	012-0168-A1	2
D15	Screw Button Torx Steel Bo M6 25mm	F-SPHT-M6-25-ST-BO	4
D16*	Soft Start Pcb 110-120v	012-0149	1
D17	Set Screw Flat Point Steel Bo M6 8mm	F-SSCFP-M6-8-ST-BO	2
D101	2000w/15a Armature Assembly 110-120v Uk/Usa	012-0051	1
E01	Screw Countersunk Torx Steel Bo M5 16mm	F-SCHT-M5-16-ST-BO	4
E02	Helical Gearbox Cover	012-0103-A1	1
E03	Screw Button Torx Steel Bo M5 140mm	F-SPHT-M5-140-ST-BO	4
E04	Circlip External Heavy Duty 12mm	F-CCEXT-12-100-ST-BO	1
E05	Helical Gear	012-0106-A1	1
E06	Washer Wave 12.5id 1.5h	F-WW-M12-ST-BO	1
E07	Screw Button Torx Steel Bo M6 16mm	F-SPHT-M6-16-ST-BO	2
E08	Front Handle Clamp Mount Bracket	012-0127-A3	1
E09	6301-2z Bearing Ball 37od 12id 12w	F-B-6301-2Z	2

[illegible][illegible]