









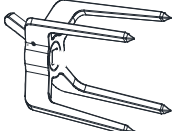



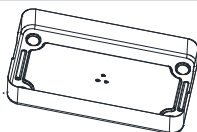
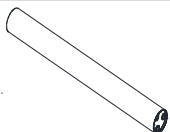

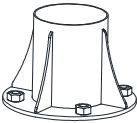









BARBEQUE AND PEDESTAL ASSEMBLY

The barbeque and pedestal (if supplied) must be assembled before use. Only a medium size Philips screwdriver is needed.

Open the carton from the top and remove the parts. Remove all packaging (especially check inside the barbeque and under the charcoal grid) and place parts on a clean surface. Check for any damage or missing parts (if found, contact your service department).

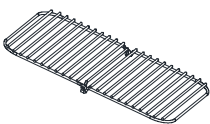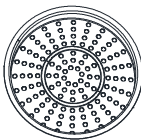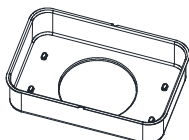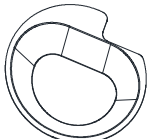INCLUDED PARTS FUSION™

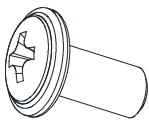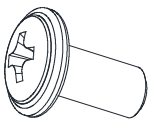
01 / Barbeque Chassis Assembly x 1Pc	02 / Lid Handle x 1Pc	03 / Lid x 1Pc	04 / Lid Hanging Bracket x 2Pcs	05 / Open Gril x 1Pc	06 / Charcoal Grid x 1Pc	07 / Charcoal Chamber x 1Pc	08 / Element Support x 2Pcs
							
09 / Element Heat Shield x 1Pc	10 / Rotisserie Rod x 1Pc	11 / Cliplock Fork™ x 2Pcs	F01 / M3 x0.4in (10mm) Screw x 2Pcs	F02 / M3 Spring Washer x 2Pcs	F03 / M3 Washer x 2Pcs		
							
S01 / Pedestal Top x 1Pc	S02 / Pedestal Pole x 1Pc	S03 / Pole Support Cover x 1Pc	S04 / Pole Support x 1Pc	S05 / Pedestal Base Cover x 1Pc	S06 / Pedestal Base x 1Pc	S07 / Pedestal Support Bracket x 1Pc	
							
F04 / M8 x 1in (25mm) Bolt x 10Pcs	F05 / M3 x 0.4in (10mm) Screw x 6Pcs	F06 / M4 x 0.3in (8mm) Screw x 4Pcs	F07 / Rubber Foot x 6Pcs				
							

PACKAGING

Remove all internal cartons and packaging from within the barbeque assembly. Remove all external packaging and remove the appliance from the packaging base before operation. Recycle as per your local government / state laws.


STEP 01

/Take the M3 spring washers (F02) and M3 washers (F03) and place them onto two M3x0.3in (8mm) screws (F01). Take the two lid hanging brackets (04) and fit onto two M3x0.3in (8mm) screws (F01) (the legs of the brackets should hang around the screw heads). Place the handle (02) on the inset side of the lid (03) and align the handle legs with the two holes. Fix the lid hanging brackets to the bottom of the lid by screwing the screws into the handle legs (take care that the hanging brackets are running parallel to the lid shorter sides). Tighten fully. If assembled correctly, the lid will hang from the bracket at the rear of the barbeque using the lid hanging brackets to hook it in place.

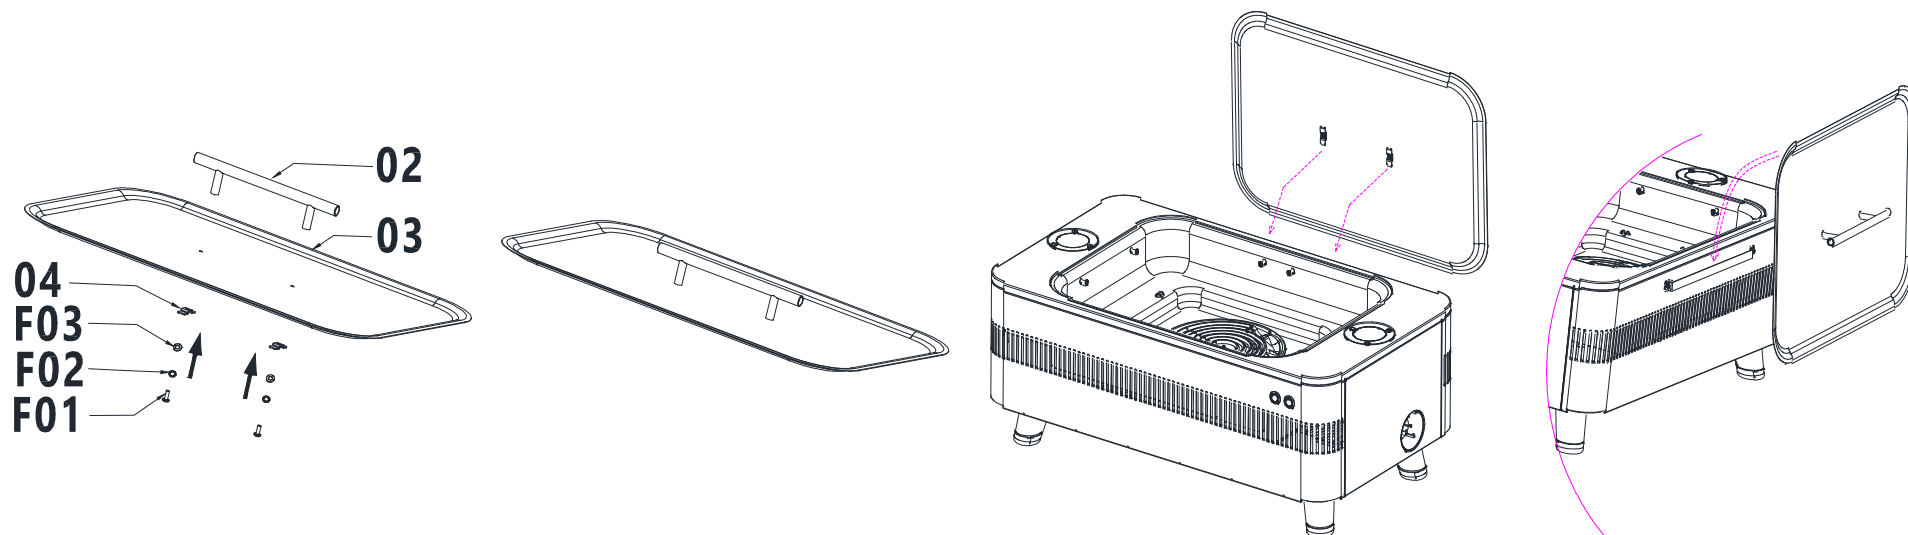


STEP 02

/If not already assembled, lever up the element and place the heat shield (09) inside the bowl. Take the two element supports (08), fit them together and place them centrally on the heat shield. Lever the element back down onto the element supports.*

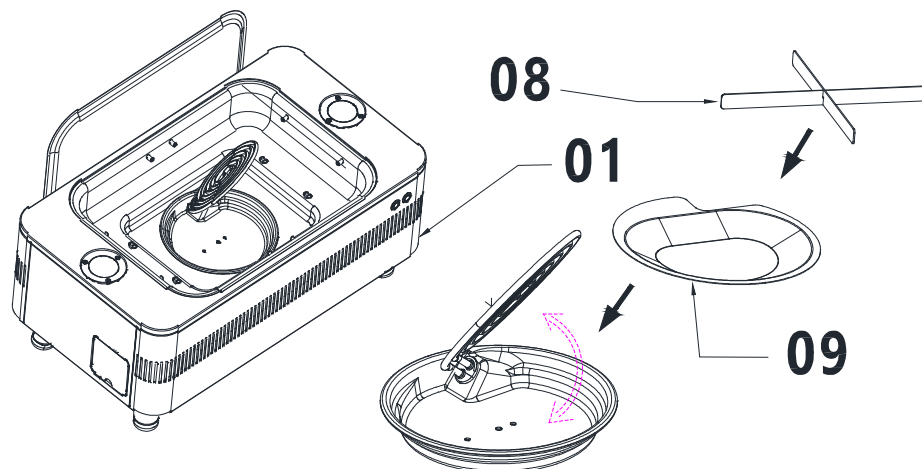


STEP 03

/Place the charcoal chamber (07) centrally within the barbeque (it will allocate on four tabs) and place the charcoal grid (06) in the centre hole above the element.

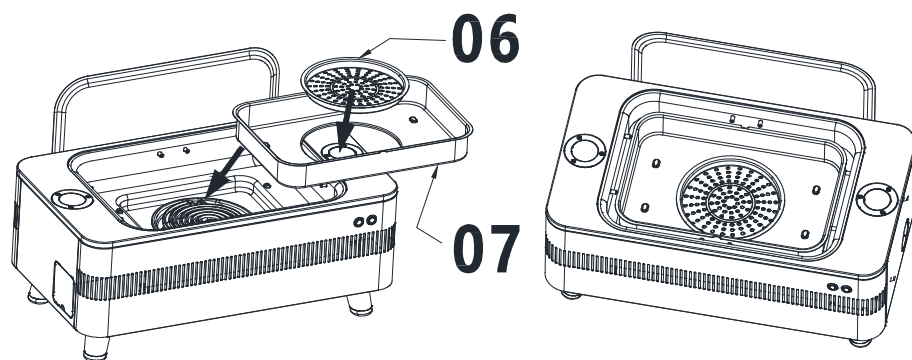


STEP 04

/Place the grill (hinges down) on the eight pins inside the chassis, above the charcoal chamber.

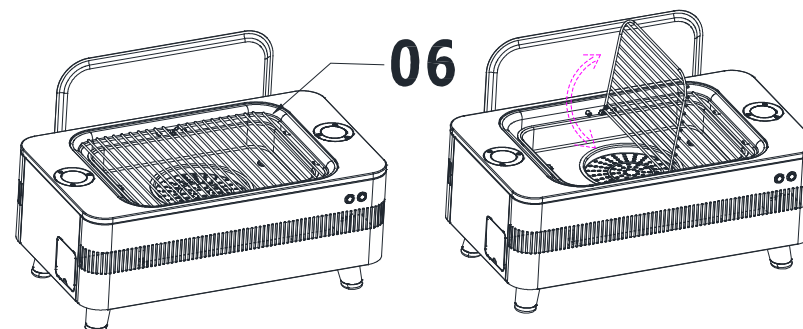


STEP 05

/The rotisserie rod and Cliplock Forks™ are stored in the compartment at the front of the left hand side panel. Lift the storage door up, remove the Cliplock Forks™ (11) (take care of the sharp points of the fork fingers) and pull the rotisserie rod (10) out from the storage compartment. Note: If the barbeque has been in operation, the rotisserie parts may be hot – remove before cooking or use heat proof gloves. The handle of the rotisserie rod must first be extended by rotating the handle anti-clockwise until the thread releases, extending the handle fully and tightening in place by rotating anti-clockwise again. The Cliplock Forks™ slide on the rod and are locked in place by pressing down on the fork levers.

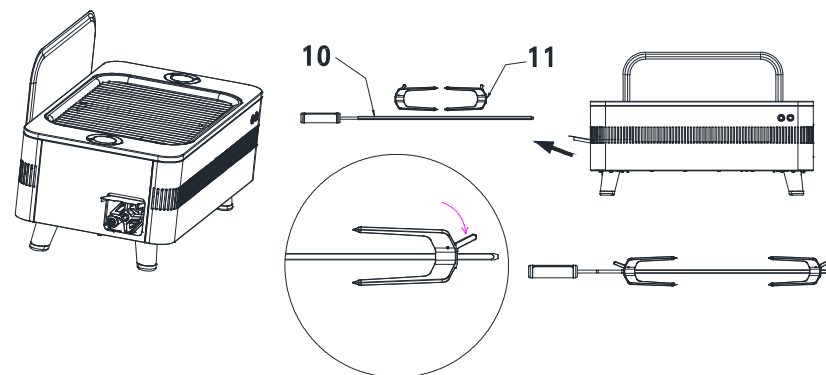


STEP 06

/ To extend the rotisserie poles, first press and release them so the first section pops out from the barbecue. Pull the poles up and rotate clockwise to allocate the poles in one of the 3 height settings. The pole to the right contains the rotisserie motor.

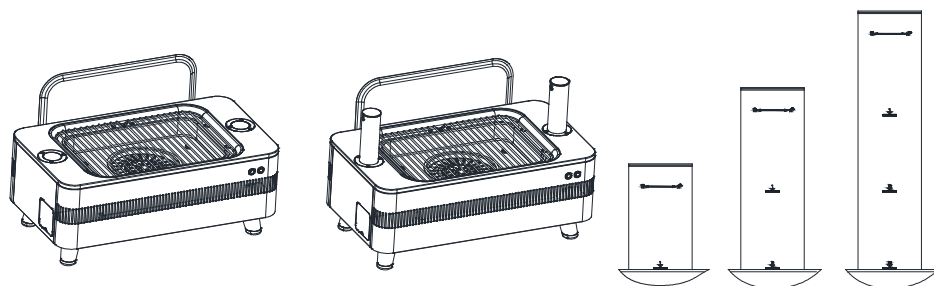

STEP 07


/ Take the rotisserie rod with the food attached and place the pointed end in the motor hole at the top of the right hand side pole. Lever the handle side of the rod down into the slot of the left hand pole (take care the slot in the rod allocates to the keyway) and close the pole cover.

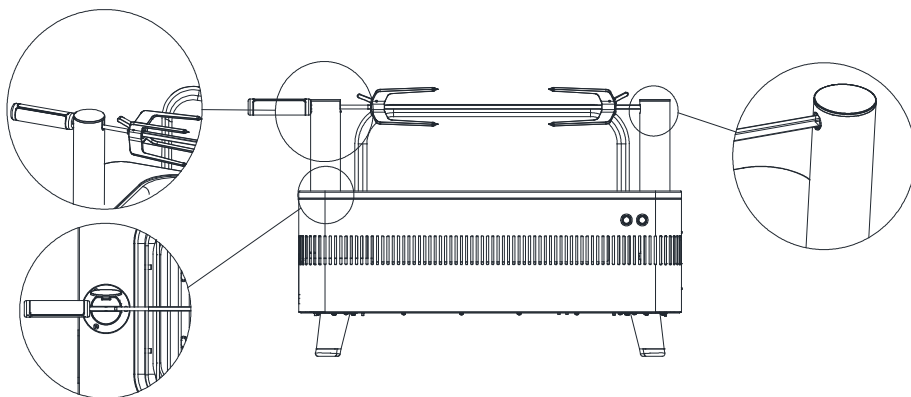

Pedestal Assembly (HBCE1BS)


STEP 08

/ Place the pedestal base cover (S05) face down on a flat, clean surface and place the pedestal base (S06) inside. If not already fitted, attach the six rubber feet (F07) onto the pedestal base with six M3x0.4 (10mm) screws (F05). Place the pedestal support bracket (S07) onto the bottom of the pedestal base (centred on the pole hole). Align the four outer holes and fix together using four M4x0.3in (8mm) screws (F06). Tighten fully.

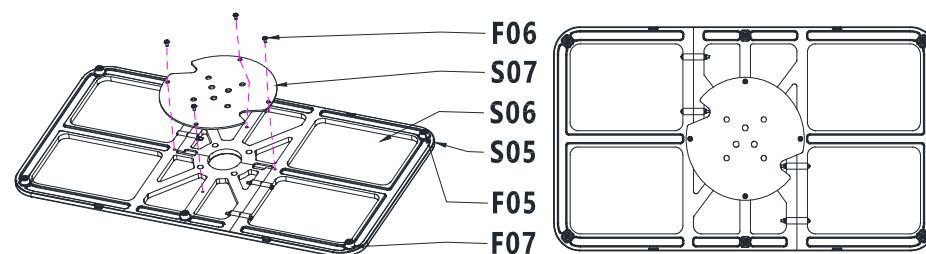


STEP 09

/ Place the pole support on top of the pedestal base (centred on the pole hole). Centre over the pole hole and align the 4 central holes. Fix together using four M8x1in (25mm) screws. Tighten fully.

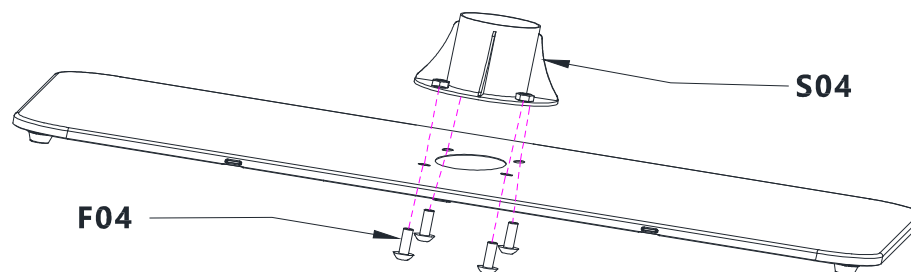


STEP 10

/Place the pedestal pole (S02) into the pole support. Align the three inner holes and fix together using three M8x1in (25mm) screws (F04). Fully tighten.

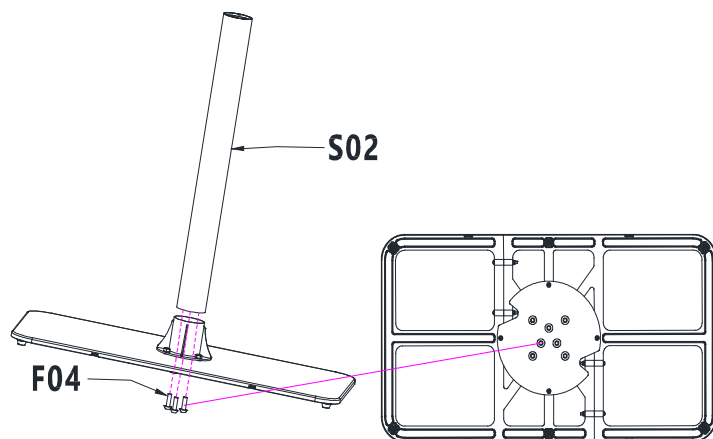


STEP 11

/Place the pedestal pole cover (S03) over the pole and place on the pole support.

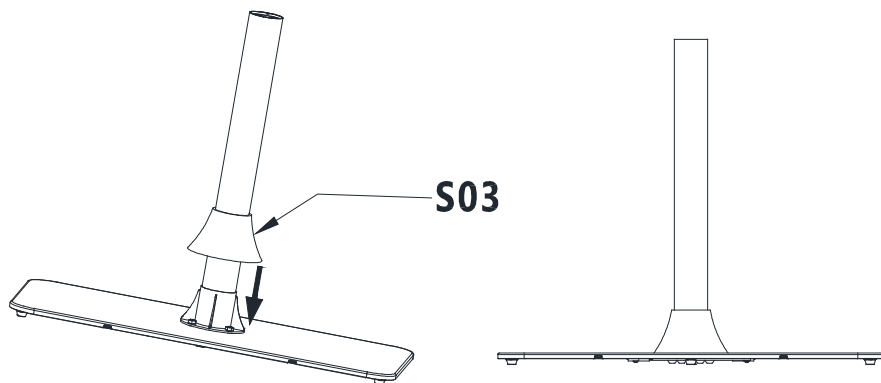


STEP 12

/Place the pedestal top (S01) over the pole. Adjust the position of the pedestal top so it is directly over the pedestal base, align the three holes and fix together using three M8x1in (25mm) screws. Leave slightly loose.

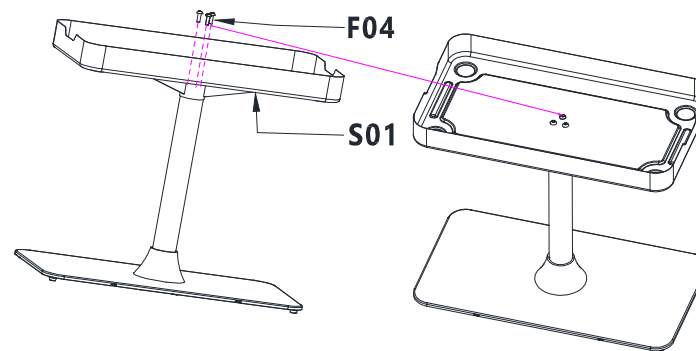

STEP 13

/To place the barbeque on the pedestal (when supplied), pick it up from the centre of the bottom of the shorter sides, so that when placed on the pedestal top, hands are positioned in the slots at the pedestal top sides. Always take care not to trap fingers under the barbeque. Do not do when the barbeque is hot.

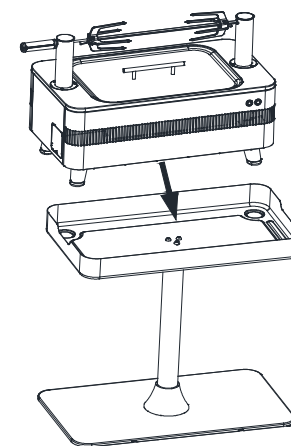

STEP 14

/ With the barbeque in a secure position, fully extend the power cord from the recess on the right hand side (do not over-extend) and connect to your power supply.

MAINTENANCE

It is recommended that at the commencement of each barbeque season the following maintenance be conducted:

BARBEQUE

1. Wipe over the outer areas of the barbeque with a clean cloth.
2. Check all oils and ash have been cleaned from the charcoal chamber and under the element.
3. Check all fasteners for tightness and re-tighten where necessary to ensure rigidity of the structure.
4. Check retractable power cord is operational and the cord/plug is undamaged.

PEDESTAL

1. Check all fasteners for tightness and re-tighten where necessary to ensure rigidity of the structure.
2. Wipe over barbeque pedestal with a clean cloth.


Wear and tear to this barbeque can be reduced by covering and storing out of the weather when not in use.

*Due to ongoing design modifications, support brackets may be permanently fixed to the element

PARTS LIST: HBCE1BUS & HBCE1BSUS

	PART NAME	QTY		PART NAME	QTY
1	Cliplock Forks™ Assembly	2	23	Storage Door	1
2	Rotisserie Rod Assembly	1	24	Barbeque Chassis	1
3	Lid Handle	1	25	Storage Box	1
4	Lid	1	26	Front Heat Shield	1
5	Lid Hanging Bracket	2	27	Side Insulation	1
6	Open Grill	1	28	Retractable Power Cord	1
7	Charcoal Grid	1		Bracket	
8	Charcoal Chamber	1	29	Retractable Power Cord	1
9	Element	1	30	Power Plug Recess	1
10	Element Support	2	31	Side Heat Shield	1
11	Element Heat Shield	1	32	PCB Cover	1
12	Element Bowl	1	33	PCB	1
13	Inner Chassis	1	34	PCB Mounting	1
14	Element Bowl Bracket	1	35	Element Switch	1
15	Inner Pole Assembly Left	1	36	Rotisserie Motor Switch	1
16	Pole Flange	2	37	Rod Guide Tube Assembly	1
17	Outer Pole Assembly	2	38	Bottom Insulation	1
18	Inner Pole Assembly Right	1	39	Bottom Plate	1
19	Inner Pole Positioning Pin	2	40	Thermostat Mount	1
20	Rear Insulation	4	41	Thermostat	1
21	Rear Heat Shield	1	42	Leg Assembly	4
22	Grill Support Pin	8			

Note: List does not include fasteners.

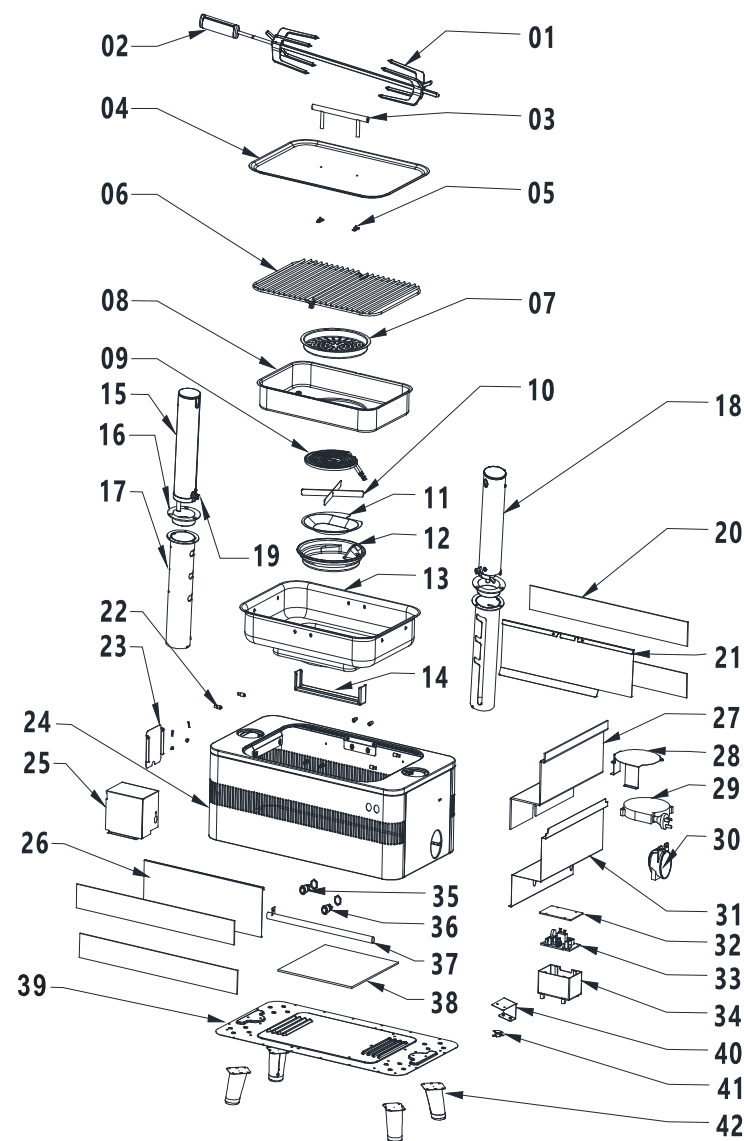

	PART NAME	QTY
1	Pedestal Top	1
2	Pedestal Pole	1
3	Pole Support Cover	1
4	Pole Support	1
5	Pedestal Base Cover	1
6	Pedestal Base	1
7	M3 x 0.4in (10mm) Screw	6
8	Rubber Foot	6
9	M8 x 1in (25mm) Bolt	10
10	M4 x 0.3in (8mm) Screw	4
11	Pedestal Support Bracket	1

