
BB-500

USER MANUAL

EN, FR

BIOBIDET®
BY BEMIS





Questions?
We're here to help.

847.458.2334
support@biobidet.com
www.biobidet.com

Technical support and alternate
fittings are available.

04

PRODUCT INFORMATION

Important Safeguards
Overview & Parts

08

GETTING STARTED

Functions & Features
Safety Features

10

INSTALLATION

Installation Guide

13

MAINTENANCE

Cleaning Tips
Use During Power Failure
How To Reset
Removing The Unit
Draining The Water
Troubleshooting Guide
Specifications

17

WARRANTY

Warranty
Customer Support

PLEASE OBSERVE THE FOLLOWING PRECAUTIONS AND INSTRUCTIONS BEFORE INSTALLATION AND USE.

- **DANGER**– To reduce the risk of electrocution:
 - Do not place or store product where it can fall or be pulled into a tub or sink.
 - Do not place in or drop into water or other liquid.
 - Do not reach for a product that has fallen into water. Unplug immediately.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons.



- This product must be connected to a GFCI receptacle (wall outlet). Do not connect the power cord if it is damaged or broken. Do not plug the product into a loose electric outlet.
 - It is recommended to operate this product on a separate circuit. Sharing a circuit could cause the breaker to trip or lights to flicker.
 - Consult a qualified electrician or service person if you are not sure whether the unit is properly grounded.
- Do not open this product for repair without authorization from the manufacturer. Only qualified service personnel should service this product. Do not use accessories not recommended by the manufacturer.
- Connect this product to a potable cold water supply line.
- Close supervision is necessary when this product is used by children, elderly, or adults with sensitive skin. A low temperature burn may occur when the skin has been in contact with an object at relatively low temperature for an extended period of time.
- If using any chemical toilet bowl cleaner, be sure to wipe up any spills that splash onto the bidet. Do not use benzene or any acid chemical detergent, as they can cause discoloration. Only neutral detergents are permitted.
- Do not plug in the power cord before connecting the water supply hose.
- Install in an area with adequate ventilation to avoid high levels of humidity which can damage the electronic components.

- Do not touch the power cord with wet hands or reach for a product that has fallen into water. Unplug immediately.
- Unplug the bidet seat when cleaning or detaching from the toilet bowl. Do not plug in until plumbing work has been completed.
- Keep the power cord away from heated surfaces to prevent a fire hazard. Keep any flammable materials away from this product at all times.
- Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.


SAVE THESE INSTRUCTIONS

WATER DOES IT BETTER®


BB-500

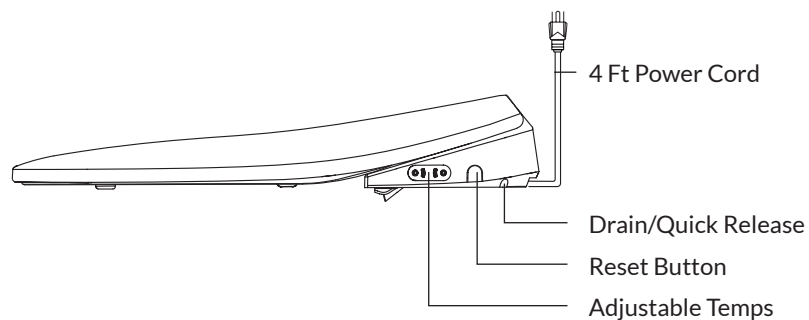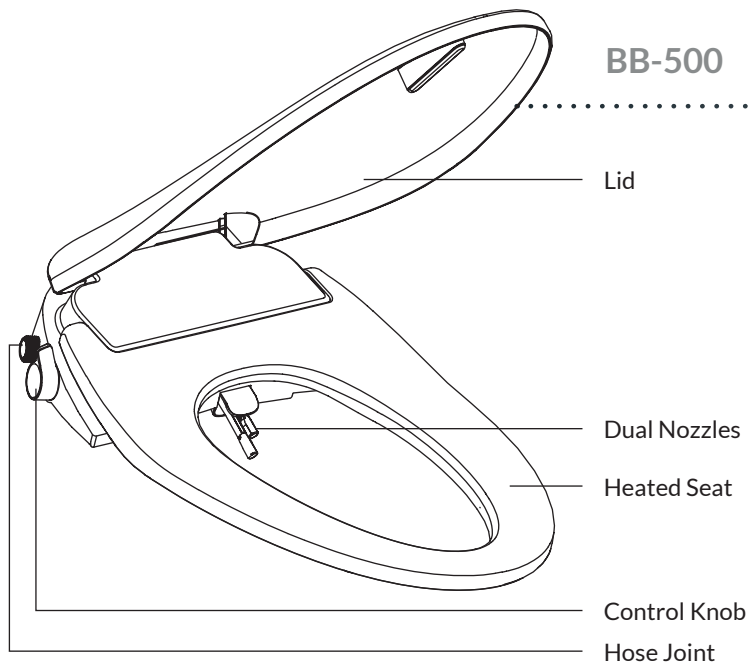


Side Control Knob

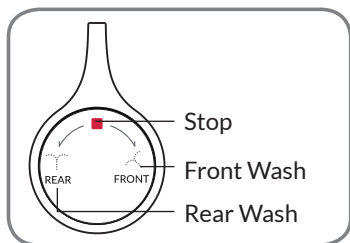

Dual Nozzle

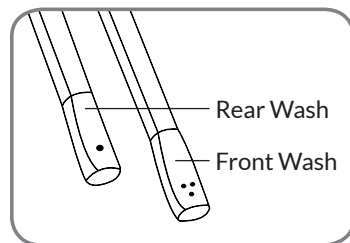

BB-500 Parts List

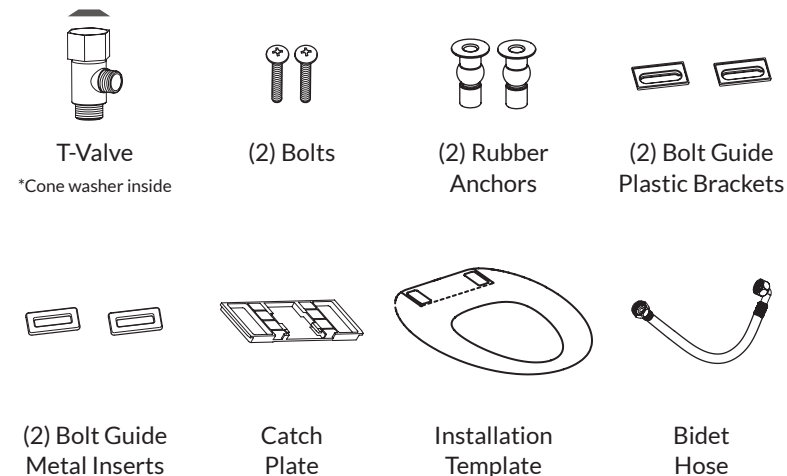

Alternate Installation Parts



(2) Nuts

*Can be used instead of Rubber Anchors

Recommended Installation Tools



Wrench




Phillips
Screwdriver

Side Control Knob (2 Washes)

Seat Sensor


This product includes a built-in seat sensor to avoid any accidental sprays while powered. Skin contact is required to activate any wash functions while powered.

Front Wash

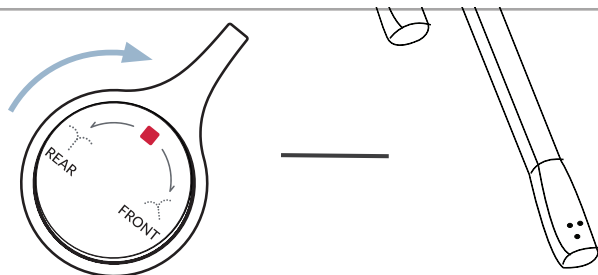

Adjust the water pressure by rotating the control knob button

Rear Wash

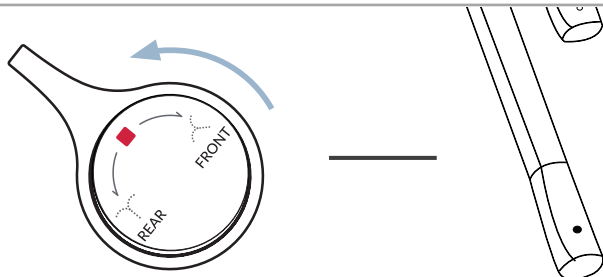

Adjust the water pressure by rotating the control knob button

Turbo Wash

Press the control knob button once while a wash is active to activate a Turbo spray with increased water pressure.

Pulse Wash

Press the control knob button a second time while a wash is active to activate a Water Therapy spray that alternates water pressure to assist in stimulating bowel movements.

Standard Wash

Press the control knob a third time while a wash is active to switch back to a standard wash.

Self Cleaning

This product includes a self cleaning function that rinses the nozzles for 5 seconds before each use.

Night Light

While the seat is unoccupied, long press the control knob button to switch between night light settings.

- Mode 1 - Both lights on
- Mode 2 - Knob light on, Bowl light off
- Mode 3 - Both lights off


Backside Backup

During a power outage, wash functions can still be used with ambient water temperature and pressure.

Side Control Buttons

Water Temp

Seat Temp

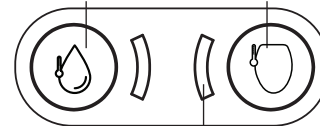

Water Temp

During a wash cycle, press the "Water Temp" button repeatedly to adjust the water temperature.

Seat Temp

Press the "Seat Temp" button repeatedly to adjust the heated seat.

Safety Features

- If the knob is not fully switched off after a wash, the unit will beep and will not allow wash functions to be activated.
- When the water temp exceeds 109°F, it will not allow wash functions to be activated. Unplug and replug the power cord to reset the unit and resume operation.
- Seat Temperature Protection - After 5 minutes of occupying the seat, the seat temp will automatically switch to ~84°F.

BEFORE INSTALLATION


Do not plug the power cord in until installation is complete.

Please contact our service center at 847.458.2334 for alternate fittings or assistance with this process.

1. Turn Off Water

Turn off the water shut-off valve. Drain the toilet tank completely by flushing the toilet. Unscrew the hose connected to the toilet tank.

You may want to have a towel ready to catch any residual water.

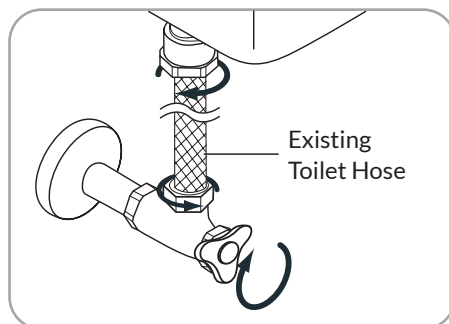


2. Remove Toilet Seat

Remove the mounting bolts to release the existing toilet seat from the toilet.




3. Install Catch Plate

Insert the rubber anchors into the toilet mounting holes. Align the installation guide to the toilet rim and place the catch plate over the mounting holes. Assemble the bolt guides by placing the metal inserts into the plastic brackets. Make sure to insert them correctly so the metal inserts sit flush on top. Place the bolt guides on the catch plate above the toilet mounting holes. Insert the bolts through the bolt guides, catch plate, and rubber anchors. Use a Phillips screwdriver to secure the catch plate on the toilet.

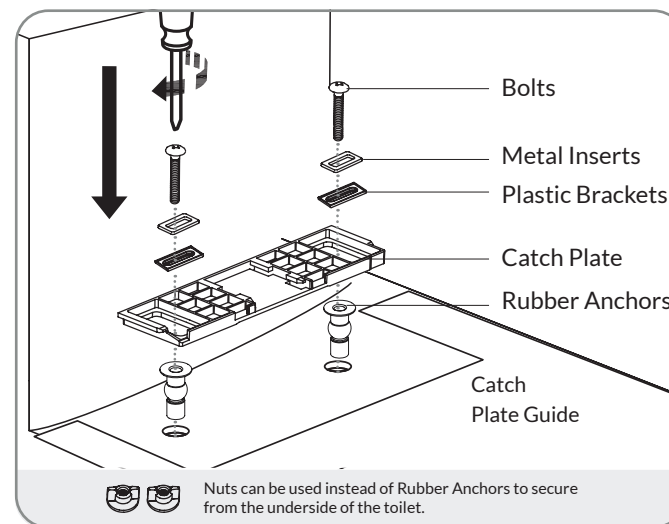



Be sure the rubber anchors are fully flush with the toilet mounting holes.

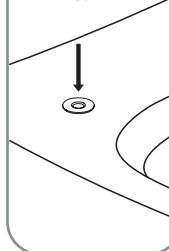

4. Install Your BB-500

Slide the bidet seat all the way onto the catch plate until you hear a click.


Press and hold the reset button for 2 seconds before continuing installation.

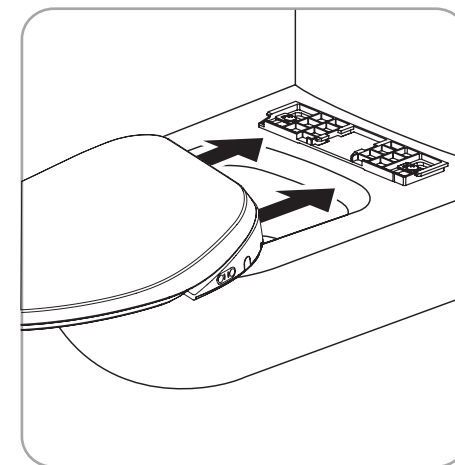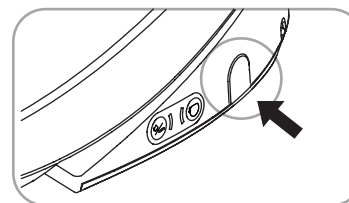

5. Connect the Water Hoses

- Install the t-valve onto the toilet tank. Ensure the cone washer is properly seated inside the t-valve.
- Connect your existing toilet hose to the water shut-off and t-valve.
- Connect the bidet hose to the bidet seat and t-valve.
- Open the water shut-off valve. Check for any leaking or dripping. Use a wrench to tighten any loose connections.
- Plug the power cord into a dedicated 120V power outlet.

Shut-off valves may vary. If supplied parts do not fit, please call 847.458.2334. Alternate fittings may be available upon request.

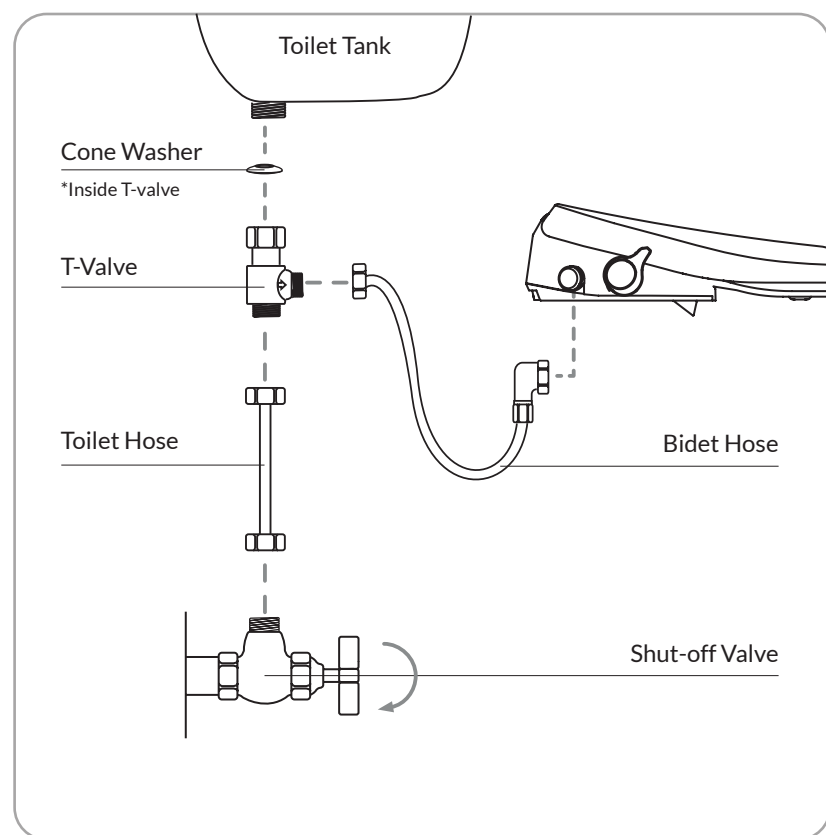


Cleaning the BB-500

- When you clean this product, do not use thinner, benzene or toilet bowl cleaner, as it may cause discoloration or damage.
- Disconnect the power cord and use a wet cloth when you clean this product.

Cleaning the Nozzle

Gently pull out the nozzle. Dip a soft cloth, sponge, or small brush into a neutral cleaning solution.

Use the cloth, sponge, or brush to carefully wipe the nozzle.

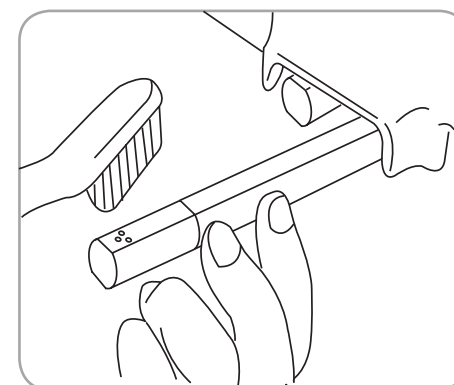


Use During Power Failure


During a power outage, it is not possible to adjust the water and seat temperature. However, you can still use the bidet functions with ambient water.

Resetting the BB-500

Press and hold the reset/drain button for 2 seconds.

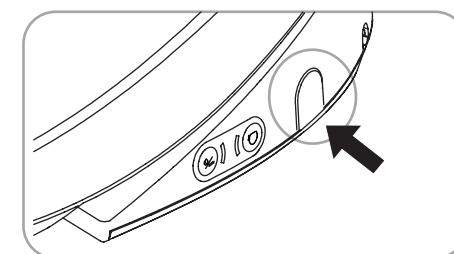


Cleaning the Filter Screen

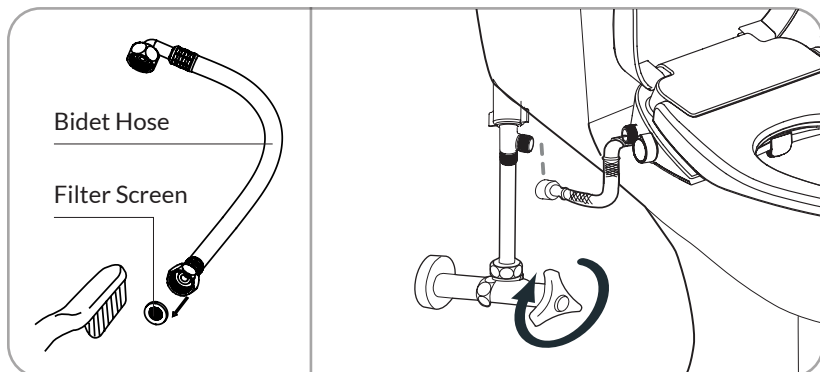

This product will not operate properly if the filter screen is clogged. Please clean the screen regularly.

1. Unplug the power cord.
2. Close the water shut-off valve.
3. Unscrew the bidet hose from the bidet seat.
4. Clean the filter screen with a small brush.
5. Re-connect the bidet hose.
6. Open the water shut-off valve.
7. Plug in the power cord.

Removing the BB-500

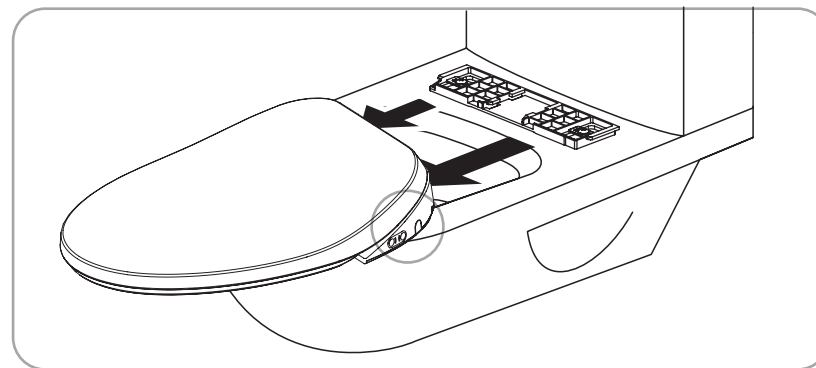

1. Disconnect the power plug.
2. Close the water supply shut-off valve.
3. Hold the side drain button and slide the bidet seat off the catch plate.

Draining the Water

Before draining, unplug the power cord and wait 30 minutes until the unit has cooled down. Do not insert your finger into the drain hole.


If you do not intend to use this product for an extended period of time, drain the water from the bidet seat

1. Disconnect the power plug.
2. Close the water shut-off valve.
3. Press the drain button until the water is completely drained.

Open the water shut-off valve to resume usage.

Problem	Cause	Solution
Water does not spray	Bidet hose has blockage.	Inspect and reattach bidet hose
	The shut-off valve is closed.	Open the shut-off valve
Water is leaking (while not occupied)	Knob is not completely turned to "Stop"	Close the knob completely.
Nozzle is not extending	The nozzle is in a self-clean cycle.	Wait a few seconds
	Not in contact with seat sensor	Occupy the seat before using
	Water temp malfunction	Unplug and replug the power cord.
Nozzle is not extending & toilet bowl is filling up	Bidet hose blockage	Clean the filter screen and reconnect the bidet nuts.
Low water pressure	Filter screen is blocked.	Clean filter screen.
No warm water	Product is not connected to a power supply.	Plug in the power cord
	Product needs to be reset.	Reset unit by holding and pressing the reset button.
Heated seat is not working	Function is turned off.	Turn on and adjust the temp.
Seat temp drops during wash function	Low-temp burn prevention is turned on	After a wash cycle, the seat temp will slowly rise.
Night light does not turn on	Night/Knob light malfunction	Unplug and replug power cord.
Knob light does not turn on		
Knob is not working	Not in contact with seat sensor	Occupy the seat before using

Specifications		BB-500
Power Rating		120Vac, 60Hz, 1050W
Water Inlet Pressure		0.1~ 0.74MPa (0.4 ~ 7.5 kgf/cm)
Power Cord		4 feet
Wash Device	Water Amount Regulation	Stepless regulation
	Water Temperature Regulation	~95/100°F /OFF
	Heating Method	Instant heating
	Protective Device	Anti-siphon valve + anti-backflow valve
	Safety Device	Double thermostat
Heated Seat	Surface Temperature	~91.4/98.6 /OFF
	Heater Power	50 W
	Safety Device	Thermostat & fuse
Others	Heating Wire Power	180W
	Safety Device	Thermostat & fuse
	Antibacterial Material	Nozzle and seat
	Seat Temperature Protection	Yes

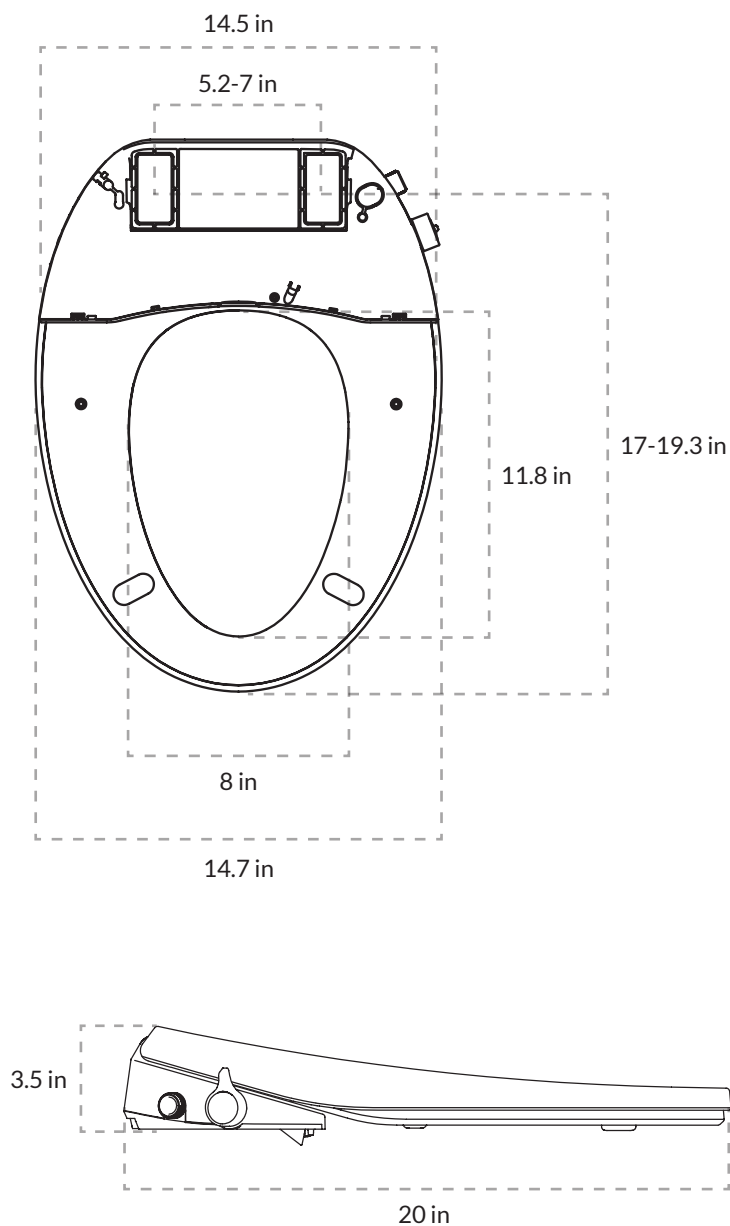

WARRANTY SUMMARY

1

1 Year Full Warranty



At-Home Repair Instructions
(Limited to certain products)



Service Center Repair Option*

**Warranty does not cover inbound shipping.*



Customer Support Available via Phone, Chat, & Email.

847.458.2334

www.biobidet.com

support@biobidet.com

1 YEAR FULL WARRANTY

Bio Bidet Innovation LLC warrants its product to be free from manufacturing defects under normal use and service for a period of one (1) year from original date of purchase.

This warranty is extended only to the ORIGINAL PURCHASER.

- Bio Bidet Innovation LLC's obligations under this warranty are limited to repair or replacement, at Bio Bidet Innovation LLC's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with instructions.
- Bio Bidet Innovation LLC reserves the right to make such inspections as may be necessary in order to determine the cause of the defect.
- Bio Bidet Innovation LLC will not charge for labor or parts in connection with authorized warranty repairs.
- Bio Bidet Innovation LLC is not responsible for the cost of removal, return, initial install, and/or re-installation of products.
- Bio Bidet Innovation LLC shall not be responsible or liable for any failure of, or damage to, this plumbing product or product component caused by either chloramines in the treatment of public water supply or in-tank bowl cleaners containing chlorine (calcium hypochlorite).

This warranty does not apply to the following items:

- Damage or loss sustained in a natural calamity such as fire, earthquake, flood, thunder electrical storm, etc.
- Damage or loss resulting from any unreasonable use, misuse, abuse, negligence, or improper maintenance of the product.
- Damage or loss resulting from removal, improper repair, or modification of the product.
- Damage or loss resulting from sediments or foreign matter contained in a water system.
- Damage or loss resulting from improper installation or from installation of a unit in a harsh and/or hazardous environment.

This warranty gives you specific legal rights. You may have other rights which vary from state to state. To obtain warranty repair service under this warranty, you must contact Bio Bidet Innovation LLC or an authorized distributor.

This written warranty is the only warranty made by Bio Bidet Innovation LLC. Repair or replacement as provided under this warranty shall be the exclusive remedy available to the purchaser. Bio Bidet Innovation LLC shall not be responsible for loss of the product or for other incidental, special or consequential damages or expenses incurred by the purchaser, or for labor or other costs due to installation or removal, or costs of repairs by others, or for any other expense not specifically stated above. Except to the extent prohibited by applicable law, any implied warranties, including that of merchantability or fitness for use, are expressly limited to the duration this warranty. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

BIO BIDET INNOVATION LLC

7900 S IL Route 31 Crystal Lake IL 60014
T: 847.458.2334
F: 847.854.1296

support@biobidet.com
www.biobidet.com



BB-500

MANUEL DE L'UTILISATEUR





**Vous avez des questions ? Nous
sommes là pour vous aider.**

1.847.458.2334
support@biobidet.com
www.biobidet.com

Assistance technique et des raccords
alternatifs sont disponibles.

26

INFORMATIONS SUR LE PRODUIT

Mesures de sécurité importantes
Vue d'ensemble et pièces

30

POUR COMMENCER

Fonctions et caractéristiques
Caractéristiques de sécurité

32

INSTALLATION

Guide d'installation

38

ENTRETIEN

Conseils pour le nettoyage
Utilisation en cas de panne d'électricité
Comment réinitialiser
Démontage de l'appareil
Drainage de l'eau
Guide de dépannage
Spécifications

41

GARANTIE

Garantie
Soutien à la clientèle
Notes


VEUILLEZ RESPECTER LES PRÉCAUTIONS ET INSTRUCTIONS SUIVANTES AVANT L'INSTALLATION ET L'UTILISATION.

- Ce produit doit être branché sur une prise GFCI (prise murale). Ne branchez pas le cordon d'alimentation s'il est endommagé ou cassé. Ne branchez pas le produit dans une prise électrique desserrée.
 - Il est recommandé d'utiliser ce produit sur un circuit séparé. Le partage d'un circuit peut entraîner le déclenchement du disjoncteur ou le vacillement des lumières..
 - Consultez un électricien qualifié ou un technicien de service si vous n'êtes pas sûr que l'unité est correctement mise à la terre.
- Ne pas ouvrir ce produit pour réparation sans l'autorisation du fabricant. Seul le personnel de service qualifié doit entretenir ce produit. Ne pas utiliser d'accessoires non recommandés par le fabricant.
- Connectez ce produit à une conduite d'alimentation en eau froide potable.
- Une surveillance étroite est nécessaire lorsque ce produit est utilisé par des enfants, des personnes âgées ou des adultes ayant la peau sensible. Une brûlure à basse température peut survenir lorsque la peau a été en contact avec un objet à une température relativement basse pendant une période prolongée.
- Si vous utilisez un nettoyant chimique pour cuvette de toilette, assurez-vous d'essuyer tous les éclaboussures qui éclaboussent sur le bidet. Ne pas utiliser de benzène ou de détergent chimique acide, car ils peuvent provoquer une décoloration. Seuls les détergents neutres sont autorisés.
- Ne pas brancher le cordon d'alimentation avant de connecter le tuyau d'alimentation en eau.
- Installez-le dans un endroit avec une ventilation adéquate pour éviter les niveaux élevés d'humidité qui peuvent endommager les composants électroniques.
- Ne pas toucher le cordon d'alimentation avec les mains mouillées et ne pas attraper un produit tombé dans l'eau. Débranchez immédiatement.


- Débranchez le siège bidet lorsque vous le nettoyez ou le détachez de la cuvette des toilettes. Ne pas brancher avant que les travaux de plomberie ne soient pas terminés.
- Gardez le cordon d'alimentation loin des surfaces chauffées pour éviter tout risque d'incendie. Gardez tout matériau inflammable loin de ce produit en tout temps.

WATER DOES IT BETTER®


BB-500

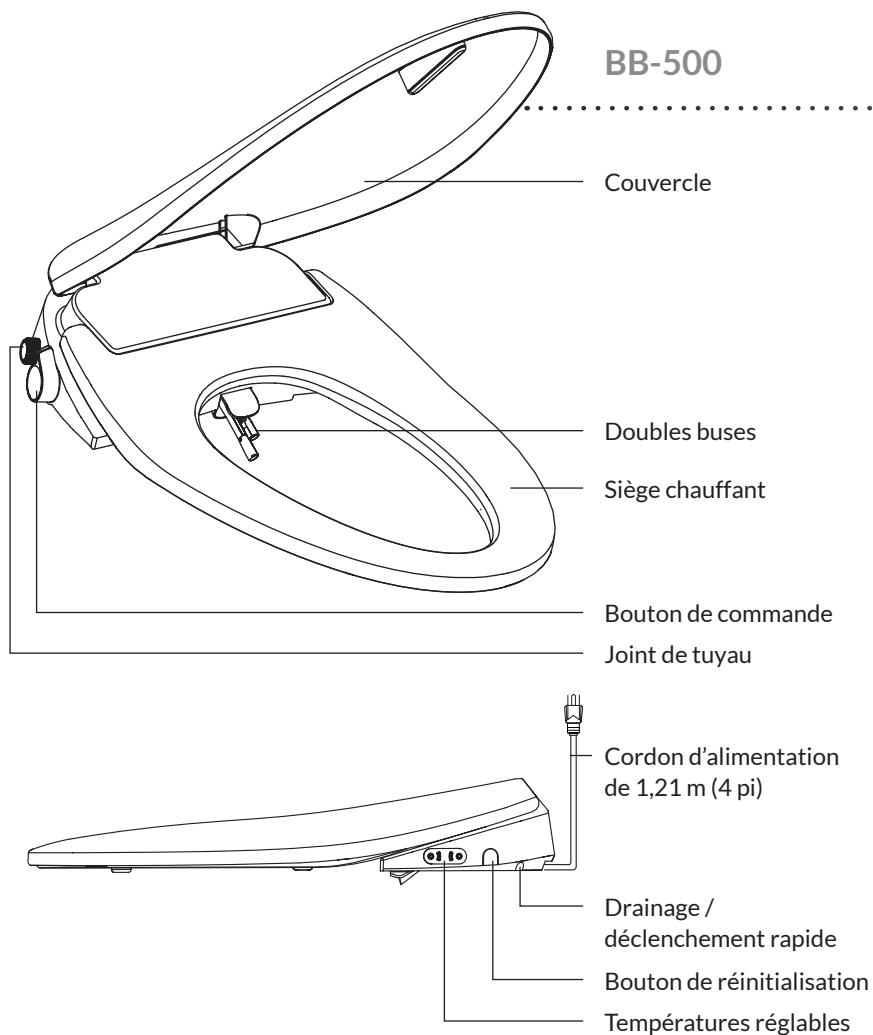


Bouton de commande latéral

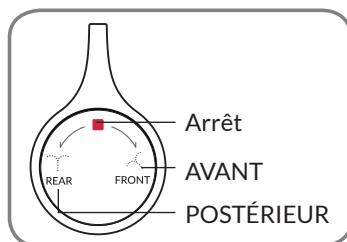


Double buse

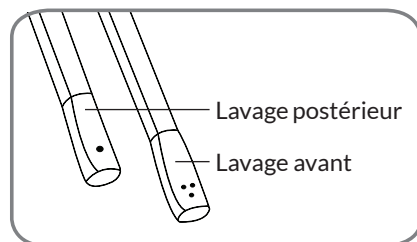

Liste des pièces

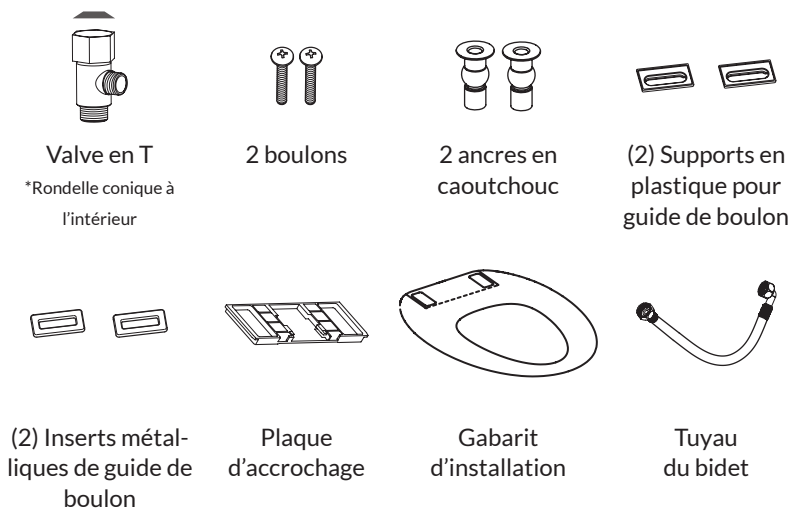

Pièces d'installation alternatives

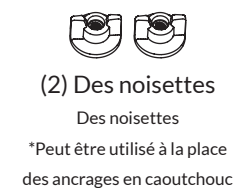


Outils recommandés pour l'installation



Bouton de commande latéral (2 lavages)

Capteur de siège

Ce produit comprend un capteur de siège intégré pour éviter toute pulvérisation accidentelle lorsqu'il est alimenté.

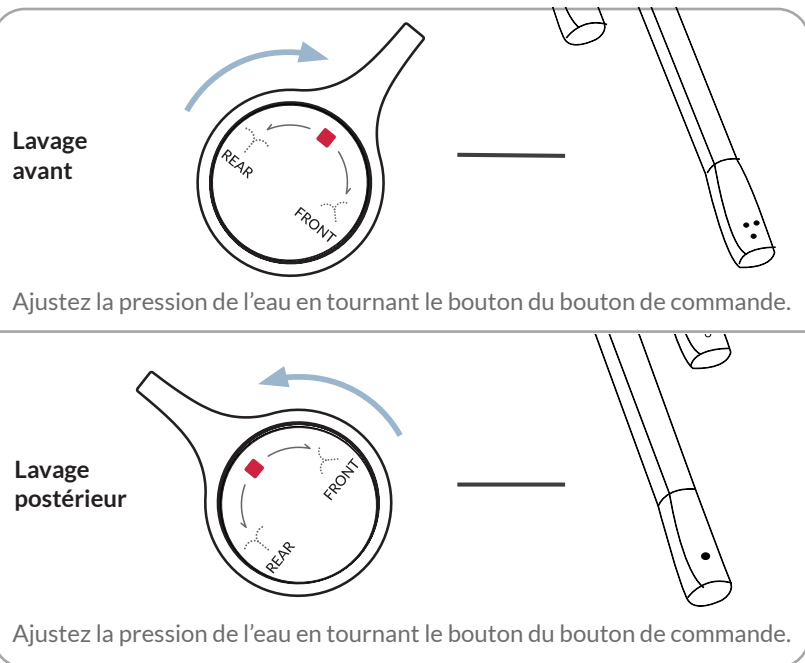

Lavage turbo Appuyez une fois sur le bouton de commande pendant qu'un lavage est actif pour activer une pulvérisation Turbo avec une pression d'eau élevée.

Lavage à pulsation Appuyez une deuxième fois sur le bouton de commande pendant qu'un lavage est en cours pour activer un jet de lavage à pulsation qui alterne la pression de l'eau afin d'aider à stimuler le mouvement des intestins.

Lavage standard Appuyez une troisième fois sur le bouton de commande pendant qu'un lavage est en cours pour revenir à un lavage standard.


Autonettoyant Ce produit comprend une fonction autonettoyante qui rince les buses pendant 5 secondes avant chaque utilisation.

Veilleuse Lorsque vous n'êtes pas assis, appuyez longuement sur le bouton de commande pour passer d'un réglage à l'autre de la veilleuse.

- Mode 1 - Les deux lumières allumées
- Mode 2 - Lumière du bouton allumée, lumière du bol éteinte
- Mode 3 - Les deux lumières éteintes

Sauvegarde postérieur Pendant une panne d'électricité, les fonctions de lavage peuvent toujours être utilisées avec la température et la pression de l'eau ambiantes.

Boutons de contrôle latéraux

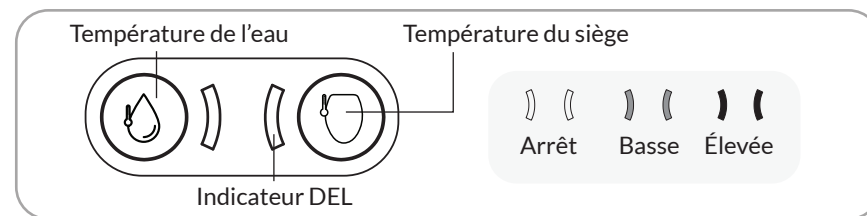

Température de l'eau Pendant un cycle de lavage, appuyez plusieurs fois sur le bouton « Température de l'eau » pour régler la température de l'eau.

Température du siège Appuyez plusieurs fois sur le bouton « Température du siège » pour régler le siège chauffant.

Caractéristiques de sécurité

- Si le bouton n'est pas complètement éteint après un lavage, l'appareil émet un signal sonore et ne permet pas d'activer les fonctions de lavage.
- Quand la température de l'eau dépasse 42,8° C (109° F), l'appareil ne permet pas d'activer les fonctions de lavage. Débranchez et rebranchez le cordon d'alimentation pour réinitialiser l'appareil et reprendre le fonctionnement.
- Protection contre les brûlures à basse température - Après 5 minutes d'occupation du siège, la température du siège passe automatiquement à ~ 28,9° F (84°F).

AVANT L'INSTALLATION


Ne pas brancher le cordon d'alimentation avant d'avoir terminé l'installation.

Veuillez contacter notre centre de service au 1-847-458-2334 pour obtenir raccords alternatifs ou de l'aide pour cette procédure.

1. Fermer l'eau

Fermez la valve d'arrêt d'eau. Drainez complètement le réservoir des toilettes en tirant la chasse d'eau. Dévissez le tuyau relié au réservoir des toilettes.

Vous pouvez prévoir une serviette pour récupérer l'eau résiduelle.

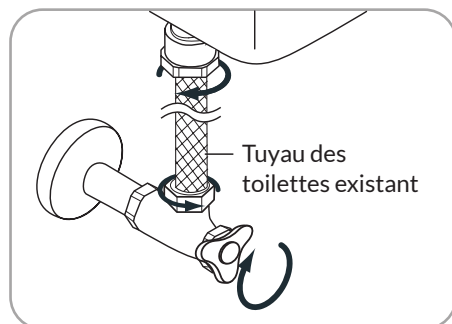


2. Retirer le siège des toilettes

Retirez les boulons de montage pour dégager le siège existant des toilettes.



3. Installer la plaque d'accrochage

Insérez les ancrages en caoutchouc dans les trous de montage des toilettes. Alignez le guide d'installation sur le rebord des toilettes et placez la plaque de capture sur les trous de montage. Assemblez les guides de boulons en plaçant les inserts métalliques dans les supports en plastique. Assurez-vous de les insérer correctement afin que les inserts métalliques affleurent le dessus. Placez les guides de boulons sur la plaque de capture au-dessus des trous de montage des toilettes. Insérez les boulons dans les guides de boulons, la plaque de retenue et les ancrages en caoutchouc. Utilisez un tournevis cruciforme pour fixer la plaque de capture sur les toilettes.


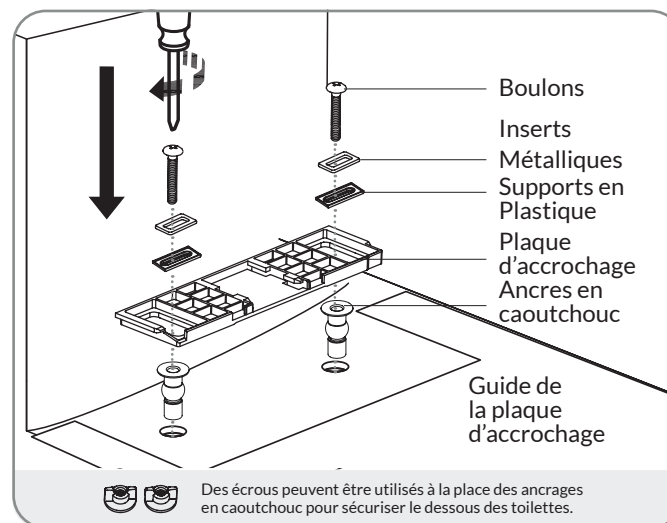


Assurez-vous que les ancrages en caoutchouc affleurent complètement les trous de montage des toilettes.

4. Installer votre BB-500

Faites glisser le siège bidet complètement sur la plaque d'accrochage jusqu'à ce que vous entendiez un déclic.


Appuyez sur le bouton de réinitialisation et maintenez-le enfoncé pendant 2 secondes avant de poursuivre l'installation.

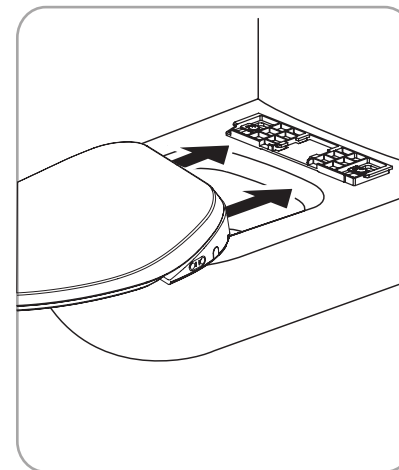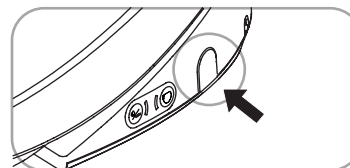

5. Connecter les tuyaux d'eau

- Installez la valve en T sur le réservoir des toilettes. S'assurer que la rondelle conique est correctement placée à l'intérieur de la valve en T.
- Connectez Tuyau des toilettes existant à la valve d'arrêt d'eau et à la valve en T.
- Connectez le tuyau du bidet au siège bidet et à la valve en T.
- Ouvrez la valve d'arrêt d'eau. Vérifiez qu'il n'y a pas de fuite ou d'égouttement. Utilisez une clé pour serrer les connexions lâches.
- Branchez le cordon d'alimentation dans une prise de courant dédiée de 120 V.

Les valves d'arrêt peuvent varier. Si les pièces fournies ne conviennent pas, veuillez appeler le 1-847-458-2334. Des raccords alternatifs peuvent être disponibles sur demande.

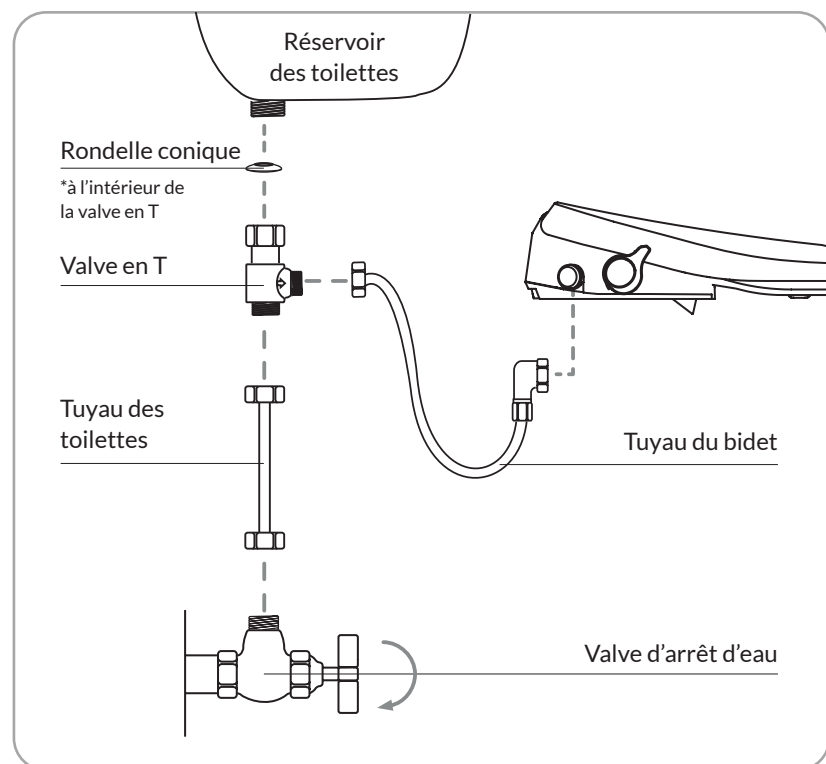


Nettoyage du BB-500

- Lorsque vous nettoyez ce produit, ne pas utiliser de diluant, de benzène ou de nettoyant pour cuvette, car cela pourrait entraîner une décoloration ou des dommages.
- Débranchez le cordon d'alimentation et utilisez un chiffon humide lorsque vous nettoyez ce produit.

Nettoyage de la buse

Retirez doucement la buse. Trempez un chiffon doux, une éponge ou une petite brosse dans une solution de nettoyage neutre.

Utilisez le chiffon, l'éponge ou la brosse pour essuyer soigneusement la buse.

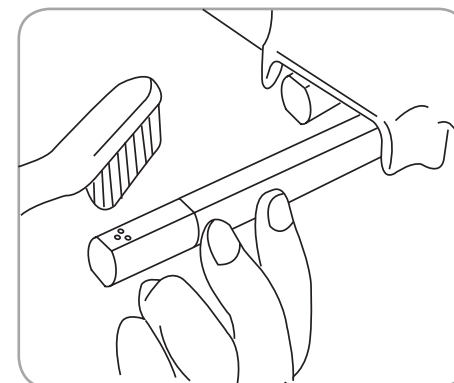


Comment utiliser en cas de panne d'électricité


En cas de panne d'électricité, il n'est pas possible de régler la température de l'eau et du siège. Cependant, vous pouvez toujours utiliser les fonctions du bidet avec de l'eau ambiante.

Réinitialisation du BB-500

Appuyez sur le bouton de réinitialisation / drainage et maintenez-le enfoncé pendant 2 secondes.

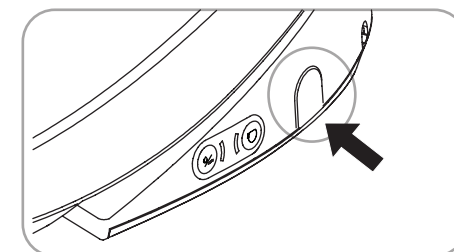


Comment nettoyer la grille du filtre

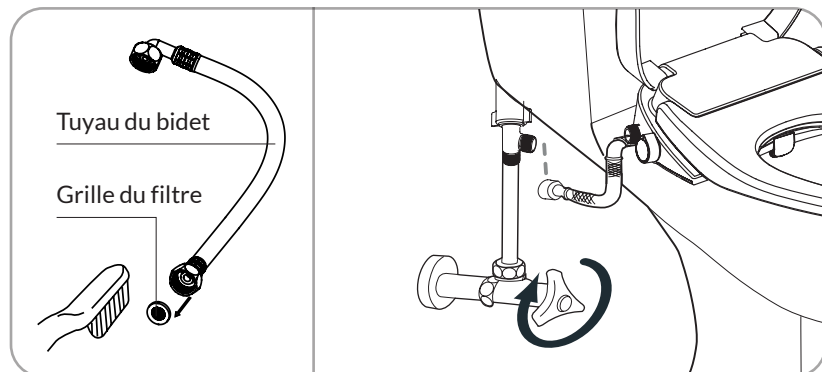

Ce produit ne fonctionnera pas correctement si la grille du filtre est obstruée. Veuillez nettoyer la grille régulièrement.

1. Débranchez le cordon d'alimentation.
2. Fermez la valve d'arrêt d'eau.
3. Dévissez le tuyau du bidet du siège du bidet.
4. Nettoyez la grille de filtre avec une petite brosse.
5. Rebranchez le tuyau du bidet.
6. Ouvrez la valve d'arrêt d'eau.
7. Branchez le cordon d'alimentation.

Démontage du BB-500

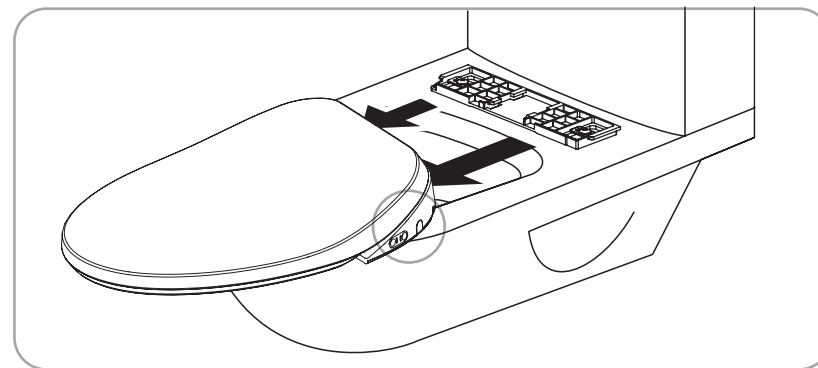

1. Débranchez la prise d'alimentation.
2. Fermez la valve d'arrêt de l'alimentation en eau.
3. Maintenez le bouton de drainage latéral enfoncé et faites glisser le siège bidet de la plaque d'accrochage.

Drainage de l'eau

Avant de procéder au drainage, débranchez le cordon d'alimentation et attendez 30 minutes jusqu'à ce que l'appareil ait refroidi. Ne pas insérer le doigt dans l'orifice de drainage



Si vous n'avez pas l'intention d'utiliser ce produit pendant une période prolongée, drainez l'eau du siège bidet.

1. Débranchez la prise d'alimentation.
2. Fermez la valve d'arrêt d'eau.
3. Appuyez sur le bouton de drainage jusqu'à ce que l'eau soit complètement drainée.

Ouvrez la valve d'arrêt d'eau pour reprendre l'utilisation.

Problème	Cause	Solution
L'eau ne pulvérise pas.	Le tuyau du bidet est bouché.	Inspectez et rattrachez le tuyau du bidet
	La valve d'arrêt est fermée.	Ouvrez la valve d'arrêt.
Il y a une fuite d'eau (alors que l'appareil n'est pas occupé).	Le bouton n'est pas complètement tourné sur « Arrêt ».	Fermez complètement le bouton.
La buse ne s'étend pas.	La buse est dans un cycle d'auto-nettoyage.	Attendez quelques secondes.
	Pas en contact avec le capteur du siège.	Occupez le siège avant d'utiliser.
	Dysfonctionnement de la température de l'eau.	Débranchez et rebranchez le cordon d'alimentation.
La buse ne s'étend pas et la cuvette se remplit.	Le tuyau du bidet est bouché	Nettoyez la grille du filtre et reconnectez les écrous du bidet.
La pression de l'eau est basse.	La grille du filtre est bouchée.	Nettoyez la grille du filtre.
Il n'y a pas d'eau chaude.	Le produit n'est pas connecté à une alimentation électrique.	Branchez le cordon d'alimentation.
	Le produit doit être réinitialisé.	Réinitialisez l'appareil en maintenant le bouton de réinitialisation enfoncé.
Le siège chauffant ne fonctionne pas.	La fonction est désactivée.	Allumez et réglez la température.
La température du siège baisse pendant la fonction de lavage.	La prévention des brûlures à basse température est activée.	Après un cycle de lavage, la température du siège augmente lentement.
La veilleuse ne s'allume pas.	Dysfonctionnement de la veilleuse / du bouton	Débranchez et rebranchez le cordon d'alimentation.
Knob light does not turn on		
Le bouton ne fonctionne pas.	Pas en contact avec le capteur du siège.	Occupez le siège avant d'utiliser.

Spécifications		BB-500
Puissance nominale		120 V CA, 60 Hz, 1050 W
Pression d'entrée de l'eau		0,1~ 0,74MPa (0,4 ~ 7,5 kgf/cm)
Cordon d'alimentation		1,21 m (4 pi)
Dispositif de lavage	Régulation de la quantité de l'eau	Régulation en continu
	Régulation de la température de l'eau	~35° / 37,8° C (~95° / 100° F) /Arrêt
	Méthode de chauffage	Chauffage instantané
	Dispositif de protection	Valve anti-siphon + valve anti-reflux
	Dispositif de sécurité	Double thermostat
Siège chauffant	Température de la surface	~ 33° / 37° C (~91,4° / 98,6° F) /Arrêt
	Puissance du chauffage	50 W
	Dispositif de sécurité	Thermostat et fusible
Autres	Puissance du fil chauffant	180 W
	Dispositif de sécurité	Thermostat et fusible
	Matériau antibactérien	Buse et siège
	Protection contre les brûlures causées par la basse température	Oui

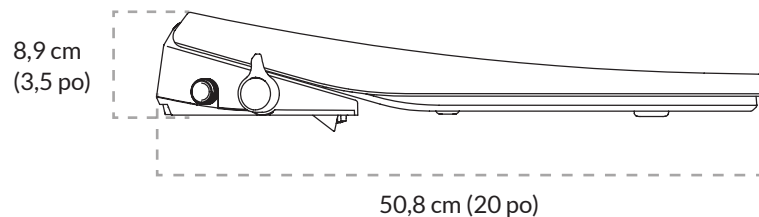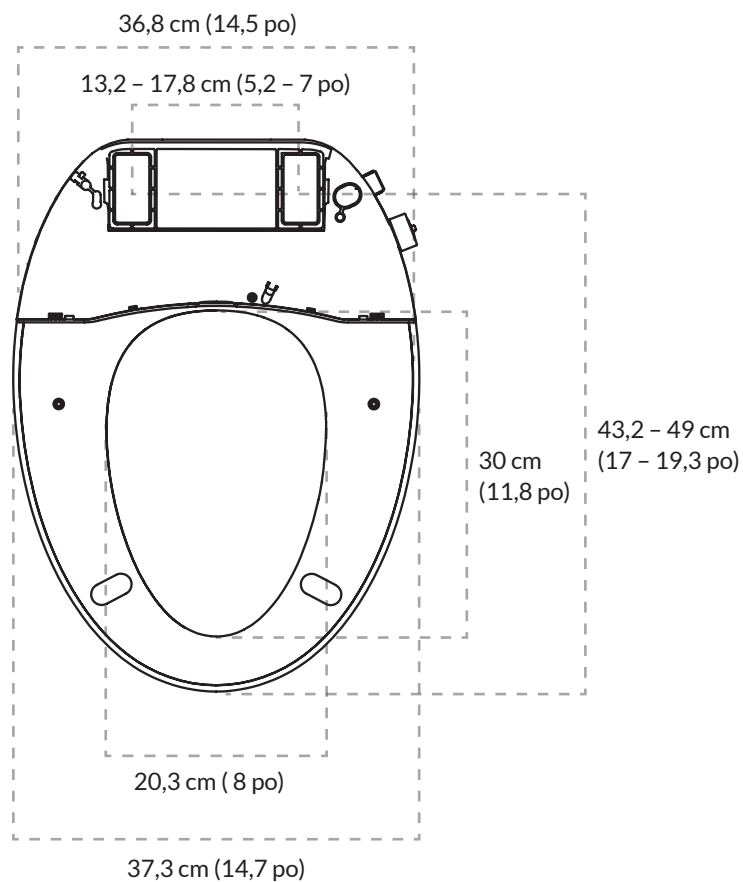

RÉSUMÉ DE LA GARANTIE

1

Garantie complète d'un (1) an.



Instructions de réparation à domicile
(Limité à certains produits)



Option de réparation par le centre de service*

**La garantie ne couvre pas les frais d'expédition.*



Assistance à la clientèle disponible par téléphone,
chat et courriel.

Tél. : 1-847-458-2334

Site web : www.biobidet.com

Courriel : support@biobidet.com


GARANTIE COMPLÈTE D'UN (1) AN.

Bio Bidet Innovation LLC garantit que son produit est exempt de défauts de fabrication dans des conditions normales d'utilisation et d'entretien pendant une période d'un (1) an à compter de la date d'achat originale.

Cette garantie est réservée à l'ACHETEUR ORIGINAL.

- Les obligations de Bio Bidet Innovation LLC dans le cadre de cette garantie sont limitées à la réparation ou au remplacement, à la discrétion de Bio Bidet Innovation LLC, des produits ou des pièces jugés défectueux, à condition que ces produits aient été correctement installés et utilisés conformément aux instructions.
- Bio Bidet Innovation LLC se réserve le droit d'effectuer les inspections nécessaires afin de déterminer la cause du défaut.
- Bio Bidet Innovation LLC ne facturera pas la main d'œuvre ou les pièces dans le cadre des réparations autorisées au titre de la garantie.
- Bio Bidet Innovation LLC n'est pas responsable du coût de l'enlèvement, du retour, de l'installation initiale et / ou de la réinstallation des produits.

THANK YOU!

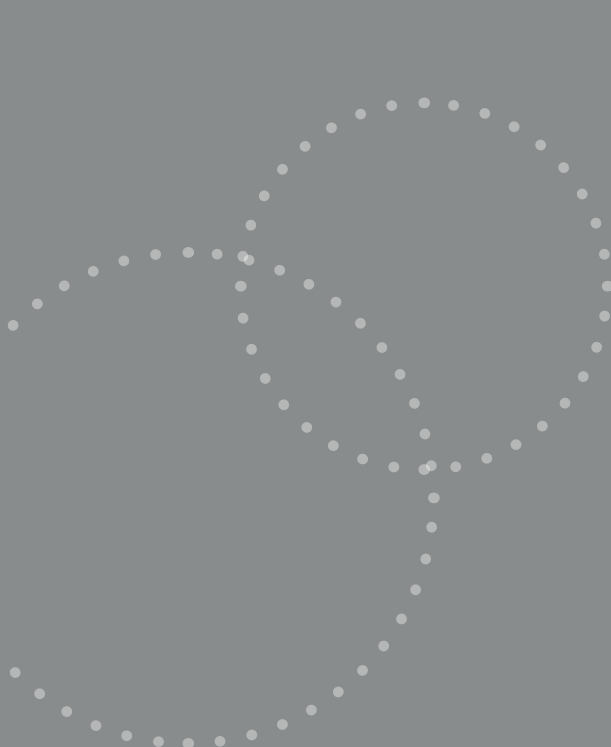

BIOBIDET®
BY BEMIS

Customer Support

T: 847.458.2334

TOLL-FREE: 877.339.5214

7900 S IL Route 31 Crystal Lake, IL 60014

support@biobidet.com

www.biobidet.com