
# **USE AND CARE MANUAL**

#### 1 LIGHT OUTDOOR WALL LANTERN SET OF 2

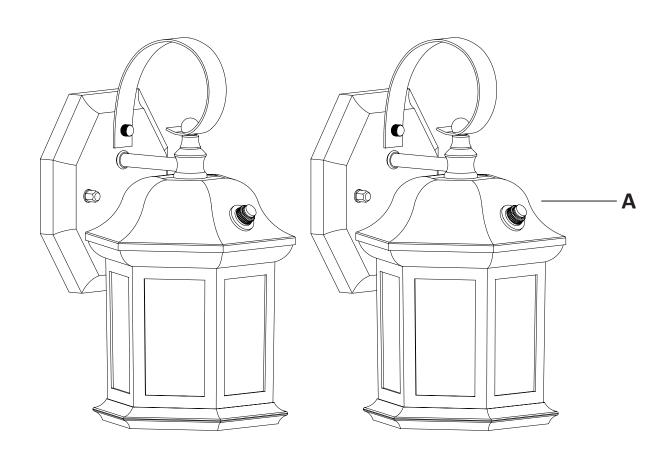

#### **Hardware** (Parts are not to scale)

H1	H2	H3	H4
Mounting strip (Pre-assembled to	Support screw (Pre-assembled to	Hex nut (Pre-assembled to support	Outlet box screw
fixture body)	mounting strip)	screw)	4 pcs
2 pcs	4 pcs	4 pcs	
H5	H6	H7	Н8
Green ground screw (Pre-	Wire connector	Cap nut (Pre-assembled to support	Rubber washer
assembled to mounting strip)	6 pcs	screw)	(4 pcs: Pre-assembled to support screw;
2 pcs		4 pcs	2 pcs: Pre-assembled to the screw of the canopy)
			6 pcs
H9	H10	H11	
Big Finial (Pre-assembled to fixture	Decoration plate	Small finial (Pre-assembled to the	
body)	2 pcs	screw of the canopy)	
2 pcs		2 pcs	

THIS MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

#### IMPORTANT SAFETY INFORMATION

- Please read and understand this entire manual before attempting to assemble, operate or install the product.
- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.
- All electrical connections must be in agreement with local codes, ordinances or the national electric
  code (NEC). Contact your municipal building department to learn about your local codes, permits and/or
  inspections. If you do not have electrical wiring experience, refer to a do-it-yourself wiring handbook or
  have your fixture installed by a qualified licensed electrician.
- Risk of fire most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not exceed the recommended wattage. Refer to the re-lamping label on the light socket for maximum wattage.
- Do not replace a bulb when electrical outlet switch is turned to the "ON" position.
- Do not immerse your lamp in water; doing so will damage the wire.
- Keep materials that burn easily away from lighted bulbs.
- This fixture is intended to be mounted at a minimum of 6' above ground level.
- This outdoor lantern has been permanently installed a photocell switch, photocell turns lantern ON at dusk and automatically turns OFF at dawn. **Note:** don't cover the photocell switch at anytime.


#### **PREPARATION**

- Before beginning assembly, installation or operation of product, make sure all parts are present. Compare
  parts with package contents list and diagram on previous page. If any part is missing or damaged, do not
  attempt to assemble, install or operate the product. Contact customer service for replacement parts.
- Tools required for assembly (not included): flathead screwdriver, phillips screwdriver, pliers, electrical tape, wire cutters, safety glasses, ladder, wire stripper, caulk.

#### **INSTALLATION**


#### 1 Preparing the mounting strip

- Unscrew the two cap nuts (H7) from the support screws (H2), remove the mounting strip (H1) from the fixture body (A), and keep the two cap nuts (H7) and two small rubber washers (H8) for later use.
- Loosen the hex nuts (H3) on the support screws (H2) and adjust the support screws (H2) so that they extend long enough to protrude through the canopy of the fixture body (A), then secure the support screws (H2) in place using the hex nuts (H3).

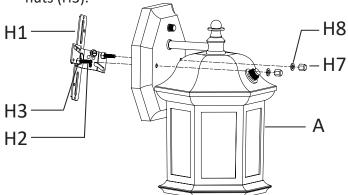

#### 2 Installing the mounting strip


• Fasten the mounting strip (H1) onto the outlet box using two outlet box screws (H4).

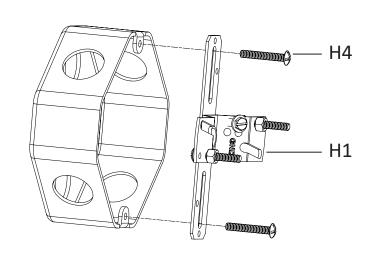

## **INSTALLATION** (continued)


#### 3 Assembling the decoration plate to the fixture body

- Unscrew the big finial (H9) from the fixture body (A).
- Unscrew the small finial (H11) from the screw of the canopy of the fixture body (A) and do not remove the small rubber washer (H8) as shown in the diagram.
- Place the small hole of the decoration plate (H10) on the screw and secure with the small finial (H11). Align the big hole of the decoration plate (H10) and the hole of the top of the fixture body (A) and secure with the big finial (H9) as shown in the diagram.
- Tighten the small finial (H11) and the big finial (H9).

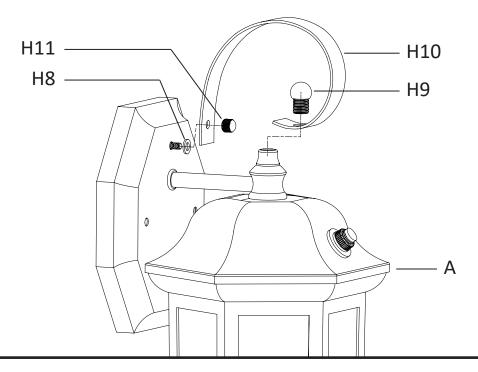

#### 4 Making the electrical connections


- Strip 3/4 in. of insulation from the wire ends.
- Connect the black wire from the fixture to the black wire from the outlet box, then connect the white wire from the fixture to the white wire from the outlet box.
- The bare copper ground wire from the fixture must loop one turn under the head of the green ground screw (H5) on the mounting strip (H1) before it is connected to the ground conductor of the supply circuit.
- Cover the wires with wire connectors (H6). Tape the wire connectors (H6) and wires together, and carefully position all wires inside the outlet box.

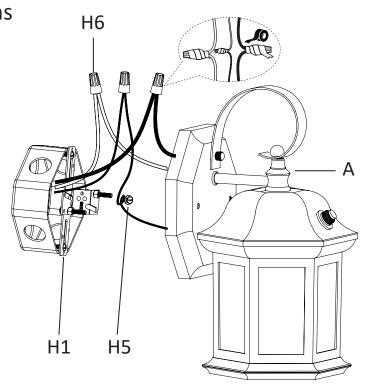

## **INSTALLATION** (continued)

# 5 Assembling the fixture body to the outlet box


 Place the fixture body (A) over the outlet box, let the heads of support screws (H2) come through the holes of the canopy of the fixture body (A), then place the small rubber washers (H8) over the support screws (H2) and secure by tightening the cap nuts (H7).

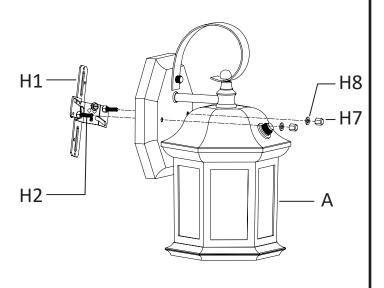

#### 6 Installing the light bulb

 Install the light bulb (not provided) into the socket. Use one MAX 60 W medium base (E26) type "A" bulb (recommended).


Note: You can also use one MAX 9W medium base (E26) self-ballasted LED bulb. Do not exceed the recommended wattage.

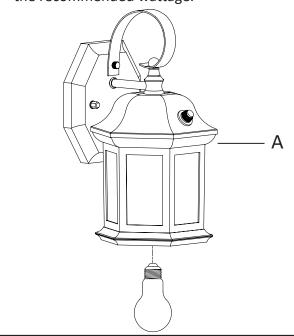

### 7 Applying the caulk


 Use weather resistant caulk (not included) to seal around top and side perimeter of fixture back plate. Do not caulk bottom to allow for condensation evaporation.

Note: Don't cover the photocell switch at anytime.

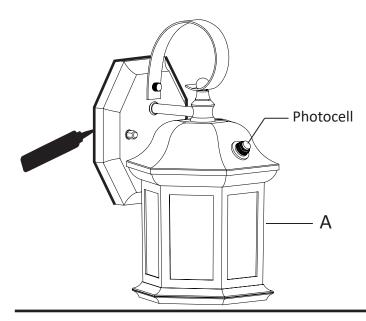

## 8 Installing the second lamp

Repeat steps 1 - 7 for the second lamp.

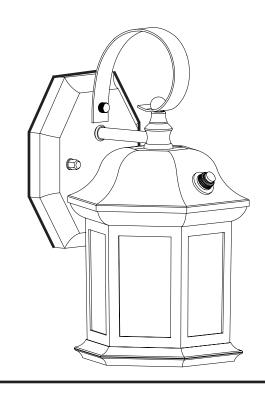

#### **CLEANING**

- Do not use any cleaners with chemicals, solvents, or harsh abrasives. Use only a dry, soft cloth to dust or wipe carefully.
- To clean the fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Use a dry or slightly dampened, clean cloth to wipe the exterior surface of the fixture.

#### **TROUBLESHOOTING**

- The light does not come on at all:
  - a) Make sure the wall switch and circuit breaker are on.
  - b) Make sure the wiring is correct.
- Fuse blows or circuit trips when light is turned on.
  - a) Check for crossed wires, ensure wiring is correct.