ABOUT US

We have been engaged in the production of tricycle spare parts for ten years. After years of polishing and experience, we know what kind of products are most suitable for the current market. Our aim is to make tricycle spare parts with high comfort, high cost performance and high practicability. Hope our products can bring you a different feeling of use.




INSTRUCTION MANUAL

ENJOY LIFE ENJOY RIDING

PACKAGE CONTENTS



Backrest

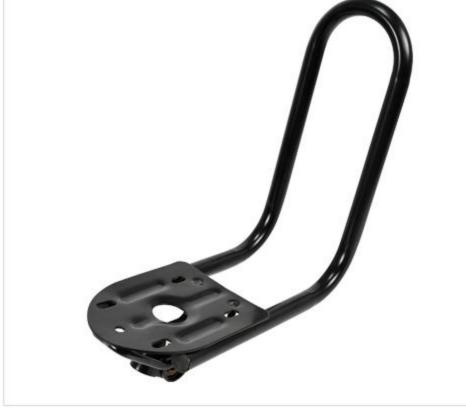

Seat frame



Saddle



Accessories

OPERATION INSTRUCTIONS



Backrest bracketinstallation screw position.



Seat saddle mountingscrew position.



Align the screw holes of theseat cushion with the backrest bracket, then tighten the four screws



Take out the backrest and plastic buckle.



The backrest is placed on the backrest bracket in the direction shown in the picture.



Put the plastic buckle on thebackrest bracket, align thescrew holes, bolts into the screw holes, and screw the backrest.


ATTENTION MATTERS

- 1. Install the seat back, and turn the screw to press down and rotate.
- 2. Fits on standard seat posts, standard seat clamp size 7/8".
- 3. Once installed on the bicycle seat post, adjust the angle and tighten the bolts as tightly as possible.
- 4. Comfortable backrest wide seat for adult tricycle, bikes, mountain bike and more bicycle styles.
- 5. Raise the backrest pull must not be greater than 130N.

Backrest can be adjusted down



Backrest can be adjusted upwards

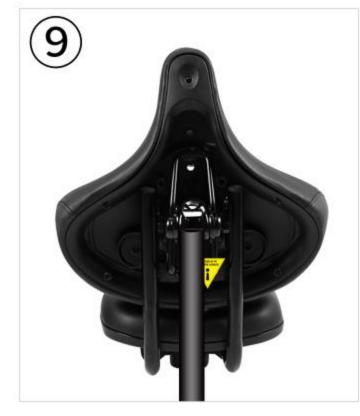

Assemble the installed saddleto the bicycle seatposttightenthe screws with a wrench.

PRODUCT SPECIFICATION

Backrest size: 8.26x9.05 inch Saddle size: 12.2x12.59inch

Standard seat clamp size: 7/8inch



12.99inch

