

Please go to **www. quoizel. com** for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (4) Candelabra Base Bulbs 60W Maximum.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Note: This CONVERTIBLE fixture can be mounted as pendant light or semi-flush light. Refer to respective installation steps for installations.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

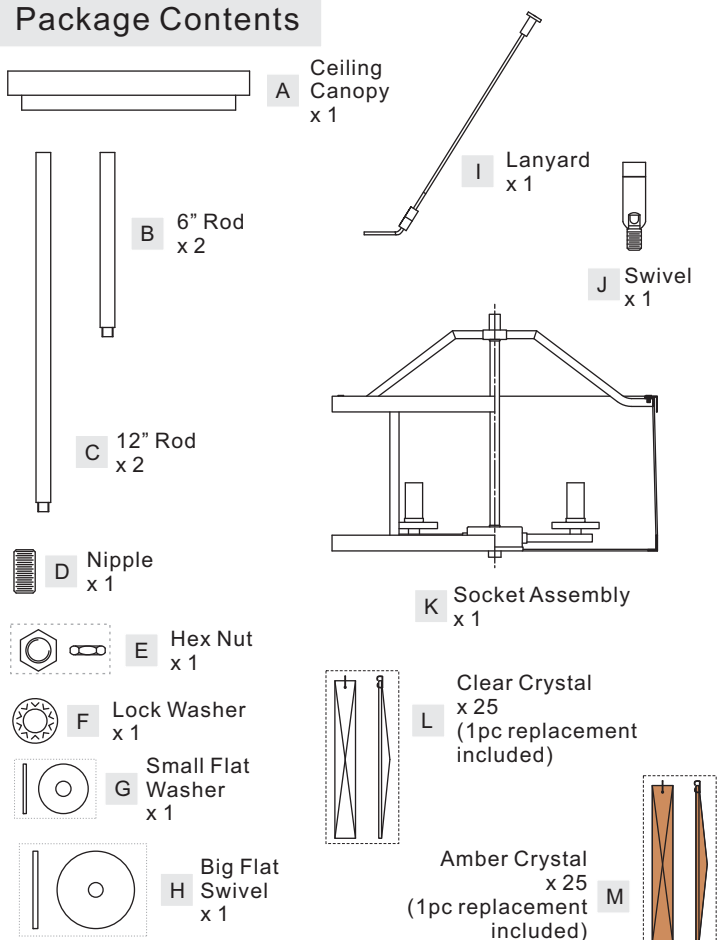

Hardware Contents

Crossbar Assembly x 1 **AA**

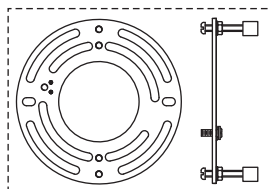


Assembly Instructions for Pendant Light (Step 1A - Step 8A)

STEP 1A – Attach Swivel, Ceiling Canopy and Lanyard

- Thread Nipple (D) onto the Swivel (J).
- Place Ceiling Canopy (A), Big Flat Washer (H), Lanyard (I), Small Flat Washer (G) and Lock Washer (F) over the Nipple (D) as shown in the illustration. Secure by threading Hex Nut (E) onto the Nipple (D), tighten until snug with pliers.

Figure 1A

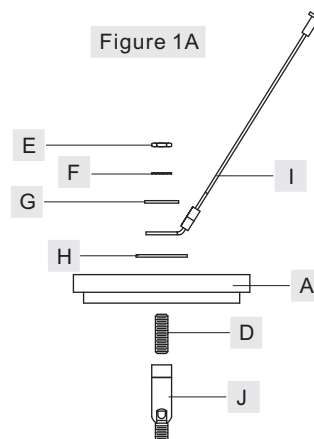


STEP 2A – Assemble Rods and the Ceiling Canopy

- Determine Rods (B/C) to be assembled to Socket Assembly (K) according to your hanging height.
- Pass supply wires and ground wire through the chosen rods (B/C) and Ceiling Canopy (A). Thread Socket Assembly (K), the chosen Rods (B/C) and the Swivel (J) together. Hand tighten until snug.

Suggested rods for Ceiling height :
8' ceiling : use (2) 12" rods
9' ceiling : use (2) 6" rods
and (2) 12" rods

Supply Wires
and Ground Wire

Figure 2A

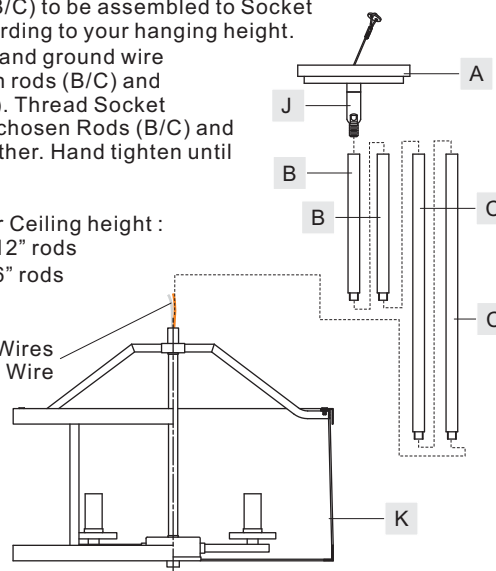

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www. quoizel. com

STEP 3A – Installing the Crossbar Assembly

- A. Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (AA) with Outlet Box Screws (not included). Tighten until snug.

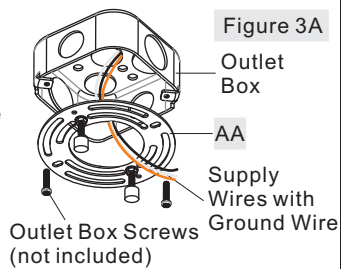


Figure 3A

STEP 4A – Test Fit the Ceiling Canopy to the Crossbar Assembly

- A. Remove the mounting balls from the Crossbar Assembly (AA). Place the Ceiling Canopy (A) onto the Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and held tight with the mounting balls. If it is not, adjust the length of the mounting screw on the Crossbar

Assembly (AA) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove the mounting ball and Ceiling Canopy (A) and proceed to Step 5A.

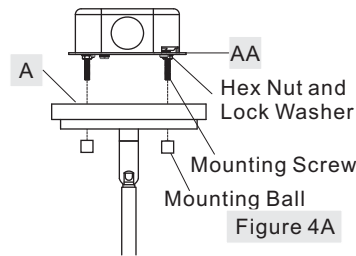


Figure 4A

STEP 5A - Attach the Lanyard

- A. The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while connecting the electrical wires.
B. Turn the Button Stop so it may be inserted into a Crossbar slot. Make sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring, the Lanyard will push into the junction box when the fixture is placed for final mounting.

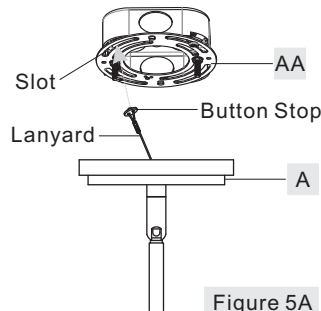


Figure 5A

STEP 6A - Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

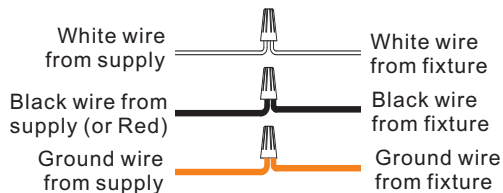


Figure 6A

STEP 7A – Install the Fixture Body

- A. Position the Ceiling Canopy (A) and Fixture Body onto the Crossbar Assembly (AA). Place the holes in the Ceiling Canopy (A) over the mounting screws. Secure the Fixture Body by using the mounting balls and hand tighten the mounting balls until snug.


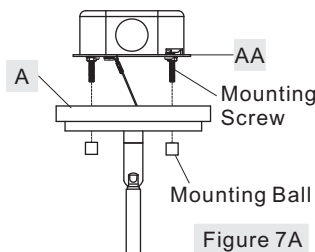


Figure 7A

STEP 8A – Attach Crystals and Install Bulbs


- A. Unlock Screws on the top of Cage and remove Ring.
B. Place the bottom end of Clear Crystals (L) and Amber Crystals (M) into bottom edge of the Cage. Attach hangers at Clear Crystals (L) and Amber Crystals (M) to holes on the top edge of Cage one next to another.
C. After finish all crystals, place Ring back onto top edge of the Cage and secure with Screws previously removed.
D. Insert bulbs onto sockets and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

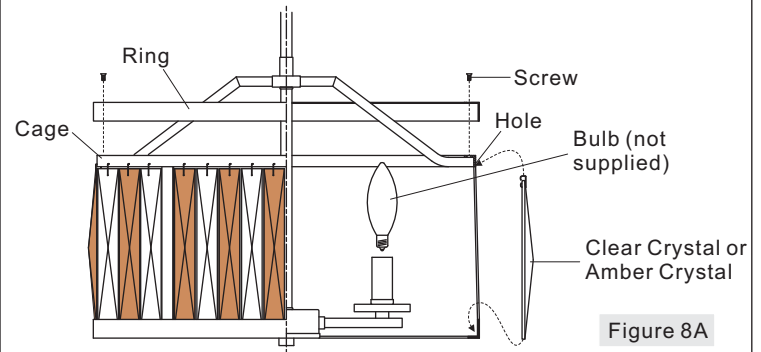

Assembly Instructions for Semi-flush Light (Step 1B - Step 8B)

Part B, Part C and Part J will not be used in the assembly of the Semi-Flush Light fixture. Please set aside these parts.

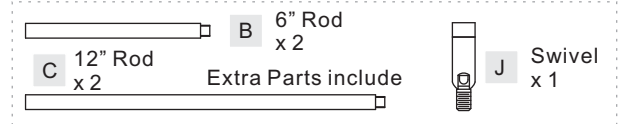

STEP 1B – Install Ceiling Canopy to Socket Assembly

- A. Pass supply wires with ground wire through Nipple (D), Ceiling Canopy (A), Big Flat Washer (H), Lanyard (I), Small Flat Washer (G), Lock Washer (F) and Hex Nut (E). Thread Nipple (D) onto Socket Assembly (K). Place Ceiling Canopy (A), Big Flat Washer (H), Lanyard (I), Small Flat Washer (G) and Lock Washer (F) onto Nipple (D). Secure by threading Hex Nut (E) onto Nipple (D). Hand tighten until snug. Cut the wires leaving approximately 6" of wire extending from the Ceiling Canopy.
B. Optional Swivel: Install the swivel to Socket Assembly (K) and then attach Nipple (D) and Ceiling Canopy (A) to the

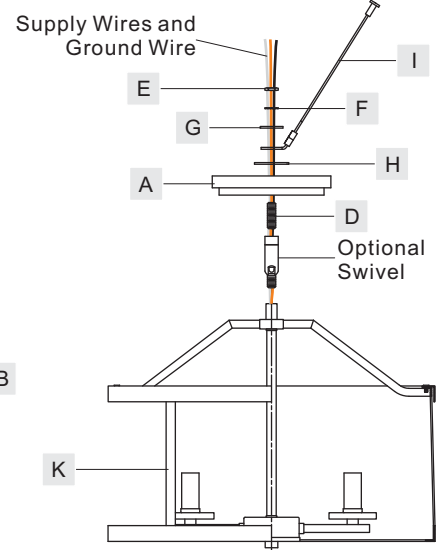


Figure 1B

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoise.com

STEP 2B – Attach Crystals

- Unlock Screws on the top of Cage and remove Ring.
- Place the bottom end of Clear Crystals (L) and Amber Crystals (M) into bottom edge of the Cage. Attach hangers at Clear Crystals (L) and Amber Crystals (M) to holes on the top edge of Cage one next to another.
- After finish all crystals, place Ring back onto top edge of the Cage and secure with Screws previously removed.

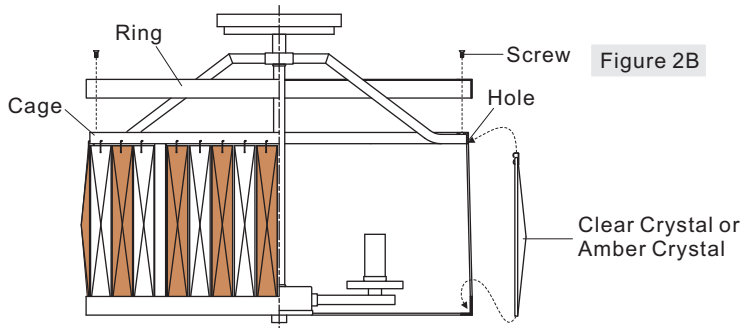


Figure 2B

STEP 3B – Installing the Crossbar Assembly

- Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (AA) with Outlet Box Screws (not included). Tighten until snug.

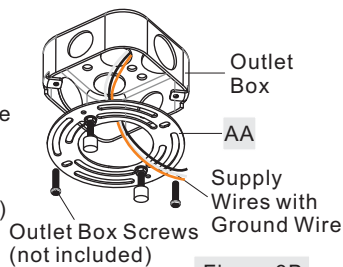


Figure 3B

STEP 4B – Test Fit the Ceiling Canopy to the Crossbar Assembly

- Remove the mounting balls from the Crossbar Assembly (AA). Place the Ceiling Canopy (A) onto the Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and held tight with the mounting balls. If it is not, adjust the length of the mounting screw on the Crossbar Assembly (AA) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove the mounting ball and Ceiling Canopy (A) and proceed to Step 5B.

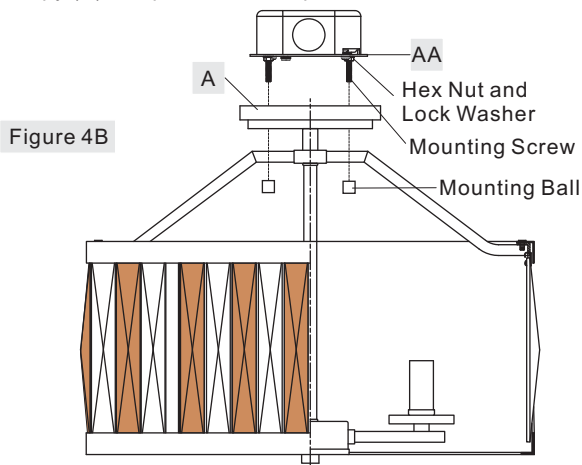


Figure 4B

STEP 5B - Attach the Lanyard

- The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while connecting the electrical wires.
- Turn the Button Stop so it may be inserted into a Crossbar slot. Make

(Step 5B Continued)

sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring, the Lanyard will push into the junction box when the fixture is placed for final mounting.

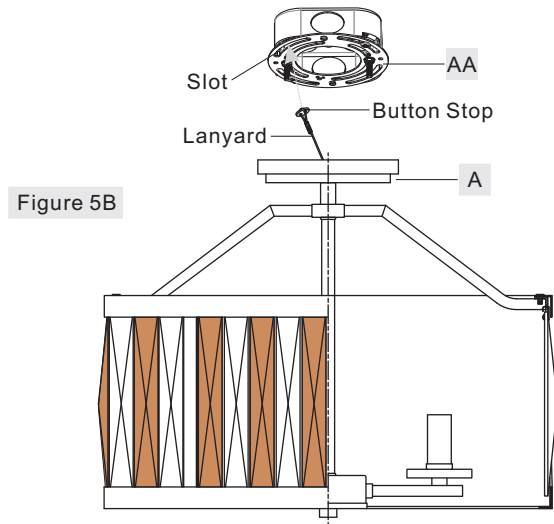


Figure 5B

STEP 6B - Wire Connections

- Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

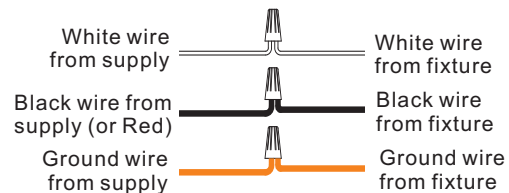


Figure 6B

STEP 7B – Install the Fixture Body

- Position the Ceiling Canopy (A) and Fixture Body onto the Crossbar Assembly (AA). Place the holes in the Ceiling Canopy (A) over the mounting screws. Secure the Fixture Body by using the mounting balls and hand tighten the mounting balls until snug.

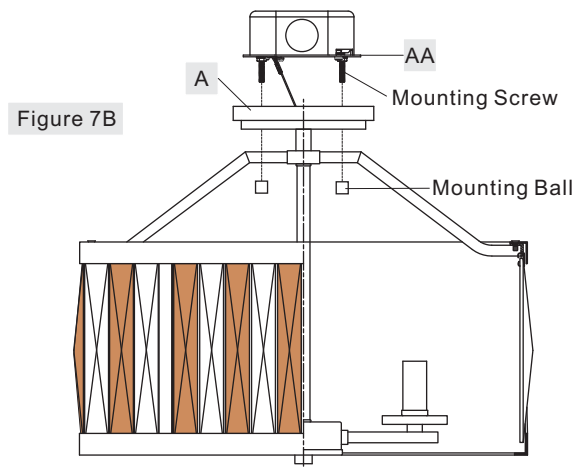


Figure 7B

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com

STEP 8B – Install Bulbs

A. Insert bulbs onto sockets and screw snugly into place.

**Your fixture is now assembled and ready to use.
Enjoy!**



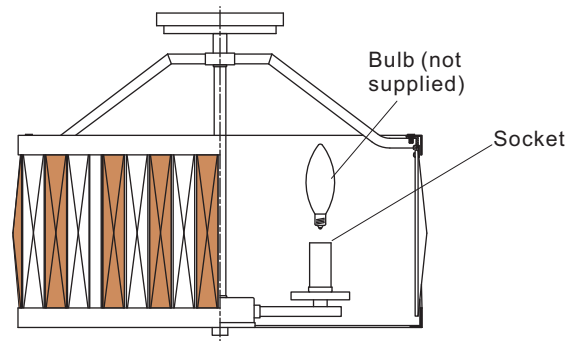


Figure 8B



PCBL2817BN

FINISH: BRUSHED NICKEL

PENDANT LIGHT

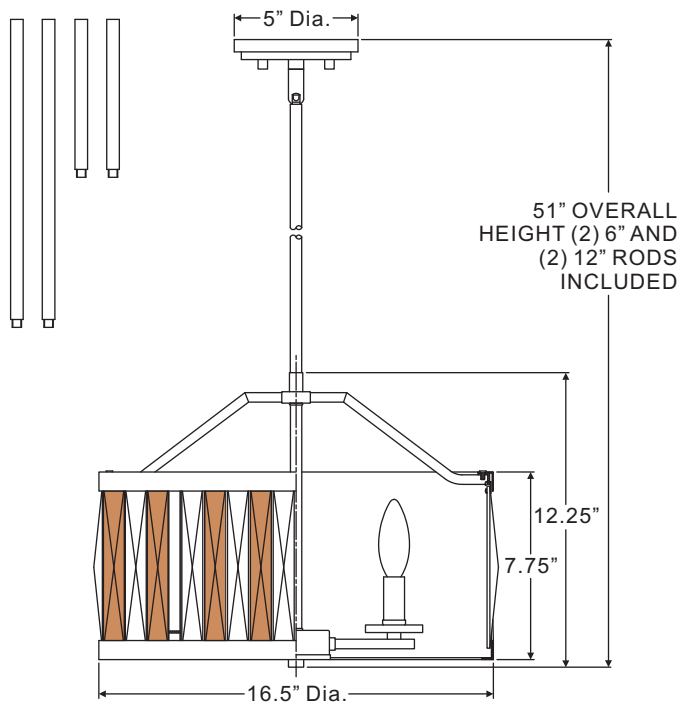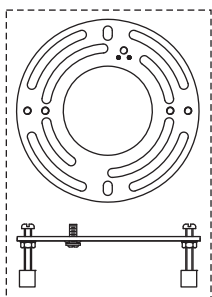

SEMI-FLUSH

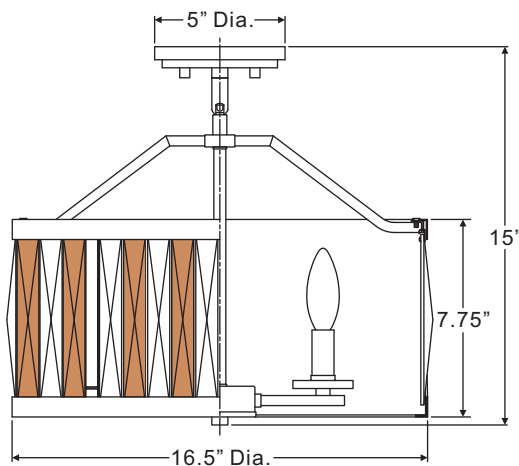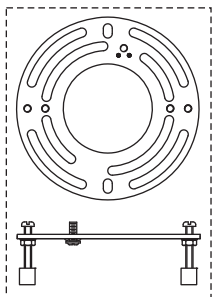

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com