


## OPENING DIMENSIONS

**Electrical:** A 115 volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

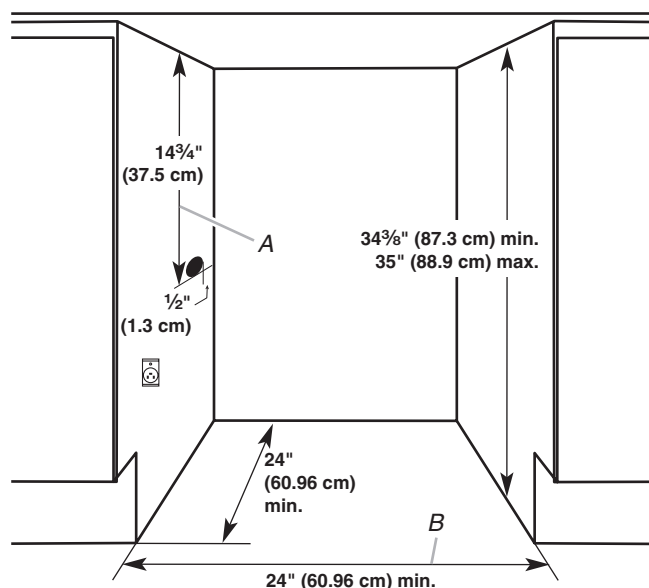


**Critical Dimensions:**  
A. 14¾" (37.5 cm) utility opening  
B. 24" (60.96 cm) minimum opening width

- Height dimensions are shown with the leveling legs extended to the minimum height.  
**NOTE:** When leveling legs are fully extended, add  $\frac{5}{8}$ " (15 mm) to the height dimensions.
- If the floor of the opening is not level with the kitchen floor, shim the opening to make it level with the kitchen floor.

|                      |            |
|----------------------|------------|
| Model                | Door Swing |
| KURL204E<br>KURL304E | Left       |
| KURR204E<br>KURR304E | Right      |

## LOCATION REQUIREMENTS

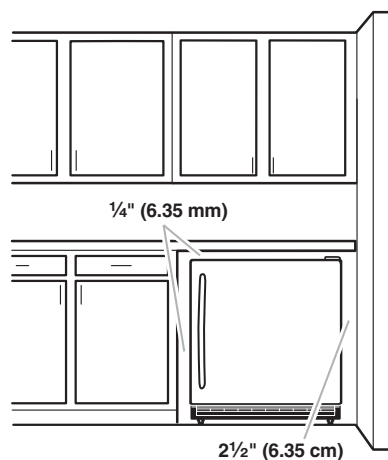

To ensure proper ventilation for your refrigerator, allow for a ¼" (6.35 mm) space on each side and at the top. When installing your refrigerator next to a fixed wall, leave 2½" (6.35 cm) minimum clearance on the hinge side to allow for the door to swing open.

- **NOTE:** It is recommended that you do not install the refrigerator near an oven, radiator, or other heat source. Do not install in a location where the temperature will fall below 55°F (13°C). For best performance, do not install the refrigerator behind a cabinet door or block the base grille.