

26"D x 24 3/8"H

INSTALLATION INSTRUCTIONS FOR FIXTURE #4655-579

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (FIG. 1)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware.
2. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
3. The arms have been turned to lay flat for shipping, turn the arms carefully so that they are evenly spaced apart. (See Fig. 1)
4. Thread the fixture loop (A) onto the nipple (B).
5. Place the cap (E) and font (G) onto the arms, then secure with long nipple (F) and two finials (D).

MOUNTING THE FIXTURE (FIG. 2)




1. Thread the nipple (S) into the collar loop (T).
2. Thread the hex nut (R) to the other end of nipple (S), place the lock washer (Q) over the nipple (S), and thread the nipple (S) into the crossbar (P), and then secure the nipple (S) to the crossbar (P) with the lock washer (Q) and the hex nut (R).
3. Take this crossbar assembly and mount to ceiling outlet box (V) using outlet box screws (W). The side of crossbar marked "GND" must face out.
4. Use proper chain pliers to open one end link of the chain (X) and connect to the fixture loop (A). Close the link.
5. By measuring, determine the correct number of links needed for proper hanging height. Using the chain pliers, disconnect and discard the remaining chain (X).
6. Carefully lace the fixture wires through the chain (X).
7. Slide the collar ring (Y) over the chain (X), then do the same with canopy (U).
8. Open the other end link of the chain (X) and connect to the collar loop (T). Close the link.
9. Feed the fixture wires through the collar loop (T) and nipple (S), then pull the fixture wires until tight.

CONNECTING THE WIRE (See fig.3)

1. At this point, connect the electrical wires as shown in Fig. 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the green screw provided.
2. Tuck the wire connectors neatly into the ceiling outlet box and raise the canopy (U) and collar ring (Y). Then thread collar ring (Y) onto collar loop (T) protruding through canopy.
3. Install the T8 bulbs (J) (bulbs included) into the sockets (I).
(DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)).
4. Insert the glass shades (K) into the cups (H).

Your installation is now complete. Return power to the outlet box and test the fixture.

60 Watts Type T8

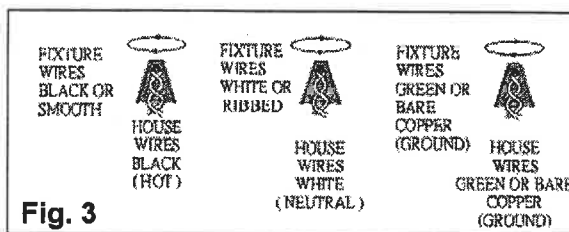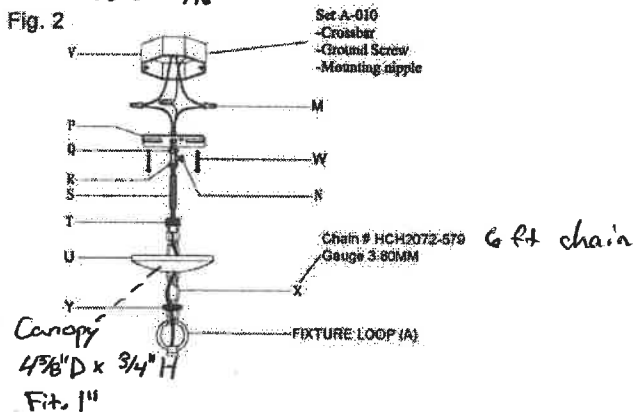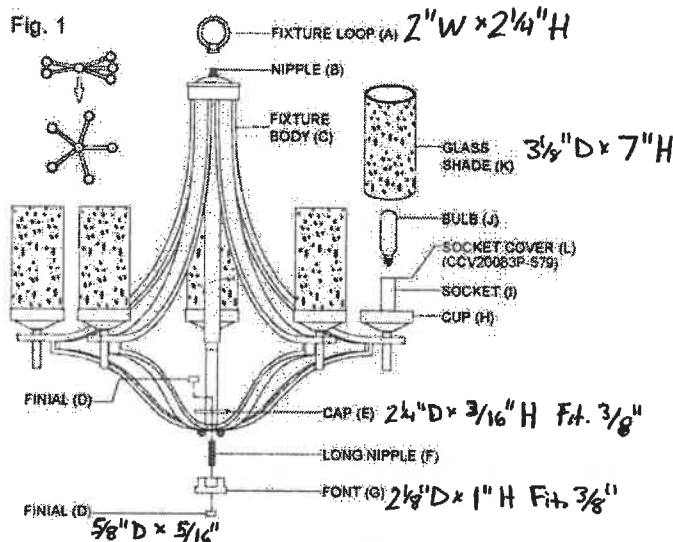

Notice: It is important to use proper chain pliers (not included) to OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.



american
lighting
association

Box Meas: 28.34" x 13.38" x 26.37"

NW: 4.89 KGS GLW: 8.67 KGS