


Installation Instructions

Read these instructions carefully and keep them for future reference



01 Safety Information

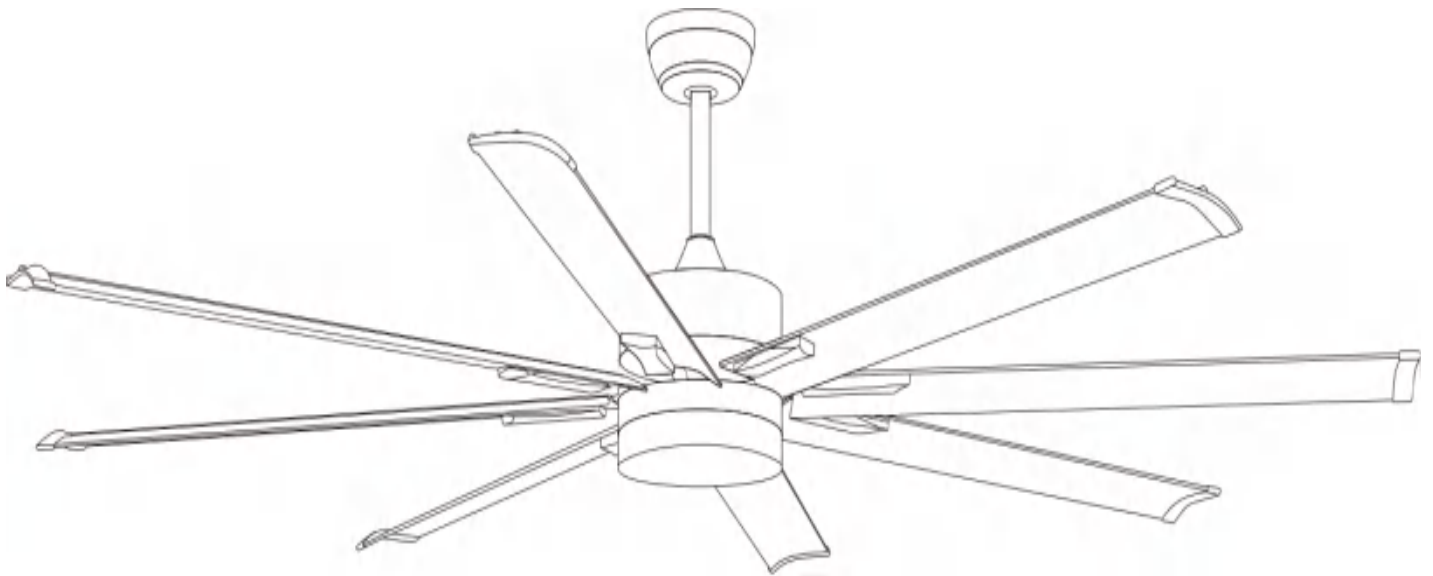

WARNING: TO reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.



WARNING: Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.



WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.



WARNING: To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring. If you feel you do not have enough electrical wiring knowledge or experience, contact a licensed electrician.




WARNING: Electrical diagrams are for reference only. Optional use of any light kit shall be UL-listed and marked suitable for use with this fan.




WARNING: To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked "Acceptable for fan support of 35 lbs. (15.9 kg) or less." and use the screws provided with the outlet box.

02) Ceiling fan installation process

1 Pre-installation

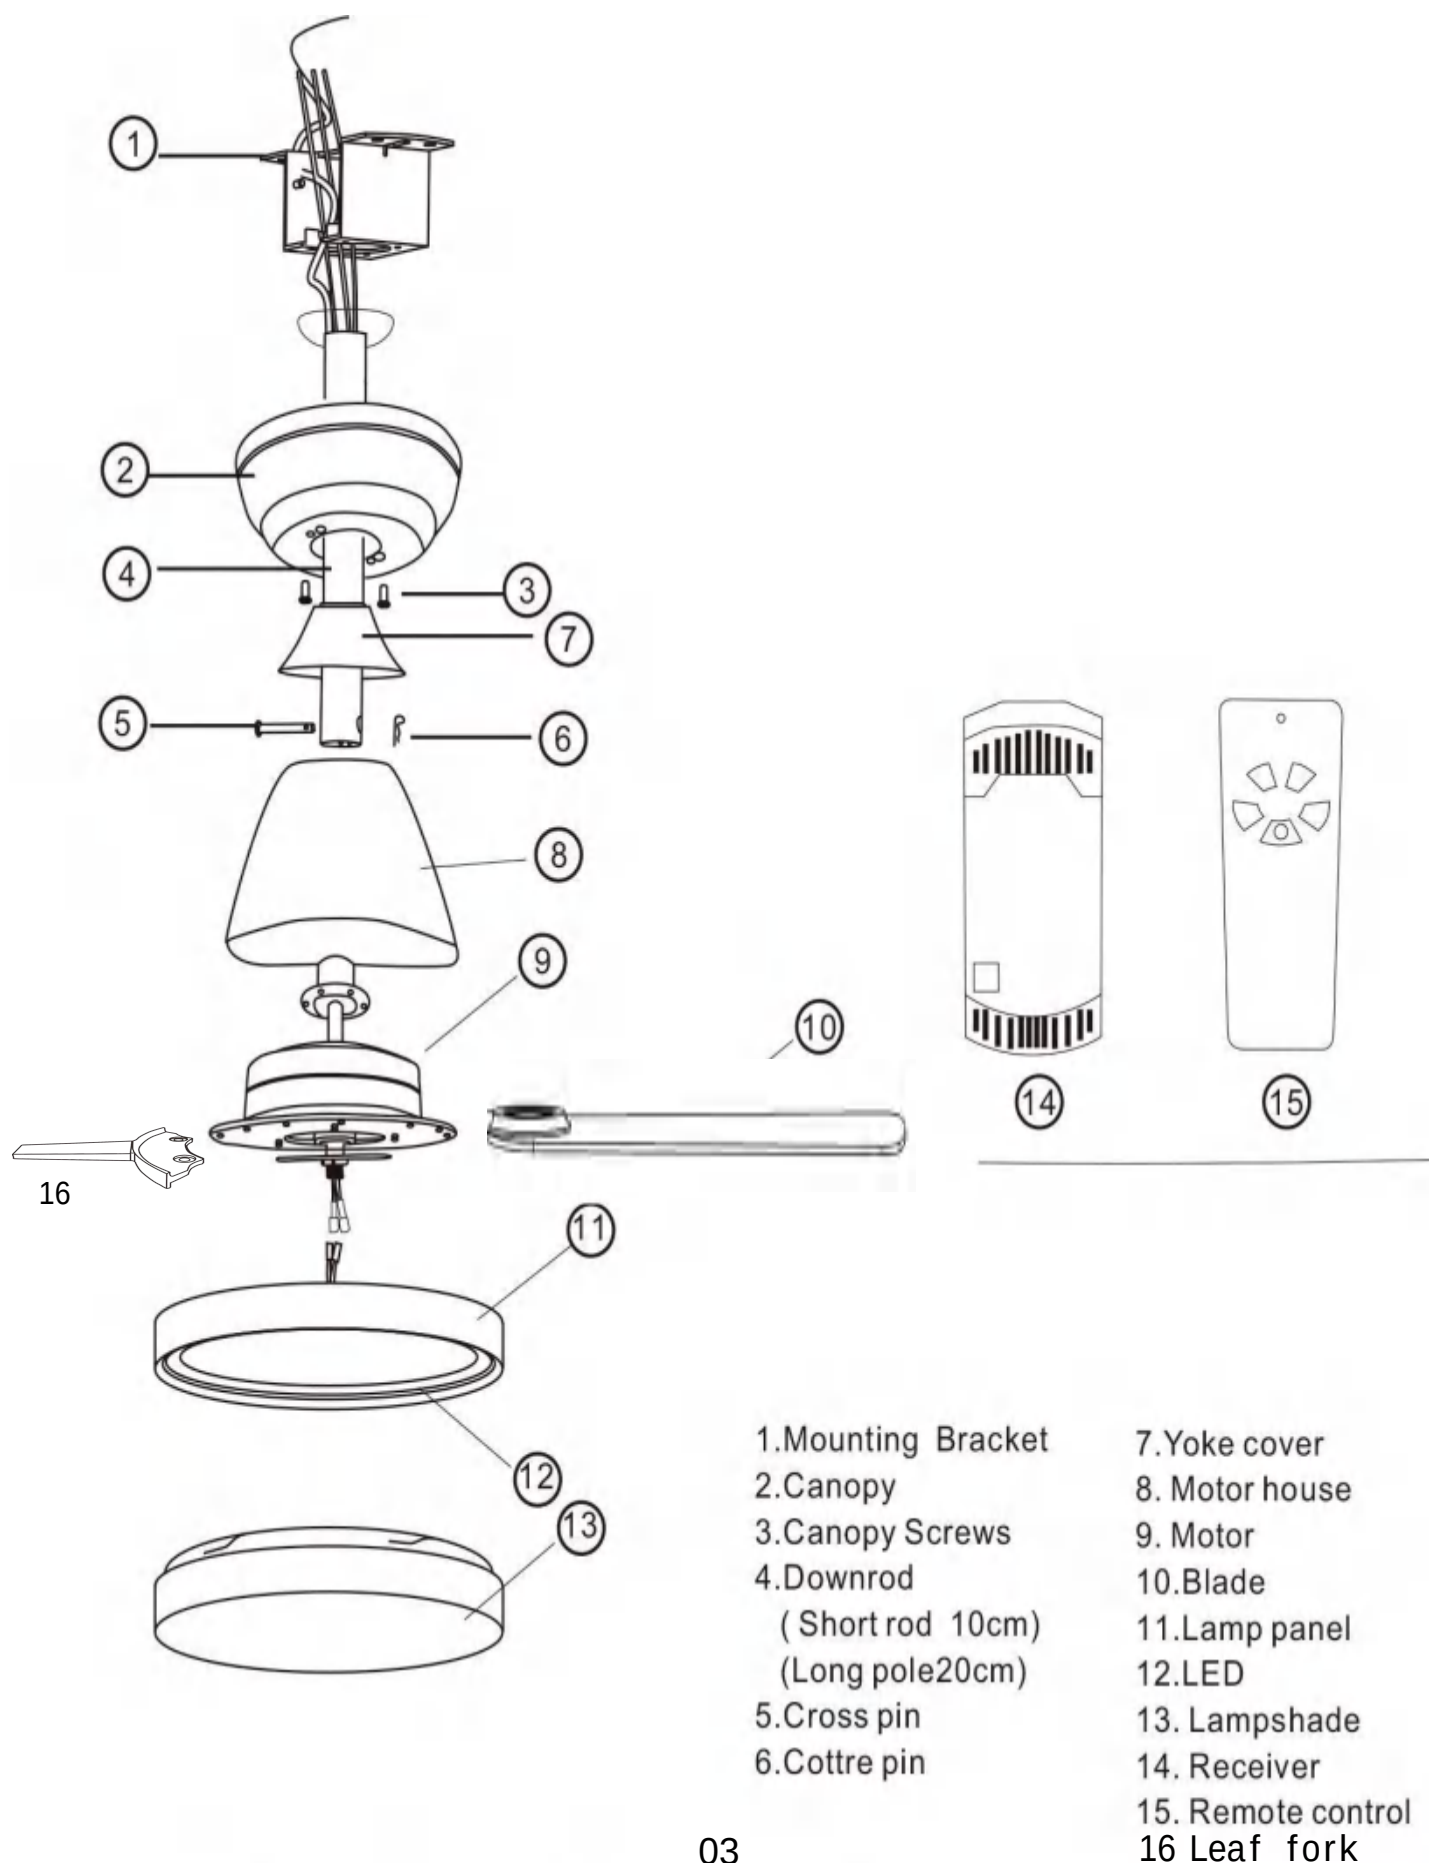

2 Tools Needed

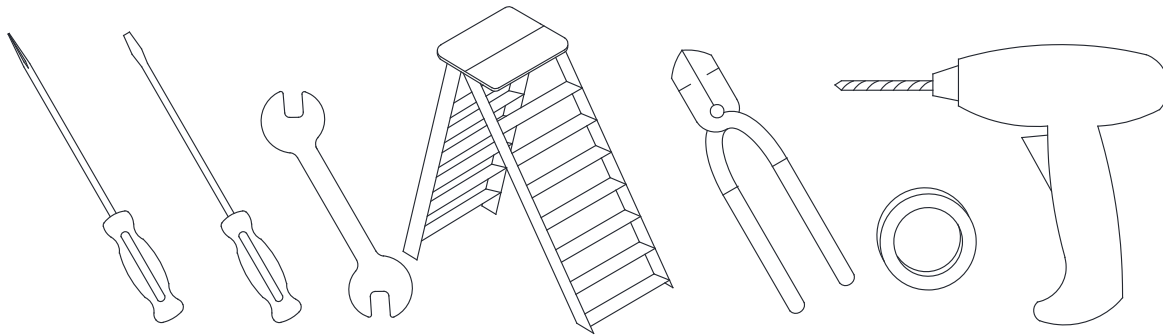


You may need the tools below:

- *Screwdrivers*
- *Wrench*
- *Ladder*
- *Wire Strippers*
- *Insulation Tape*
- *Power drill*

3


BEFORE YOU START

Contact a licensed electrician if you are not good at performing electrical work. It's the licensed electrician who installs the fan, if required by the local code. Do not use the fan with a dimmer switch. Turn off power at breaker.

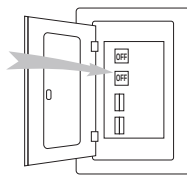

04) Installation of the hanging bracket(suspension part)

Wooden ceiling

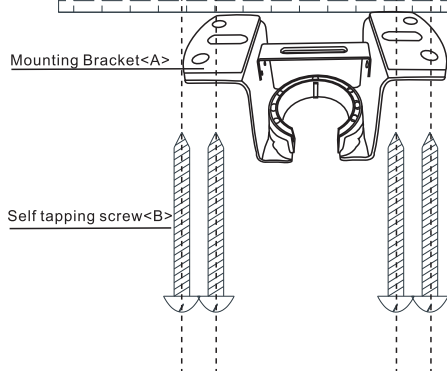

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket (selection is made according to actual requirements of the customers).


STEP 1A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket (A) as a guide, mark the spots where the 4 Self Tapping Screws (B) will be drilled.
- 2) Remove the Mounting Bracket (A), drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws (B).

IMPORTANT : SCREWS MUST BE TIGHTENED TILL SNUG

CONCRETE CEILING

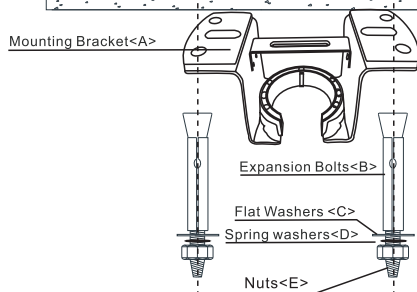

Note: According to the ceiling of different materials, use different screws to fix the hanging bracket. Don't fix the hanging bracket on the wood ceiling less than 12MM to prevent danger caused by loosening of screws. After the hanging bracket is completed, ensure that it can withstand the tension test of more than 68KG for safety.

For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 2A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.



- 1) Use the Mounting Bracket (A) as a guide, mark the spots where the 4 Expansion Bolts (B) will be drilled.
- 2) Remove the Mounting Bracket (A), drill 4 holes and insert 4 Expansion Bolts (2) into the concrete ceiling, install the mounting bracket and secure with Flat Washers (C), Spring Washers (D) and Nuts (E).

IMPORTANT : SCREWS & NUTS MUST BE



TIGHTENED TILL SNUG

05) Install the hanging part of the ceiling fan.

1.install downrod assembly

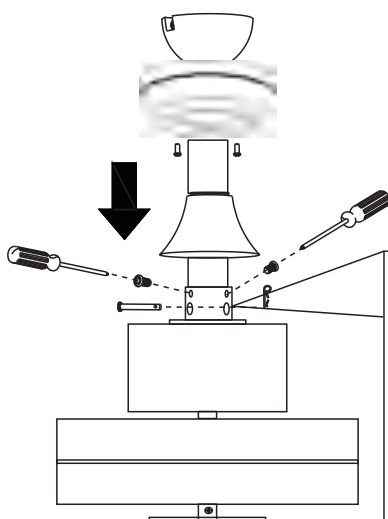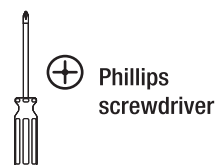


1. Thread the suspender through the suspended clock and coupling cover.
2. Then insert the tail of the suspender from the lifting head of the motor.
3. After the lateral pin is threaded out from the suspended head position, insert R type pin.
4. Tighten the lifting head screws.
5. Hang the fan of the hanging pipe into the hanger.

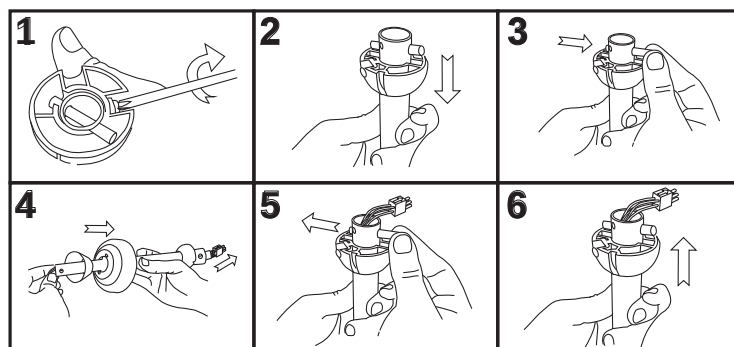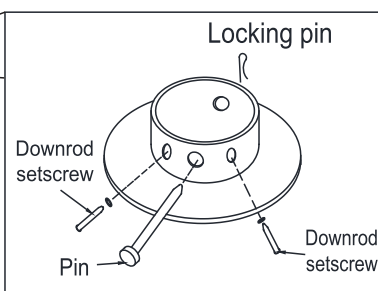

06) Assembly – Hanging the Fan(continued)

Mount Fan to Bracket

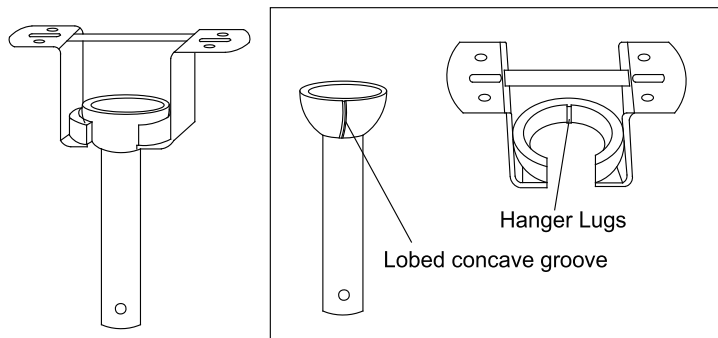

Lift the fan assembly onto the mounting bracket. Ensure the registration slot of the hanger ball is positioned on the stopper of the mounting bracket to prevent the fan from rotating when in operation.


Tips: Seek the help of another person to hold the stepladder and hang the fan body for you.

Preparing for mounting




1. Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots.
2. Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket

Install remote control

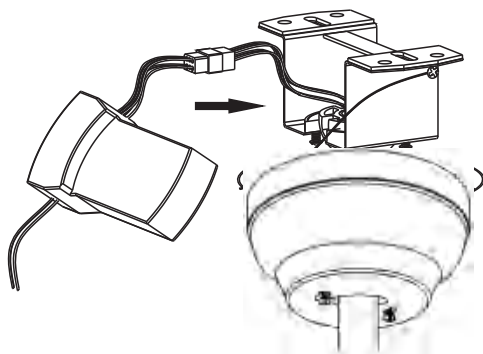

1. Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.
2. Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.

Preparing for mounting

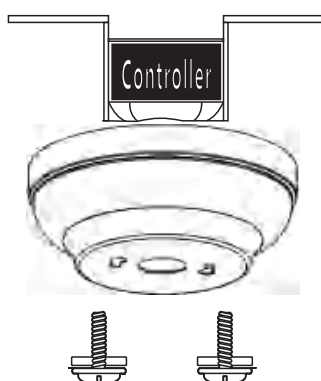



1. Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots.
2. Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket



Phillips
screwdriver

07) Assembly – Attaching the Fan Blades

1. Fastening the blade to the motor

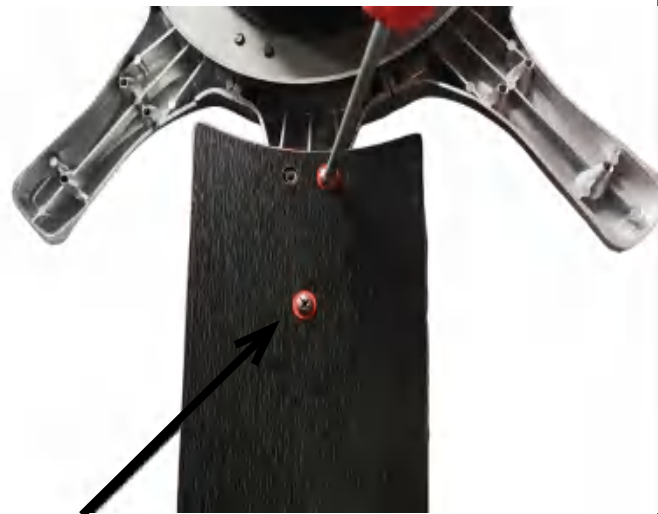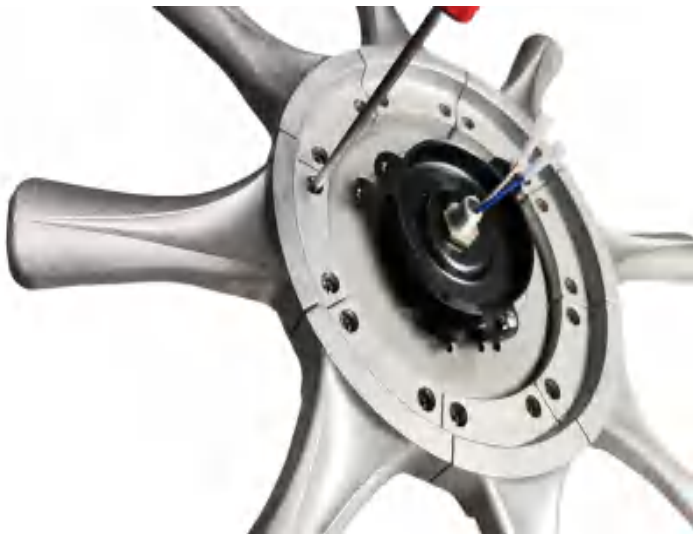

Be careful to put on the gasket

1. Install Leaf fork onto the motor

2. Install the fan blades and fix them to A with screws

Insert a blade screw from the package through the blade hole and position it under the motor so that the screw is aligned with the "center" hole position of any group of screw holes.

.Fasten the Blade to the fan-motor assembly by inserting the alignment post into the slot on the bottom of the motor and tightening the pre-installed Blade screws.


.Repeat this step for the remaining blade assemblies.




Phillips
screwdriver

08) Assembly-Attaching the cover

- 1.Remove 3 mounting screws from the light kit.
 - 2.Find the Molex connector from the motor and the Molex connector from the light kit. Slide them together.
 - 3.Install the motor's junction box with 3 screws and tighten light kit.
 - 4.Carefully install the glass shade into the main body and turn it clockwise to lock.
- WARNING:** Take care not to over tighten when installing the glass shade.

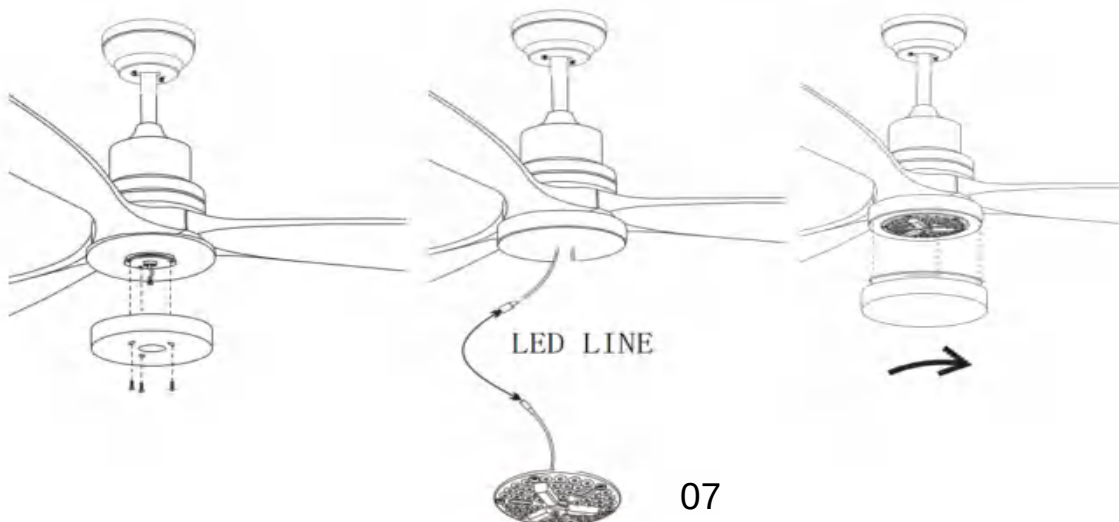


09) Function Instruction of Emitter

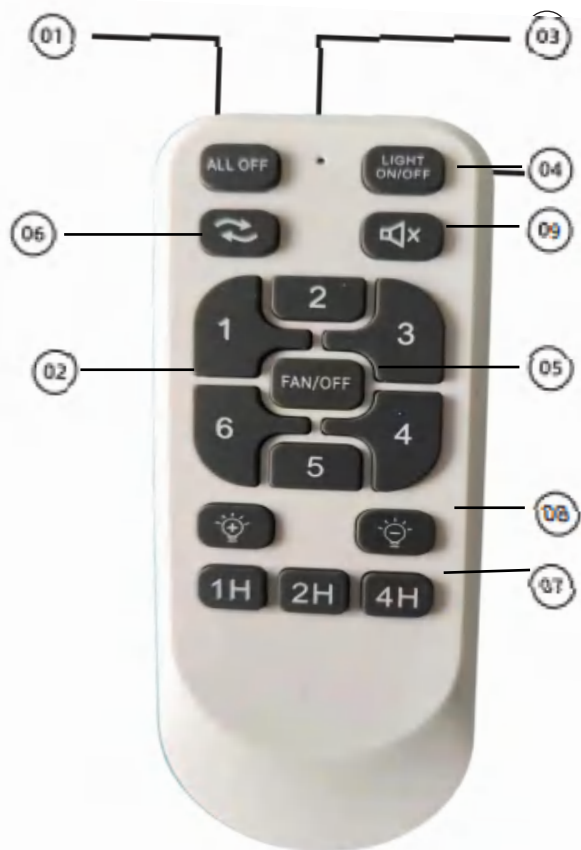

1. Turn off all Loads
2. Fan Speed Control
3. LED Indicator Light
4. Turn On the Light (no light Not Applicable)
5. Fan ON (Include Wind Speed and Lights)
6. Fan Forward and Counter Rotation Control
7. Fan Timing Control
8. Brightness adjustment
9. BEE sound ON/OFF

10) Change Downrod (OPT)

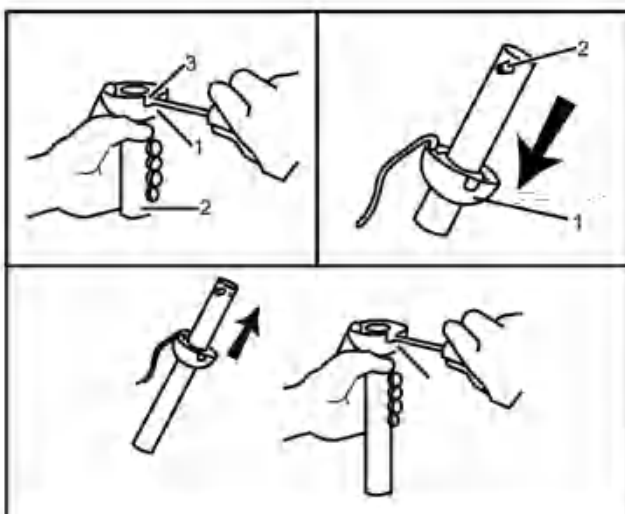

The Ceiling Fan comes with 5 inches and 10 inches downrod which is preassembled and attached to the hanger ball, one longer 10 inches downrod is also included for higher ceilings. If you need a different downrod length, please follow these steps:

1. Loosen the hanger ball from ball from downrod by removing set screw.
2. Slide downrod ball off of downrod and remove pin
3. Re-install pin into extended downrod, and slide downrod ball up to the top of the downrod
4. Re-install set screw to secure ball to downrod

14) Product problems you encountered

Dear buyer

Product Problem:

* Ceiling fan Shaking:

1. Check whether the cam ball is tightened with screws
2. Check whether the lifting head screws are tightened
3. Check whether the three fan blades are evenly distributed
(see whether the gap between the fan blades is the same size)
4. Check whether there is a balance patch in the black package,
Can be used to adjust the balance of fan blades.

* Shade Damage/Blade Damage:

Please contact our after-sales team and send pictures or video feedback to check the damage of the product, please contact our after-sales team and provide your order number, your name, phone number and specific shipping address .Accessory issues: including screw kits, remotes, controllers missing or unavailable, please contact our after-sales team with your order number and your name, phone and specific shipping address.