

SPEED Button

Select to adjust airflow between high or low speed.

+

-

Buttons (Temperature & Timer Adjustment)

Select to increase or decrease the temperature in Cool mode. The adjustable range is 61°F–90°F (16°C–32°C). The unit can switch between °C and °F using the remote control. Select to increase or decrease timer when you choose to adjust auto off or on.

TIMER Button

Select to set the auto-off or auto-on timer. Press and hold the Timer button for 3 seconds to activate the Wi-Fi function.

SLEEP Button

Press this button to activate Sleep mode. The unit runs at a fixed low fan speed. The temperature increases by 1°C (2°F) after 1 hour and another 1°C (2°F) after 2 hours. Then the temperature stays constant, and the unit shuts off after 12 hours.

LOCK Button

Press and hold the Lock button for 3 seconds to activate the Child Lock (disabling all other buttons). Press and hold it again for 3 seconds to deactivate it.

Temperature and Timer Display

The display window shows the current temperature setting and timer value.

Remote Control — Working & Other Modes

The diagram shows a remote control with the following labels:

- Cool Dry Fan**: Points to the top of the remote.
- Battery Life Indicator**: Points to the battery level icon on the display.
- Timer**: Points to the timer icon on the display.
- Fan Speed**: Points to the fan speed slider.
- Signal**: Points to the signal icon on the display.
- Child Lock Function**: Points to the child lock icon on the display.
- Sleep Function**: Points to the sleep icon on the display.
- Power**: Points to the power button.
- Dehumidifying Mode**: Points to the dehumidifying mode button.
- Low Fan Speed**: Points to the low fan speed button.
- Timer**: Points to the timer button.
- Cooling**: Points to the cooling button.
- Fan Only Mode**: Points to the fan only mode button.
- High Fan Speed**: Points to the high fan speed button.
- Sleep Mode**: Points to the sleep mode button.

Working Modes

Cool Mode (16°C to 32°C /61°F to 90°F)

- Press or to set the desired room temperature.
- Press the High or Low fan speed button to select the desired airflow.
- Adjust horizontal airflow manually using the louver.
- The “Cool” light on the unit and the indicator on the remote will turn on.

Fan Only Mode

- Circulates air in the room.
- Press the High or Low fan speed button to select the desired airflow.
- Temperature adjustment is not available in this mode.
- The “Fan” light on the unit and the indicator on the remote will turn on.

Dry Mode

- **Before Starting:** Don't forget to remove the protective cap from the drain and attach the drain hose. Push one end firmly into the unit's drain outlet and run the other end to a floor drain or place it in a bucket.
- **How It Works:** Once you select this mode, the “Dry” light on the aircon and the remote control will glow. The unit operates at a low, fixed fan speed, and the temperature cannot be adjusted in this mode.

Timer Mode (1 – 24 Hours)

- In Standby Mode, press TIMER to set an ON timer (Cool/Fan/Dry).
- In Operating Mode, press TIMER to set an Auto Off.
- Press or to adjust the duration (1–24 hours).
- To cancel the timer, press the button and adjust to “00.” Pressing the button will also exit Timer Setting.
- The timer indicator illuminates when the function is active.

Sleep Button

- In Sleep mode, This mode uses a fixed Low fan speed.
- You can set your desired temperature when starting Sleep Mode.
- The temperature will automatically adjust for comfort throughout the night:
 - After 1 hours, it increases by 1°C (2°F).
 - After 1 more hours, it increases by another 1°C (2°F).
 - After that, The temperature will remain unchanged. As a ECO feature, the product will automatically shut down after running for 12 hours nonstop.

Additional Features

Temperature Switch Button

Press to toggle the temperature display between °C and °F.

Step 5: APP CONNECTION

Download the App

Scan the QR code or search “Smart Life” in the App Store/Google Play to download and install the app.

Sign In / Create an Account

Open the app and follow the on-screen instructions to sign in or create a new account. **Tip:** You may also connect the appliance to Amazon Alexa or Google Home through Me → Service Center in the app. (Smart Life account required.)

Prepare for Wi-Fi Setup

Before connecting the appliance to the app, ensure the following:

- 1.The Smart Life app is installed and you are logged in.
- 2.The appliance's Wi-Fi function is enabled.
- 3.The appliance is placed within 5 m (16 ft) of your router.

A stable home Wi-Fi network is required.

Enter Pairing Mode

- Press and hold the Timer button until the Wi-Fi indicator begins flashing.
- If not connected within 3 minutes, pairing will cancel and the indicator will turn off.
- To retry, press and hold the Timer button again until the indicator flashes.

Choose a Connection Method

You may connect the appliance using Bluetooth Auto-Connect or Manual Wi-Fi Setup.

Method A: Bluetooth Auto-Connect (Recommended)

- 1.Turn on Bluetooth on your mobile device.
- 2.With the Wi-Fi indicator flashing, open the Smart Life app.
- 3.The appliance will connect automatically.

Method B: Manual Wi-Fi Setup

- 1.When the Wi-Fi indicator is flashing, open the Smart Life app.
- 2.Select: Add Device → Large Home Appliances → Portable Air Conditioner.
- 3.Follow the on-screen instructions to complete setup.

After Connection

- When connected, the Wi-Fi indicator will remain lit.
- You can now monitor and control your appliance through the app.
- To reset the Wi-Fi connection, press and hold the Timer button for about 3 seconds. The Wi-Fi indicator will blink.

Step 6: Cleaning and Maintenance

WARNING: Always turn off and unplug the unit before cleaning to prevent electric shock.

Water Drainage

1.Manual Drainage

- A. Turn off and unplug the unit. Move it carefully to avoid spills.
- B. Place a container under the side drain outlet.
- C. Remove the drain plug and allow water to drain.
- D. After drainage, reinstall the drain plug properly.

Note: Do not restart the unit until the drain plug is securely installed.

2.Continuous Drainage (Recommended for Dry Mode)

In Cool Mode, water normally evaporates automatically. In Dry Mode or high humidity, connect the drain hose for continuous removal.

- A. Remove the drain plug located at the center of the back of the unit.
- B. Attach the drain hose securely, keeping it straight and unobstructed.
- C. Position the hose toward a drain or container. Keep the hose sloped downward (min. 20°) and avoid submerging the end in water.

Air Filter Cleaning (Every 2 Weeks)

A dirty filter reduces performance and may damage the unit. Clean regularly.

Steps:

- 1.Turn off and unplug the unit.
- 2.Remove the air filter.
- 3.Vacuum off dust, then rinse under running water.
- 4.Allow the filter to dry completely before reinstalling.

Note: Do not touch the evaporator—its sharp surface may cause injury.

Customer Support

For assistance with any of the following, please contact our customer service team:

- 1.Difficulty installing or operating the appliance.
- 2.Damage or missing parts resulting from shipping.
- 3.Any other questions or concerns.

Support is available by phone at **1-833-632-0897** or by email at **support@homymd.com**.

QUICK GUIDE

PAC023 Portable Air Conditioner

PAC023-8KWH-USZX
PAC023-10KWH-USZX

IMPORTANT SAFETY INSTRUCTIONS

Indoor Use Only: This appliance is designed for indoor household use. **DO NOT** operate it outdoors or in damp environments.

Stable Placement: Always place the unit upright on a flat, level surface. Maintain at least 50 cm (19.7 in) of clearance around the unit to ensure proper airflow.

Unobstructed Airflow: **DO NOT** place objects on top of or in front of the air inlets or outlets, as this may block airflow and reduce performance.


Water Safety: Keep all electrical and mechanical parts away from water. If any liquid enters the unit, turn it off, unplug it, and contact qualified service personnel.

Electrical Safety: Use a properly grounded outlet. Avoid damaged cords or plugs. Never plug or unplug with wet hands, and **DO NOT** run the cord under carpets or rugs.

Step 1: Unboxing

Unpack

Carefully remove all packaging materials and check that all accessories are included.

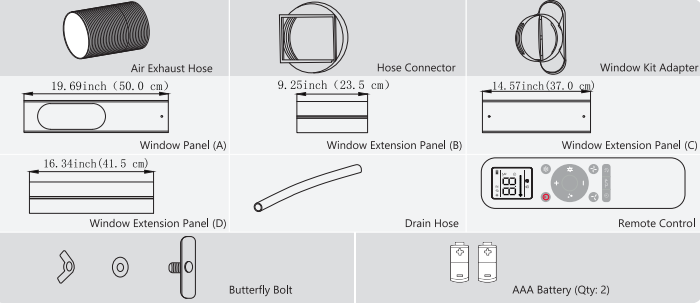


Settle Refrigerant

Place the air conditioner upright on a level surface and let it stand for at least 24 hours before use. This allows the refrigerant to stabilize and prevents internal damage.


Position

Set up the unit on a flat, stable surface near a suitable window. Ensure that there's at least 19.7 inches (50 cm) of clearance around the unit for proper ventilation and airflow. Avoid direct sunlight or heat sources.

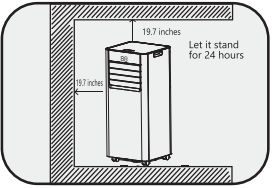

Power Connection

Plug into a dedicated, grounded 115 V outlet. **DO NOT** use extension cords, power strips, or plug into the same outlet as other appliances to prevent overload and electrical hazards.

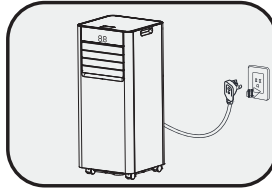

Step 2: Prepare the Window Panel

1.Measure your window opening to fit the window kit.

For Hung Windows	For Sliding Windows
Compatible window width: 19.69 inches (50.0 cm) – 53.15 inches (135.0 cm)	Compatible window height: 19.69 inches(50.0 cm) – 53.15 inches (135.0 cm)


2. Select the window panels to use

Window Opening Size	Panels to Use			
	Extension Panel A	Extension Panel B	Extension Panel C	Extension Panel D
19.69 inches (50.0 cm)	✓			
A+B: 19.69 inches (50.0 cm) – 27.17 inches(69.0 cm)	✓	✓		
A+D: 27.17 inches (69.0 cm) – 34.25 inches (87.0 cm)	✓			✓
A+C+D: 34.25 inches (87.0 cm) – 46.85 inches (119.0 cm)	✓		✓	✓
A+B+C+D: 46.85 inches (119.0 cm) – 53.15 inches (135.0 cm)	✓	✓	✓	✓


Note: For windows smaller than 19.69 inches (50.0 cm), trim Panel A to fit; for windows larger than 53.15 inches (135.0 cm), contact Customer Support.

Extension Panel Assembly


Align the slot on the back side with the butterfly bolt on the panel.
Note: The butterfly bolt must be inserted into the back slot before installing the panel onto the window.

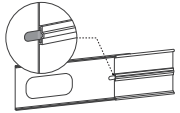

Place the panel on the window and adjust the extension according to the opening length.

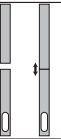

Secure the panel by tightening the butterfly bolt.

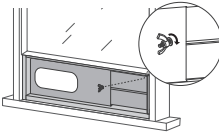


Step 3: Installing the Window Panel and Air Conditioner

1.Measure and Install the Window Panel


- Measure the width of the window opening to determine the required panel length.
- Connect the window panel sections, keeping the wing nuts facing indoors.
- Position the window panel in the window frame and firmly tighten the wing nuts.

2.Air Exhaust Duct Assembly

A: Insert one end of the exhaust hose into the hose connector and rotate it until it locks securely.

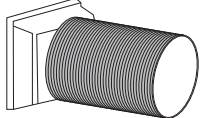


B: Connect the other end of the exhaust hose to the window kit adapter and rotate to ensure a tight fit.

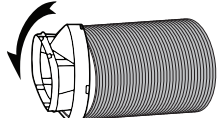

Note: Ensure all connections are properly locked and sealed to prevent air leakage and maintain optimal cooling performance.

3.Connect the Exhaust Hose to the Appliance


Attach the hose connector (the round end of the exhaust hose) to the exhaust outlet on the back of the unit. Slide it to the left until it clicks into place, as shown in the illustration.

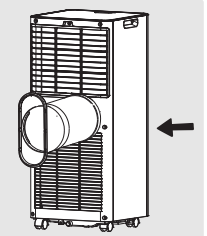


4.Connect the Exhaust Hose to the Window Panel

Attach the exhaust hose to the window kit. Close the window firmly to secure the window kit in place.

For Hung Windows

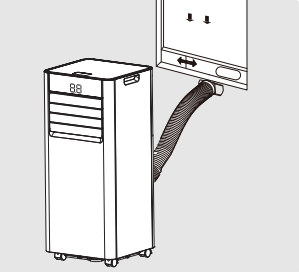


For Sliding Windows

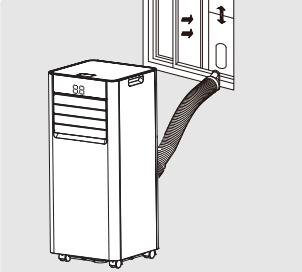

5.Ensure Proper Airflow

- Adjust the exhaust hose so the unit is at least 19.7 inches (50 cm) from the window and the hose outlet is at least 35.4 inches (90 cm) above the floor.

- Position the appliance near a grounded electrical outlet, adjust the air outlet louver as needed, and switch on the unit.

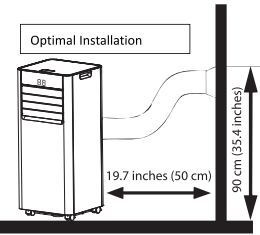

Incorrect Installation

- If the unit has been tilted more than 45°, keep it upright for at least 24 hours before use.
- Place the appliance on a firm, flat surface with at least 19.7 inches (50 cm) of clearance around it.
- Keep the air inlet and outlet free from curtains, walls, and other obstructions.
- Avoid installation near heat sources, direct sunlight, vibrations, dust, enclosed spaces, or uneven floors.


WARNING: Install only in rooms larger than 4 m² (43 sq ft). Do not use the appliance in environments where flammable gas may be present.

To ensure optimum performance, **DO NOT** overextend or bend the hose.



Step 4: Using Your Air Conditioner

Control Panel Overview

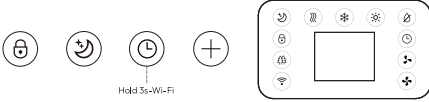

Control Panel

POWER Button

Press to turn the unit on or off. The front louver can be adjusted manually if needed.

MODE Button

Press to turn the unit on or off. Ensure the front louver is opened before operation.