

INSTALLATION INSTRUCTIONS



White Farmhouse Sink

Installation instructions Farmhouse Sinks

General Recommendations:

Read installation and maintenance instructions thoroughly before installation. Inspect your sink for any noticeable damage before installation. Check all local applicable plumbing and building codes.

These instructions are based on application to composite material or solid surface countertop installation only; countertop application to stone, marble, granite or butcher-block should be referred to experienced countertop fabricator for custom installation.

Farmhouse series sinks are individually hand-crafted and we suggest using experienced and professional installers only. For custom cutting of countertop and installation of the actual sink, on-site installation is also recommended. Acceptable variances are approximately 1/2 of an inch. Alignment to cut-out and precise application and trimming of any adhesive sealant are critical to a superior fit and finished look. Please take extra care in this regard.

Farmhouse series sinks require custom order cabinets. Consult your cabinet dealer.

We do not accept any liability for damage to countertop, sink fixture, faucets or personal injury during installation. Warranty is void if installation instructions are not followed.

Tools and Materials needed:

Tape Measure	Denatured Alcohol	Wood Braces
Pencil (NOT ink)	Ear Protection	Framing Square
Silicone Adhesive Sealant	Eye Protection	Shims
Rags	Hacksaw/jigsaw	

Be sure to use proper tools and always wear personal safety accessories for your protection.

Installation Options:

Our ceramic farmhouse sinks offer installation options to suit your kitchen design.

Undermount installation (Recommended)

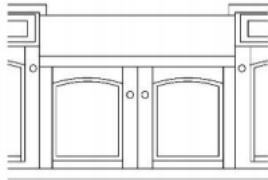


Figure 1

Flushmount Installation

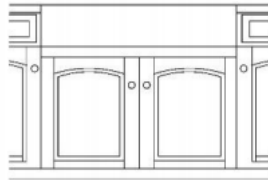


Figure 2

Above counter Installation

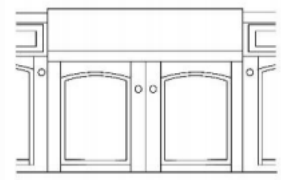


Figure 3

NOTE: All installation types require space to install a faucet. Make sure there is enough room behind the sink to install any faucet and splashback, as well as the range of motion of the faucet spout and handle.

Typical under mount installation with 1/4 in. reveal recommended

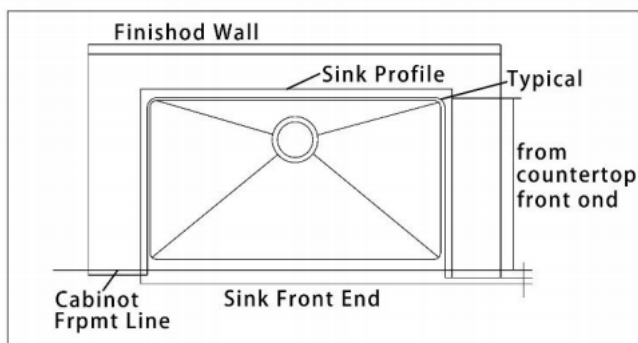


Figure 4

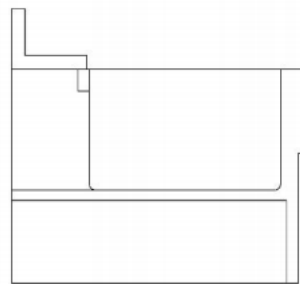


Figure 5

Typical flush mount and above counter installation.

Above counter installation may expose sink sides to be raised above the countertop.

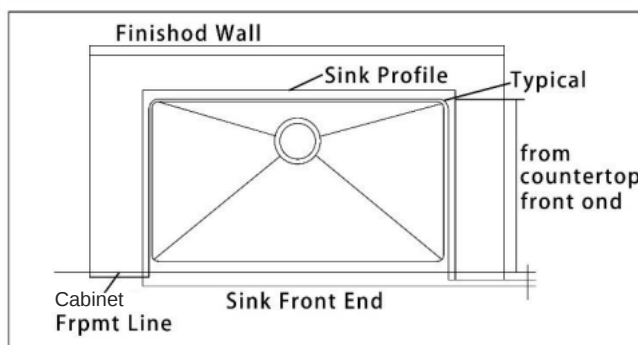


Figure 6

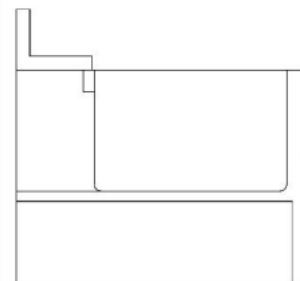


Figure 7

If any product is damaged or missing before installation, please contact your retailer. Never install a damaged sink as this will void your warranty.


1. Prepare the sink base cabinet

Farmhouse sinks require custom order sink base cabinets with a front cutout to accommodate a 10 in. or 9 in. deep sink. Build structural supports on the inside frame of the sink base cabinet. The structural supports must support the weight of the sink and any attachments such as garbage disposals. When the sink is placed onto the cabinet support, make sure the top of the sink is evenly flush against the bottom of the countertop. Allow clearance for water supply line and drains or garbage disposal, as necessary.

2. Make template and cutout

Depending on the installation option, make proper cutout of the countertop. We recommend a 1/4" reveal on 3 sides when installed under mount style. For a flush mount or above counter installation, cut countertop along with outside of sink profile. Front end of farmhouse sinks are designed to be installed 3/4" extended out beyond the front end of the countertop. Cut countertop accordingly.

No template is provided due to the custom nature of each application and installation. The actual sink is used as the template guide for each installation. After centering the sink and allowing for faucets and backsplashes, use a pencil to outline the sinks as your guide for the cutout, allowing for any reveal before the actual cutting.

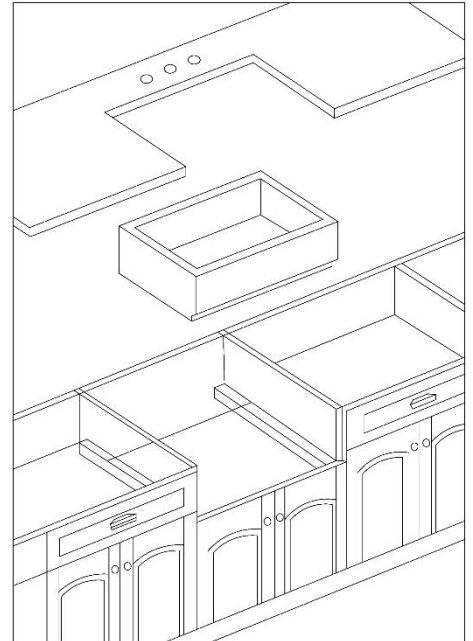

3. Set the sink

Place the sink on top of the cabinet or in the cabinet front opening. If necessary, apply sealant between the sink and cabinet to act as a gasket.

4. Install the countertop

Clean bottom of countertop and top flange of sink. Apply sealant (not supplied) around the top edge of the sink. Place the counter-top onto the sink and remove any excess sealant from all surfaces.

Care and Maintenance

ALWAYS

- Clean everyday by thoroughly rinsing with a mild soap and warm water and wipe dry.
- Rub lightly with a soft cloth in the direction of grain lines on a regular basis for additional preventative cleaning.
- Keep the sink free of any standing water as this can cause a buildup of mineral deposit, which can affect the appearance of your sink.
- Always rinse the sink after using any cleaning agent and wipe dry. Clean any mineral deposits built up over time with a mild solution of vinegar and water followed by a thorough flushing with water.

NEVER

- Use a steel wool or scoring pad as it damages the sink surface and causes discoloration.
- Let household cleaning agents or bleach sit in your sink for long period of time as this may ruin the finish of your sink.
- Leave rubber mats, sponges, or cleaning pads in the sink for long period of times as this may ruin the finish of your sink.
- Use any drain cleaning products containing sulfuric acid or hydrochloric acid as this will attack the sink. Sliver cleaners can also contain acids that will damage the sink surface.
- Use the inside of the sink as cutting surface.

1- year Limited Warranty

Our products are made with quality materials and craftsmanship to provide customers with long-lasting and durable products. If any defects in materials or workmanship are found under normal use within one year after delivery, we will provide replacement parts free of charge, or at our option, replace any product or product part that is deemed defective under normal installation, use, service and maintenance.

This warranty applies only to the original purchaser. Proof of purchase is required at the time of claim. Scratches are not covered under warranty. This warranty applies to the original owner or end user and is not transferable to subsequent owners.

Limitations

This warranty does not apply to failures, breakages or damages caused by improper operation, improper installation, neglect, abuse, misuse, improper maintenance or modification of the product, as well as chemical or natural corrosion, accidents, fire, floods, acts of God or any other disaster. Avoid the use of abrasive cleaners, steel wool and harsh chemicals as these will scratch, damage and/or dull the product and/or surfaces and void this warranty. The owner/end user of the products covered by this warranty is solely responsible for their proper installation and any applicable plumbing or wiring, and we neither install nor supervise the installation nor employ contractors for this purpose; therefore, we are not responsible for any breach, breakage or damages resulting directly or indirectly from such.

